

14 Technical Data and Dimension Sheets for MOVIMOT®

14.1 Available MOVIMOT® motor combinations

14.1.1 Motor identification for MOVIMOT® (/MI)


Each MOVIMOT® contains a motor identification module (DIM) for easy and fast startup. The DIM is included in the scope of delivery of the MOVIMOT® motor or MOVIMOT® gearmotor.

If a DR. motor / brakemotor is ordered without MOVIMOT®, a DIM can be supplied for the DR. motor according to its energy efficiency class. The DIM is attached in the standard terminal box of the DR. motor or DR...BE brakemotor. In the type designation of the DR. motor / brakemotor, the DIM is indicated by /MI.


*Assignment of the
Drive-ID module*

Type	Motor		Drive-ID module		
	Line voltage [V]	Line frequency [Hz]	Label	ID color	Part number
DRS	230 / 400	50	DRS/400/50	White	1 821 437 1
DRE	230 / 400	50	DRE/400/50	Orange	1 821 439 8
DRS	266 / 460	60	DRS/460/60	Yellow	1 821 440 1
DRE	266 / 460	60	DRE/460/60	Green	1 821 442 8
DRS / DRE	220 / 380	60	DRS/DRE/380/60	Red	1 823 493 3
DRS / DRE	220 – 240 / 380 – 415	50	DRS/DRE50/60	Violet	1 821 444 4
	254 – 277 / 440 – 480	60			
DRP	230 / 400	50	DRP/230/400	Brown	1 821 790 7
DRP	266 / 460	60	DRP/266/460	Beige	1 821 791 5
DRE...J	230 / 400	50	DRE...J/400/50	Pure orange	2 820 318 6
DRU...J	230 / 400	50	DRU...J/400/50	Mouse gray	2 820 319 4

14.1.2 MOVIMOT® drives with DRE motors

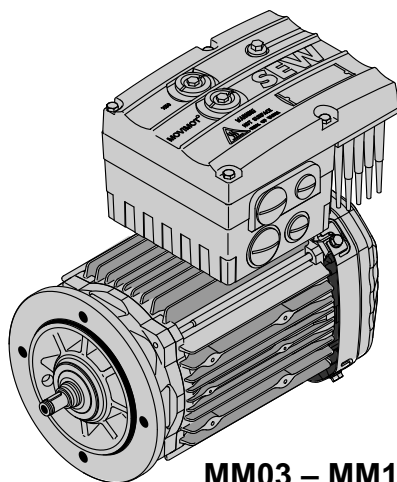

MM03 – MM15

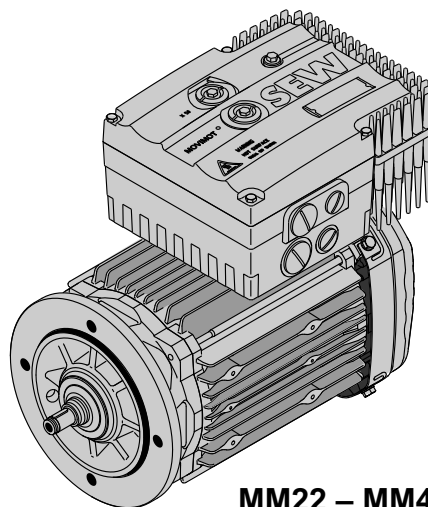

MM22 – MM40

1409434251

280 – 1400 rpm $\curvearrowright$ 3 x 380 – 500 V (400 V) IEC or c  US

Type	P _n [kW]	M _n [Nm]	M _a /M _n f > 5 Hz	n _n [rpm]	I _{n1} [A]	cosφ	J _{mot} [10 ⁻⁴ kgm ²]		M _{Bmax} [Nm]	m ¹⁾ [kg]	m ²⁾ [kg]
							Without brake	With brake			
DRE80S4 /../MM03	0.37	2.52	1.5	1400	1.3	0.99	14.9	16.4	5	12.7	15.7
DRE80M4 /../MM05	0.55	3.75	1.5	1400	1.6	0.99	21.5	23	10	15.5	18.5
DRE80M4 /../MM07	0.75	5.1	1.5	1400	1.9	0.99	21.5	23	10	15.5	18.5
DRE90M4 /../MM11	1.1	7.5	1.5	1400	2.4	0.99	35.5	40	20	19.6	24.2
DRE90L4 /../MM15	1.5	10.2	1.5	1400	3.5	0.99	43.5	48.5	20	22.6	27.2
DRE100M4 /../MM22	2.2	15	1.5	1400	5.0	0.99	56	62	28	28.3	34.2
DRE100LC4 /../MM30	3.0	20.5	1.5	1400	6.7	0.99	90	96	40	33.5	39.4
DRE132S4 /../MM40	4.0	27.3	1.5	1400	7.3	0.99	190	195	55	49.2	56.4

290 – 2900 rpm $\triangle$ 3 x 380 – 500 V (400 V)


IEC or c  US

Type	P _n [kW]	M _n [Nm]	M _a /M _n f > 5 Hz	n _n [rpm]	I _{n1} [A]	cosφ	J _{mot} [10 ⁻⁴ kgm ²]		M _{Bmax} [Nm]	m ¹⁾ [kg]	m ²⁾ [kg]
							Without brake	With brake			
DRE80S4 /../MM03	0.37	1.22	1.5	2900	1.3	0.99	14.9	16.4	5	12.7	15.7
DRE80S4 /../MM05	0.55	1.81	1.5	2900	1.6	0.99	14.9	16.4	5	12.7	15.7
DRE80M4 /../MM07	0.75	2.47	1.5	2900	1.9	0.99	21.5	23	10	15.5	18.5
DRE80M4 /../MM11	1.1	3.62	1.5	2900	2.4	0.99	21.5	23	10	15.5	18.5
DRE90M4 /../MM15	1.5	4.95	1.6	2900	3.5	0.99	35.5	40	20	19.6	24.2
DRE90L4 /../MM22	2.2	7.25	1.6	2900	5.0	0.99	43.5	48.5	20	23.7	28.2
DRE100M4 /../MM30	3.0	9.9	1.6	2900	6.7	0.99	56	62	28	28.3	34.2
DRE100LC4 /../MM40	4.0	13.2	1.6	2900	7.3	0.99	90	96	40	34.1	40.0


1) Mass of motor without brake

2) Mass of motor with brake


Thermal classification F as standard

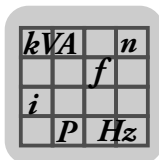

14.1.3 MOVIMOT® drives with DRE motors and increased short-term torque

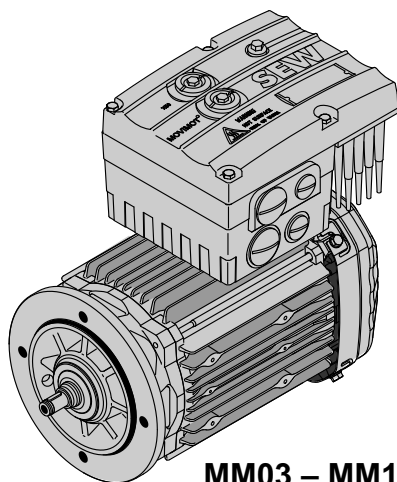

MM03 – MM15

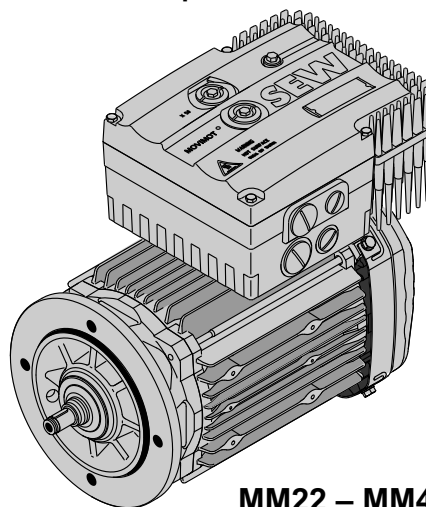

MM22 – MM40

1409434251

280 – 1400 rpm $\curvearrowright$ 3 x 380 – 500 V (400 V) IEC or c  US

Type	P _n [kW]	M _n [Nm]	M _a /M _n f > 5 Hz	n _n [rpm]	I _{n1} [A]	cosφ	J _{mot} [10 ⁻⁴ kgm ²]		M _{Bmax} [Nm]	m ¹⁾ [kg]	m ²⁾ [kg]
							Without brake	With brake			
DRE80S4 /.../MM05	0.37	2.52	2.1	1400	1.3	0.99	14.9	16.4	5	12.7	15.7
DRE80M4 /.../MM07	0.55	3.75	2.1	1400	1.6	0.99	21.5	23	10	15.5	18.5
DRE80M4 /.../MM11	0.75	5.1	2.1	1400	1.9	0.99	21.5	23	10	15.5	18.5
DRE90M4 /.../MM15	1.1	7.5	2.1	1400	2.4	0.99	35.5	40	20	19.6	24.2
DRE90L4 /.../MM22	1.5	10.2	2.1	1400	3.5	0.99	43.5	48.5	20	23.7	28.3
DRE100M4 /.../MM30	2.2	15.0	2.1	1400	5.0	0.99	56	62	28	28.3	34.2
DRE100LC4 /.../MM40	3.0	20.5	2.1	1400	6.7	0.99	90	96	40	34.1	40.0


290 – 2900 rpm $\triangle$ 3 x 380 – 500 V (400 V) IEC or c  US

Type	P _n [kW]	M _n [Nm]	M _a /M _n f > 5 Hz	n _n [rpm]	I _{n1} [A]	cosφ	J _{mot} [10 ⁻⁴ kgm ²]		M _{Bmax} [Nm]	m ¹⁾ [kg]	m ²⁾ [kg]
							Without brake	With brake			
DRE80S4 /.../MM05	0.37	1.22	2.2	2900	1.3	0.99	14.9	16.4	5	12.7	15.7
DRE80S4 /.../MM07	0.55	1.81	2.2	2900	1.6	0.99	14.9	16.4	5	12.7	15.7
DRE80M4 /.../MM11	0.75	2.47	2.2	2900	1.9	0.99	21.5	23	10	15.5	18.5
DRE80M4 /.../MM15	1.1	3.62	2.2	2900	2.4	0.99	21.5	23	10	15.5	18.5
DRE90M4 /.../MM22	1.5	4.95	2.2	2900	3.5	0.99	35.5	40	20	20.7	25.3
DRE90L4 /.../MM30	2.2	7.25	2.2	2900	5.0	0.99	43.5	48.5	20	23.7	28.3
DRE100M4 /.../MM40	3.0	9.9	2.2	2900	6.7	0.99	56	62	28	28.9	34.8


1) Mass of motor without brake

2) Mass of motor with brake


Thermal classification F as standard

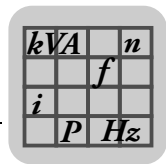

14.1.4 MOVIMOT® drives with DRS motors

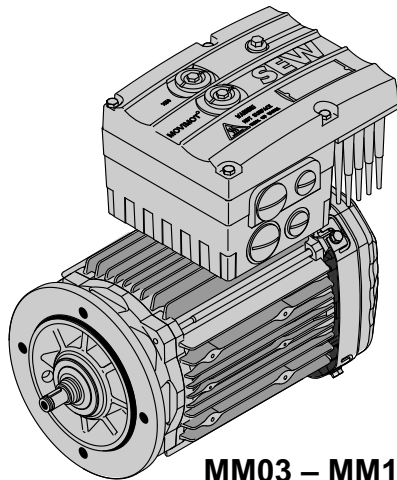

MM03 – MM15

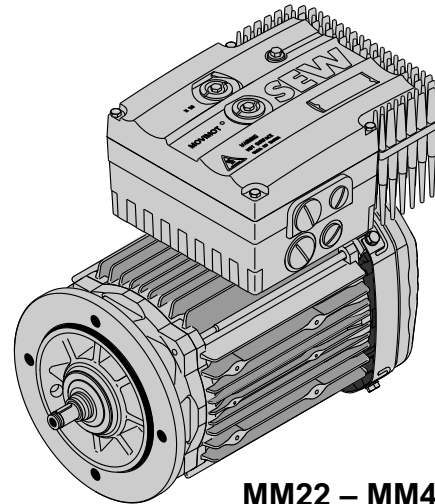

MM22 – MM40

1409434251

280 – 1400 rpm $\curvearrowright$ 3 x 380 – 500 V (400 V) IEC or c US

Type	P _n [kW]	M _n [Nm]	M _a /M _n f > 5 Hz	n _n [rpm]	I _{n1} [A]	cosφ	J _{mot} [10 ⁻⁴ kgm ²]		M _{Bmax} [Nm]	m ¹⁾ [kg]	m ²⁾ [kg]
							Without brake	With brake			
DRS71S4 /../MM03	0.37	2.52	1.5	1400	1.3	0.99	4.9	6.2	5	9.0	11.4
DRS71M4 /../MM05	0.55	3.75	1.5	1400	1.6	0.99	7.1	8.4	10	10.3	12.9
DRS80S4 /../MM07	0.75	5.1	1.5	1400	1.9	0.99	14.9	16.4	10	12.7	15.7
DRS80M4 /../MM11	1.1	7.5	1.5	1400	2.4	0.99	21.5	26	14	15.5	19.2
DRS90M4 /../MM15	1.5	10.2	1.5	1400	3.5	0.99	35.5	40	20	19.6	24.2
DRS90L4 /../MM22	2.2	15.0	1.5	1400	5.0	0.99	43.5	49.5	40	23.7	29.6
DRS100M4 /../MM30	3.0	20.5	1.5	1400	6.7	0.99	56	62	40	28.3	34.2
DRS100LC4 /../MM40	4.0	27.3	1.5	1400	7.3	0.99	90	96	50	34.1	40.0

14


290 – 2900 rpm $\triangle$ 3 x 380 – 500 V (400 V) IEC or c US

Type	P _n [kW]	M _n [Nm]	M _a /M _n f > 5 Hz	n _n [rpm]	I _{n1} [A]	cosφ	J _{mot} [10 ⁻⁴ kgm ²]		M _{Bmax} [Nm]	m ¹⁾ [kg]	m ²⁾ [kg]
							Without brake	With brake			
DRS71S4 /../MM05	0.55	1.81	2.0	2900	1.6	0.99	4.9	6.2	5	9.0	11.4
DRS71M4 /../MM07	0.75	2.47	2.0	2900	1.9	0.99	7.1	8.4	10	10.3	12.9
DRS80S4 /../MM11	1.1	3.62	2.0	2900	2.4	0.99	14.9	16.4	10	12.7	15.7
DRS80M4 /../MM15	1.5	4.95	1.6	2900	3.5	0.99	21.5	26	14	15.5	19.2
DRS90M4 /../MM22	2.2	7.25	1.6	2900	5.0	0.99	35.5	40	20	20.7	25.3
DRS90L4 /../MM30	3.0	9.9	1.6	2900	6.7	0.99	43.5	49.5	40	23.7	29.6
DRS100M4 /../MM40	4.0	13.2	1.6	2900	7.3	0.99	56	62	40	28.9	34.8


1) Mass of motor without brake

2) Mass of motor with brake


Thermal classification F as standard

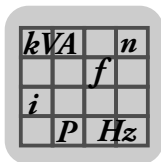

14.1.5 MOVIMOT® drives with DRS motors and increased short-term torque

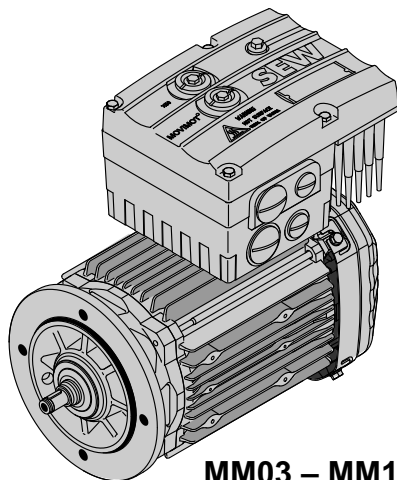

MM03 – MM15

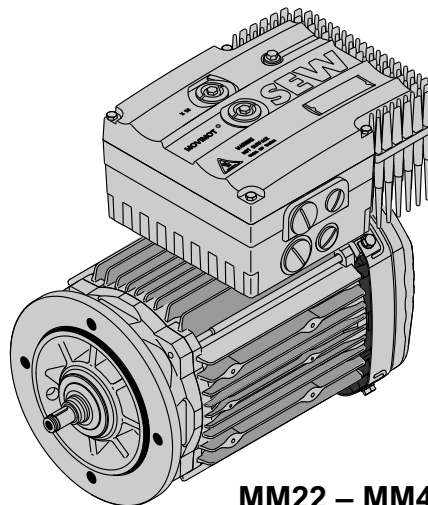

MM22 – MM40

1409434251

280 – 1400 rpm $\triangle$ 3 x 380 – 500 V (400 V) IEC or c  US

Type	P _n [kW]	M _n [Nm]	M _a /M _n ¹⁾ f > 5 Hz	n _n [rpm]	I _{n1} [A]	cosφ	J _{mot} [10 ⁻⁴ kgm ²]		M _{Bmax} [Nm]	m ²⁾ [kg]	m ³⁾ [kg]
							Without brake	With brake			
DRS71S4 /.../MM05	0.37	2.52	2.1	1400	1.3	0.99	4.9	6.2	5	9.0	11.4
DRS71M4 /.../MM07	0.55	3.75	2.1	1400	1.6	0.99	7.1	8.4	10	10.3	12.9
DRS80S4 /.../MM11	0.75	5.1	2.1	1400	1.9	0.99	14.9	16.4	10	12.7	15.7
DRS80M4 /.../MM15	1.1	7.5	2.1	1400	2.4	0.99	21.5	26	14	15.5	19.2
DRS90M4 /.../MM22	1.5	10.2	2.1	1400	3.5	0.99	35.5	40	20	20.7	25.3
DRS90L4 /.../MM30	2.2	15.0	2.1	1400	5.0	0.99	43.5	49.5	40	23.7	29.6
DRS100M4 /.../MM40	3.0	20.5	2.0	1400	6.7	0.99	56	62	40	28.9	34.8

290 – 2  $\triangle$ 3 x 380 – 500 V (400 V)
IEC or c  US


Type	P _n [kW]	M _n [Nm]	M _a /M _n ¹⁾ f > 5 Hz	n _n [rpm]	I _{n1} [A]	cosφ	J _{mot} [10 ⁻⁴ kgm ²]		M _{Bmax} [Nm]	m ²⁾ [kg]	m ³⁾ [kg]
							Without brake	With brake			
DRS71S4 /.../MM07	0.55	1.81	2.4	2900	1.6	0.99	4.9	6.2	5	9.0	11.4
DRS71M4 /.../MM11	0.75	2.47	2.4	2900	1.9	0.99	7.1	8.4	10	10.3	12.9
DRS80S4 /.../MM15	1.1	3.62	2.4	2900	2.4	0.99	14.9	16.4	10	12.7	15.7
DRS80M4 /.../MM22	1.5	4.95	2.2	2900	3.5	0.99	21.5	26	14	16.6	20.3
DRS90M4 /.../MM30	2.2	7.25	2.2	2900	5.0	0.99	35.5	40	20	20.7	25.3
DRS90L4 /.../MM40	3.0	9.9	2.0	2900	6.7	0.99	43.5	49.5	40	24.3	30.2

1) Increased short-term torque in S3 operation, 25 % cdf

2) Mass of motor without brake

3) Mass of motor with brake






Thermal classification F as standard

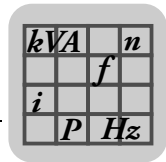


14.2 Connection technology

14.2.1 Overview of connection technology MOVIMOT® standard design


MOVIMOT® MM...D is supplied without plug connector if not specified otherwise in the order. The following table shows the available plug connector variants:

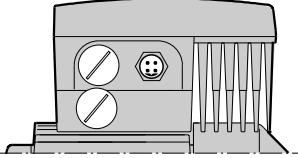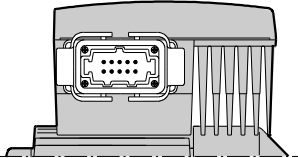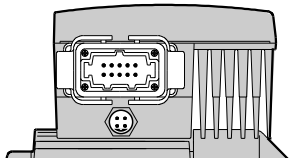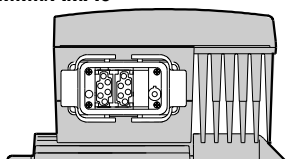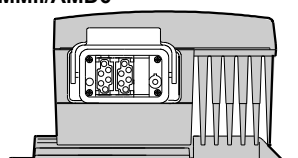Order designation	Function	Manufacturer designation
MM../AVT1 	RS485	Round plug connector M12 x 1
MM../ASA3 	Power	Harting Han® 10 ES pin element (built-on housing with 2 clips)
MM../ASA3/AVT1 	- Power - RS485	Harting Han® 10 ES pin element (built-on housing with 2 clips) + Round plug connector M12 x 1
MM../AMA6 	Power/RS485	Harting HAN Modular® pin element (built-on housing with 2 clips)
MM../AMD6 	Power/RS485	Harting HAN Modular® pin element (built-on housing with 1 clip)

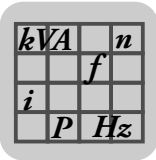


Available plug connector positions
(MOVIMOT® standard design)

The following positions are possible for plug connectors:

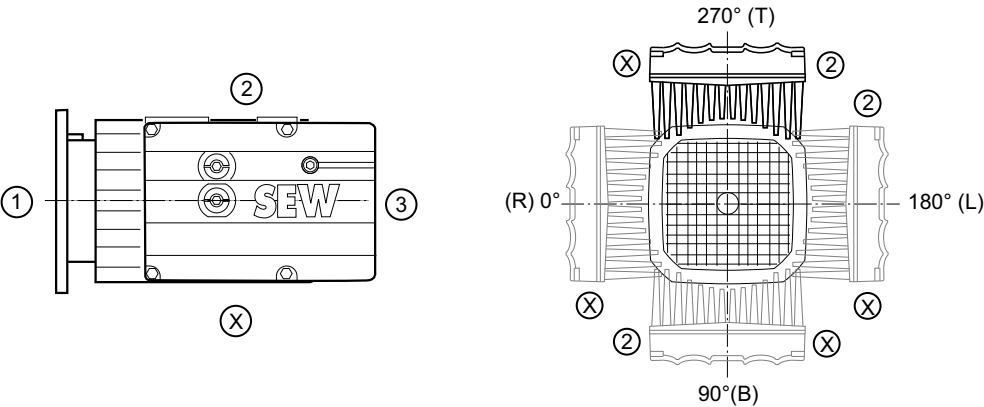


1456424715

Plug connector	Possible positions
AVT1	X (standard)
	2
ASA3	X (standard)
	2
ASA3/AVT1	ASA3 = X (standard) + AVT1 = X (standard)
	ASA3 = 2 + AVT1 = 2
AMA6 AMD6	X (standard)
	2

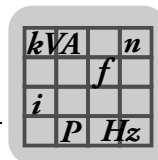


*Plug connector
assignment*

AVT1, ASA3 plug
connectors:

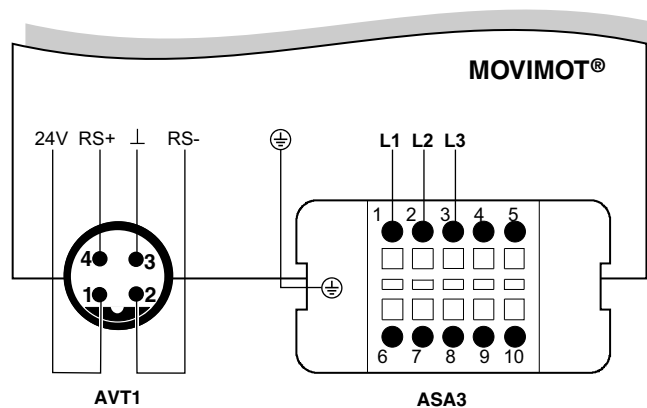


323830155

AMA6, AMD6 plug
connectors:





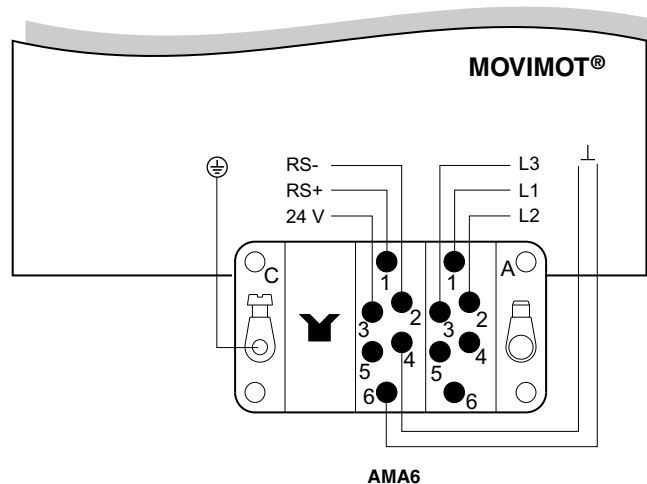


9007199578620555

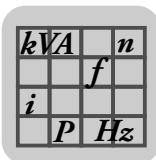

14.2.2 Overview of connection technology – MOVIMOT® with integrated AS-Interface


MOVIMOT® MM..D with integrated AS-Interface is supplied with AVSK plug connector (for AS-Interface) if not specified otherwise in the order. The following table shows the available plug connector variants:

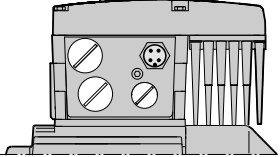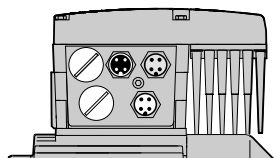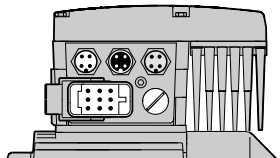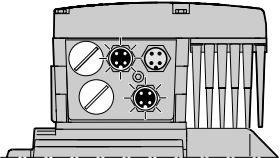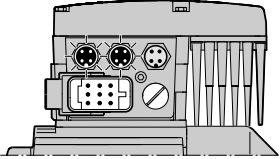Order designation	Function	Manufacturer designation
MM../AVSK 	AS-Interface	1 x M12 x 1 round plug connector
MM../AZSK 	- AS-Interface - AUX PWR - Sensor connection	3 x M12 x 1 round plug connector
MM../AND3/AZSK 	- Power - AS-Interface - AUX PWR - Sensor connection	Harting Han® Q8/0 pin element (built-on housing with one clip) + 3 x M12 x 1 round plug connector
MM../AZZK 	- AS-Interface / AUX-PWR - Sensor connection - Sensor connection	3 x M12 x 1 round plug connector
MM../AND3/AZZK 	- Power - AS-Interface / AUX-PWR - Sensor connection - Sensor connection	Harting Han® Q8/0 pin element (built-on housing with one clip) + 3 x M12 x 1 round plug connector


kVA	n
f	
i	
P	H_z

Possible plug connector positions
(MOVIMOT® with
integrated AS-
Interface)

Positions "X" or "2" are possible for plug connectors. The plug connectors are always located on one connection side. Combined plug connector positions are not possible.

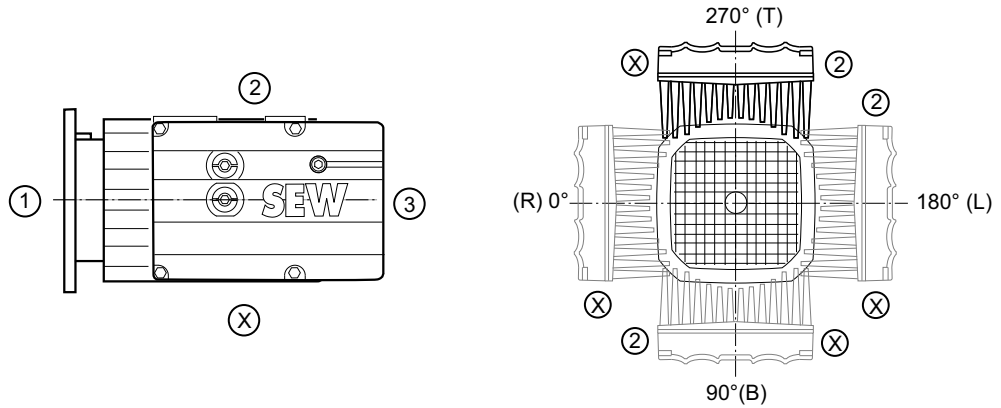


1456424715

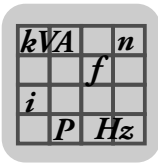

14.3 Sample type designation


14.3.1 Standard variant

The type designation of the MOVIMOT® gearmotor starts from the component on the output end.

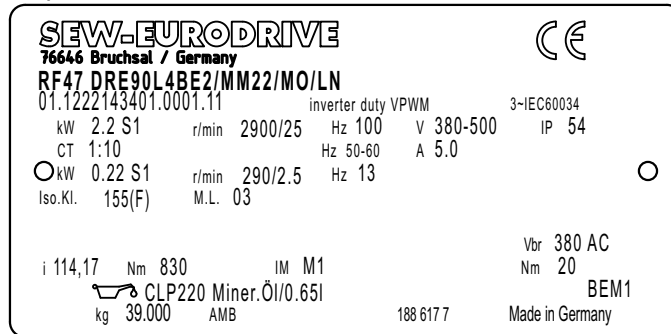


9007200711173131

RF 47 DRE 90L4 BE2/MM22/MO/LN

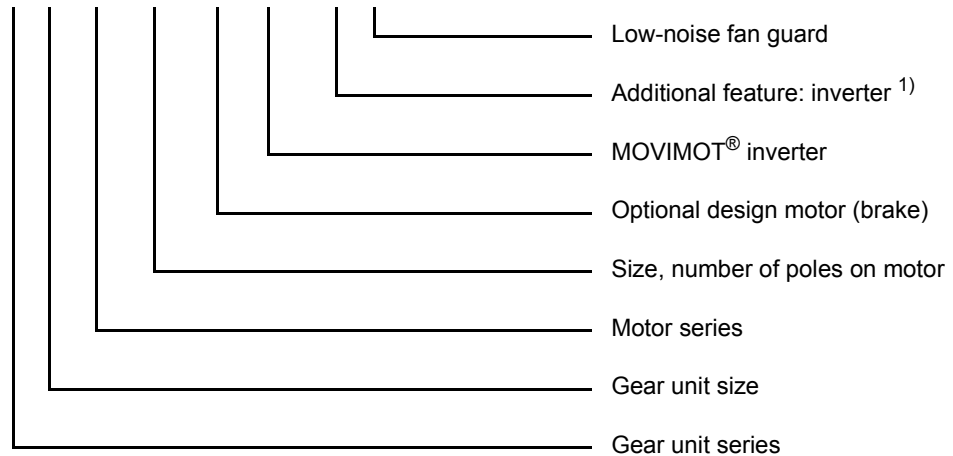


1) The nameplate only displays options installed at the factory.

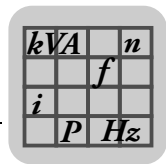


14.3.2 MOVIMOT® with integrated AS-Interface

The type designation of the MOVIMOT® gearmotor starts from the component on the output end.

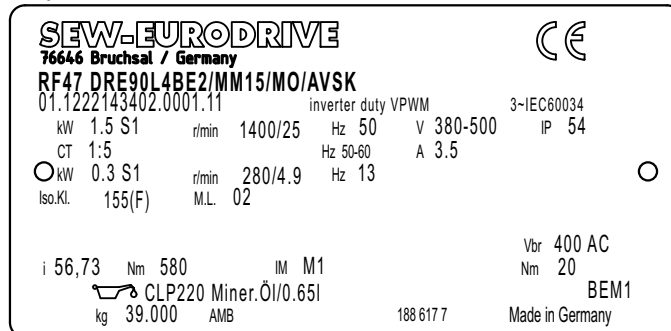


9007200940565643

RF 47 DRE 90L4 BE2/MM15/MO/AVSK

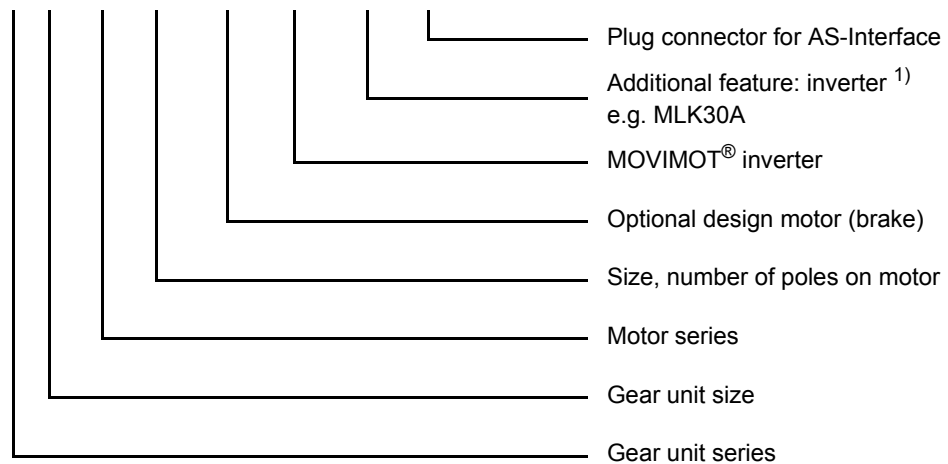


1) The nameplate only displays options installed at the factory.

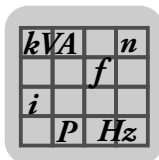

14.4 Options

The following tables show the options for MOVIMOT® MM..D.

Option	Figure	Description
DC 24 V supply MLU11A (Input voltage AC 380 – 500 V) Part number: 0 823 383 7 MLU21A (Input voltage AC 200 – 240 V) Part number: 0 823 387 X		The MLU.1A option is mounted in a cable gland of MOVIMOT® and offers the opportunity to operate one MOVIMOT® including one option with a current consumption of max. 70 mA (MBG11A, MWA21A) without external 24 V auxiliary power supply.
Setpoint adjuster with DC 24 V supply MLG11A (Input voltage AC 380 – 500 V) Part number: 0 823 384 5 MLG21A (Input voltage AC 200 – 240 V) Part number: 0 823 388 8		The MLG.1A option is mounted in a cable gland of MOVIMOT® and lets you adjust the input speed in the –100% to +100% f_{max} range (potentiometer f1) and power the inverter using the DC 24 V auxiliary voltage.
MBG11A setpoint adjuster Part number: 0 822 547 8		The MBG11A setpoint adjuster has 2 keys and a display. They allow for remote speed control in the range of –100% – +100% f_{max} (potentiometer f1). Up to 31 MOVIMOT® units can be controlled at the same time (broadcasting).
MWA21A setpoint converter Part number: 0 823 006 4		The MWA21A setpoint converter converts an analog setpoint and control signals into an RS485 protocol. This conversion allows for remote control of the MOVIMOT® from the control cabinet. Up to 31 MOVIMOT® units can be controlled at the same time (broadcasting).

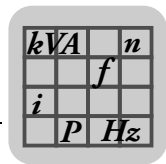





14.4.1 Options integrated in terminal box




INFORMATION

The following table shows the options for MOVIMOT® MM..D that are installed in the connection box:

   - The options BEM, BES, URM, MLU13A and MNF21A are integrated in the MOVIMOT® terminal box.
- The MLU13A and MNF21A options can only be ordered in combination with the modular terminal box.
- The modular terminal box is assigned depending on the ordered option and the MOVIMOT® size.

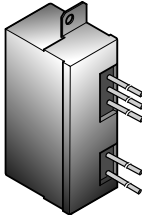Option	Figure	Description
BEM brake control Part number: 0 829 611 1		The BEM brake rectifier can be used with MOVIMOT® MM..D for controlling the brake (see also the MOVIMOT® operating instructions). The brake is controlled by means of parameter setting or activating additional function 7 or 9. The BEM brake controller implements fast release and application of the mechanical brake. Important: The brake coil must correspond to the connection voltage.
BES brake control Part number: 0 829 847 5		The BES brake rectifier can be used with MOVIMOT® MM..D for controlling a non-series DC 24 V brake (see also the MOVIMOT® operating instructions). The brake is controlled by means of parameter setting or activating additional function 7 or 9. The BES brake controller implements normal release and fast application of the mechanical brake. Important: The brake coil must be designed as DC 24 V coil.
URM voltage relay Part number: 0 827 601 3		The URM voltage relay ensures rapid application of the mechanical brake. Important: The brake coil must correspond to the MOVIMOT® standard (AC 120 V or 230 V).
Internal DC 24 V voltage supply MLU13A Part number: 1 820 596 8		The MLU13A option is integrated in the terminal box of MOVIMOT® and allows for operating a MOVIMOT® unit including one option with a maximum current consumption of 70 mA (MBG11A, MWA21A) without external 24 V auxiliary voltage. The option is installed in the modular terminal box as standard. Note that the height of the terminal box is higher for MOVIMOT® MM03 to MM15 by 18 mm.

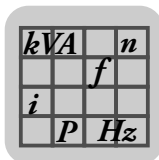

Option	Figure	Description
MNF21A internal line filter Part number: 0 804 265 9		The MNF21A option is integrated in the terminal box of MOVIMOT® (MM03 – MM15) and allows for implementing a drive system that complies with category C1 according to EN 61800-3 with respect to interference emission. The option requires the modular terminal box with increased dimensions. Note that the height of the terminal box is higher for MOVIMOT® MM03 to MM15 by 18 mm .

14.4.2 Braking resistors

Assignment of internal braking resistors

The following table shows the assignments of internal braking resistors to MOVIMOT®.


MOVIMOT® type	Braking resistor	Part number
MM03D-503-00 – MM15D-503-00 MM03D-233-00 – MM07D-233-00	BW1	0 822 897 3 ¹⁾
MM22D-503-00 – MM40D-503-00 MM11D-233-00 – MM22D-233-00	BW2	0 823 136 2 ¹⁾

1) Two screws M4 x 8, included in scope of delivery

Assignment of external braking resistors

The following table shows the assignments of external braking resistors to MOVIMOT®.

MOVIMOT® type	Braking resistor	Part number	Protective grid
MM03D-503-00 – MM15D-503-00 MM03D-233-00 – MM07D-233-00	BW200-003/K-1.5	0 828 291 9	0 813 152 X
	BW200-005/K-1.5	0 828 283 8	–
	BW150-006/T	1 796 956 5	–
MM22D-503-00 – MM40D-503-00 MM11D-233-00 – MM22D-233-00	BW100-003/K-1.5	0 828 293 5	0 813 152 X
	BW100-005/K-1.5	0 828 286 2	–
	BW068-006/T	1 797 000 8	–
	BW068-012/T	1 797 001 6	–

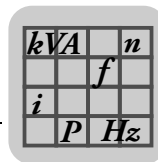

14.4.3 Options for Diagnostics, Startup and Manual Operation



INFORMATION

This section provides an overview of options regarding diagnostics, startup and manual operation for decentralized components from SEW-EURODRIVE.

For additional information on the functionality, refer to the MOVIMOT®, MOVIFIT® operating instructions, or to the manuals for the fieldbus interfaces and field distributors.




INFORMATION

This section provides an overview of options regarding diagnostics, startup and manual operation for decentralized components from SEW-EURODRIVE.

For additional information on the functionality, refer to the MOVIMOT®, MOVIFIT® operating instructions, or to the manuals for the fieldbus interfaces and field distributors.

Overview

Option	Description	Type	Part number	Compatible with
Operator device	The MFG11A operator device is plugged onto a MFZ.. connection module (not included in the scope of delivery) instead of a fieldbus interface for manual control of a MOVIMOT® drive.	MFG11A 	823 559 7	- Field distributors - MFZ.. connection module (not included in scope of delivery)
Operator device	Features: - Illuminated text display, range of languages - Keypad with 21 keys - Can be connected via extension cable DKG60B (5 m) - Degree of protection IP40 (EN 60529) Functions (examples): - Visualization of process values and status displays - Representation of process output and input data - Indicates error status and error reset - Manual control and operation - Status displays of binary inputs/outputs - Parameters can be displayed and set - Data backup and transfer of parameter sets	DBG60B-01 (DE/EN/FR/IT/ES/PT/NL) DBG60B-02 (DE/EN/FR/FI/SV/DA/TR) DBG60B-03 (DE/EN/FR/RU/PL/CS) DBG60B-04 (DE/EN/FR/ZH) 	1 820 403 1 1 820 405 8 1 820 406 6 1 820 850 9	- MOVIMOT® - MOVIFIT® - Fieldbus interfaces MF../MQ..
Extension cable	Extension cable for DBG60B (length 5 m)	DKG60B	0 817 583 7	DBG60B

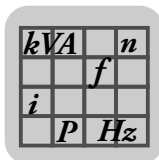

Technical Data and Dimension Sheets for MOVIMOT®

Options

Option	Description	Type	Part number	Compatible with
Interface adapter RS232 to RS485	The UWS21B option converts RS232 signals, for example from the PC, into RS485 signals. These RS485 signals can then be transmitted to the diagnostic interface of MOVIFIT®, MOVIMOT® with integrated AS-Interface or MF../MQ.. fieldbus interfaces. Scope of delivery: • UWS21B • Serial interface cable with 9-pin D-sub socket and 9-pin D-sub connector for the UWS21B – PC connection. • Serial interface cable with 2 RJ10 plugs for connection of MOVIFIT®, MOVIMOT® or MF../MQ.. fieldbus interfaces • CD-ROM with MOVITOOLS® MotionStudio	UWS21B 	1 820 456 2	• MOVIMOT® • MOVIFIT® • Fieldbus interfaces MF../MQ..
Interface adapter USB1.1/USB2.0 to RS485	Option USB11A enables a PC or laptop with a USB interface to be connected to MOVIFIT®, MOVIMOT® or MF../MQ.. fieldbus interfaces. The USB11A interface adapter supports USB 1.1 and USB 2.0. Scope of delivery: • USB11A interface adapter • USB connection cable to connect USB11A - PC • Serial interface cable with 2 RJ10 plugs for connecting MOVIFIT®, MOVIMOT® or MF../MQ.. fieldbus interfaces to USB11A • CD-ROM with drivers and MOVITOOLS® MotionStudio	USB11A 	0 824 831 1	• MOVIMOT® • MOVIFIT® • Fieldbus interfaces MF../MQ..

14.4.4 Factory-installed external options



On request, the following options can be installed at the connection box at the factory (mounted, wired, and ready for operation):

- Local DC 24 V supply (MLU.1A)
- Local speed control module with DC 24 V supply (MLG.1A)
- PROFIBUS fieldbus interface (MFP../MQP..)
- PROFINET IO fieldbus interface (MFE..)
- INTERBUS fieldbus interface (MFI)
- DeviceNet fieldbus interface (MFD../MQD..)
- Hybrid cable for connection between MF.../Z.3. or MF../.6. field distributor and MOVIMOT® (KPF6, 1–5 m)

Important order information

The external options can be installed in the following positions as standard:

- Position "2"
- Position "X" (normal)

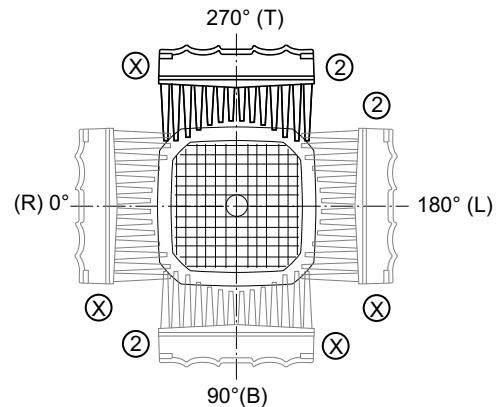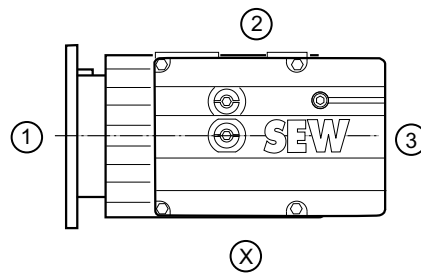


1456424715

14

14.4.5 Factory-installed integrated options

On request, the following options can be installed in the connection box at the factory (mounted, wired, and ready for operation):


- Local DC 24 V voltage MLU13A
- MNF21A line filter
- BEM or BES brake control or URM voltage relay

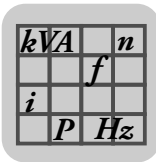

14.5 MOVIMOT® retrofit sets

14.5.1 Scope of delivery of the retrofit set

The following figure shows the scope of delivery of the retrofit set for MOVIMOT® MM03D – MM40D.

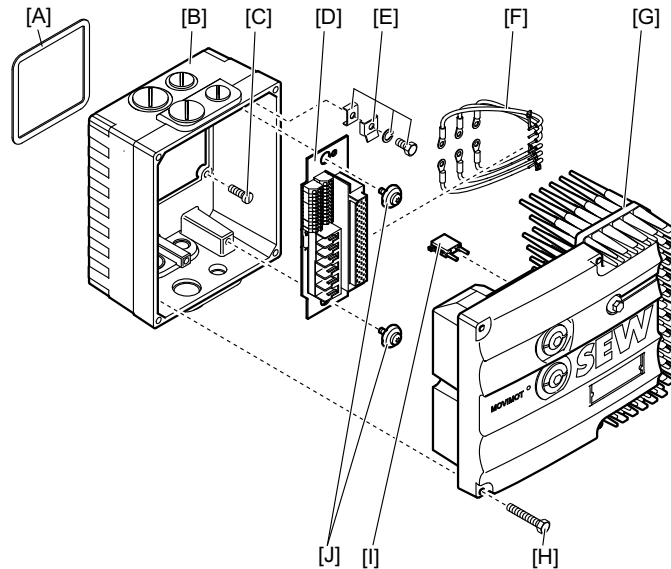

[A] Terminal box gasket	[E] PE screw	[I] Drive-ID module
[B] Connection box	[F] Connection cable	[J] 2 screws
[C] 4 screws	[G] Cover with inverter	
[D] Connection pcb	[H] 4 screws	


783979147

The parts [B] and [D] to [J] are already assembled when the retrofit set is delivered.



INFORMATION

- Only (brake) motors are allowed to be retrofitted with:
 - Nominal motor voltage: AC 230/400 V, 50 Hz
 - Nominal brake voltage AC 230 V for MM03 – MM15
AC 120 V for MM22 – MM40
- No retrofit sets are available for UL units.
- MOVIMOT® retrofit sets are configured to order. This is the reason why retrofit sets do not have a part number.

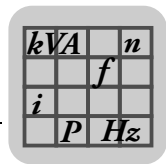

14.5.2 Retrofit sets for DRS motors

1400 rpm λ

Power [kW]	Motor	+ MOVIMOT® retrofit set	= MOVIMOT® drive
0.37	DRS71S4	MM03D, λ , DRS	DRS71S4/.../MM03D
0.55	DRS71M4	MM05D, λ , DRS	DRS71M4/.../MM05D
0.75	DRS80S4	MM07D, λ , DRS	DRS80S4/.../MM07D
1.1	DRS80M4	MM11D, λ , DRS	DRS80M4/.../MM11D
1.5	DRS90M4	MM15D, λ , DRS	DRS90M4/.../MM15D
2.2	DRS90L4	MM22D, λ , DRS	DRS90L4/.../MM22D
3.0	DRS100M4	MM30D, λ , DRS	DRS100M4/.../MM30D
4.0	DRS100LC4	MM40D, λ , DRS	DRS100LC4/.../MM40D

2900 rpm Δ

Power [kW]	Motor	+ MOVIMOT® retrofit set	= MOVIMOT® drive
0.55	DRS71S4	MM05D, Δ , DRS	DRS71S4/.../MM05D
0.75	DRS71M4	MM07D, Δ , DRS	DRS71M4/.../MM07D
1.1	DRS80S4	MM11D, Δ , DRS	DRS80S4/.../MM11D
1.5	DRS80M4	MM15D, Δ , DRS	DRS80M4/.../MM15D
2.2	DRS90M4	MM22D, Δ , DRS	DRS90M4/.../MM22D
3.0	DRS90L4	MM30D, Δ , DRS	DRS90L4/.../MM30D
4.0	DRS100M4	MM40D, Δ , DRS	DRS100M4/.../MM40D


14.5.3 Retrofit sets for DRE motors

1400 rpm λ

Power [kW]	Motor	+ MOVIMOT® retrofit set	= MOVIMOT® drive
0.75	DRE80M4	MM07D, λ , DRE	DRE80M4/.../MM07D
1.1	DRE90M4	MM11D, λ , DRE	DRE90M4/.../MM11D
1.5	DRE90L4	MM15D, λ , DRE	DRE90L4/.../MM15D
2.2	DRE100M4	MM22D, λ , DRE	DRE100M4/.../MM22D
3.0	DRE100LC4	MM30D, λ , DRE	DRE100LC4/.../MM30D
4.0	DRE132S4	MM40D, λ , DRE	DRE132S4/.../MM40D

2900 rpm Δ

Power [kW]	Motor	+ MOVIMOT® retrofit set	= MOVIMOT® drive
1.1	DRE80M4	MM11D, Δ , DRE	DRE80M4/.../MM11D
1.5	DRE90M4	MM15D, Δ , DRE	DRE90M4/.../MM15D
2.2	DRE90L4	MM22D, Δ , DRE	DRE90L4/.../MM22D
3.0	DRE100M4	MM30D, Δ , DRE	DRE100M4/.../MM30D
4.0	DRE100LC4	MM40D, Δ , DRE	DRE100LC4/.../MM40D

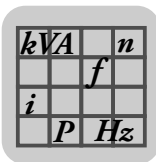

14.5.4 Retrofit sets for DRP motors

1400 rpm λ

Power [kW]	Motor	+ MOVIMOT® retrofit set	= MOVIMOT® drive
0.75	DRP90M4	MM07D, λ , DRP	DRP90M4/.../MM07D
1.1	DRP90L4	MM11D, λ , DRP	DRP90L4/.../MM11D
1.5	DRP100M4	MM15D, λ , DRP	DRP100M4/.../MM15D
2.2	DRP100L4	MM22D, λ , DRP	DRP100L4/.../MM22D
3.0	DRP112M4	MM30D, λ , DRP	DRP112M4/.../MM30D
4.0	DRP132M4	MM40D, λ , DRP	DRP132M4/.../MM40D

2900 rpm Δ

Power [kW]	Motor	+ MOVIMOT® retrofit set	= MOVIMOT® drive
1.1	DRP90M4	MM11D, Δ , DRP	DRP90M4/.../MM11D
1.5	DRP90L4	MM15D, Δ , DRP	DRP90L4/.../MM15D
2.2	DRP100M4	MM22D, Δ , DRP	DRP100M4/.../MM22D
3.0	DRP100L4	MM30D, Δ , DRP	DRP100L4/.../MM30D
4.0	DRP112M4	MM40D, Δ , DRP	DRP112M4/.../MM40D

14.5.5 Braking resistors for motors without brake

For motors without mechanical brake, we recommend to connect an integrated braking resistor BW... The braking resistor is not included in the scope of delivery of the retrofit set and must be ordered separately:

MOVIMOT® type	Braking resistor	Part number
MM03D to MM15D	BW1	0 822 897 3 ¹⁾
MM22D to MM40D	BW2	0 823 136 2 ¹⁾


1) The scope of delivery includes 2 screws M4 x 8.

kVA		n
	f	
i		
P	H_z	

14.6 Dimension sheets

Note the following for the dimension sheets of MOVIMOT® AC motors:

- Foot-mounted motors are available with connection box position 270° only.
- A fan guard represented by a dotted line shows the design with brake.
- Different positions are possible for the manual brake release. The four positions 33°, 123°, 213° or 303° are basically possible.

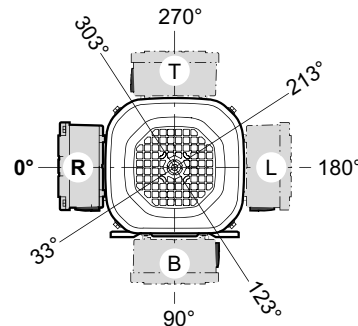


6024047499


- The manual brake release is located at an angle of 303° to the terminal box as standard. The manual brake release can be turned by $4 \times 90^\circ$. The forced cooling fan option (V) limits the possible positions of the manual brake release.
- For brakemotors, do not forget to add the space required for removing the fan guard (= fan guard diameter).
- Leave a clearance of at least half the fan guard diameter to provide unhindered air access.
- The motor dimensions may change when installing motor options. Refer to the dimension drawings of the motor options.

DRS71S, DRE71SJ, DRU71SJ
/FI/MM-D..


80 152 01 07
Bl. 1 (3)

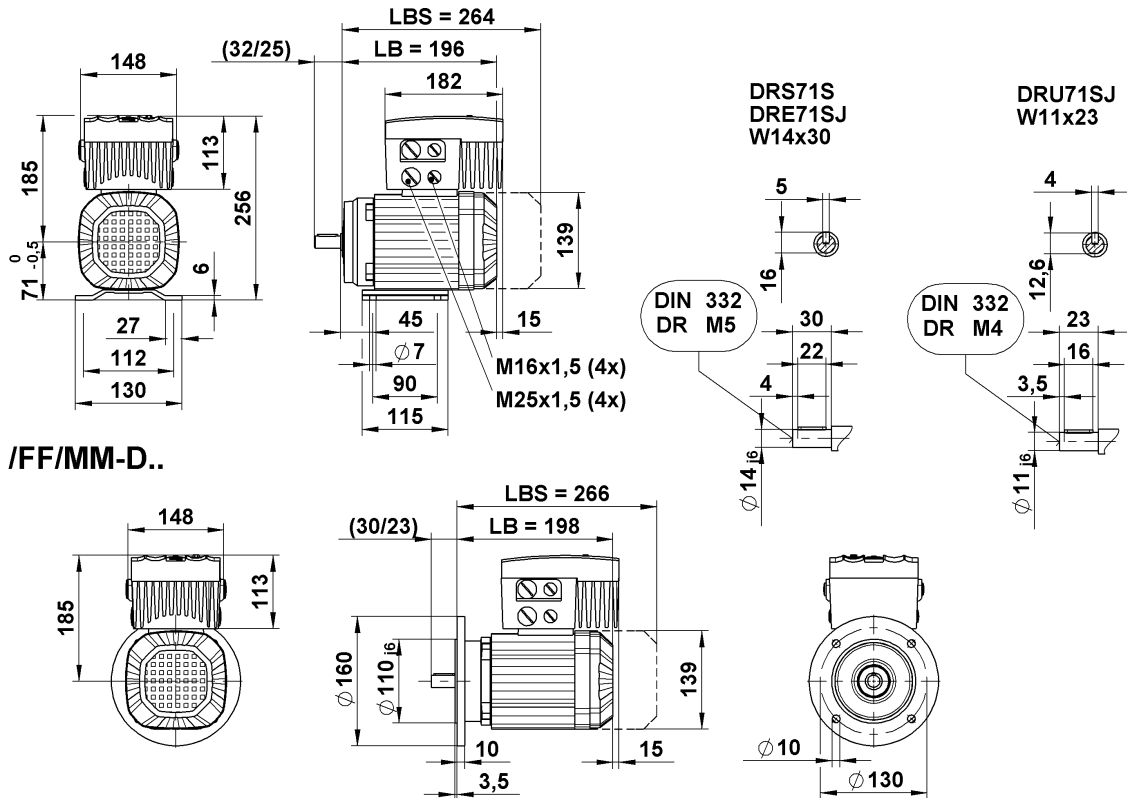


DRU71MJ
/FI/MM-D..

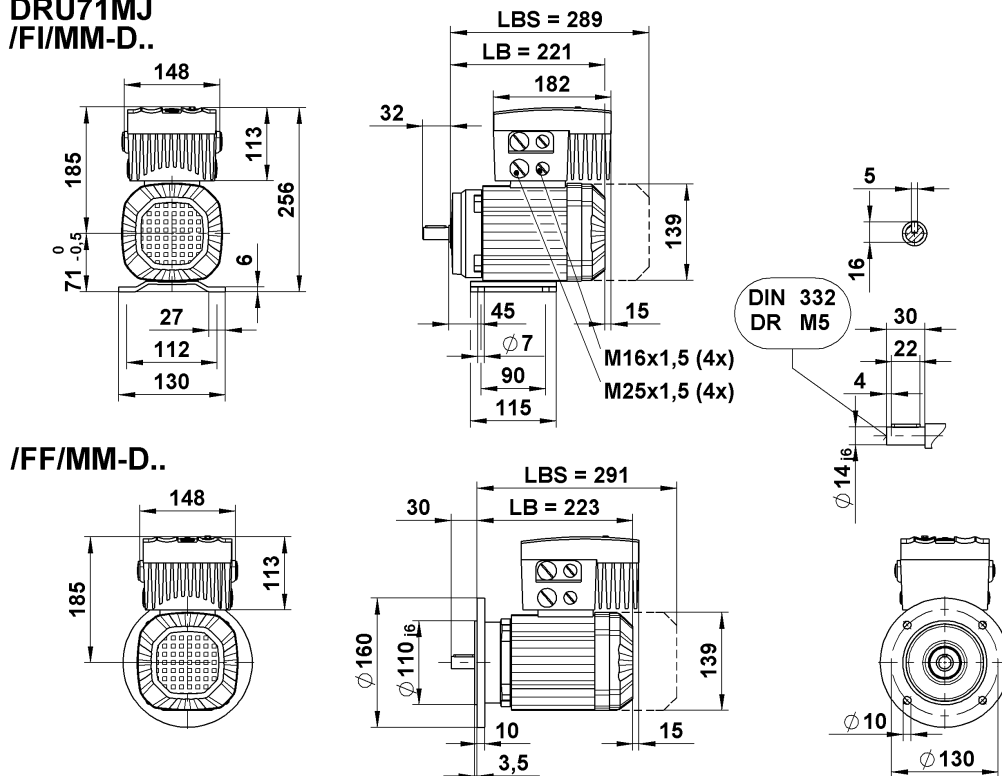

DR.71..
/MM-D..

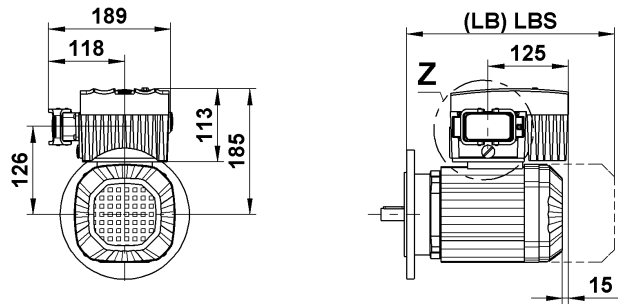


/MM-D../EI7./AVSE
/AVRE

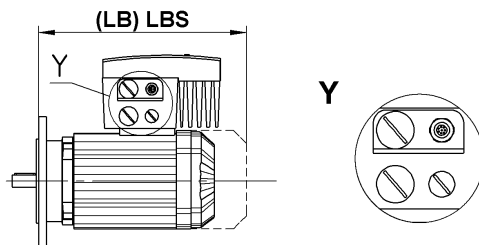


Z

80 152 01 07
Bl. 3 (3)


ASD3

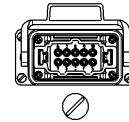


ASA3

 


AMD6

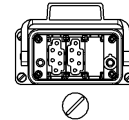


AMA6

 


ASD3+AVT1
ASD3+AVR1

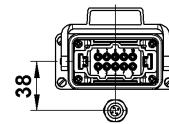



ASA3+AVT1
AS3+AVR1

 


/C/MM-D..

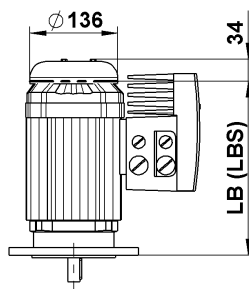


/2W/MM-D..

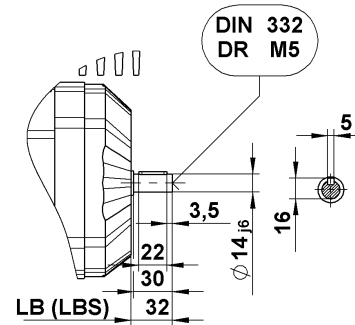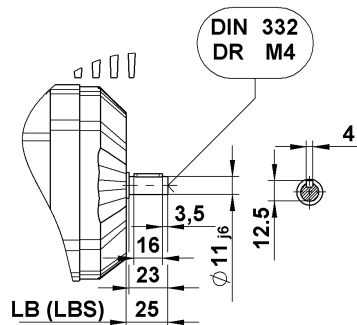

V/MM-D..

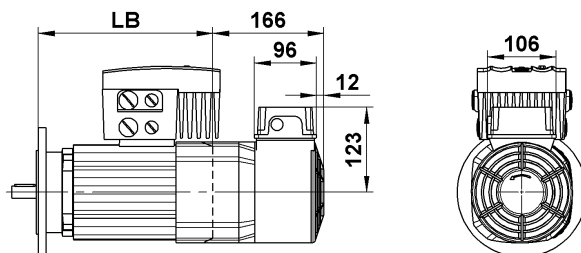


BE/V/MM-D..

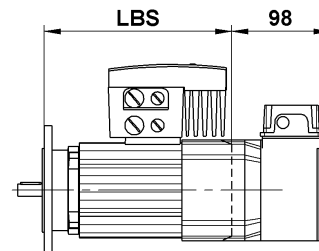


LB = (DR.71..MM..)
LBS = (DR.71.BE..MM..)

**DRS80S, DRE80S, DRU80SJ, DRE80SJ
/FI/MM-D..**


80 153 01 07
Bl. 1 (4)

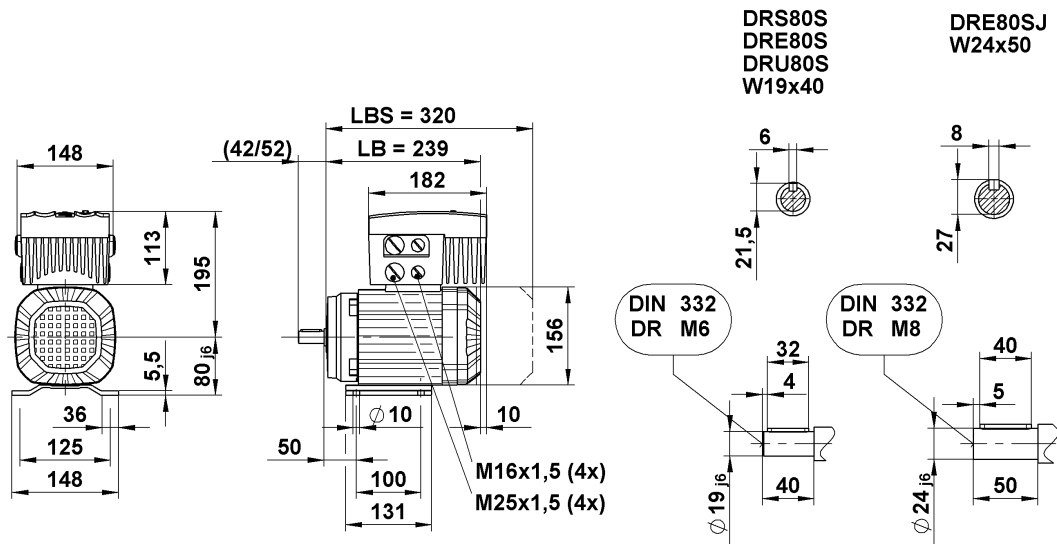

DRS80S, DRU80SJ, DRE80SJ
/FF165

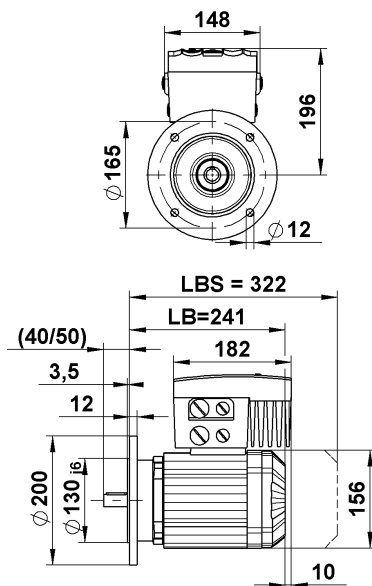


DRE80S
/FF130

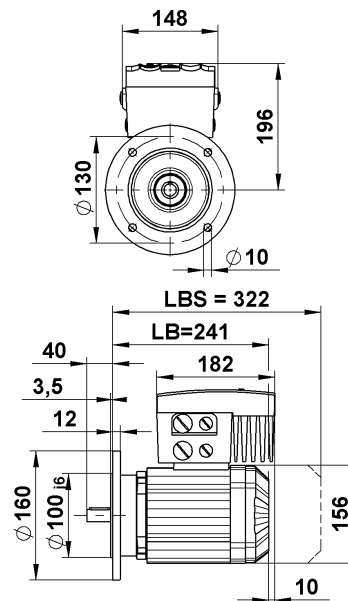


**DRE80M, DRU80MJ
/FI/MM-D..**

80 153 01 07
Bl. 2 (4)

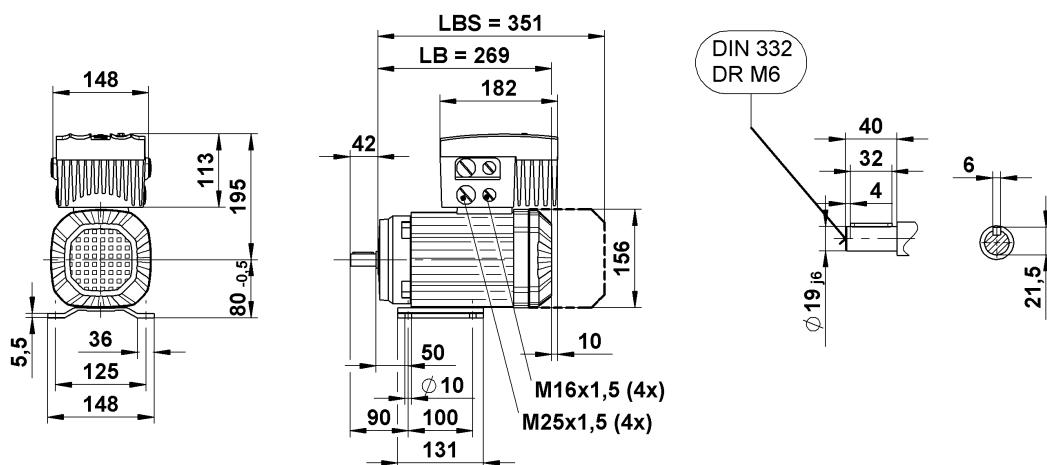


/FF/MM-D..



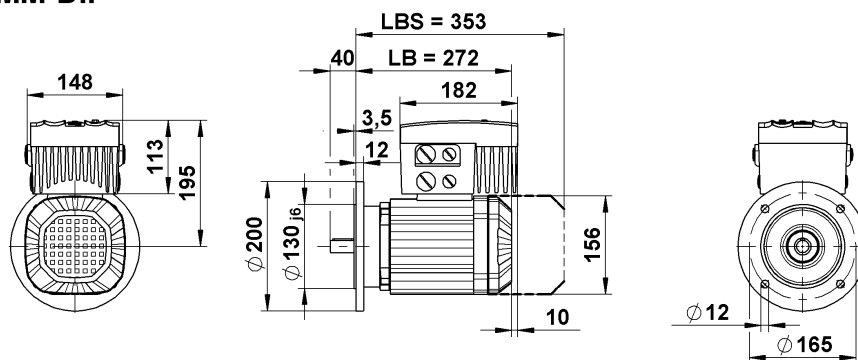


DRS80M, DRE80MJ
/FI../MM-D.. (MM11,MM15)




80 153 01 07
Bl. 3 (4)

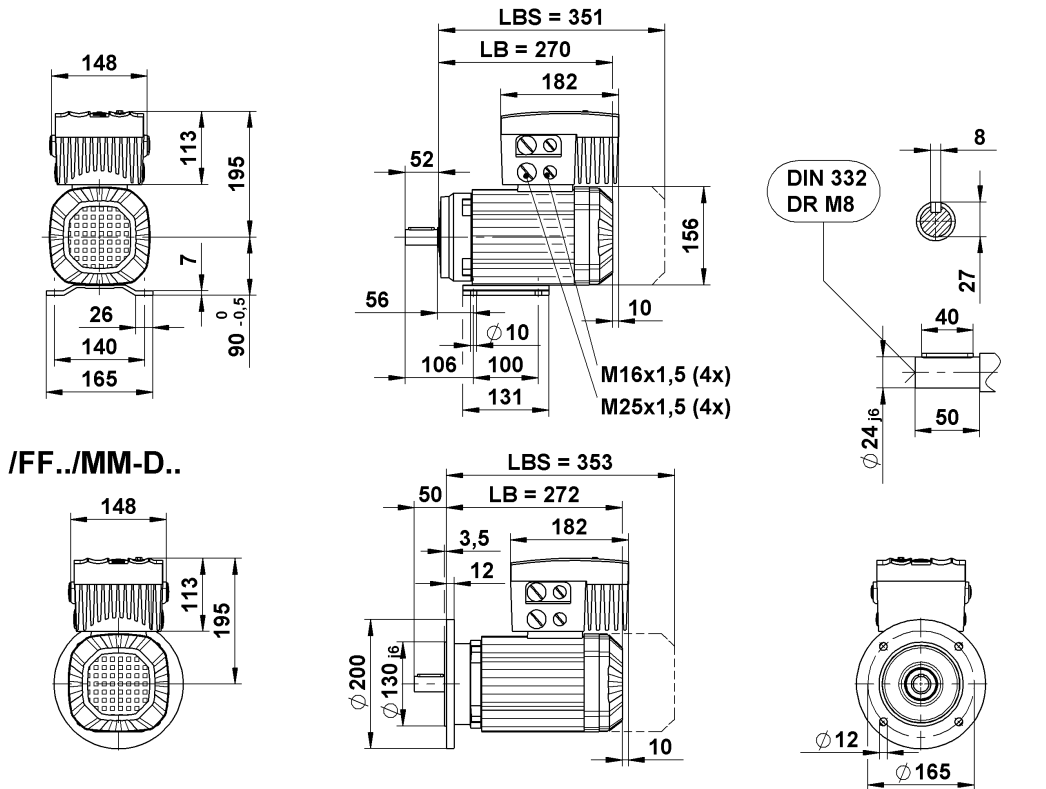




/FF../MM-D..

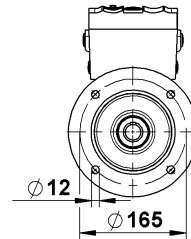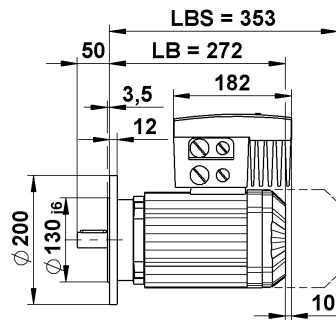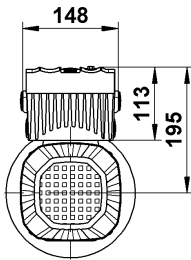


/FI../MM-D.. (MM22)




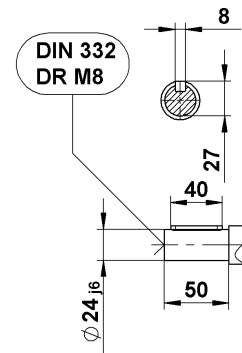
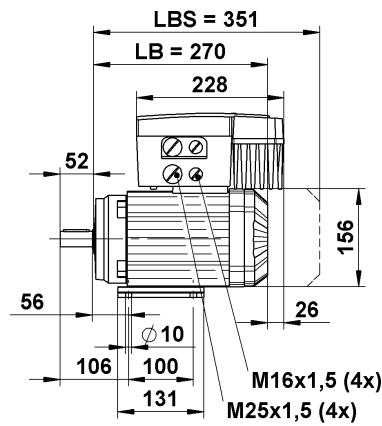
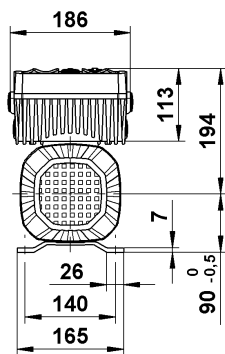


/FF../MM-D.

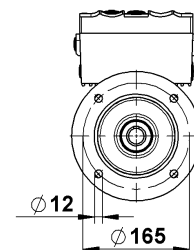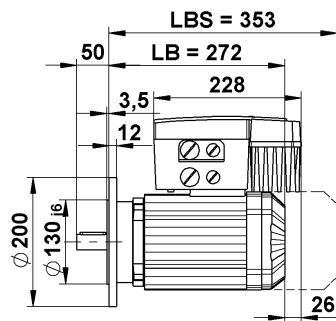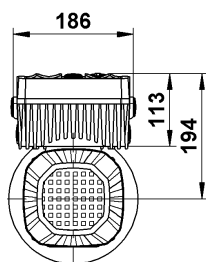

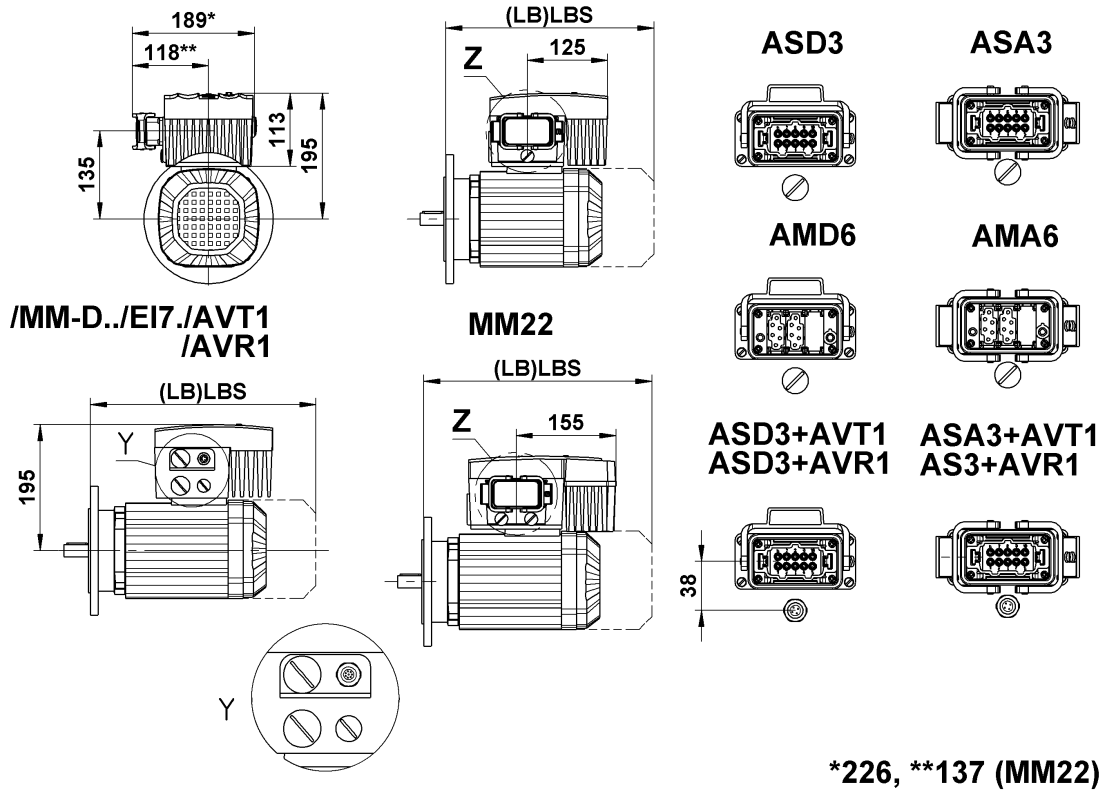
**DR.80..
/MM-D..**
**80 153 01 07
Bl. 4 (4)**


*226, **137 (MM22)

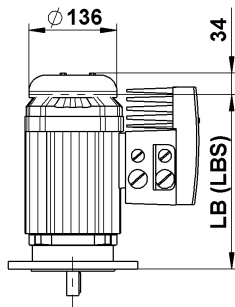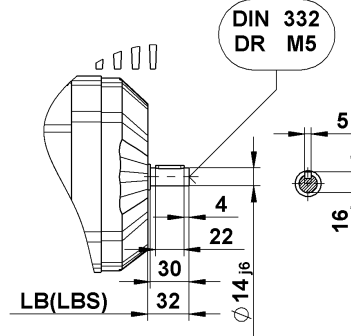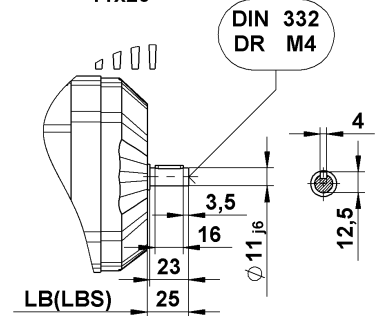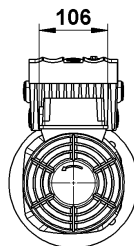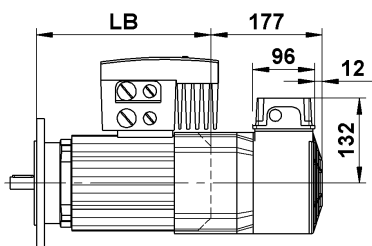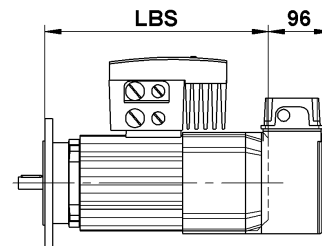
/C/MM-D..

**/2W
14x30**

**/2W
11x23**

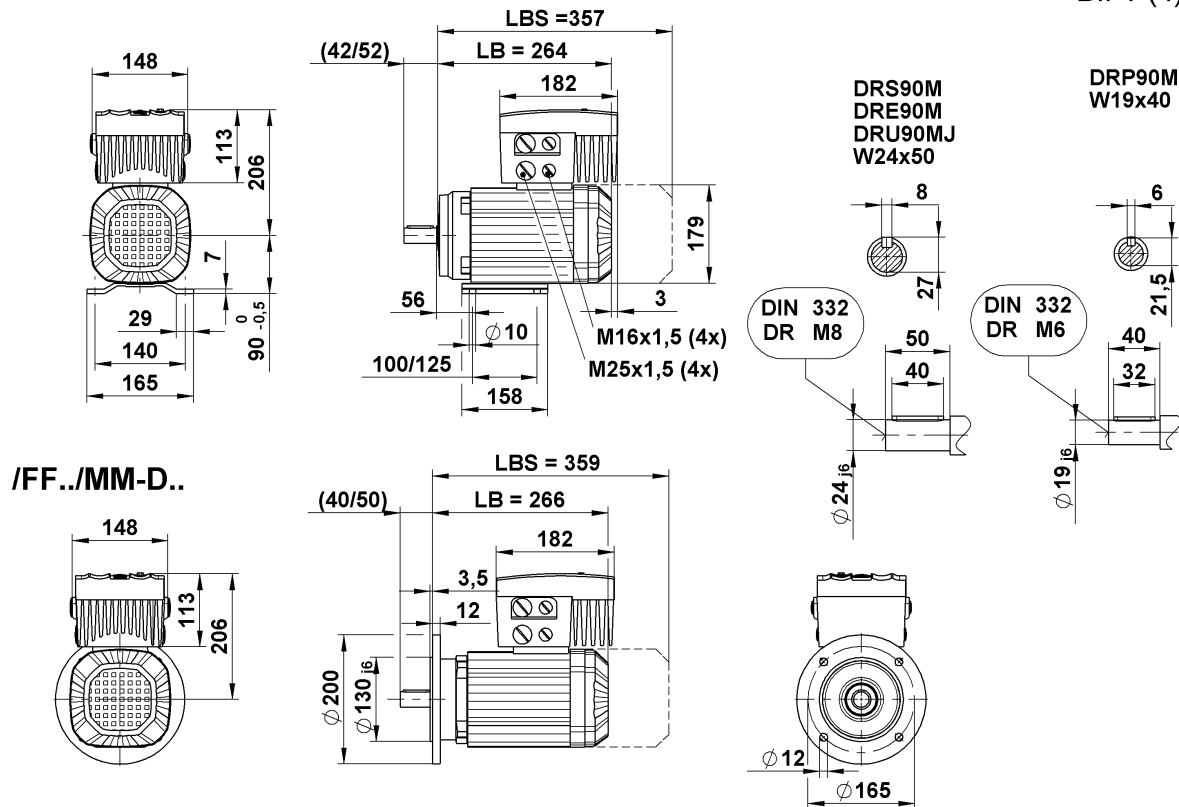/V/MM-D..

BE/V/MM-D..

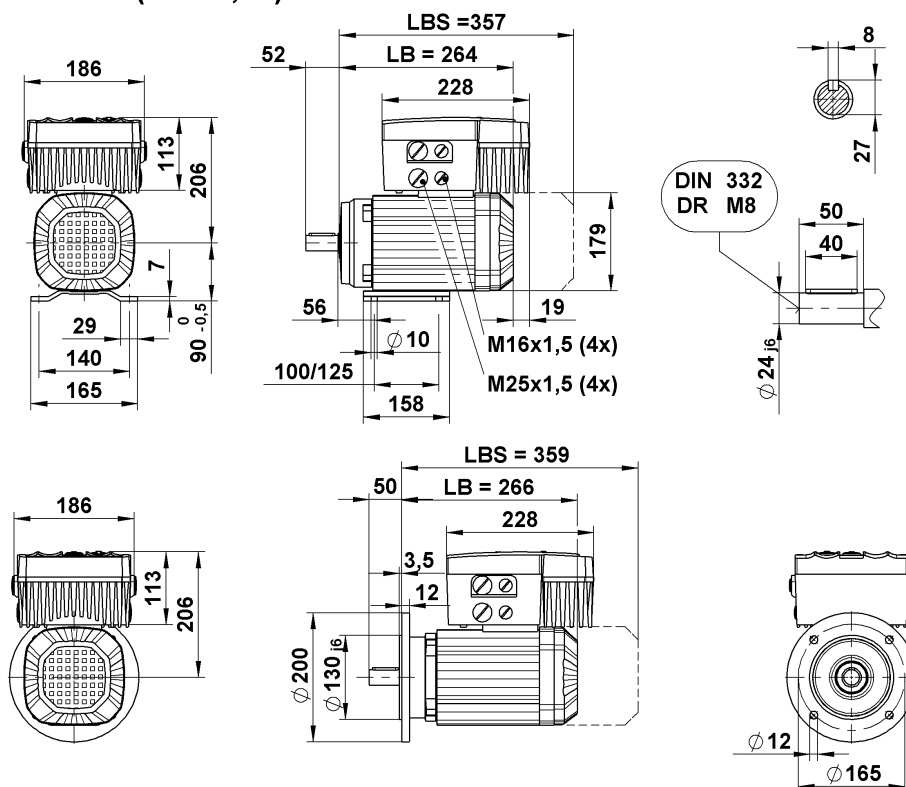 LB = (DR.80../MM..)
 LBS = (DR.80.BE../MM..)



DRP90M, DRS90M, DRE90M, DRU90MJ
/FI../MM-D.. (MM07,11,15)

80 158 01 07
Bl. 1 (4)




DRS90M, DRE90M, DRU90MJ
/FI../MM-D.. (MM22,33)

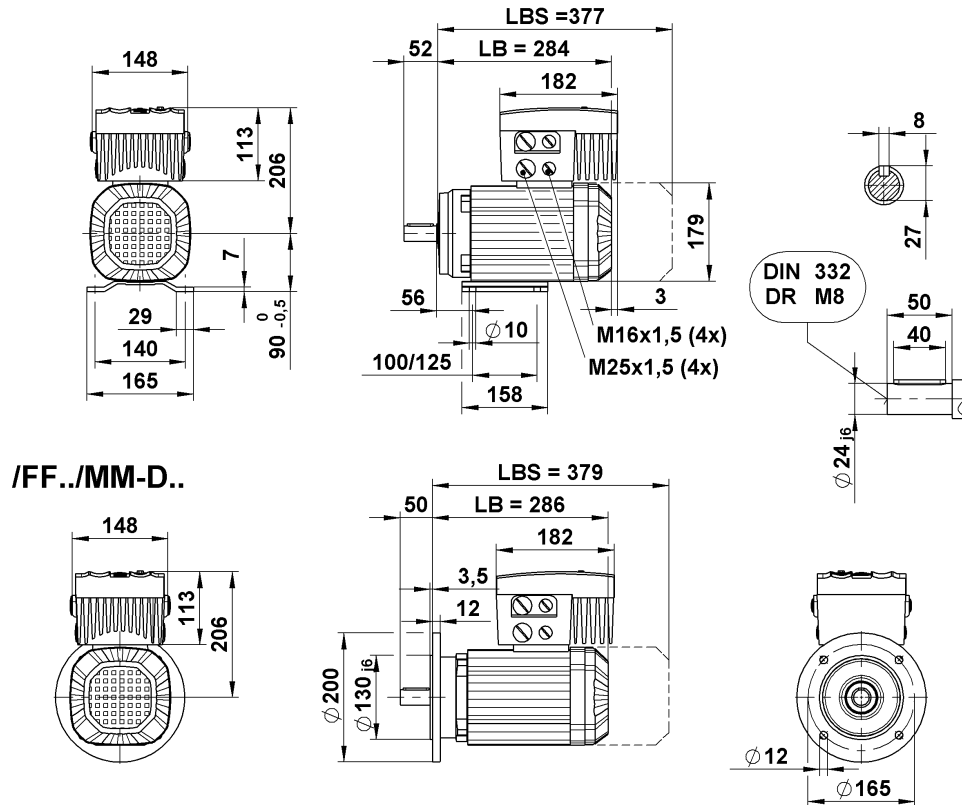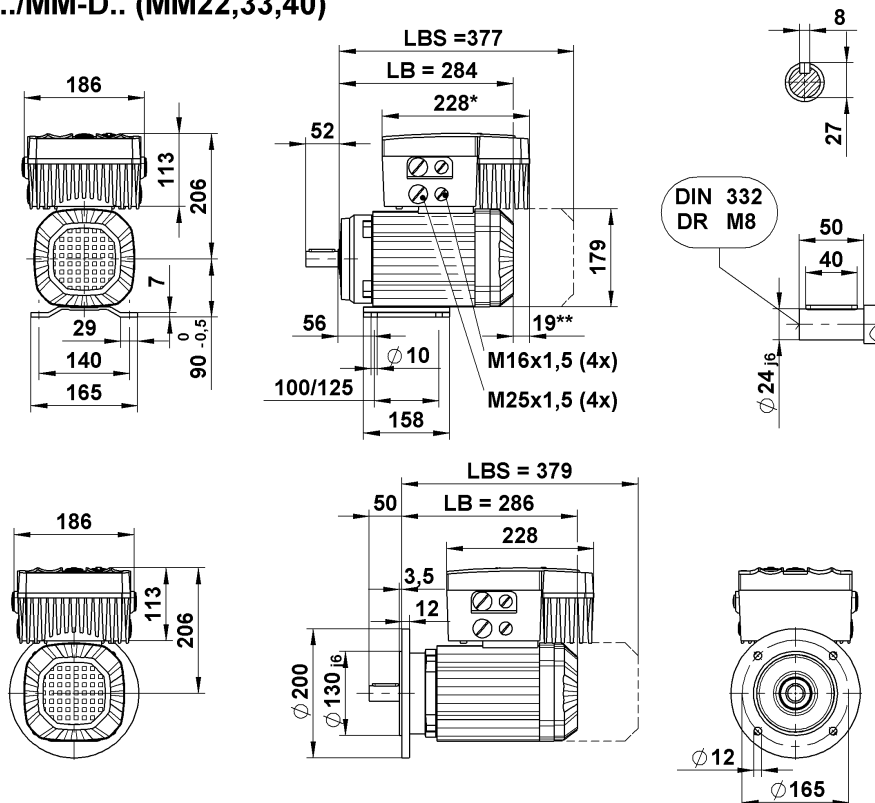


DRP90L, DRE90L, DRU90LJ
/FI../MM-D.. (MM11,15)
80 158 01 07
 Bl. 2 (4)

DRE90L, DRP90L, DRU90LJ
/FI../MM-D.. (MM22,33,40)

***254 (MM40)**
****45 (MM40)**

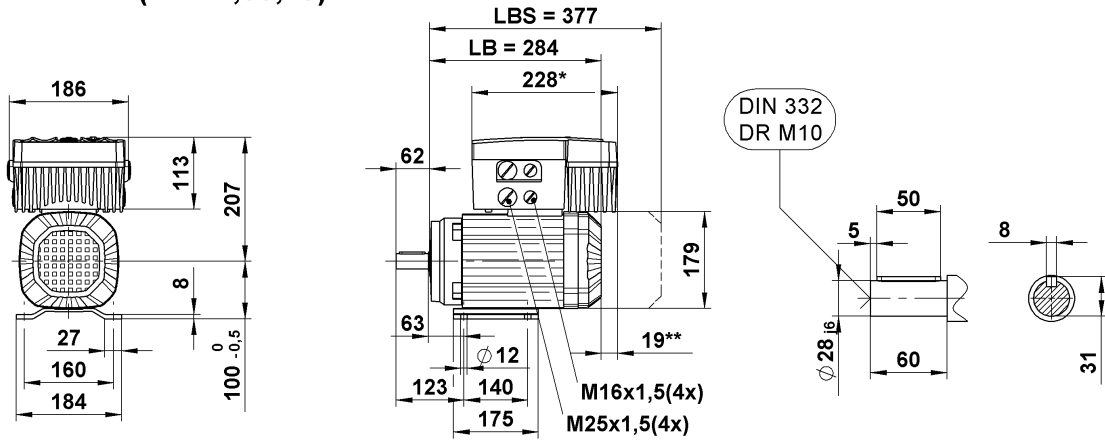DRS90L
DRE90LJ
/FI../MM-D..(MM22,30,40)

80 158 01 07
Bl. 3 (4)

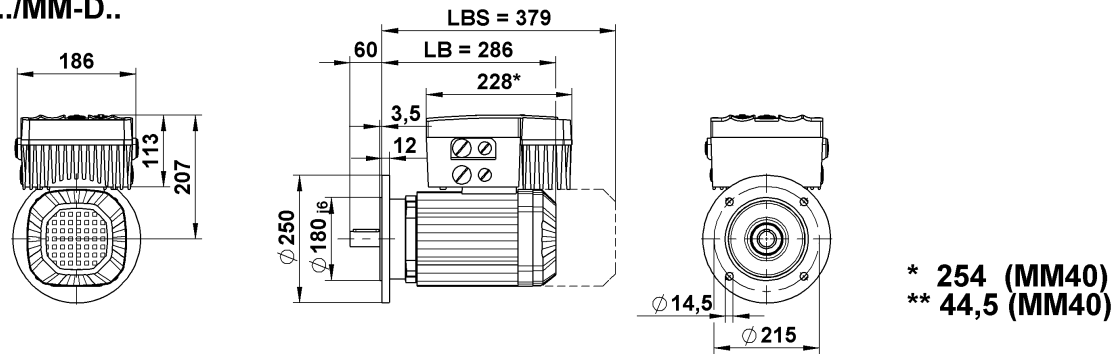


/FF../MM-D..




* 254 (MM40)
** 44,5 (MM40)

DRE90MJ
/FI../MM-D..(MM22,30)


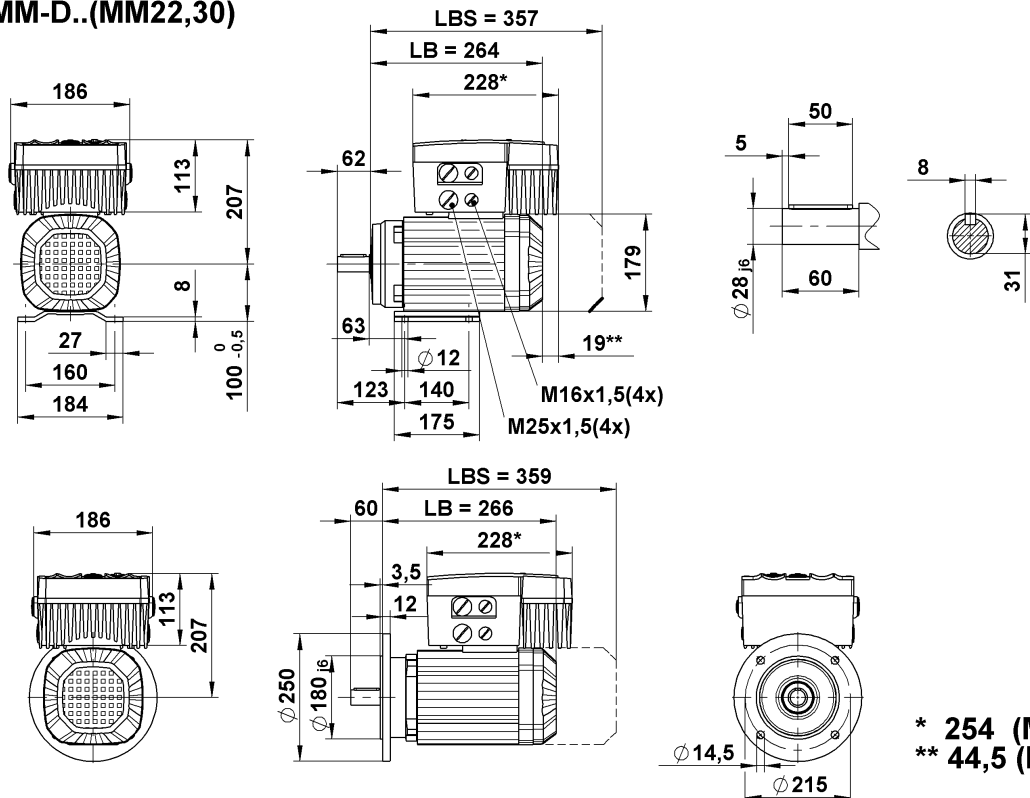


* 254 (MM40)
** 44,5 (MM40)


DR.90M,L
MM-D..

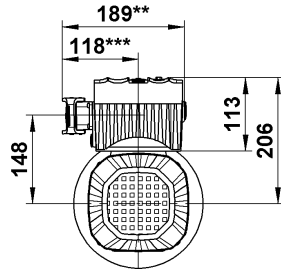


/MM-D../EI7./AVSE
/AVRE

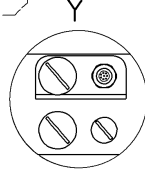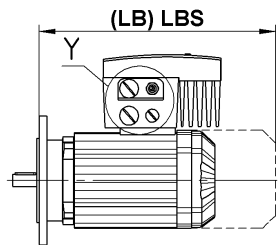

MM11,15

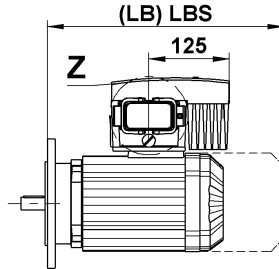


MM22,30,40

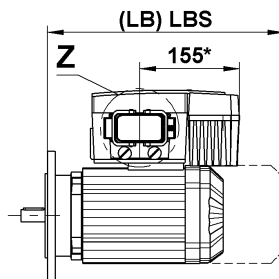


80 158 01 07
Bl. 4 (4)

Z


ASD3

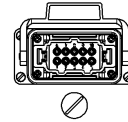


ASA3

 


AMD6

 


AMA6

 

ASD3+AVT1
ASD3+AVR1

 


ASA3+AVT1
AS3+AVR1

 



*181 (MM40)

226, *137 (MM22,30,40)



/C/MM-D..

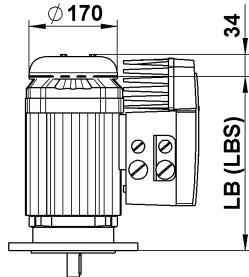


/2W/MM-D..

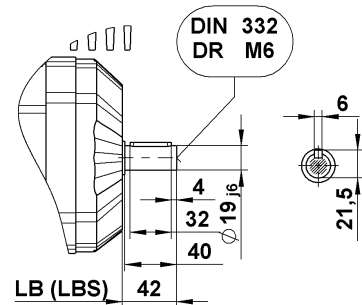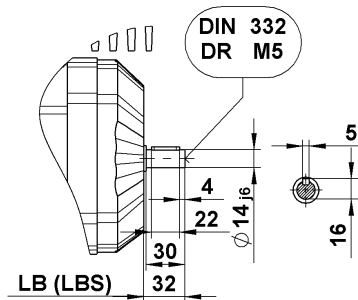

/V/MM-D..

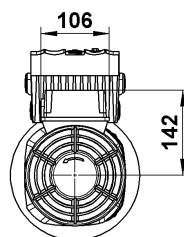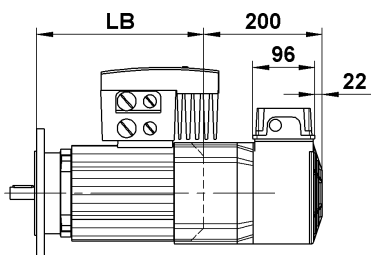


BE/V/MM-D..

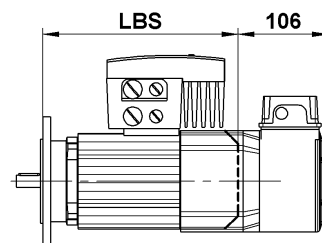


LB = (DR.90..MM..)
LBS = (DR.90.BE..MM..)

DRP100M
FI../MM-D..(MM22,30)

80 161 01 07
Bl. 1 (4)

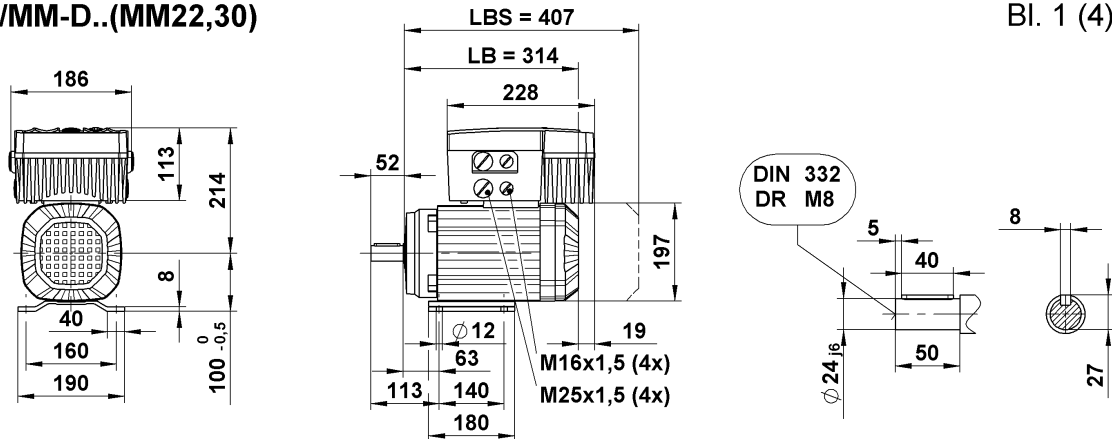


/FF../MM-D..

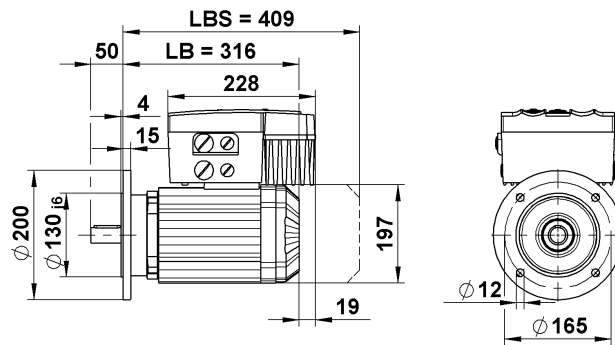




DRP100M
FI../MM-D..(MM15)

14

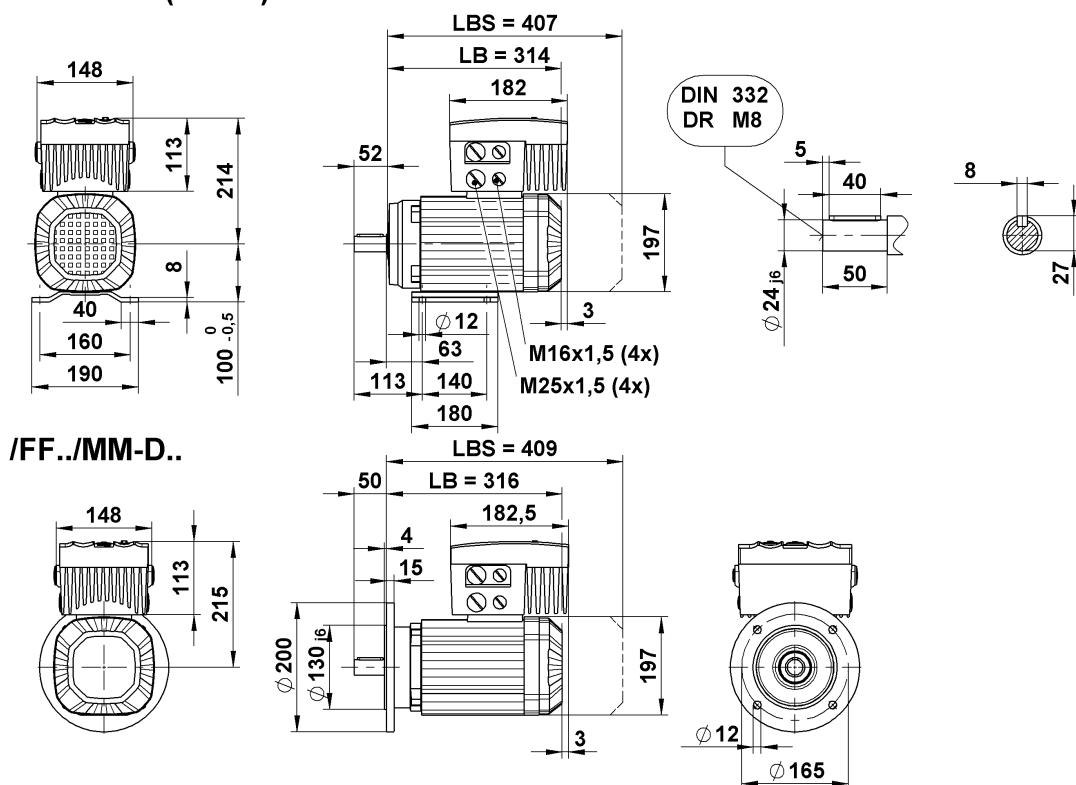


/FF../MM-D..

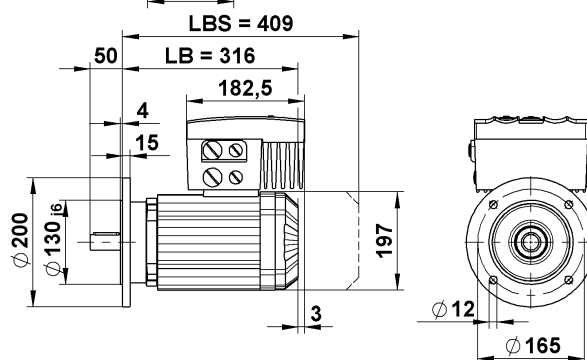

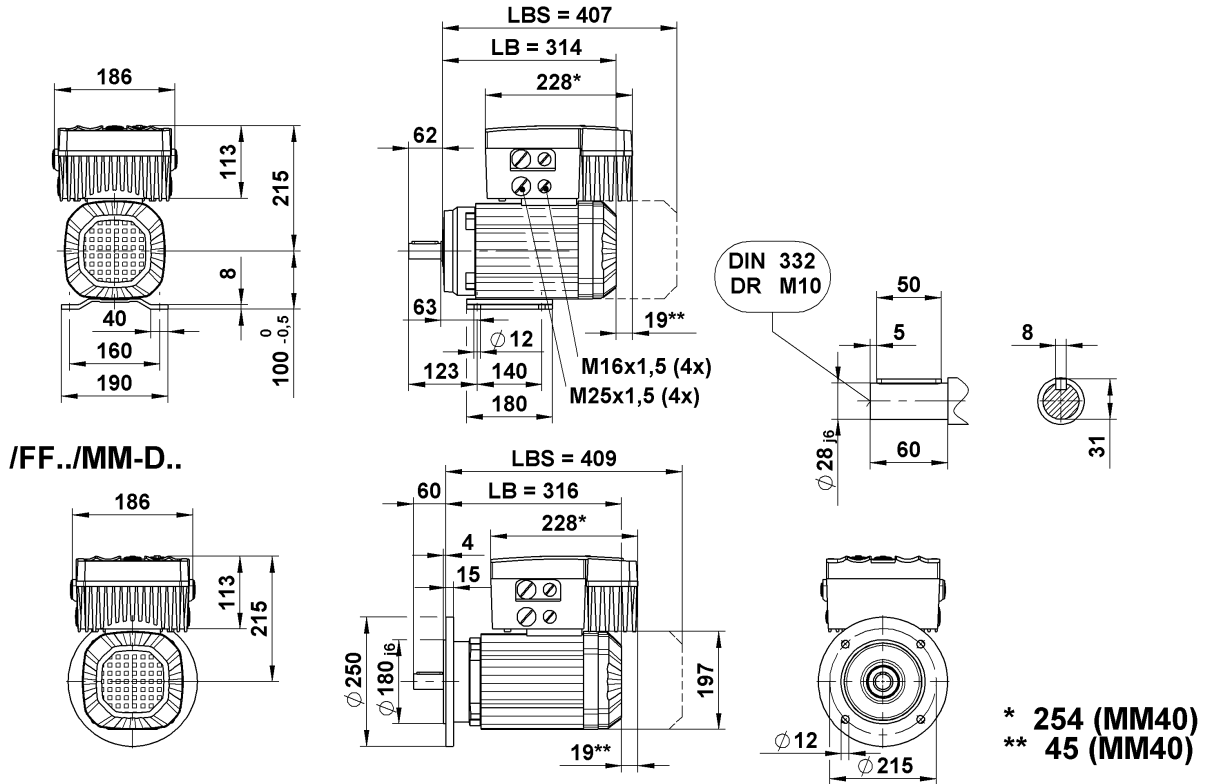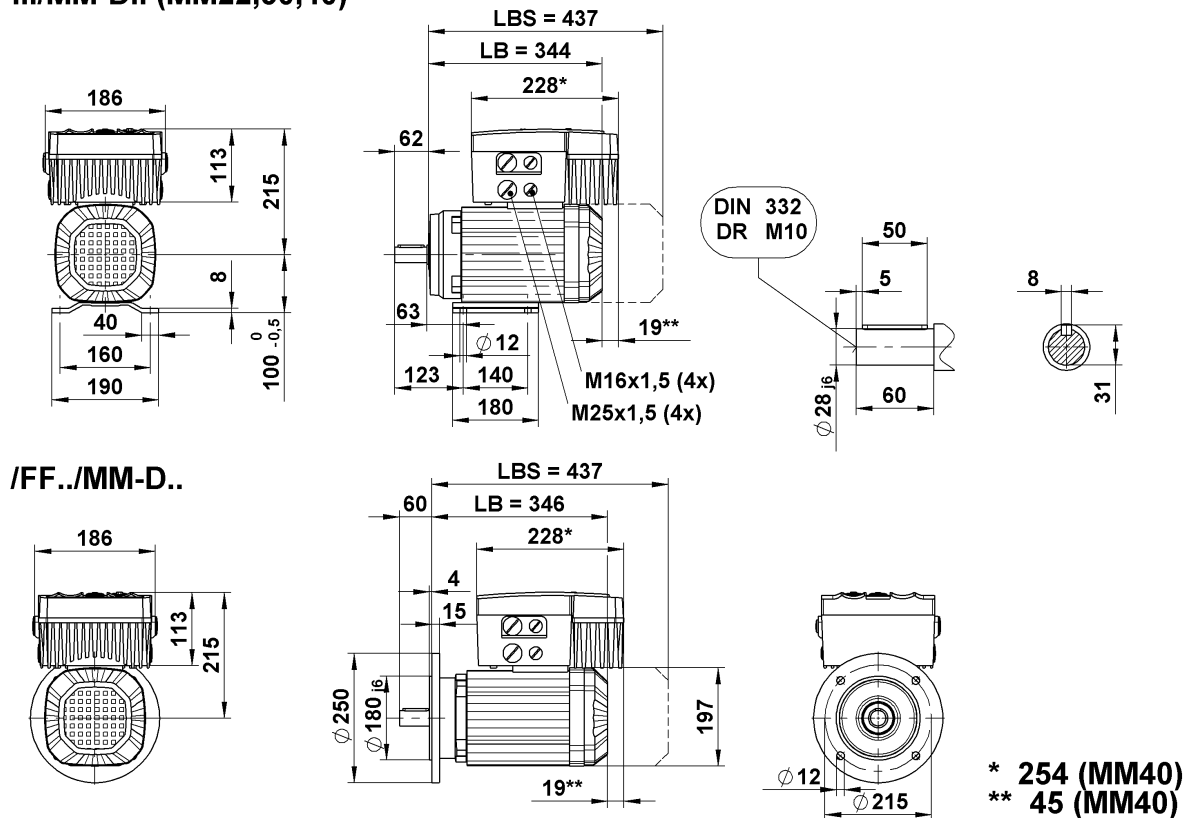
DRS100M, DRE100M, DRE100MJ, DRU100MJ
/FI../MM-D.. (MM22,30,40)
80 161 01 07
 Bl. 2 (4)

DRP100L, DRE100L, DRE100LC, DRU100LJ
/FI../MM-D.. (MM22,30,40)


DRS100LC
/FI../MM-D..






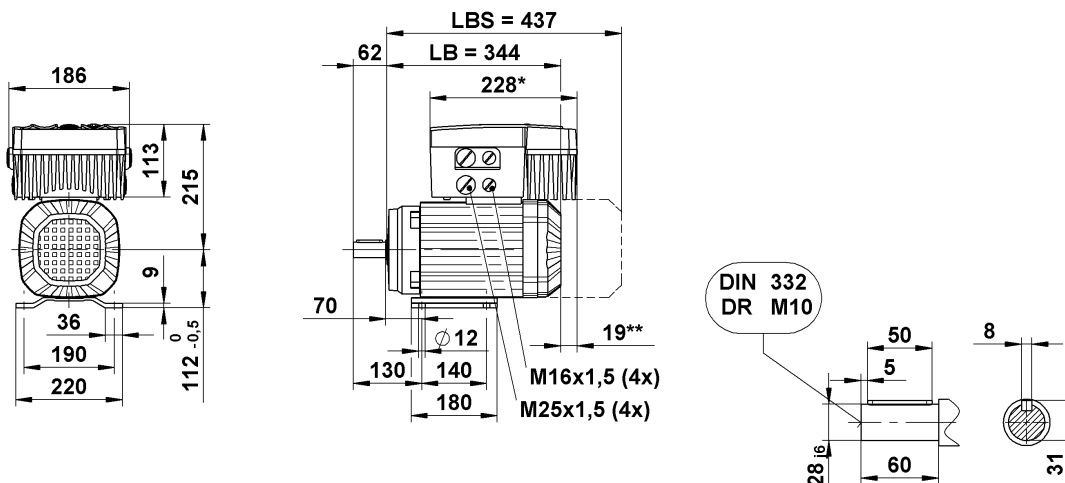
80 161 01 07
Bl. 3 (4)






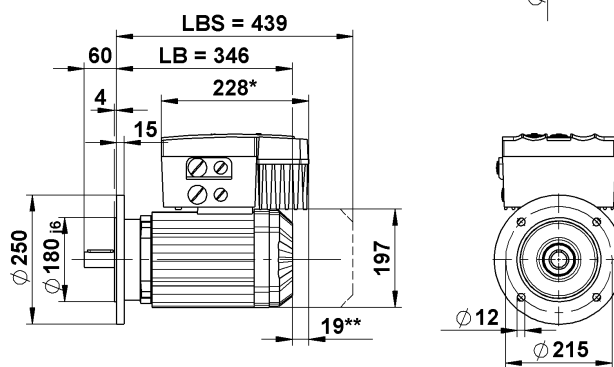



/FF../MM-D..



  * 254 (MM40)
** 44,5 (MM40)

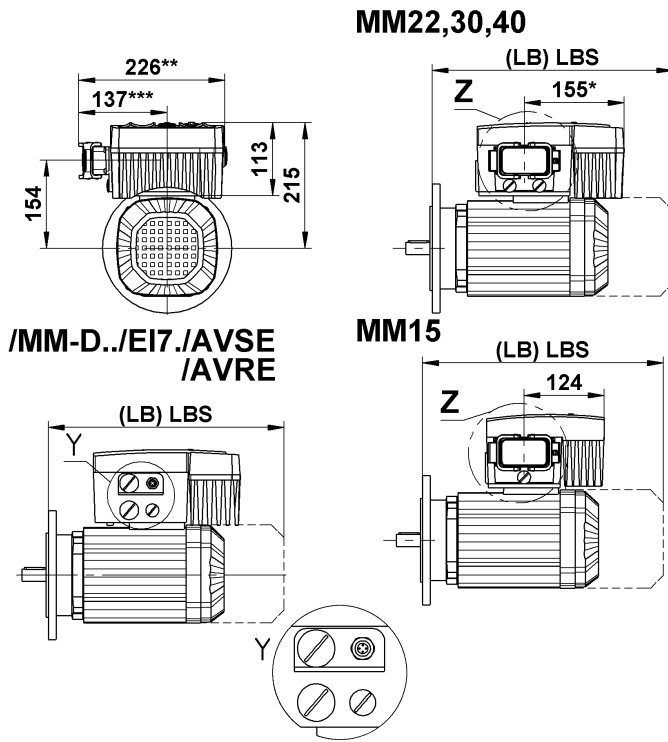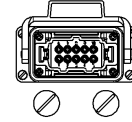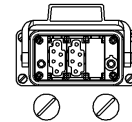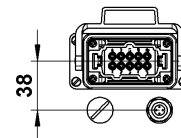
**DR.100..
/MM-D../IV**
80 161 01 07
 Bl. 4 (4)

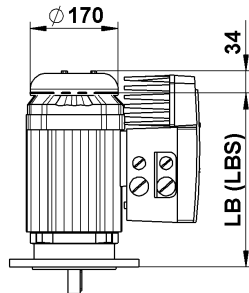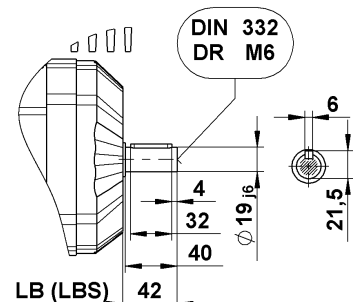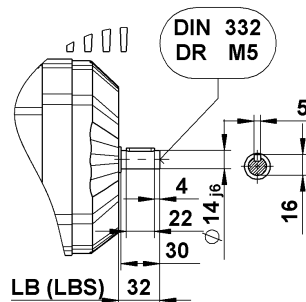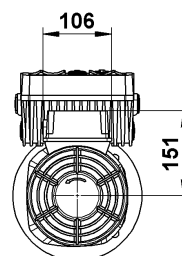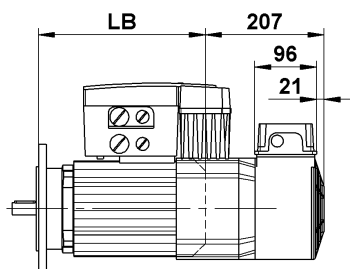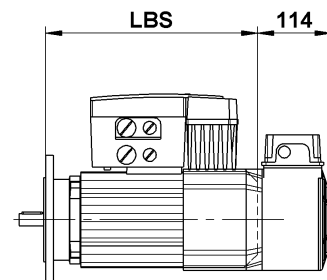ASD3

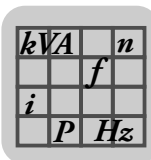Z
ASA3

AMD6

AMA6

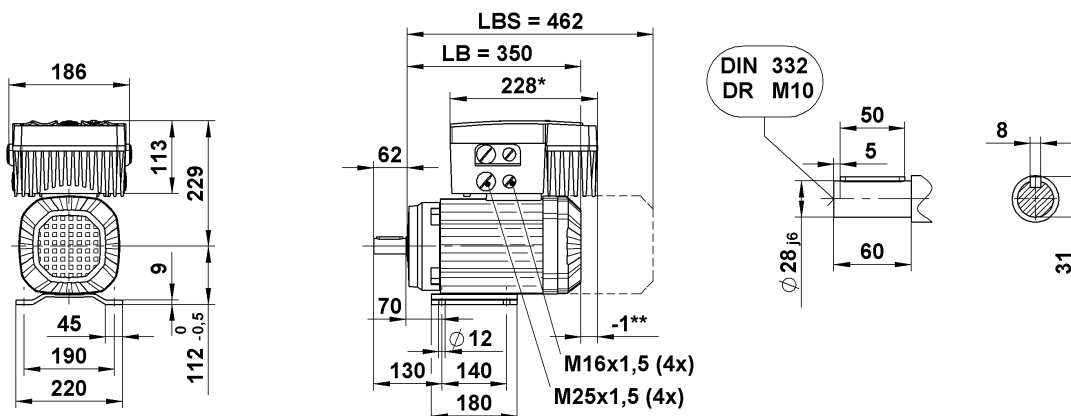**ASD3+AVT1
ASD3+AVR1**

**ASA3+AVT1
ASA3+AVR1**

****189,***118 (MM15)**
***181 (MM40)**
/C/MM-D..

/2W/MM-D..

/V/MM-D..

BE/V/MM-D..

LB = (DR.100..MM..)
LBS = (DR.100.BE..MM..)




DRP112M
/FI../MM-D..












80 162 01 07
Bl. 1 (2)



/FF../MM-D..

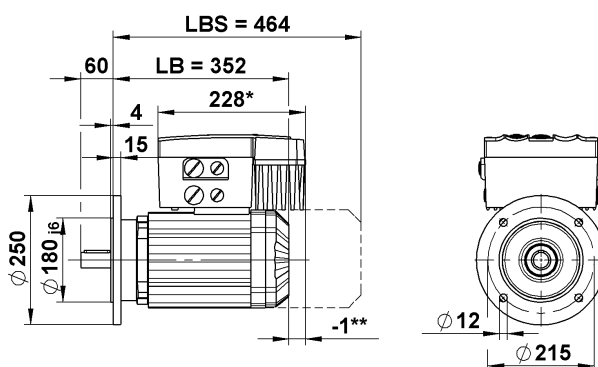


* 254 (MM40)
** 25 (MM40)

   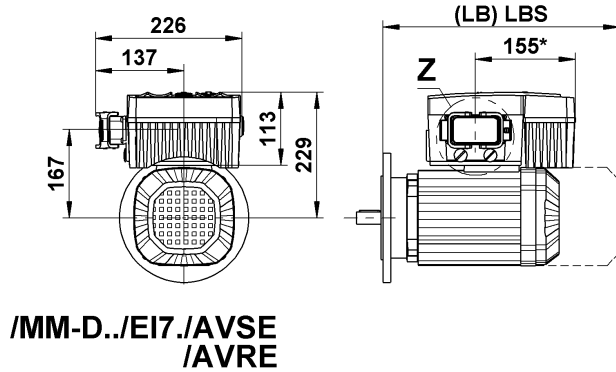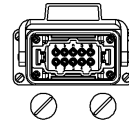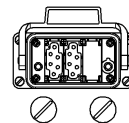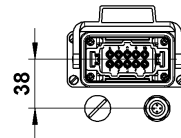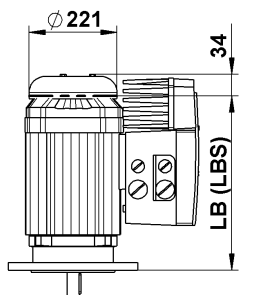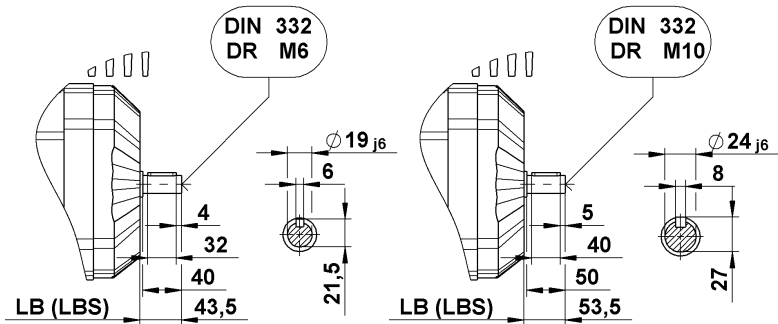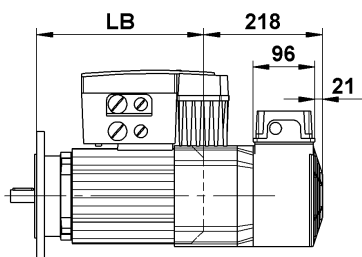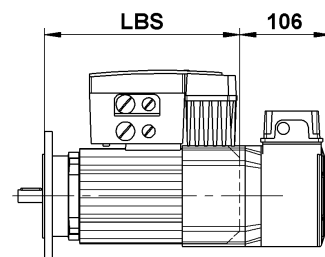
DR.112.
/MM-D..
80 162 01 07
 Bl. 2 (2)
Z**ASD3****ASA3****AMD6****AMA6**
ASD3+AVT1
ASD3+AVR1

ASA3+AVT1
ASA3+AVR1

*** 181 (MM40)**
/C/MM-D..

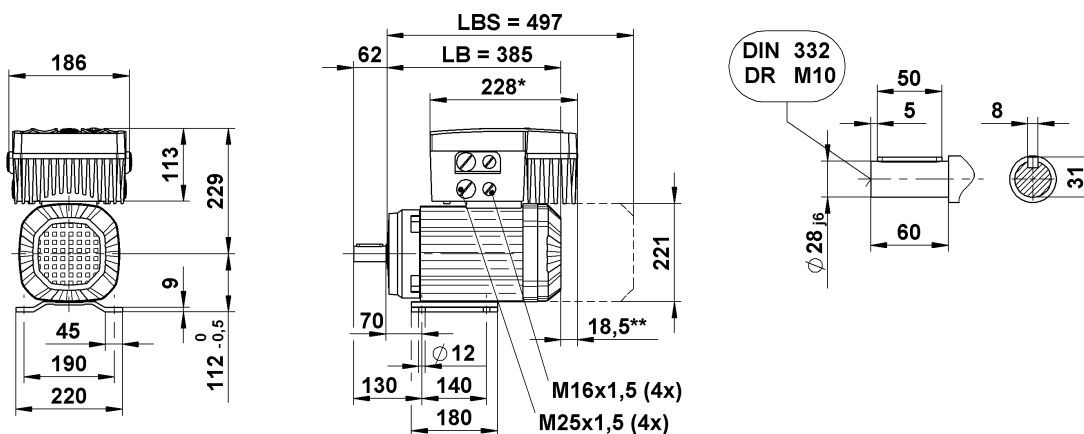/2W/MM-D..

/V/MM-D..

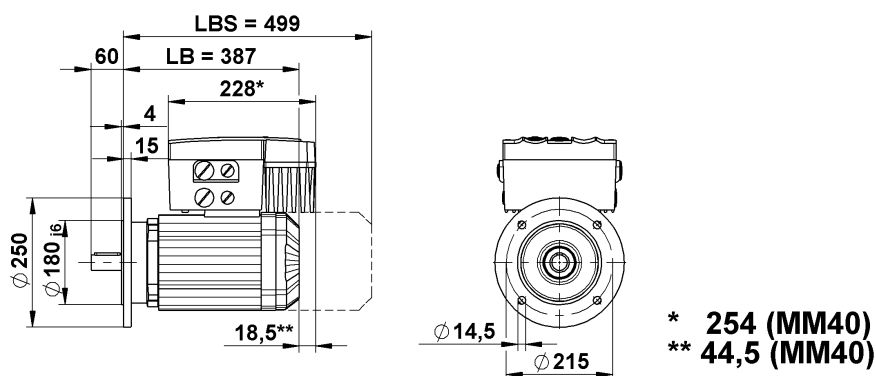BE/V/MM-D..

LB = (DR.112..MM..)
LBS = (DR.112.BE..MM..)

DRE132S/Fl../MM-D..

80 165 01 07
Bl. 1 (2)





/FF../MM-D..





DR.132.
/MM-D..

80 165 01 07
Bl. 2 (2)


Z

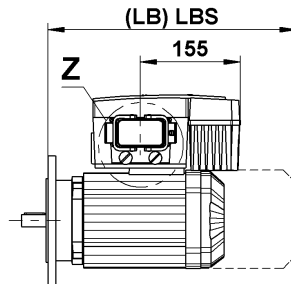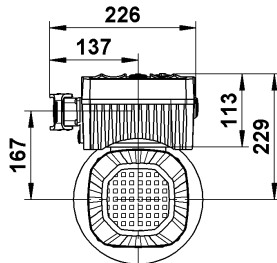


/MM-D../AVSE
/AVRE

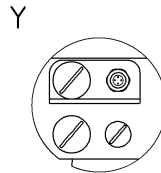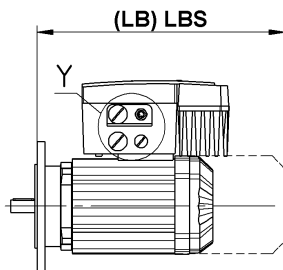


ASD3

 


AMD6

 


ASA3

 


AMA6

 

ASD3+AVT1
ASD3+AVR1

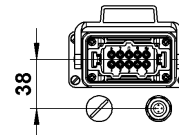




ASA3+AVT1
ASA3+AVR1

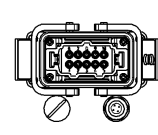

* 181 (MM40)



/C/MM-D..

/2W/MM-D..

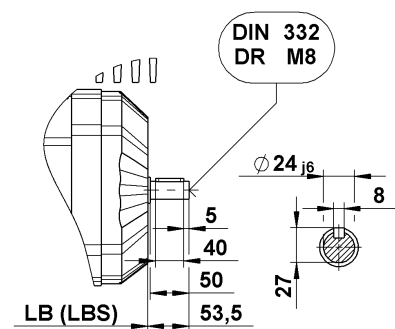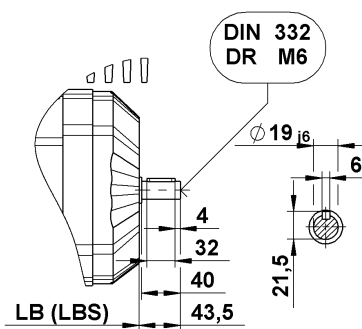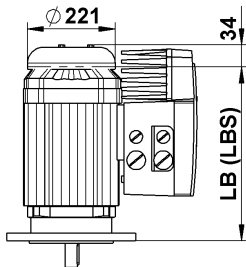


/V/MM-D..

BE/V/MM-D..

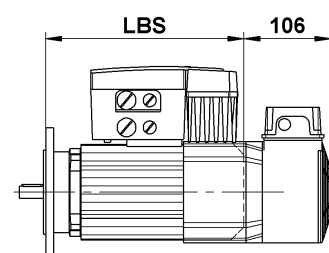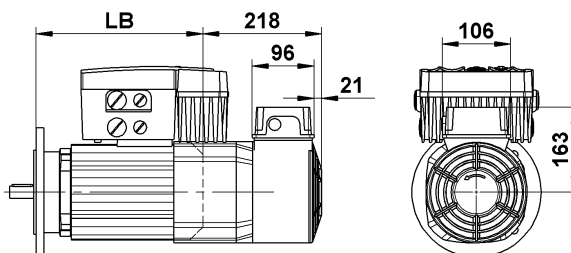


LB = (DR.132..MM..)
LBS = (DR.132.BE..MM..)

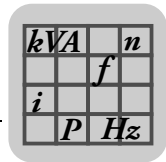

14.7 Fieldbus interfaces

14.7.1 Description

The following figure shows field distributors from SEW-EURODRIVE:

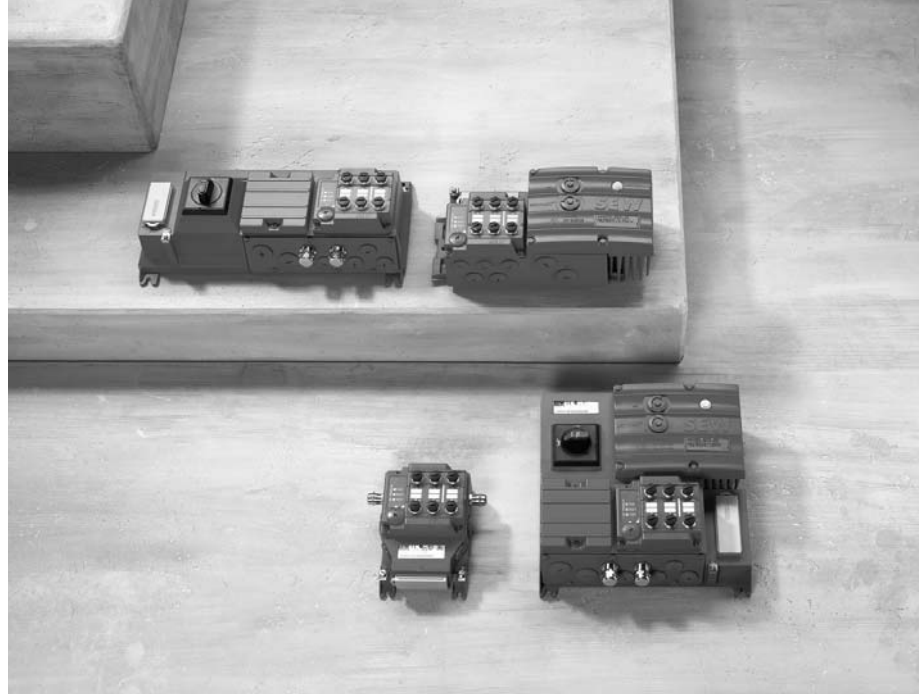


1507298827

Fieldbus interfaces MF.. / MQ..

Type MF.. fieldbus interfaces allow for connecting MOVIMOT® and MOVI-SWITCH® drives to a standardized fieldbus system. These fieldbus interfaces not only allow for controlling MOVIMOT® and MOVI-SWITCH® drives but also for reading sensor signals as well as controlling actuators via the digital output terminals. All fieldbus interfaces and field distributors are supplied in IP65 degree of protection as standard.


Type MQ.. fieldbus interfaces are based on the same housing and fieldbus technology as type MF.. fieldbus interfaces but are additionally equipped with an integrated control featuring the following functions:

- Programmable using IPOS^{plus}®
- Simple positioning with EI76 incremental encoder
- Integrated I/O preprocessing and timing elements
- Protocol modification

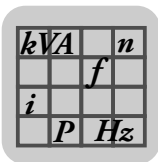


Installation topology

The following figure shows the installation topology of MOVIFIT® with fieldbus interfaces MF.. / MQ.. and field distributors:

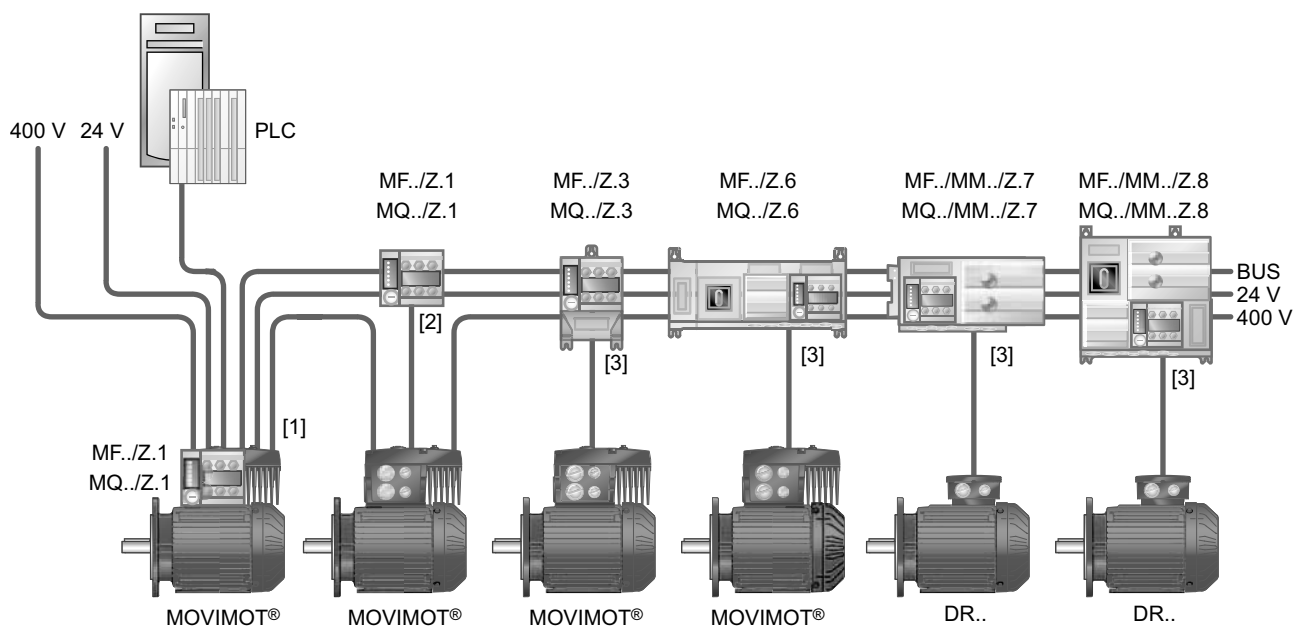


5068858507

- [1] Fieldbus interface of the drive
- [2] Fieldbus interface in the field
- [3] Fieldbus interface of the field distributor

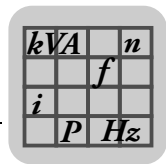

14.7.2 MF../Z.1 fieldbus interfaces

The following figure shows the dimensions of the fieldbus interface MF../Z.1:

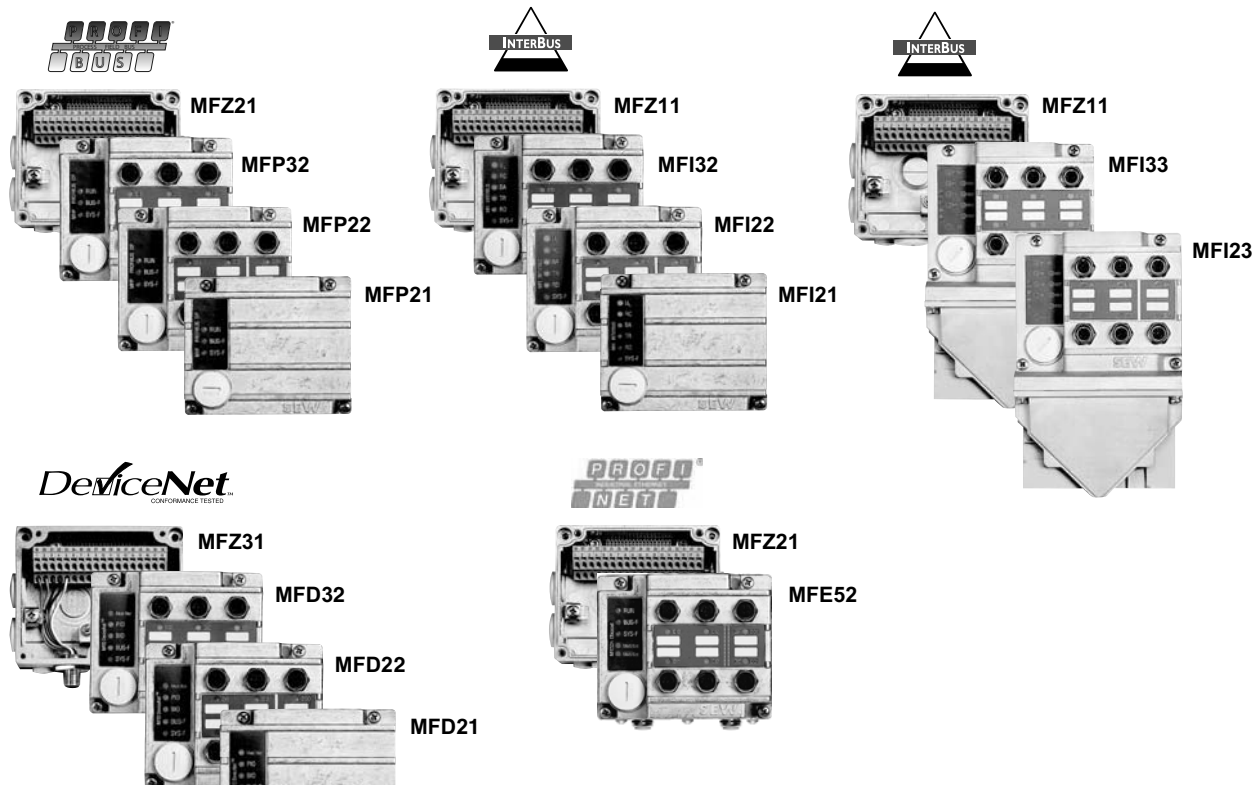


9007200668249483

PROFIBUS variants

The following figure shows the PROFIBUS variants of the fieldbus interface MF../Z.1:

Module type	MFP21D	MFP22D	MFP32D
Part number	823 624 0	823 625 9	823 626 7
Connection technology	Terminals	M12 and terminals	M12 and terminals
Sensors/actuators			
Binary inputs	4	4	6
Binary outputs	2	2	0
Associated module carrier	MFZ21D or MFZ21D/AVT2/AWT2		
Part number	823 627 5 or 824 299 2		
Fieldbus connection technology	Terminals or M12 plug connectors		
Module + module carrier	MFP21D/Z21D..	MFP22D/Z21D..	MFP32D/Z21D..

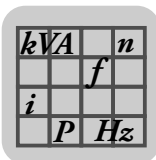

INTERBUS variants

The following figure shows the INTERBUS variants of the fieldbus interface MF../Z.1:

Module type	MFI21A	MFI22A	MFI32A
Part number	823 526 0	823 527 9	823 528 7
Connection technology	Terminals	M12 and terminals	M12 and terminals
Sensors/actuators			
Binary inputs	4	4	6
Binary outputs	2	2	0
Associated module carrier	MFZ11A		
Part number	823 514 7		
Fieldbus connection technology	Terminals		
Module + module carrier	MFI21A/Z11A	MFI22A/Z11A	MFI32A/Z11A

INTERBUS variants with fiber optic cable and Rugged Line connector (Phoenix Contact)

The following figure shows the INTERBUS variants with fiber optic cable of the fieldbus interface MF../Z.1:

Module type	MFI23F	MFI33F
Part number	824 335 2	824 336 0
Connection technology	FO (via Rugged Line connector)	
Sensors/actuators	M12 and terminals	
Binary inputs	4	6
Binary outputs	2	0
Associated module carrier	MFZ11A	
Part number	823 514 7	
Module + module carrier	MFI23F/Z11A	MFI33F/Z11A

PROFINET IO variant

The following figure shows the PROFINET I/O variant of the fieldbus interface MF../Z.1:


Module type	MFE52A
Part number	1 824 137 9
Connection technology	
Fieldbus	M12, D-coded
Sensors/actuators	M12 and terminals
Binary inputs	4 or 6 ¹⁾
Binary outputs	2 or 0 ¹⁾
Associated module carrier	MFZ21D
Part number	823 627 5
Module + module carrier	MFE52A/Z21D

1) Startup configuration: 4 DI and 2 DO or 6 DI and 0 DO

DeviceNet variants


The following figure shows the DeviceNet variants of the fieldbus interface MF../Z.1:

Module type	MFD21A	MFD22A	MFD32A
Part number	823 551 1	823 552 X	823 553 8
Connection technology	Terminals	M12 and terminals	M12 and terminals
Sensors/actuators			
Binary inputs	4	4	6
Binary outputs	2	2	0
Associated module carrier	MFZ31A		
Part number	823 548 1		
Fieldbus connection technology	Micro-style connector		
Module + module carrier	MFD21A/Z31A	MFD22A/Z31A	MFD32A/Z31A

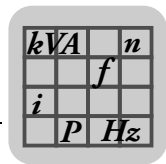

14.7.3 MQ../Z.1 fieldbus interfaces

The following figure shows the variants of the fieldbus interface MQ../Z.1:

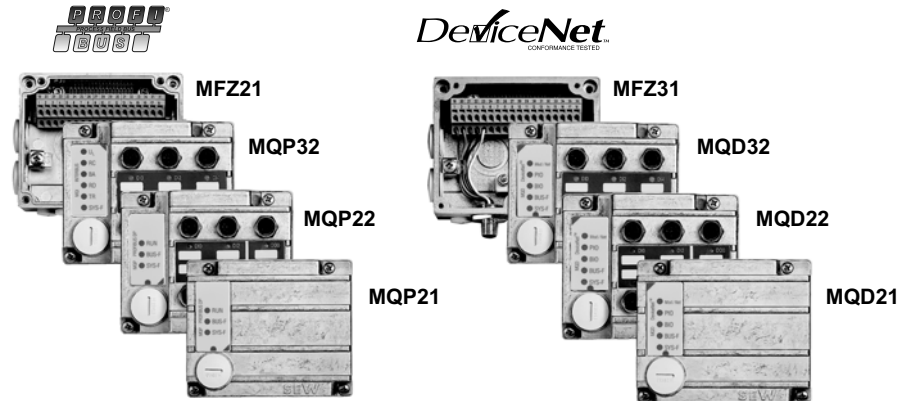

18014399923590411

PROFIBUS variants

The following figure shows the PROFIBUS variants of the fieldbus interface MQ../Z.1:


Module type	MQP21D	MQP22D	MQP32D
Part number	824 190 2	824 191 0	824 192 9
Connection technology	Terminals	M12 and terminals	M12 and terminals
Sensors/actuators			
Binary inputs	4	4	6
Binary outputs	2	2	0
Associated module carrier	MFZ21D or MFZ21D/AVT2/AWT2		
Part number	823 627 5 or 824 299 2		
Fieldbus connection technology	Terminals or M12 plug connectors		
Module + module carrier	MQP21D/Z21D..	MQP22D/Z21D..	MQP32D/Z21D..

14

DeviceNet variants

The following figure shows the DeviceNet variants of the fieldbus interface MQ../Z.1:


Module type	MQD21A	MQD22A	MQD32A
Part number	824 200 3	824 201 1	824 202 X
Connection technology	Terminals	M12 and terminals	M12 and terminals
Sensors/actuators			
Binary inputs	4	4	6
Binary outputs	2	2	0
Associated module carrier	MFZ31A		
Part number	823 548 1		
Fieldbus connection technology	Micro-style connector		
Module + module carrier	MQD21A/Z31A	MQD22A/Z31A	MQD32A/Z31A

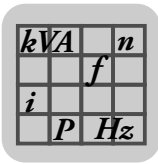


14.7.4 Dimension drawings MF../Z.1, MQ../Z.1 fieldbus interfaces

Dimension sheet
fieldbus interfaces
MF../MQ..

The following figure shows the dimensions of the fieldbus interface MF../MQ.. :


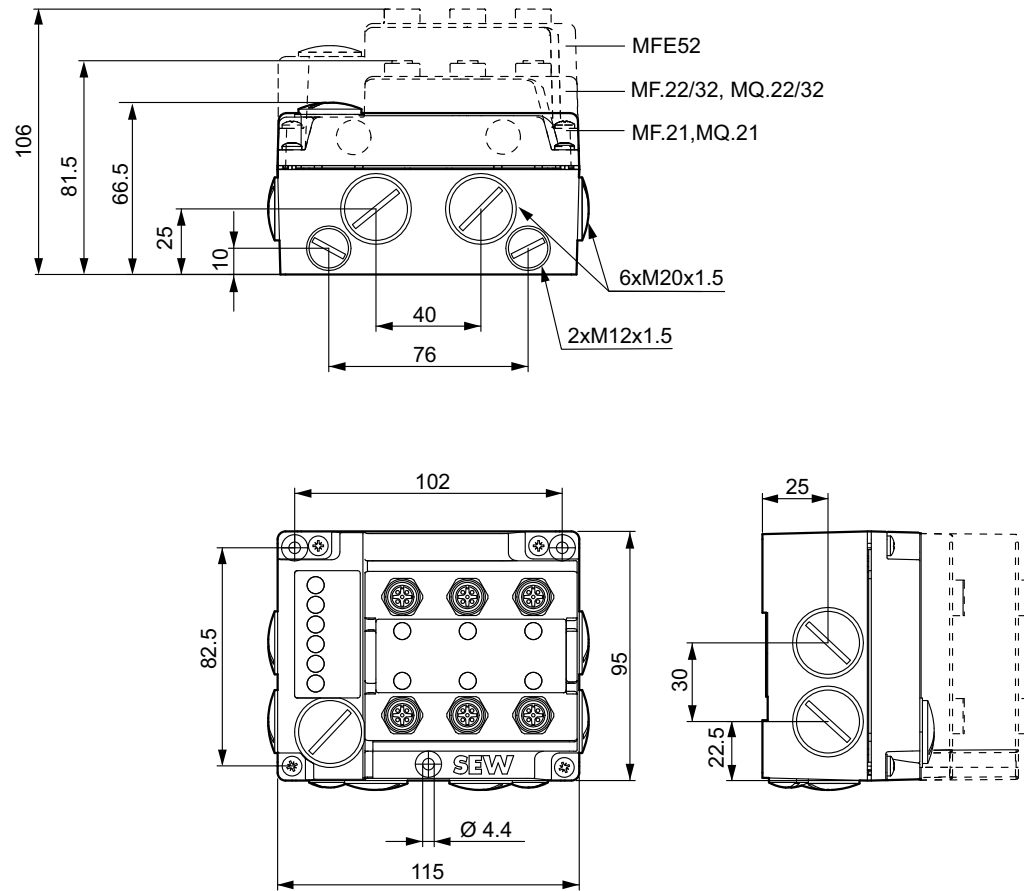


9007200670406923

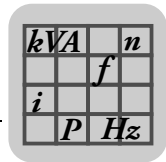


Dimension drawing
of MFI23/MFI33
fieldbus interface
with Rugged Line
connection

The following figure shows the dimensions of the fieldbus interface MFI23/MFI33:

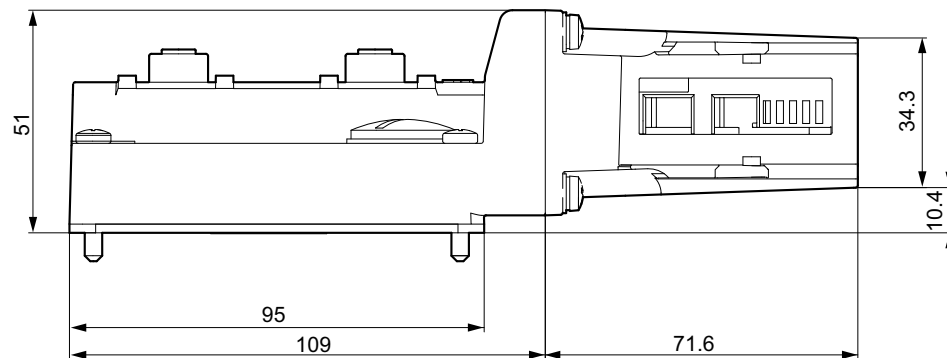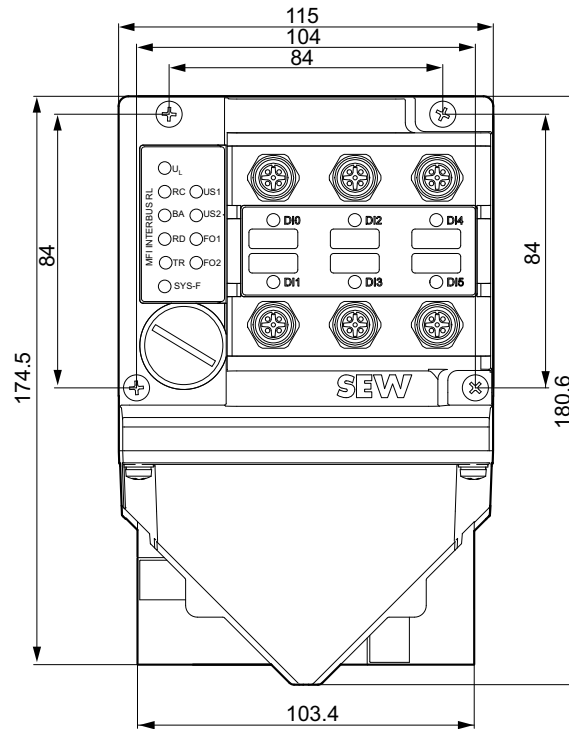

1415668491

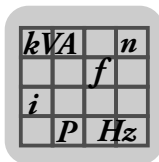

15 Address Directory

Germany			
Headquarters Production Sales	Bruchsal	SEW-EURODRIVE GmbH & Co KG Ernst-Blickle-Straße 42 D-76646 Bruchsal P.O. Box Postfach 3023 • D-76642 Bruchsal	Tel. +49 7251 75-0 Fax +49 7251 75-1970 http://www.sew-eurodrive.de sew@sew-eurodrive.de
	Bruchsal	SEW-EURODRIVE GmbH & Co KG Christian-Pähr-Str.10 D-76646 Bruchsal	Tel. +49 7251 75-0 Fax +49 7251 75-2970
	Graben	SEW-EURODRIVE GmbH & Co KG Ernst-Blickle-Straße 1 D-76676 Graben-Neudorf P.O. Box Postfach 1220 • D-76671 Graben-Neudorf	Tel. +49 7251 75-0 Fax +49 7251 75-2970
	Östringen	SEW-EURODRIVE GmbH & Co KG, Werk Östringen Franz-Gurk-Straße 2 D-76684 Östringen	Tel. +49 7253 9254-0 Fax +49 7253 9254-90 oesstringen@sew-eurodrive.de
Service Competence Center	Mechanics / Mechatronics	SEW-EURODRIVE GmbH & Co KG Ernst-Blickle-Straße 1 D-76676 Graben-Neudorf	Tel. +49 7251 75-1710 Fax +49 7251 75-1711 sc-mitte@sew-eurodrive.de
	Electronics	SEW-EURODRIVE GmbH & Co KG Ernst-Blickle-Straße 42 D-76646 Bruchsal	Tel. +49 7251 75-1780 Fax +49 7251 75-1769 sc-elektronik@sew-eurodrive.de
Drive Technology Center	North	SEW-EURODRIVE GmbH & Co KG Alte Ricklinger Straße 40-42 D-30823 Garbsen (near Hannover)	Tel. +49 5137 8798-30 Fax +49 5137 8798-55 sc-nord@sew-eurodrive.de
	East	SEW-EURODRIVE GmbH & Co KG Dänkritzer Weg 1 D-08393 Meerane (near Zwickau)	Tel. +49 3764 7606-0 Fax +49 3764 7606-30 sc-ost@sew-eurodrive.de
	South	SEW-EURODRIVE GmbH & Co KG Domagkstraße 5 D-85551 Kirchheim (near München)	Tel. +49 89 909552-10 Fax +49 89 909552-50 sc-sued@sew-eurodrive.de
	West	SEW-EURODRIVE GmbH & Co KG Siemensstraße 1 D-40764 Langenfeld (near Düsseldorf)	Tel. +49 2173 8507-30 Fax +49 2173 8507-55 sc-west@sew-eurodrive.de
	Drive Service Hotline / 24 Hour Service		+49 800 SEWHELP +49 800 7394357
Technical Offices	Augsburg	SEW-EURODRIVE GmbH & Co KG August-Wessels-Straße 27 D-86156 Augsburg	Tel. +49 821 22779-10 Fax +49 821 22779-50 tb-augsburg@sew-eurodrive.de
	Berlin	SEW-EURODRIVE GmbH & Co KG Lilienthalstraße 3a D-12529 Schönefeld	Tel. +49 306331131-30 Fax +49 306331131-36 tb-berlin@sew-eurodrive.de
	Bodensee	SEW-EURODRIVE GmbH & Co KG Dornierstraße 4 D-88677 Markdorf	Tel. +49 7544 96590-90 Fax +49 7544 96590-99 tb-bodensee@sew-eurodrive.de
	Bremen	SEW-EURODRIVE GmbH & Co KG Bornstr.19 ... 22 D-28195 Bremen	Tel. +49 421 33918-10 Fax +49 421 33918-22 tb-bremen@sew-eurodrive.de
	Dortmund	SEW-EURODRIVE GmbH & Co KG Hildastraße 8 D-44145 Dortmund	Tel. +49 231 229028-10 Fax +49 231 229028-20 tb-dortmund@sew-eurodrive.de



Germany			
Dresden	SEW-EURODRIVE GmbH & Co KG Hauptstraße 32 D-01445 Radebeul	Tel. +49 351 26338-0 Fax +49 351 26338-38 tb-dresden@sew-eurodrive.de	
Erfurt	SEW-EURODRIVE GmbH & Co KG Dubliner Straße 12 D-99091 Erfurt	Tel. +49 361 21709-70 Fax +49 361 21709-79 tb-erfurt@sew-eurodrive.de	
Güstrow	SEW-EURODRIVE GmbH & Co KG Am Gewerbegrund 3 D-18273 Güstrow P.O. Box Postfach 1216 • D-18262 Güstrow	Tel. +49 3843 8557-80 Fax +49 3843 8557-88 tb-guestrow@sew-eurodrive.de	
Hamburg	SEW-EURODRIVE GmbH & Co KG Bramfelder Straße 119 D-22305 Hamburg	Tel. +49 40 298109-60 Fax +49 40 298109-70 tb-hamburg@sew-eurodrive.de	
Hannover/Garbsen	SEW-EURODRIVE GmbH & Co KG Alte Ricklinger Str.40-42 D-30823 Garbsen P.O. Box Postfach 1104 53 • D-30804 Garbsen	Tel. +49 5137 8798-10 Fax +49 5137 8798-50 tb-hannover@sew-eurodrive.de	
Heilbronn	SEW-EURODRIVE GmbH & Co KG Zeppelinstraße 7 D-74357 Bönningheim	Tel. +49 7143 8738-0 Fax +49 7143 8738-25 tb-heilbronn@sew-eurodrive.de	
Herford	SEW-EURODRIVE GmbH & Co KG Göbenstraße 3 – 7 32052 Herford	Tel. +49 5221 9141-0 Fax +49 5221 9141-20 tb-herford@sew-eurodrive.de	
Karlsruhe	SEW-EURODRIVE GmbH & Co KG Ettlinger Weg 2 D-76467 Bietigheim P.O. Box Postfach 43 • D-76463 Bietigheim	Tel. +49 7245 9190-10 Fax +49 7245 9190-20 tb-karlsruhe@sew-eurodrive.de	
Kassel	SEW-EURODRIVE GmbH & Co KG Lange Straße 14 D-34253 Lohfelden	Tel. +49 561 95144-80 Fax +49 561 95144-90 tb-kassel@sew-eurodrive.de	
Koblenz	SEW-EURODRIVE GmbH & Co KG Bahnstraße 17a D-56743 Mendig	Tel. +49 2652 9713-30 Fax +49 2652 9713-40 tb-koblenz@sew-eurodrive.de	
Lahr	SEW-EURODRIVE GmbH & Co KG Europastraße 3/1 D-77933 Lahr / Schwarzwald	Tel. +49 7821 90999-60 Fax +49 7821 90999-79 tb-lahr@sew-eurodrive.de	
Langenfeld	SEW-EURODRIVE GmbH & Co KG Siemensstraße 1 D-40764 Langenfeld	Tel. +49 2173 8507-10 Fax +49 2173 8507-50 tb-langenfeld@sew-eurodrive.de	
Magdeburg	SEW-EURODRIVE GmbH & Co KG Breiteweg 53 D-39179 Barleben	Tel. +49 39203 7577-1 Fax +49 39203 7577-9 tb-magdeburg@sew-eurodrive.de	
Mannheim	SEW-EURODRIVE GmbH & Co KG Besselstraße 26 D-68219 Mannheim	Tel. +49 621 71683-10 Fax +49 621 71683-22 tb-mannheim@sew-eurodrive.de	
München	SEW-EURODRIVE GmbH & Co KG Domagkstraße 5 D-85551 Kirchheim	Tel. +49 89 90955-110 Fax +49 89 90955-150 tb-muenchen@sew-eurodrive.de	
Münster	SEW-EURODRIVE GmbH & Co KG Hafenplatz 4 D-48155 Münster	Tel. +49 251 41475-11 Fax +49 251 41475-50 tb-muenster@sew-eurodrive.de	



Germany			
	Nürnberg	SEW-EURODRIVE GmbH & Co KG Plattenäckerweg 6 D-90455 Nürnberg	Tel. +49 911 98884-50 Fax +49 911 98884-60 tb-nuernberg@sew-eurodrive.de
	Regensburg	SEW-EURODRIVE GmbH & Co KG Im Gewerbepark A15 D-93059 Regensburg	Tel. +49 941 46668-68 Fax +49 941 46668-66 tb-regensburg@sew-eurodrive.de
	Rhein-Main	SEW-EURODRIVE GmbH & Co KG Niederstedter Weg 5 D-61348 Bad Homburg	Tel. +49 6172 9617-0 Fax +49 6172 9617-50 tb-rheinmain@sew-eurodrive.de
	Stuttgart	SEW-EURODRIVE GmbH & Co KG Friedrich-List-Straße 46 D-70771 Leinfelden-Echterdingen	Tel. +49 711 16072-0 Fax +49 711 16072-72 tb-stuttgart@sew-eurodrive.de
	Ulm	SEW-EURODRIVE GmbH & Co KG Dieselstraße 14 D-89160 Dornstadt	Tel. +49 7348 9885-0 Fax +49 7348 9885-90 tb-ulm@sew-eurodrive.de
	Drive Center Würzburg	SEW-EURODRIVE GmbH & Co KG Nürnbergerstraße 118 D-97076 Würzburg-Lengfeld	Tel. +49 931 27886-60 Fax +49 931 27886-66 tb-wuerzburg@sew-eurodrive.de
	Zwickau / Meerane	SEW-EURODRIVE GmbH & Co KG Dänkritzter Weg1 D-08393 Meerane	Tel. +49 3764 7606-0 Fax +49 3764 7606-20 tb-zwickau@sew-eurodrive.de
France			
Production Sales Service	Hagenau	SEW-USOCOME 48-54 route de Soufflenheim B. P. 20185 F-67506 Hagenau Cedex	Tel. +33 3 88 73 67 00 Fax +33 3 88 73 66 00 http://www.usocom.com sew@usocom.com
Production	Forbach	SEW-USOCOME Zone industrielle Technopôle Forbach Sud B. P. 30269 F-57604 Forbach Cedex	Tel. +33 3 87 29 38 00
Assembly Sales Service	Bordeaux	SEW-USOCOME Parc d'activités de Magellan 62 avenue de Magellan - B. P. 182 F-33607 Pessac Cedex	Tel. +33 5 57 26 39 00 Fax +33 5 57 26 39 09
	Lyon	SEW-USOCOME Parc d'affaires Roosevelt Rue Jacques Tati F-69120 Vaulx en Velin	Tel. +33 4 72 15 37 00 Fax +33 4 72 15 37 15
	Nantes	SEW-USOCOME Parc d'activités de la forêt 4 rue des Fontenelles F-44140 Le Bignon	Tel. +33 2 40 78 42 00 Fax +33 2 40 78 42 20
	Paris	SEW-USOCOME Zone industrielle 2 rue Denis Papin F-77390 Verneuil l'Etang	Tel. +33 1 64 42 40 80 Fax +33 1 64 42 40 88
Technical Offices	Alsace	SEW-USOCOME 1 rue Auguste Gasser F-68360 Soultz	Tel. +33 3 89 74 51 62 Fax +33 3 89 76 58 71
	Aquitaine / Char- entes	SEW-USOCOME Parc d'activités de Magellan 62 avenue de Magellan - B.P.182 F-33607 Pessac Cedex	Tel. +33 5 57 26 39 08 Fax +33 5 57 26 39 09



France		
Auvergne / Limousin	SEW-USOCOME Farges F-19600 Chasteaux	Tel. +33 5 55 20 12 10 Fax +33 5 55 20 12 11
Lower Normandy	SEW-USOCOME 5 rue de la Limare F-14250 Brouay	Tel. +33 2 31 37 92 86 Fax +33 2 31 74 68 15
Burgundy	SEW-USOCOME 10 rue de la poste F-71350 Saint Loup Géanges	Tel. +33 3 85 49 92 18 Fax +33 3 85 49 92 19
Brittany	SEW-USOCOME Parc d'activités de la forêt 4 rue des Fontenelles F-44140 Le Bignon	Tel. +33 2 40 78 42 04 Fax +33 2 40 78 42 20
Centre / Poitou	SEW-USOCOME Parc d'activités de la forêt 4 rue des Fontenelles F-44140 Le Bignon	Tel. +33 2 40 78 42 11 Fax +33 2 40 78 42 20
Champagne-Ardenne	SEW-USOCOME 2 rue des Sénardes F-10000 Troyes	Tel. +33 3 25 79 63 24 Fax +33 3 25 79 63 25
Franche-Comté	SEW-USOCOME Chemin des saules F-25870 Venise	Tel. +33 3 81 60 20 47 Fax +33 3 81 87 75 93
Île-de-France East / Aisne	SEW-USOCOME 20 rue Félix Faure F-02100 Saint Quentin	Tel. +33 3 23 62 81 24 Fax +33 3 23 62 81 44
Île-de-France North / Picardy	SEW-USOCOME 25bis rue Kléber F-92300 Levallois Perret	Tel. +33 1 41 05 92 74 Fax +33 1 41 05 92 75
Île-de-France South	SEW-USOCOME 6 chemin des bergers Lieu-dit Marchais F-91410 Roinville sous Dourdan	Tel. +33 1 60 81 10 56 Fax +33 1 60 81 10 57
Lorraine / Alsace North	SEW-USOCOME 1 rue de la forêt F-54250 Champigneulle	Tel. +33 3 83 96 28 04 Fax +33 3 83 96 28 07
Midi-Pyrénées / Roussillon	SEW-USOCOME 179 route de Grazac F-31190 Caujac	Tel. +33 5 61 08 15 85 Fax +33 5 61 08 16 44
Nord-Pas-de-Calais	SEW-USOCOME 209 route d'Hesdigneul F-62360 Hesdin l'Abbé	Tel. +33 3 21 10 86 86 Fax +33 3 21 10 86 87
Paris / Île-de-France West	SEW-USOCOME 42 avenue Jean Jaurès F-78580 Maule	Tel. +33 1 30 90 89 86 Fax +33 1 30 90 93 15
Pays de la Loire	SEW-USOCOME Parc d'activités de la forêt 4 rue des Fontenelles F-44140 Le Bignon	Tel. +33 2 40 78 42 03 Fax +33 2 40 78 42 20
Provence-Alpes-Côte d'Azur	SEW-USOCOME Le Clos Montolivet 9 impasse Bounin – Bât. A F-13012 Marseille	Tel. +33 4 91 18 00 11 Fax +33 4 91 18 00 12
Rhône-Alpes East	SEW-USOCOME Montée de la Garenne F-26750 Génissieux	Tel. +33 4 75 05 65 95 Fax +33 4 75 05 65 96



France			
	Rhône-Alpes North	SEW-USOCOME Parc d'affaires Roosevelt Rue Jacques Tati F-69120 Vaulx en Velin	Tel. +33 4 72 15 37 03 Fax +33 4 72 15 37 15
	Rhône-Alpes West	SEW-USOCOME Parc d'affaires Roosevelt Rue Jacques Tati F-69120 Vaulx en Velin	Tel. +33 4 72 15 37 04 Fax +33 4 72 15 37 15
Algeria			
Sales	Algiers	REDUCOM Sarl 16, rue des Frères Zaghroune Bellevue 16200 El Harrach Alger	Tel. +213 21 8214-91 Fax +213 21 8222-84 info@reducom-dz.com http://www.reducom-dz.com
Argentina			
Assembly Sales	Buenos Aires	SEW EURODRIVE ARGENTINA S.A. Ruta Panamericana Km 37.5, Lote 35 (B1619IEA) Centro Industrial Garín Prov. de Buenos Aires	Tel. +54 3327 4572-84 Fax +54 3327 4572-21 sewar@sew-eurodrive.com.ar http://www.sew-eurodrive.com.ar
	Córdoba	SEW EURODRIVE ARGENTINA S.A. Ruta Nacional 19, Manzana 97, Lote 5 (X5125) Malvinas Argentinas Prov. de Córdoba	Tel. +54 351-490-0010 sewcor@sew-eurodrive.com.ar http://www.sew-eurodrive.com.ar
	Santa Fe	SEW EURODRIVE ARGENTINA S.A. Ruta Prov. 21 Km 7, Lote 41 Parque Industrial Alvear (2126) Gral. Alvear Prov. de Santa Fe	Tel. +54 341-317-7277 sewsfe@sew-eurodrive.com.ar http://www.sew-eurodrive.com.ar
Service	Mendoza	SEW EURODRIVE ARGENTINA S.A.	Tel. +54 261-430-0060 sewmen@sew-eurodrive.com.ar http://www.sew-eurodrive.com.ar
Technical Offices	Tucumán	SEW EURODRIVE ARGENTINA S.A. Balcarce 609 (T4000IAM) S.M. de Tucumán Prov. de Tucumán	Tel. +54 381-400-4569 sewtuc@sew-eurodrive.com.ar http://www.sew-eurodrive.com.ar
	Bahía Blanca	SEW EURODRIVE ARGENTINA S.A. O'Higgins 95, 1er Piso A (B8000IVA) Bahía Blanca Prov. de Buenos Aires	Tel. +54 291-451-7345 sewbb@sew-eurodrive.com.ar http://www.sew-eurodrive.com.ar
	Comahue	SEW EURODRIVE ARGENTINA S.A. Puerto Rico 1885 (R8324IOE) Cipolletti Prov. de Río Negro	Tel. +54 299-478-1290 sewcomahue@sew-eurodrive.com.ar http://www.sew-eurodrive.com.ar
Mining	Mendoza	SEW EURODRIVE ARGENTINA S.A.	Tel. +54 261-430-0060 mineria@sew-eurodrive.com.ar http://www.sew-eurodrive.com.ar
Australia			
Assembly Sales Service	Melbourne	SEW-EURODRIVE PTY. LTD. 27 Beverage Drive Tullamarine, Victoria 3043	Tel. +61 3 9933-1000 Fax +61 3 9933-1003 http://www.sew-eurodrive.com.au enquires@sew-eurodrive.com.au
	Sydney	SEW-EURODRIVE PTY. LTD. 9, Sleigh Place, Wetherill Park New South Wales, 2164	Tel. +61 2 9725-9900 Fax +61 2 9725-9905 enquires@sew-eurodrive.com.au



Australia			
Sales Service	Adelaide	SEW-EURODRIVE PTY. LTD. 9C Park Way Mawson Lakes, SA 5095	Tel. +61 8 8161 4000 Fax +61 8 8161 4002 enquires@sew-eurodrive.com.au
	Brisbane	SEW-EURODRIVE PTY.LTD. 1 /34 Collinsvale St Rocklea, Queensland, 4106	Tel. +61 7 3276 5100 Fax +61 7 3276 5102 enquires@sew-eurodrive.com.au
	Perth	SEW-EURODRIVE PTY. LTD. 10 Colin Jamieson Drive Welshpool, WA 6106	Tel. +61 8 9251-4900 Fax +61 8 9251-4903 enquires@sew-eurodrive.com.au
Sales	Townsville	SEW-EURODRIVE PTY. LTD. 12 Leyland Street Garbutt, QLD 4814	Tel. +61 7 4779 4333 Fax +61 7 4779 5333 enquires@sew-eurodrive.com.au
Austria			
Assembly Sales Service	Wien	SEW-EURODRIVE Ges.m.b.H. Richard-Strauss-Strasse 24 A-1230 Wien	Tel. +43 1 617 55 00-0 Fax +43 1 617 55 00-30 http://www.sew-eurodrive.at sew@sew-eurodrive.at
Technical Offices	Linz	SEW-EURODRIVE Ges.m.b.H. Reuchlinstr. 6/3 A-4020 Linz	Tel. +43 732 655 109-0 Fax +43 732 655 109-20 tb-linz@sew-eurodrive.at
	Graz	SEW-EURODRIVE Ges.m.b.H. Grabenstraße 231 A-8045 Graz	Tel. +43 316 685 756-0 Fax +43 316 685 755 tb-graz@sew-eurodrive.at
	Dornbirn	SEW-EURODRIVE Ges.m.b.H. Lustenauerstraße 27/1 A-6850 Dornbirn	Tel. +43 5572 3725 99-0 Fax +43 5572 3725 99-20 tb-dornbirn@sew-eurodrive.at
Bangladesh			
Sales	Bangladesh	SEW-EURODRIVE INDIA PRIVATE LIMITED 345 DIT Road East Rampura Dhaka-1219, Bangladesh	Mobile +88 01729 097309 salesdhaka@seweurodrivebangla- desh.com
Belarus			
Sales	Minsk	SEW-EURODRIVE BY RybalkoStr. 26 BY-220033 Minsk	Tel.+375 17 298 47 56 / 298 47 58 Fax +375 17 298 47 54 http://www.sew.by sales@sew.by
Belgium			
Assembly Sales Service	Brussels	SEW-EURODRIVE n.v./s.a. Researchpark Haasrode 1060 Evenementenlaan 7 BE-3001 Leuven	Tel. +32 16 386-311 Fax +32 16 386-336 http://www.sew-eurodrive.be info@sew-eurodrive.be
Service Compe- tence Center	Industrial Gears	SEW-EURODRIVE n.v./s.a. Rue de Parc Industriel, 31 BE-6900 Marche-en-Famenne	Tel. +32 84 219-878 Fax +32 84 219-879 http://www.sew-eurodrive.be service-wallonie@sew-eurodrive.be
Brazil			
Production Sales Service	São Paulo	SEW-EURODRIVE Brasil Ltda. Avenida Amâncio Gaiolli, 152 - Rodovia Presi- dente Dutra Km 208 Guarulhos - 07251-250 - SP SAT - SEW ATENDE - 0800 7700496	Tel. +55 11 2489-9133 Fax +55 11 2480-3328 http://www.sew-eurodrive.com.br sew@sew.com.br



Brazil			
Assembly Sales Service	Rio Claro	SEW-EURODRIVE Brasil Ltda. Rodovia Washington Luiz, Km 172 Condomínio Industrial Conpark Caixa Postal: 327 13501-600 – Rio Claro / SP	Tel. +55 19 3522-3100 Fax +55 19 3524-6653 montadora.rc@sew.com.br
	Joinville	SEW-EURODRIVE Brasil Ltda. Rua Dona Francisca, 12.346 – Pirabeiraba 89239-270 – Joinville / SC	Tel. +55 47 3027-6886 Fax +55 47 3027-6888 filial.sc@sew.com.br
	Indaiatuba	SEW-EURODRIVE Brasil Ltda. Estrada Municipal Jose Rubim, 205 Rodovia Santos Dumont Km 49 13347-510 - Indaiatuba / SP	Tel. +55 19 3835-8000 sew@sew.com.br
Bulgaria			
Sales	Sofia	BEVER-DRIVE GmbH Bogdanovetz Str.1 BG-1606 Sofia	Tel. +359 2 9151160 Fax +359 2 9151166 bever@bever.bg
Cameroon			
Sales	Douala	Electro-Services Rue Drouot Akwa B.P. 2024 Douala	Tel. +237 33 431137 Fax +237 33 431137 electrojembra@yahoo.fr
Canada			
Assembly Sales Service	Toronto	SEW-EURODRIVE CO. OF CANADA LTD. 210 Walker Drive Bramalea, ON L6T 3W1	Tel. +1 905 791-1553 Fax +1 905 791-2999 http://www.sew-eurodrive.ca l.watson@sew-eurodrive.ca
	Vancouver	SEW-EURODRIVE CO. OF CANADA LTD. Tilbury Industrial Park 7188 Honeyman Street Delta, BC V4G 1G1	Tel. +1 604 946-5535 Fax +1 604 946-2513 b.wake@sew-eurodrive.ca
	Montreal	SEW-EURODRIVE CO. OF CANADA LTD. 2555 Rue Leger Lasalle, PQ H8N 2V9	Tel. +1 514 367-1124 Fax +1 514 367-3677 a.peluso@sew-eurodrive.ca
Additional addresses for service in Canada provided on request!			
Chile			
Assembly Sales Service	Santiago	SEW-EURODRIVE CHILE LTDA. Las Encinas 1295 Parque Industrial Valle Grande LAMP RCH-Santiago de Chile P.O. Box Casilla 23 Correo Quilicura - Santiago - Chile	Tel. +56 2 75770-00 Fax +56 2 75770-01 http://www.sew-eurodrive.cl ventas@sew-eurodrive.cl
China			
Production Assembly Sales Service	Tianjin	SEW-EURODRIVE (Tianjin) Co., Ltd. No. 46, 7th Avenue, TEDA Tianjin 300457	Tel. +86 22 25322612 Fax +86 22 25323273 info@sew-eurodrive.cn http://www.sew-eurodrive.cn
	Suzhou	SEW-EURODRIVE (Suzhou) Co., Ltd. 333, Suhong Middle Road Suzhou Industrial Park Jiangsu Province, 215021	Tel. +86 512 62581781 Fax +86 512 62581783 suzhou@sew-eurodrive.cn



China			
	Guangzhou	SEW-EURODRIVE (Guangzhou) Co., Ltd. No. 9, JunDa Road East Section of GETDD Guangzhou 510530	Tel. +86 20 82267890 Fax +86 20 82267922 guangzhou@sew-eurodrive.cn
	Shenyang	SEW-EURODRIVE (Shenyang) Co., Ltd. 10A-2, 6th Road Shenyang Economic Technological Development Area Shenyang, 110141	Tel. +86 24 25382538 Fax +86 24 25382580 shenyang@sew-eurodrive.cn
	Wuhan	SEW-EURODRIVE (Wuhan) Co., Ltd. 10A-2, 6th Road No. 59, the 4th Quanli Road, WEDA 430056 Wuhan	Tel. +86 27 84478388 Fax +86 27 84478389 wuhan@sew-eurodrive.cn
	Xi'An	SEW-EURODRIVE (Xi'An) Co., Ltd. No. 12 Jinye 2nd Road Xi'An High-Technology Industrial Development Zone Xi'An 710065	Tel. +86 29 68686262 Fax +86 29 68686311 xian@sew-eurodrive.cn
Colombia			
Assembly Sales Service	Bogotá	SEW-EURODRIVE COLOMBIA LTDA. Calle 22 No. 132-60 Bodega 6, Manzana B Santafé de Bogotá	Tel. +57 1 54750-50 Fax +57 1 54750-44 http://www.sew-eurodrive.com.co sew@sew-eurodrive.com.co
Croatia			
Sales Service	Zagreb	KOMPEKS d. o. o. Zeleni dol 10 HR 10 000 Zagreb	Tel. +385 1 4613-158 Fax +385 1 4613-158 kompeks@inet.hr
Czech Republic			
Sales Assembly Service	Hostivice	SEW-EURODRIVE CZ s.r.o. Floriánova 2459 253 01 Hostivice	Tel. +420 255 709 601 Fax +420 235 350 613 http://www.sew-eurodrive.cz sew@sew-eurodrive.cz
	Drive Service Hotline / 24 Hour Service	HOT-LINE +420 800 739 739 (800 SEW SEW)	Servis: Tel. +420 255 709 632 Fax +420 235 358 218 servis@sew-eurodrive.cz
Assembly Service	Plzeň	SEW-EURODRIVE CZ s.r.o. Areal KRPA a.s. Zahradni 173/2 326 00 Plzeň	Tel. +420 378 775 320 Fax +420 377 970 710 sew@sew-eurodrive.cz
Technical Offices	Brno	SEW-EURODRIVE CZ s.r.o. Křenová 52 60200 Brno	Tel. +420 543 254 174 Fax +420 543 256 845 radek.chmela@sew-eurodrive.cz
	Hradec Králové	SEW-EURODRIVE CZ s.r.o. Čechova 498 50202 Hradec Králové	Tel. +420 495 510 141 Fax +420 495 521 313 miroslav.moravec@sew-eurodrive.cz
	Ostrava	SEW-EURODRIVE CZ s.r.o. Studentská 6202/17 708 00 Ostrava-Poruba	Tel. +420 597 329 044 jan.kurs@sew-eurodrive.cz
	Klatovy	SEW-EURODRIVE CZ s.r.o. Videňská 841 33901 Klatovy	Tel. +420 376 331 634 Fax +420 376 331 634 viktor.kubernat@sew-eurodrive.cz
Service	Horní Moštěnice	SEW-EURODRIVE CZ s.r.o. Nám.Dr.M.Tyrše 14/64 751 17 Horní Moštěnice	Tel. +420 581 224 374 Fax +420 581 224 374 servis@sew-eurodrive.cz



Denmark			
Assembly Sales Service	Copenhagen	SEW-EURODRIVE A/S Geminivej 28-30 DK-2670 Greve	Tel. +45 43 9585-00 Fax +45 43 9585-09 http://www.sew-eurodrive.dk sew@sew-eurodrive.dk
Egypt			
Sales Service	Cairo	Copam Egypt for Engineering & Agencies 33 El Hegaz ST, Heliopolis, Cairo	Tel. +20 2 22566-299 +1 23143088 Fax +20 2 22594-757 http://www.copam-egypt.com/ copam@datum.com.eg
Estonia			
Sales	Tallin	ALAS-KUUL AS Reti tee 4 EE-75301 Peetri küla, Rae vald, Harjumaa	Tel. +372 6593230 Fax +372 6593231 veiko.soots@alas-kuul.ee
Finland			
Assembly Sales Service	Lahti	SEW-EURODRIVE OY Vesimäentie 4 FIN-15860 Hollola 2	Tel. +358 201 589-300 Fax +358 3 780-6211 http://www.sew-eurodrive.fi sew@sew.fi
Technical Offices	Helsinki	SEW-EURODRIVE OY Luutnantintie 5 FIN-00410 Helsinki	Tel. +358 201 589-300 sew@sew.fi
	Vaasa	SEW-EURODRIVE OY Asemakatu 7 FIN-65100 Vaasa	Tel. +358 201 589-300 sew@sew.fi
	Kuopio	SEW-EURODRIVE OY Viestikatu 3 FIN-70600 Kuopio	Tel. +358 201 589-300 sew@sew.fi
Production Assembly	Karkkila	SEW Industrial Gears Oy Valurinkatu 6, PL 8 FI-03600 Karkkila, 03601 Karkkila	Tel. +358 201 589-300 Fax +358 201 589-310 sew@sew.fi http://www.sew-eurodrive.fi
Gabon			
Sales	Libreville	ESG Electro Services Gabun Feu Rouge Lalala 1889 Libreville Gabun	Tel. +241 741059 Fax +241 741059 esg_services@yahoo.fr
Great Britain			
Assembly Sales Service	Normanton	SEW-EURODRIVE Ltd. Beckbridge Industrial Estate Normanton West Yorkshire WF6 1QR	Tel. +44 1924 893-855 Fax +44 1924 893-702 http://www.sew-eurodrive.co.uk info@sew-eurodrive.co.uk
	Drive Service Hotline / 24 Hour Service		Tel. 01924 896911
Service Competence Center	Southern England	SEW-EURODRIVE Ltd. Unit 41 Easter Park Benyon Road Silchester Reading Berkshire RG7 2PQ	Tel. +44 1189 701-699 Fax +44 1189 701-021



Great Britain			
Technical Offices	Midlands	SEW-EURODRIVE Ltd. 5 Sugar Brook court Aston Road Bromsgrove Worcs. B60 3EX	Tel. +44 1527 877-319 Fax +44 1527 575-245
	Scotland	SEW-EURODRIVE Ltd. No 37 Enterprise House Springkerse Business Park Stirling FK7 7UF	Tel. +44 17 8647-8730 Fax +44 17 8645-0223
Greece			
Sales	Athens	Christ. Boznos & Son S.A. 12, K. Mavromichali Street P.O. Box 80136 GR-18545 Piraeus	Tel. +30 2 1042 251-34 Fax +30 2 1042 251-59 http://www.boznos.gr info@boznos.gr
Technical Office	Thessaloniki	Christ. Boznos & Son S.A. Asklipiou 26 562 24 Evosmos, Thessaloniki	Tel. +30 2 310 7054-00 Fax +30 2 310 7055-15 info@boznos.gr
Hong Kong			
Assembly Sales Service	Hong Kong	SEW-EURODRIVE LTD. Unit No. 801-806, 8th Floor Hong Leong Industrial Complex No. 4, Wang Kwong Road Kowloon, Hong Kong	Tel. +852 36902200 Fax +852 36902211 contact@sew-eurodrive.hk
Hungary			
Sales Service	Budapest	SEW-EURODRIVE Kft. H-1037 Budapest Kunigunda u. 18	Tel. +36 1 437 06-58 Fax +36 1 437 06-50 http://www.sew-eurodrive.hu office@sew-eurodrive.hu
Iceland			
Sales	Reykjavik	VARMA & VELAVERK EHF Dalshrauni 5 IS-220 Hafnarjördur	Tel. +354 585 1070 Fax +354 585)1071 varmaverk@varmaverk.is http://www.varmaverk.is
India			
Registered Office Assembly Sales Service	Vadodara	SEW-EURODRIVE India Private Limited Plot No. 4, GIDC POR Ramangamdi • Vadodara - 391 243 Gujarat	Tel. +91 265 3045200, +91 265 2831086 Fax +91 265 3045300, +91 265 2831087 http://www.seweurodriveindia.com salesvadodara@seweurodriveindia.com
Assembly Sales Service	Chennai	SEW-EURODRIVE India Private Limited Plot No. K3/1, Sipcot Industrial Park Phase II Mambakkam Village Sriperumbudur - 602105 Kancheepuram Dist, Tamil Nadu	Tel. +91 44 37188888 Fax +91 44 37188811 saleschennai@seweurodriveindia.com
Technical Offices	Ahmedabad	SEW-EURODRIVE India Private Limited 306, Shaan office complex, Behind Sakar-IV, Ellisebridge, Ashram Road Ahmedabad – Gujarat	Tel. +91 79 40072067/68 Fax +91 79 40072069 salesahmedabad@seweurodriveindia.com



India			
Aurangabad	SEW-EURODRIVE INDIA PRIVATE LIMITED	Tel. +91 86000 12333 salesaurangabad@seweurodriveindia.com	
Bangalore	SEW-EURODRIVE India Private Limited Sy.no:41-P3, Peenya1, Phase 1A, Peenya Village, Yeswanthapura Hobli, Bangalore North Taluk, Bangalore Dist, Karnataka	Tel. +91 80 22266565 Fax +91 80 22266569 salesbangalore@seweurodriveindia.com	
	SEW-EURODRIVE India Private Limited # C-104, 3rd Block, KSSIDC Complex, Electronic City. Bangalore – 560100, Karnataka	Tel. +91 80 28522662 / 28522663 salesbangalore@seweurodriveindia.com	
Bangladesh	SEW-EURODRIVE INDIA PRIVATE LIMITED Genetic Udayanchal, House-96 (6th Floor), Road-23/A, Block-B, Banani, Dhaka-1213, Bangladesh	Mobile +88 01729 097309 salesdhaka@seweurodrivebangladesh.com	
Bellary	SEW-EURODRIVE India Private Limited Door no-56/279 Ward No-16, Sindhigi compound, Near Raghavendra talkies, Bellary-583101 Karnataka	Tel. +91 77609 88668 salesbellary@seweurodriveindia.com	
Chandigarh	SEW-EURODRIVE India Private Limited # 72, Type- 4, Power Colony, Chandigarh - Rupnagar Highway Rupnagar- 140001, Punjab	Tel. +91 81462 67606 saleschandigarh@seweurodriveindia.com	
Chennai	SEW-EURODRIVE India Private Limited 2nd Floor, Josmans Complex, No. 5, McNichols Road, Chetpet Chennai - 600031 - Tamil Nadu	Tel. +91 44 42849813 Fax +91 44 42849816 saleschennai@seweurodriveindia.com	
Cochin	SEW-EURODRIVE India Private Limited CF7-(2), Block No 1, Vasanth Nagar, Opposite Jawahar Lal Nehru Stadium, Palarivattom – Cochin 682025	Tel. +91 98951 30375 salescochin@seweurodriveindia.com	
Coimbatore	SEW-EURODRIVE INDIA PRIVATE LIMITED 687/2, SRI SAKTHIVEL TOWERS (NEAR DEEPAM HOSPITAL) TRICHY ROAD, RAMANATHAPURAM COIMBATORE - 641 045.Tamilnadu	Tel. +91 422 2322420 Fax +91 422 2323988 salescoimbatore@seweurodriveindia.com	
Cuttack	SEW-EURODRIVE India Private Limited Plot No.- 1764, Nuasahi, Nayapalli Bhubaneswar-12 Orissa	Tel. +91 9937446333 salescuttack@seweurodriveindia.com	
Gandhidham	SEW-EURODRIVE India Private Limited TCX-S-28, FF, Ward 12/A, Gandhidham - Kutch - 370201	Tel. +91 81282 36850 salesgandhidham@seweurodriveindia.com	
Hyderabad	SEW-EURODRIVE India Private Limited 408, 4th Floor, Meridian Place Green Park Road Amerpet Hyderabad - 500016 - Andhra Pradesh	Tel. +91 40 23414698 Fax +91 40 23413884 saleshyderabad@seweurodriveindia.com	
Jamshedpur	SEW-EURODRIVE India Private Limited Flat No :- S1 " Kashi Kunj",h. No. 60, New Rani Kudar Road No - 3 P.O. + P.S. - Kadma Jamshedpur - Pin - 831005 Jharkhand	Tel. +91 9934123671 salesjamshedpur@seweurodriveindia.com	



India			
Kolhapur	SEW EURODRIVE India Private Limited	Tel. +91 86000 20846 saleskolhapur@seweurodriveindia.com	
Kolkata	SEW EURODRIVE India Private Limited 2nd floor, Room No. 35 Chowringhee Court 55, Chowringhee Road Kolkata - 700 071 - West Bengal	Tel. +91 33 22827457 Fax +91 33 22894204 saleskolkata@seweurodriveindia.com	
Lucknow	SEW-EURODRIVE India Private Limited 69, Shiv Vihar Colony Vikas Nagar-5 Lucknow 226022 - Uttar Pradesh	Tel. +91 9793627333 saleslucknow@seweurodriveindia.com	
Mumbai	SEW-EURODRIVE India Private Limited 312 A, 3rd Floor, Acme Plaza, J.B. Nagar, Andheri Kurla Road, Andheri (E) Mumbai - 400059 - Maharashtra	Tel. +91 22 28348440 Fax +91 22 28217858 salesmumbai@seweurodriveindia.com	
Nagpur	SEW-EURODRIVE India Private Limited Plot No 49, New Kailash Nager, Samta colony, Nagpur-440027	Tel. +91 95610 89525 salesnagpur@seweurodriveindia.com	
Nashik	SEW-EURODRIVE India Private Limited 107, "YOG" Bungalow, Mahatama Nagar, Trimbak Road, Nashik, Maharashtra – 422 007	Tel. +91 9665752978 salesnashik@seweurodriveindia.com	
New Delhi	SEW-EURODRIVE India Private Limited 1008, 10th Floor, 12th Level 'Westend Mall' Tower Plot, District Centre Adjacent Hotel Hilton Janak Puri, New Delhi – 110058	Tel. +91 11 25544111 Fax +91 11 25544113 salesdelhi@seweurodriveindia.com	
Pune	SEW-EURODRIVE India Private Limited Jai Tulajabhavani Complex. Office No:- 15 First Floor, Opp. Century Enka Company, MIDC Bhosari, Pune 411 026	Tel. +91 20-65118890 / 91 Fax +91 20 25380721 salespune@seweurodriveindia.com	
	SEW-EURODRIVE India Private Limited LUNAWAT PRISM 4th Floor, S.No. 148 Opposite Wanaz Company, Besides Mega Mart At Neena Co-Operative Housing Society, Paud Road, Pune 411038 - Maharashtra	Tel. +91 20 25380730/735 Fax +91 20 25380721 salespune@seweurodriveindia.com praveen.hosur@seweurodriveindia.com	
Raipur	SEW-EURODRIVE India Private Limited A-42, Ashoka Millenium Complex, Ring Road-1, Raipur 492 001 - Chhattisgarh	Tel. +91 771 4090765 Fax +91 771 4090765 salesraipur@seweurodriveindia.com	
Ranchi	SEW-EURODRIVE India Private Limited Flat No : A - 101, Krishna Shree Apartment, Anantpur, P.O. Doranda – Ranchi 834002	Tel. +91 8294630772 salesranchi@seweurodriveindia.com	
Tiruchirappalli	SEW-EURODRIVE India Private Limited A-106, Trichy Towers, Chandrasekarapuram, Salai Road, Trichy – 620018.	Mobile +91 95009 88081 salestrichy@seweurodriveindia.com	



India			
	Vadodara	SEW-EURODRIVE India Private Limited Unit No. 301, Savorite Bldg, Plot No. 143, Vinayak Society, off old Padra Road, Vadodara - 390 007. Gujarat	Tel. +91 265 2325258 Fax +91 265 2325259 salesvadodara@seweurodrivein- dia.com
	Vijayawada	SEW-EURODRIVE India Private Limited Door No:40-5/3-10A, Syam Nagar,NGO's Col- ony, Tikkle Road, Vijayawada-520010	Tel. +91 99895 01748 Fax +91 8662475157 Mobile 09989501748 salesvijayawada@seweurodrivein- dia.com
Indonesia			
Sales	Jakarta	PT. Cahaya Sukses Abadi Komplek Rukan Puri Mutiara Blok A no 99, Sunter Jakarta 14350	Tel: +62 21 65310599 Fax: +62 21 65310600 csajkt@cbn.net.id
		PT. Agrindo Putra Lestari Jl.Prof.DR.Latumenten no27/A Jakarta 11330	Tel: +62 21 63855588 Fax: +62 21 63853789 aplindo@indosat.net.id
		PT. Sentratek Adimitra Jln. Krekot Jaya Molek Block D No. 12A Jakarta 10710	Tel: +62 21 3865504 / +62 21 3865505 / +62 21 3507178 Fax: +62 21 34833170 sew@adimitra.com
	Medan	PT. Serumpun Indah Lestari Pulau Solor no. 8, Kawasan Industri Medan II Medan 20252	Tel. +62 61 687 1221 Fax +62 61 6871429 / +62 61 6871458 / +62 61 30008041 sil@serumpunindah.com serumpunindah@yahoo.com
	Surabaya	PT. TRIAGRI JAYA ABADI Jl. Sukosemolo No. 63, Galaxi Bumi Permai G6 No. 11 Surabaya 60122	Tel: +62 31 5990128 Fax: +62 31 5962666 triagri@indosat.net.id
		CV. Multi Mas Jl. Raden Saleh 43A Kav. 18 Surabaya 60174	Tel: +62 31 5458589 / +62 31 5317224 Fax: +62 31 5317220 / +62 31 5994629 sianhwa@sby.centrin.net.id
Ireland			
Sales Service	Dublin	Alpert Engineering Ltd. 48 Moyle Road Dublin Industrial Estate Glasnevin, Dublin 11	Tel. +353 1 830-6277 Fax +353 1 830-6458 info@alperton.ie http://www.alperton.ie
Israel			
Sales	Tel-Aviv	Liraz Handasa Ltd. Ahofer Str 34B / 228 58858 Holon	Tel. +972 3 5599511 Fax +972 3 5599512 http://www.liraz-handasa.co.il office@liraz-handasa.co.il
Italy			
Assembly Sales Service	Solaro	SEW-EURODRIVE di R. Blicke & Co.s.a.s. Via Bernini,14 I-20020 Solaro (Milano)	Tel. +39 02 96 9801 Fax +39 02 96 799781 http://www.sew-eurodrive.it sewit@sew-eurodrive.it
Technical Offices	Bologna	SEW-EURODRIVE di R. Blicke & Co.s.a.s. Via della Grafica, 47 I-40064 Ozzano dell'Emilia (Bo)	Tel. +39 051 65-23-801 Fax +39 051 796-595



Italy			
	Caserta	SEW-EURODRIVE di R. Blickle & Co.s.a.s. Viale Carlo III Km. 23,300 I-81020 S. Nicola la Strada (Caserta)	Tel. +39 0823 219011 Fax +39 0823 421414
	Milan	SEW-EURODRIVE di R. Blickle & Co.s.a.s. Via Bernini,14 I-20020 Solaro (Milano)	Tel. +39 02 96 980229 Fax +39 02 96 799781
	Pescara	SEW-EURODRIVE di R. Blickle & Co.s.a.s. Viale Europa,132 I-65010 Villa Raspa di Spoltore (PE)	Tel. +39 085 41-59-427 Fax +39 085 41-59-643
	Torino	SEW-EURODRIVE di R. Blickle & Co.s.a.s. Filiale Torino c.so Unione Sovietica 612/15 - int. C I-10135 Torino	Tel. +39 011 3473780 Fax +39 011 3473783
	Verona	SEW-EURODRIVE di R. Blickle & Co.s.a.s. Via P. Sgulmero, 27/A I-37132 Verona	Tel. +39 045 89-239-11 Fax +39 045 97-6079
Ivory Coast			
Sales	Abidjan	SICA Société Industrielle & Commerciale pour l'Afrique 165, Boulevard de Marseille 26 BP 1173 Abidjan 26	Tel. +225 21 25 79 44 Fax +225 21 25 88 28 sicamot@aviso.ci
Japan			
Assembly Sales Service	Iwata	SEW-EURODRIVE JAPAN CO., LTD 250-1, Shimoman-no, Iwata Shizuoka 438-0818	Tel. +81 538 373811 Fax +81 538 373855 http://www.sew-eurodrive.co.jp sewjapan@sew-eurodrive.co.jp
Technical Offices	Fukuoka	SEW-EURODRIVE JAPAN CO., LTD. C-go, 5th-floor, Yakuin-Hiruzu-Bldg. 1-5-11, Yakuin, Chuo-ku Fukuoka, 810-0022	Tel. +81 92 713-6955 Fax +81 92 713-6860 sewkyushu@jasmine.ocn.ne.jp
	Osaka	SEW-EURODRIVE JAPAN CO., LTD. Higobashi Shimizu Bldg. 10th flor 1-3-7 Tosabori, Nishi-ku Osaka, 550-0001	Tel. +81 6 6444--8330 Fax +81 6 6444--8338 sewosaka@crocus.ocn.ne.jp
	Tokyo	SEW-EURODRIVE JAPAN CO., LTD. Omarimon Yusen Bldg. 13th floor 3-23-5 Nishinbashi, Minato-ku Tokyo 105-0003	Tel. +81 3 3239-0469 Fax +81 3 3239-0943 sewtokyo@basil.ocn.ne.jp
Kazakhstan			
Sales	Almaty	TOO "СЕВ-ЕВРОДРАЙВ" пр.Райымбека, 348 050061 г. Алматы Республика Казахстан	Тел. +7 (727) 334 1880 Факс +7 (727) 334 1881 http://www.sew-eurodrive.kz sew@sew-eurodrive.kz
Kenya			
Sales	Nairobi	Barico Maintenances Ltd Kamutaga Place Commercial Street Industrial Area P.O.BOX 52217 - 00200 Nairobi	Tel. +254 20 6537094/5 Fax +254 20 6537096 info@barico.co.ke



Latvia			
Sales	Riga	SIA Alas-Kuul Katlakalna 11C LV-1073 Riga	Tel. +371 6 7139253 Fax +371 6 7139386 http://www.alas-kuul.com info@alas-kuul.com
Lebanon			
Sales Lebanon	Beirut	Gabriel Acar & Fils sarl B. P. 80484 Bourj Hammoud, Beirut	Tel. +961 1 510 532 Fax +961 1 494 971 ssacar@inco.com.lb
		After Sales Service	service@medrives.com
Sales Jordan / Kuwait / Saudi Ara- bia / Syria	Beirut	Middle East Drives S.A.L. (offshore) Sin El Fil. B. P. 55-378 Beirut	Tel. +961 1 494 786 Fax +961 1 494 971 info@medrives.com http://www.medrives.com
		After Sales Service	service@medrives.com
Lithuania			
Sales	Alytus	UAB Irseva Statybininku 106C LT-63431 Alytus	Tel. +370 315 79204 Fax +370 315 56175 irmantas@irseva.lt http://www.sew-eurodrive.lt
Luxembourg			
Assembly Sales Service	Brussels	SEW-EURODRIVE n.v./s.a. Researchpark Haasrode 1060 Evenementenlaan 7 BE-3001 Leuven	Tel. +32 16 386-311 Fax +32 16 386-336 http://www.sew-eurodrive.lu info@sew-eurodrive.be
Macedonia			
Sales	Skopje	Boznos DOOEL Dime Anicin 2A/7A 1000 Skopje	Tel. +389 23256553 Fax +389 23256554 http://www.boznos.mk
Madagascar			
Sales	Antananarivo	Ocean Trade BP21bis. Andraharo Antananarivo. 101 Madagascar	Tel. +261 20 2330303 Fax +261 20 2330330 oceantrabp@moov.mg
Malaysia			
Assembly Sales Service	Johor	SEW-EURODRIVE SDN BHD No. 95, Jalan Seroja 39, Taman Johor Jaya 81000 Johor Bahru, Johor West Malaysia	Tel. +60 7 3549409 Fax +60 7 3541404 sales@sew-eurodrive.com.my
Technical Offices	Kota Kinabalu	SEW-EURODRIVE Sdn Bhd (Kota Kinabalu Branch) Lot No. 2, 1st Floor, Inanam Baru Phase III, Miles 5.1 /2, Jalan Tuaran, Inanam 89350 Kota Kinabalu Sabah, Malaysia	Tel. +60 88 424792 Fax +60 88 424807
	Kuala Lumpur	SEW-EURODRIVE Sdn. Bhd. No. 2, Jalan Anggerik Mokara 31/46 Kota Kemuning Seksyen 31 40460 Shah Alam Selangor Darul Ehsan	Tel. +60 3 5229633 Fax +60 3 5229622 sewsa@sew-eurodrive.com.my



Malaysia			
	Kuching	SEW-EURODRIVE Sdn. Bhd. Lot 268, Section 9 KTLD Lorong 9, Jalan Satok 93400 Kuching, Sarawak East Malaysia	Tel. +60 82 232380 Fax +60 82 242380
	Penang	SEW-EURODRIVE Sdn. Bhd. No. 38, Jalan Bawal Kimsar Garden 13700 Prai, Penang	Tel. +60 4 3999349 Fax +60 4 3999348 sewpgg@sew-eurodrive.com.my
Mauritania			
Sales	Zouérat	AFRICOM - SARL En Face Marché Dumez P.B. 88 Zouérate	Tel. +222 45 44 50 19 Fax +222 45 44 03 14 contact@africom-sarl.com
Mexico			
Assembly Sales Service	Quéretaro	SEW-EURODRIVE MEXICO SA DE CV SEM-981118-M93 Tequisquiapan No. 102 Parque Industrial Quéretaro C.P. 76220 Quéretaro, México	Tel. +52 442 1030-300 Fax +52 442 1030-301 http://www.sew-eurodrive.com.mx scmexico@seweurodrive.com.mx
Morocco			
Sales Service	Mohammedia	SEW-EURODRIVE SARL 2 bis, Rue Al Jahid 28810 Mohammedia	Tel. +212 523 32 27 80/81 Fax +212 523 32 27 89 sew@sew-eurodrive.ma http://www.sew-eurodrive.ma
Namibia			
Sales	Swakopmund	DB Mining & Industrial Services Einstein Street Strauss Industrial Park Unit1 Swakopmund	Tel. +264 64 462 738 Fax +264 64 462 734 sales@dbmining.in.na
Netherlands			
Assembly Sales Service	Rotterdam	SEW-EURODRIVE B.V. Industrieweg 175 NL-3044 AS Rotterdam Postbus 10085 NL-3004 AB Rotterdam	Tel. +31 10 4463-700 Fax +31 10 4155-552 Service: 0800-SEWHELP http://www.sew-eurodrive.nl info@sew-eurodrive.nl
New Zealand			
Assembly Sales Service	Auckland	SEW-EURODRIVE NEW ZEALAND LTD. P.O. Box 58-428 82 Greenmount drive East Tamaki Auckland	Tel. +64 9 2745627 Fax +64 9 2740165 http://www.sew-eurodrive.co.nz sales@sew-eurodrive.co.nz
	Christchurch	SEW-EURODRIVE NEW ZEALAND LTD. 10 Settlers Crescent, Ferryroad Christchurch	Tel. +64 3 384-6251 Fax +64 3 384-6455 sales@sew-eurodrive.co.nz
Technical Offices	Palmerston North	SEW-EURODRIVE NEW ZEALAND LTD. C/-Grant Shearman, RD 5, Aronui Road Palmerston North	Tel. +64 6 355-2165 Fax +64 6 355-2316 sales@sew-eurodrive.co.nz



Nigeria			
Sales	Lagos	EISNL Engineering Solutions and Drives Ltd Plot 9, Block A, Ikeja Industrial Estate (Ogba Scheme) Adeniyi Jones St. End Off ACME Road, Ogba, Ikeja, Lagos Nigeria	Tel. +234 (0)1 217 4332 team.sew@eisnl.com http://www.eisnl.com
Norway			
Assembly Sales Service	Moss	SEW-EURODRIVE A/S Solgaard skog 71 N-1599 Moss	Tel. +47 69 24 10 20 Fax +47 69 24 10 40 http://www.sew-eurodrive.no sew@sew-eurodrive.no
Pakistan			
Sales	Karachi	Industrial Power Drives Al-Fatah Chamber A/3, 1st Floor Central Commercial Area, Sultan Ahmed Shah Road, Block 7/8, Karachi	Tel. +92 21 452 9369 Fax +92-21-454 7365 seweurodrive@cyber.net.pk
Peru			
Assembly Sales Service	Lima	SEW DEL PERU MOTORES REDUCTORES S.A.C. Los Calderos, 120-124 Urbanizacion Industrial Vulcano, ATE, Lima	Tel. +51 1 3495280 Fax +51 1 3493002 http://www.sew-eurodrive.com.pe sewperu@sew-eurodrive.com.pe
Philippines			
Sales	Luzon	Totaltech Corporation 5081-B C&L Mansion Filmore Ave. Cor. Fahr- enheit St. 1235 Makati City	Tel: +63 2 551-9265 / +63 2 551-9271 / +63 2 551-9378 Fax: +63 2 551-9273 totaltech89@gmail.com
	All Areas	P.T. Cerna Corporation 4137 Ponte St., Brgy. Sta. Cruz, Makati City 1205	Tel: +63 2 519 6214 Fax: +63 2 890 2802 mech_drive_sys@ptcerna.com
Poland			
Assembly Sales Service	Lodz	SEW-EURODRIVE Polska Sp.z.o.o. ul. Techniczna 5 PL-92-518 Łódź	Tel. +48 42 676 53 00 Fax +48 42 676 53 49 http://www.sew-eurodrive.pl sew@sew-eurodrive.pl
	Service	Tel. +48 42 6765332 / 42 6765343 Fax +48 42 6765346	Linia serwisowa Hotline 24H Tel. +48 602 739 739 (+48 602 SEW SEW) serwis@sew-eurodrive.pl
Technical Office	Tychy	SEW-EURODRIVE Polska Sp.z.o.o. ul. Strzelecka 66 PL-43-109 Tychy	Tel. +48 32 32 32 610 Fax +48 32 32 32 648
	Bydgoszcz	SEW-EURODRIVE Polska Sp.z.o.o. ul. Fordońska 246 PL-85-959 Bydgoszcz	Tel. +48 52 3606590 Fax +48 52 3606591
	Gdańsk	SEW-EURODRIVE Polska Sp.z.o.o. ul. Galaktyczna 30A PL-80-299 Gdańsk	Tel. +48 58 762 70 00 Fax +48 58 762 70 09
	Poznan	SEW-EURODRIVE Polska Sp.z.o.o. ul. Romana Maya 1 PL-61-371 Poznań	Tel. +48 61 6465500 Fax +48 61 6465519



Poland			
	Radom	SEW-EURODRIVE Polska Sp.z.o.o. ul. Słowackiego 84 PL-26-600 Radom	Tel. +48 48 365 40 50 Fax +48 48 365 40 52
Portugal			
Assembly Sales Service	Coimbra	SEW-EURODRIVE, LDA. Apartado 15 P-3050-901 Mealhada	Tel. +351 231 20 9670 Fax +351 231 20 3685 http://www.sew-eurodrive.pt infosew@sew-eurodrive.pt
Service Competence Center	Lisboa	SEW-EURODRIVE, LDA. Núcleo Empresarial I de São Julião do Tojal Rua de Entremuros, 54 Fracção I P-2660-533 São Julião do Tojal	Tel. +351 21 958-0198 Fax +351 21 958-0245 esc.lisboa@sew-eurodrive.pt
Technical Office	Porto	SEW-EURODRIVE, LDA. Av. 25 de Abril, 68 4440-502 Valongo	Tel. +351 229 350 383 Fax +351 229 350 384 Tel. +351 9 32559110 esc.porto@sew-eurodrive.pt
Romania			
Sales Service	Bucharest	Sialco Trading SRL str. Brazilia nr. 36 011783 Bucuresti	Tel. +40 21 230-1328 Fax +40 21 230-7170 sialco@sialco.ro
Russia			
Assembly Sales Service	St. Petersburg	ZAO SEW-EURODRIVE P.O. Box 36 RUS-195220 St. Petersburg	Tel. +7 812 3332522 +7 812 5357142 Fax +7 812 3332523 http://www.sew-eurodrive.ru sew@sew-eurodrive.ru
Technical Office	Yekaterinburg	ZAO SEW-EURODRIVE Kominterna Str. 16 Office 614 RUS-620078 Ekaterinburg	Tel. +7 343 310 3977 Fax +7 343 310 3978 eso@sew-eurodrive.ru
	Irkutsk	ZAO SEW-EURODRIVE 5-Armii Str., 31 RUS-664011 Irkutsk	Tel. +7 3952 25 5880 Fax +7 3952 25 5881 iso@sew-eurodrive.ru
	Moscow	ZAO SEW-EURODRIVE Malaja Semjonovskaja Str. д. 9, корпус 2 RUS-107023 Moskau	Tel. +7 495 9337090 Fax +7 495 9337094 mso@sew-eurodrive.ru
	Novosibirsk	ZAO SEW-EURODRIVE pr. K Marksa 30 RUS-630087 Novosibirsk	Tel. +7 383 3350200 Fax +7 383 3462544 nso@sew-eurodrive.ru
	Perm	ZAO SEW-EURODRIVE Stakhanovskaya str., 45 Office 512 RUS-614066 Perm	Tel. +7 342 2219494 Fax +7 342 2219444 pso@sew-eurodrive.ru
	Togliatti	ZAO SEW-EURODRIVE Sportivnaya Str. 4B, office 2 Samarskaya obl. RUS-445057 Togliatti	Tel. +7 8482 710529 Fax +7 8482 810590
Senegal			
Sales	Dakar	SENEMECA Mécanique Générale Km 8, Route de Rufisque B.P. 3251, Dakar	Tel. +221 338 494 770 Fax +221 338 494 771 senemeca@sentoo.sn http://www.senemeca.com



Serbia			
Sales	Beograd	DIPAR d.o.o. Ustanicka 128a PC Košum, IV sprat SRB-11000 Beograd	Tel. +381 11 347 3244 / +381 11 288 0393 Fax +381 11 347 1337 office@dipar.rs
Singapore			
Assembly Sales Service	Singapore	SEW-EURODRIVE PTE. LTD. No 9, Tuas Drive 2 Jurong Industrial Estate Singapore 638644	Tel. +65 68621701 Fax +65 68612827 http://www.sew-eurodrive.com.sg sewsingapore@sew-eurodrive.com
Slovakia			
Sales	Bratislava	SEW-Eurodrive SK s.r.o. Rybničná 40 SK-831 06 Bratislava	Tel. +421 2 33595 202 Fax +421 2 33595 200 sew@sew-eurodrive.sk http://www.sew-eurodrive.sk
	Žilina	SEW-Eurodrive SK s.r.o. Industry Park - PChZ ulica M.R.Štefánika 71 SK-010 01 Žilina	Tel. +421 41 700 2513 Fax +421 41 700 2514 sew@sew-eurodrive.sk
	Banská Bystrica	SEW-Eurodrive SK s.r.o. Rudlovská cesta 85 SK-974 11 Banská Bystrica	Tel. +421 48 414 6564 Fax +421 48 414 6566 sew@sew-eurodrive.sk
	Košice	SEW-Eurodrive SK s.r.o. Slovenská ulica 26 SK-040 01 Košice	Tel. +421 55 671 2245 Fax +421 55 671 2254 sew@sew-eurodrive.sk
Slovenia			
Sales Service	Celje	Pakman - Pogonska Tehnika d.o.o. Ul. XIV. divizije 14 SLO - 3000 Celje	Tel. +386 3 490 83-20 Fax +386 3 490 83-21 pakman@siol.net
South Africa			
Assembly Sales Service	Johannesburg	SEW-EURODRIVE (PROPRIETARY) LIMITED Eurodrive House Cnr. Adcock Ingram and Aerodrome Roads Aeroton Ext. 2 Johannesburg 2013 P.O.Box 90004 Bertsham 2013	Tel. +27 11 248-7000 Fax +27 11 494-3104 http://www.sew.co.za info@sew.co.za
	Cape Town	SEW-EURODRIVE (PROPRIETARY) LIMITED Rainbow Park Cnr. Racecourse & Omuramba Road Montague Gardens Cape Town P.O.Box 36556 Chempet 7442 Cape Town	Tel. +27 21 552-9820 Fax +27 21 552-9830 Telex 576 062 bgriffiths@sew.co.za
	Durban	SEW-EURODRIVE (PROPRIETARY) LIMITED 2 Monaco Place Pinetown Durban P.O. Box 10433, Ashwood 3605	Tel. +27 31 700-3451 Fax +27 31 700-3847 cdejager@sew.co.za
	Nelspruit	SEW-EURODRIVE (PTY) LTD. 7 Christie Crescent Vintonia P.O.Box 1942 Nelspruit 1200	Tel. +27 13 752-8007 Fax +27 13 752-8008 robermeyer@sew.co.za



South Africa			
Technical Offices	Port Elizabeth	SEW-EURODRIVE PTY LTD. 8 Ruan Access Park Old Cape Road Greenbushes 6000 Port Elizabeth	Tel. +27 41 3722246 Fax +27 41 3722247 dtait@sew.co.za
	Richards Bay	SEW-EURODRIVE PTY LTD. 103 Bulion Blvd Richards Bay P.O. Box 458 Richards Bay, 3900	Tel. +27 35 797-3805 Fax +27 35 797-3819 jswart@sew.co.za
South Korea			
Assembly Sales Service	Ansan	SEW-EURODRIVE KOREA CO., LTD. B 601-4, Banweol Industrial Estate #1048-4, Shingil-Dong, Danwon-Gu, Ansan-City, Kyunggi-Do Zip 425-839	Tel. +82 31 492-8051 Fax +82 31 492-8056 http://www.sew-korea.co.kr master.korea@sew-eurodrive.com
	Busan	SEW-EURODRIVE KOREA Co., Ltd. No. 1720 - 11, Songjeong - dong Gangseo-ku Busan 618-270	Tel. +82 51 832-0204 Fax +82 51 832-0230 master@sew-korea.co.kr
Technical Offices	Daegu	SEW-EURODRIVE KOREA Co., Ltd. No.1108 Sungan officetel 87-36, Duryu 2-dong, Dalseo-ku Daegu 704-712	Tel. +82 53 650-7111 Fax +82 53 650-7112
	Daejeon	SEW-EURODRIVE KOREA Co., Ltd. No. 1502, Hongin officetel 536-9, Bongmyung-dong, Yusung-ku Daejeon 305-301	Tel. +82 42 828-6461 Fax +82 42 828-6463
	Gwangju	SEW-EURODRIVE KOREA Co., Ltd. 4fl., Dae-Myeong B/D 96-16 Unam-dong, Buk-ku Kwangju 500-170	Tel. +82 62 511-9172 Fax +82 62 511-9174
	Seoul	SEW-EURODRIVE KOREA Co., Ltd. No.504 Sunkyung officetel 106-4 Kuro 6-dong, Kuro-ku Seoul 152-054	Tel. +82 2 862-8051 Fax +82 2 862-8199
Spain			
Assembly Sales Service	Bilbao	SEW-EURODRIVE ESPAÑA, S.L. Parque Tecnológico, Edificio, 302 E-48170 Zamudio (Vizcaya)	Tel. +34 94 43184-70 Fax +34 94 43184-71 http://www.sew-eurodrive.es sew.spain@sew-eurodrive.es
Technical Offices	Barcelona	Delegación Barcelona Avda. Francesc Macià, 60 – Planta 16, porta 1 Eix Macià – “Torre Milenium” E-08208 Sabadell (Barcelona)	Tel. +34 93 7162200 Fax +34 93 7233007
	Madrid	Delegación Madrid Gran Vía. 48-2° A-D E-28220 Majadahonda (Madrid)	Tel. +34 91 6342250 Fax +34 91 6340899
	Seville	MEB Pólogono Calonge, C/A Nave 2 - C E-41.077 Sevilla	Tel. +34 954 356 361 Fax +34 954 356 274 mebsa.sevilla@mebsa.com
	Valencia	MEB Músico Andreu i Piqueres, 4 E-46.900 Torrente (Valencia)	Tel. +34 961 565 493 Fax +34 961 566 688 mebsa.valencia@mebsa.com



Sri Lanka			
Sales	Colombo	SM International (Pte) Ltd 254, Galle Raod Colombo 4, Sri Lanka	Tel. +94 1 2584887 Fax +94 1 2582981
Swaziland			
Sales	Manzini	C G Trading Co. (Pty) Ltd PO Box 2960 Manzini M200	Tel. +268 2 518 6343 Fax +268 2 518 5033 engineering@cgtrading.co.sz
Sweden			
Assembly Sales Service	Jönköping	SEW-EURODRIVE AB Gnejsvägen 6-8 S-55303 Jönköping Box 3100 S-55003 Jönköping	Tel. +46 36 3442 00 Fax +46 36 3442 80 http://www.sew-eurodrive.se jonkoping@sew.se
Sales	Göteborg	SEW-EURODRIVE AB Gustaf Werners gata 8 S-42132 Västra Frölunda	Tel. +46 31 70968 80 Fax +46 31 70968 93 goteborg@sew.se
	Stockholm	SEW-EURODRIVE AB Björkholmsvägen 10 S-14146 Huddinge	Tel. +46 8 44986 80 Fax +46 8 44986 93 stockholm@sew.se
	Malmö	SEW-EURODRIVE AB Borrgatan 5 S-21124 Malmö	Tel. +46 40 68064 80 Fax +46 40 68064 93 malmo@sew.se
	Skellefteå	SEW-EURODRIVE AB Trädgårdsgatan 8 S-93131 Skellefteå	Tel. +46 910 7153 80 Fax +46 910 7153 93 skelleftea@sew.se
Switzerland			
Assembly Sales Service	Basel	Alfred Imhof A.G. Jurastrasse 10 CH-4142 Münchenstein bei Basel	Tel. +41 61 417 1717 Fax +41 61 417 1700 http://www.imhof-sew.ch info@imhof-sew.ch
Technical Offices	Rhaetian Switzerland	André Gerber Es Perreyres CH-1436 Chamblon	Tel. +41 24 445 3850 Fax +41 24 445 4887
	Bern / Solothurn	Rudolf Bühler Muntersweg 5 CH-2540 Grenchen	Tel. +41 32 652 2339 Fax +41 32 652 2331
	Central Switzerland, Aargau	Armin Pfister Stierenweid CH-4950 Huttwill, BE	Tel. +41 62 962 54 55 Fax +41 62 962 54 56
	Zürich, Ticino	Gian-Michele Muletta Fischerstrasse 61 CH-8132 Egg bei Zürich	Tel. +41 44 994 81 15 Fax +41 44 994 81 16
	Bodensee and East Switzerland	Markus Künzle Eichweg 4 CH-9403 Goldach	Tel. +41 71 845 2808 Fax +41 71 845 2809
Taiwan (R.O.C.)			
Sales	Nan Tou	Ting Shou Trading Co., Ltd. No. 55 Kung Yeh N. Road Industrial District Nan Tou 540	Tel. +886 49 255353 Fax +886 49 257878
	Taipei	Ting Shou Trading Co., Ltd. 6F-3, No. 267, Sec. 2 Tung Hwa South Road, Taipei	Tel. +886 2 27383535 Fax +886 2 27368268 Telex 27 245 sewtwn@ms63.hinet.net



Thailand			
Assembly Sales Service	Chonburi	SEW-EURODRIVE (Thailand) Ltd. 700/456, Moo.7, Donhuaroh Muang Chonburi 20000	Tel. +66 38 454281 Fax +66 38 454288 sewthailand@sew-eurodrive.com
Technical Offices	Bangkok	SEW-EURODRIVE (Thailand) Ltd. 6th floor, TPS Building 1023, Phattanakarn Road Suanluang Bangkok, 10250	Tel. +66 2 7178149 Fax +66 2 7178152 sewthailand@sew-eurodrive.com
	Hat Yai	SEW-EURODRIVE (Thailand) Ltd. Hadyai Country Home Condominium 59/101 Soi.17/1 Rachas-Utid Road. Hadyai, Songkhla 90110	Tel. +66 74 359441 Fax +66 74 359442 sewthailand@sew-eurodrive.com
	Khon Kaen	SEW-EURODRIVE (Thailand) Ltd. 4th Floor, Kaow-U-HA MOTOR Bldg, 359/2, Mitraphab Road. Muang District Khonkaen 40000	Tel. +66 43 225745 Fax +66 43 324871 sew-thailand@sew-eurodrive.com
Tunisia			
Sales	Tunis	T. M.S. Technic Marketing Service Zone Industrielle Mghira 2 Lot No. 39 2082 Fouchana	Tel. +216 79 40 88 77 Fax +216 79 40 88 66 http://www.tms.com.tn tms@tms.com.tn
Turkey			
Assembly Sales Service	Istanbul	SEW-EURODRIVE Hareket Sistemleri Sanayi Ticaret Limited Şirketi Gebze Organize Sanayi Bölgesi 400.Sokak No:401 TR-41480 Gebze KOCAELİ	Tel. +90-262-9991000-04 Fax +90-262-9991009 http://www.sew-eurodrive.com.tr sew@sew-eurodrive.com.tr
Technical Offices	Adana	SEW-EURODRIVE Hareket Sistemleri San. ve Tic. Ltd. Sti. Kızılay Caddesi 8 Sokak No 6 Daötekin Is Merkezi Kat 4 Daire 2 TR-01170 SEYHAN / ADANA	Tel. +90 322 359 94 15 Fax +90 322 359 94 16
	Ankara	SEW-EURODRIVE Hareket Sistemleri San. ve Tic. Ltd. Sti. Özcelik Is Merkezi, 14. Sok, No. 4/42 TR-06370 Ostim/Ankara	Tel. +90 312 385 33 90 Fax +90 312 385 32 58
	Bursa	SEW-EURODRIVE Hareket Sistemleri San. ve Tic. Ltd. Sti. Üçevler Mah. Bayraktepe Sok. Akay İş Merkezi Kat:3 No: 7/6 TR Nilüfer/Bursa	Tel. +90 224 443 45 60 Fax +90 224 443 45 58
	Izmir	SEW-EURODRIVE Hareket Sistemleri San. ve Tic. Ltd. Sti. 1203/11 Sok. No. 4/613 Hasan Atli Is Merkezi TR-35110 Yenisehir-Izmir	Tel. +90 232 469 62 64 Fax +90 232 433 61 05
Ukraine			
Assembly Sales Service	Dnipropetrovsk	ООО «СЕВ-Евродрайв» ул.Рабочая, 23-В, офис 409 49008 Днепропетровск	Тел. +380 56 370 3211 Факс. +380 56 372 2078 http://www.sew-eurodrive.ua sew@sew-eurodrive.ua



Ukraine			
Sales	Kiev	ООО «СЕВ-Евродрайв» ул.С.Олейника, 21 02068 Киев	Тел. +380 44 503 95 77 Факс. +380 44 503 95 78 kso@sew-eurodrive.ua
	Donetsk	ООО «СЕВ-Евродрайв» ул.25-летия РККА, 1-В, оф. 805 83000 Донецк	Тел. +380 62 38 80 545 Факс. +380 62 38 80 533 dso@sew-eurodrive.ua
	Ivano-Frankivsk	ООО «СЕВ-Евродрайв» ул.Независимости, 4, оф.303 83000 Ивано-Франковск	Тел. +380 342 725 190 Факс. +380 342 725 191 ifso@sew-eurodrive.ua
United Arab Emirates			
Sales Service	Sharjah	Copam Middle East (FZC) Sharjah Airport International Free Zone P.O. Box 120709 Sharjah	Tel. +971 6 5578-488 Fax +971 6 5578-499 copam_me@eim.ae
Uruguay			
Assembly Sales	Montevideo	SEW-EURODRIVE Uruguay, S. A. Jose Serrato 3569 Esquina Corumbe CP 12000 Montevideo	Tel. +598 2 21181-89 Fax +598 2 21181-89 sewuy@sew-eurodrive.com.uy
USA			
Production Assembly Sales Service	Southeast Region	SEW-EURODRIVE INC. 1295 Old Spartanburg Highway P.O. Box 518 Lyman, S.C. 29365	Tel. +1 864 439-7537 Fax Sales +1 864 439-7830 Fax Manufacturing +1 864 439-9948 Fax Assembly +1 864 439-0566 Fax Confidential/HR +1 864 949-5557 http://www.seweurodrive.com cslyman@seweurodrive.com
Assembly Sales Service	Northeast Region	SEW-EURODRIVE INC. Pureland Ind. Complex 2107 High Hill Road, P.O. Box 481 Bridgeport, New Jersey 08014	Tel. +1 856 467-2277 Fax +1 856 845-3179 csbridgeport@seweurodrive.com
	Midwest Region	SEW-EURODRIVE INC. 2001 West Main Street Troy, Ohio 45373	Tel. +1 937 335-0036 Fax +1 937 332-0038 cstroy@seweurodrive.com
	Southwest Region	SEW-EURODRIVE INC. 3950 Platinum Way Dallas, Texas 75237	Tel. +1 214 330-4824 Fax +1 214 330-4724 csdallas@seweurodrive.com
	Western Region	SEW-EURODRIVE INC. 30599 San Antonio St. Hayward, CA 94544	Tel. +1 510 487-3560 Fax +1 510 487-6433 cshayward@seweurodrive.com
Additional addresses for service in the USA provided on request!			
Venezuela			
Assembly Sales Service	Valencia	SEW-EURODRIVE Venezuela S.A. Av. Norte Sur No. 3, Galpon 84-319 Zona Industrial Municipal Norte Valencia, Estado Carabobo	Tel. +58 241 832-9804 Fax +58 241 838-6275 http://www.sew-eurodrive.com.ve ventas@sew-eurodrive.com.ve sewfinanzas@cantv.net



Vietnam			
Sales	Ho Chi Minh City	All sectors except harbor, steel, coal power and offshore: Nam Trung Co., Ltd 250 Binh Duong Avenue, Thu Dau Mot Town, Binh Duong Province HCM office: 91 Tran Minh Quyen Street District 10, Ho Chi Minh City	Tel. +84 8 8301026 Fax +84 8 8392223 namtrungco@hcm.vnn.vn truongtantam@namtrung.com.vn khanh-nguyen@namtrung.com.vn
		Harbor and offshore: DUC VIET INT LTD Industrial Trading and Engineering Services A75/6B/12 Bach Dang Street, Ward 02, Tan Binh District, 70000 Ho Chi Minh City	Tel. +84 8 62969 609 Fax +84 8 62938 842 totien@ducvietint.com
		Coal power and steel: Thanh Phat Co Ltd DMC Building, L11-L12, Ward3, Binh Thanh Dist, Ho Chi Minh City	Tel. +84 835170381 Fax +84 835170382 sales@thanh-phat.com
	Hanoi	Nam Trung Co., Ltd R.205B Tung Duc Building 22 Lang ha Street Dong Da District, Hanoi City	Tel. +84 4 37730342 Fax +84 4 37762445 namtrunghn@hn.vnn.vn
Zambia			
Sales	Kitwe	EC Mining Limited Plots No. 5293 & 5294, Tangaanyika Road, Off Mutentemuko Road, Heavy Industrial Park, P.O.BOX 2337 Kitwe	Tel. +260 212 210 642 Fax +260 212 210 645 sales@ecmining.com http://www.ecmining.com



Index

A	
Additional documentation.....	33
Altitude (asl) for installation.....	34
Ambient temperature	
R, F, K, S, W gear units	11
Axial loads of R, F, K, S, W gear units.....	44
B	
Bearing greases	90
BEM	403
BES	403
Brake control.....	403
Brakemotors.....	13
Braking resistors, external	
MOVIMOT® assignment	404
Braking resistors, integrated	
MOVIMOT® assignment	404
Breather valves	120
C	
Churning losses	39, 57
Condition monitoring	
Project planning	51
Technical data.....	114
Type designation.....	19
Connection technology	
MOVIMOT®.....	395
MOVIMOT® with integrated AS-Interface	398
Connection variants	21
Copyright.....	10
Covers, fixed	112
D	
DBG60B	405
Derating	34
Design and operating notes	83
Designation	
Fieldbus interfaces MF.....	433
Fieldbus interfaces MQ.....	435
MOVIMOT®.....	400
MOVIMOT® with integrated AS-Interface	401
Diagnostic unit	
DUV10A vibration sensor.....	51
DUV10A/30A vibration sensor	116
Oil aging sensor DUO10A.....	51, 114
Diagnostics	405
Dimension drawings	
MF../Z.1, MQ../Z.1 fieldbus interfaces	436
Dimension sheets	
Helical gearmotors.....	148
Helical-bevel gearmotors	276
Helical-worm gearmotors.....	333
MOVIMOT® AC motors	411
Notes	119
Parallel-shaft helical gearmotors	214
Spiroplan® gearmotors	375
E	
Efficiency of SEW gear units	38
EI7. incremental encoder	431
Encoder	
Type designation	21
Encoders	
EI7. incremental encoder.....	431
Extended storage.....	15
F	
Fieldbus interfaces.....	431
Functional description.....	431
MF../Z.1 fieldbus interfaces	433
MQ../Z.1 fieldbus interfaces.....	435
Fill quantities	
R, F, K, S, W gear units	85
Fixed covers	112
Flange contours	
FAF., KAF., SAF.. and WAF.....	111
FF., KF., SF.. and WF.....	110
RF.. and R..F	109
Force application definition	45
G	
Gear unit	
Extended storage.....	15
Project planning	38
Gear unit mounting	108
Gear unit with hollow shaft	
Special motor/gear unit combinations.....	98
Gear units with hollow shaft.....	98
Gearmotor dimensions	121




H		M	
Helical	43	Manual mode	405
Helical gear units		MBG11A	402
Type designation	17	MFG11A	405
Helical gearmotors		MLG11A	402
Dimension sheets	148	MLU11A	402
Selection tables	123	MLU13A	403
Structure of the selection tables	118	MNF11A	404
Variants	24	Mounting gear units with hollow shaft and key	
Helical-bevel gear unit		Use the SEW installation/removal kit	94
Type designation	18	Mounting of gear units	108
Helical-bevel gearmotors		Mounting positions	52, 81
Dimension sheets	276	Churning losses	39, 57
Selection tables	260	Key to the mounting position sheets	57
Structure of the selection tables	118	MOVIMOT® AC motors	
Variants	27	Dimension sheets	411
Helical-worm gear units		MWA21A	402
Type designation	18		
Helical-worm gearmotors		N	
Dimension sheets	333	Notes on the gearmotor dimension sheets	119
Selection tables	318		
Structure of the selection tables	118	O	
Variants	29	Oil aging and vibration sensor	
Higher permitted overhung loads R, F, K, S, W gear units	45	Technical data	114
Hollow shaft and key, installation and removal	92	Oil aging sensor	
Hollow shaft mounting system, TorqLOC®	99	Technical data and part numbers	114
		Oil expansion tank	40
I		Operator device	405
Installation altitude	34	Options	
Installation of gear units with hollow shaft and key		Type designation	19
Supplied fastening parts	92	Options for diagnostics, startup and manual operation	
Installation/removal of gear units with hollow shaft and key	92	405	
Interface adapter	406	DBG60B keypad	
International markets	13	405	
		MFG11A operator device	405
L		USB11A interface adapter	406
Line filter	404	UWS21AB interface adapter	406
Lubricant fill quantities	85	Options for MOVIMOT®	
Lubricant table	83	BES brake control	403
Lubricants		Brake control BEM	403
General information	83	DC 24 V supply MLU11A	402
Lubricant fill quantities	85	Factory-installed options	407
Lubricant table	83, 84	Internal DC 24 V supply MLU13A	403
Rolling bearing grease	90	Internal line filter MNF11A	404
Lubricants and fill quantities		Setpoint adjuster MBG11A	402
R, F, K, S, W gear units	83	Setpoint adjuster + 24 V supply MLG11A	402
		Setpoint converter MWA21A	402
		Voltage relay URM	403




OS surface protection	14	S	
Output variants	20	Selection tables	
Overhung load conversion, gear unit constants	47	Fieldbus interfaces MQ	435
Overhung loads of R, F, K, S, W gear units	44	Helical gearmotors	123
Overview of types and type designation		Helical-bevel gearmotors	260
R, F, K, S, W gear units	17	Helical-worm gearmotors	318
P		MOVIMOT®	393
Painting	12	Parallel-shaft helical gearmotors	193
Parallel shaft helical gearmotors		Spiroplan® gearmotors	368
Structure of the selection tables	118	Structure of the selection tables	118
Variants	25	Self-locking	38
Parallel-shaft helical gear unit		Service factor	
Type designation	17	Determining the service factor	41
Parallel-shaft helical gearmotors		SEW service factor fB	42
Dimension sheets	214	Setpoint adjuster	402
Selection tables	193	Setpoint adjuster with DC 24 V supply	402
Permitted axial load	45	Setpoint converter	402
Product groups	7	SEW-EURODRIVE	
Product names	10	Group of companies	6
Project planning for drives		Products	7
Additional documentation	33	Systems	7
Procedure	37	Shouldered hollow shaft with shrink disk	101
Project planning for gear units		Helical-bevel gear unit	104
Churning losses	39	Helical-worm gear unit	106
Efficiency of SEW gear units	38	Parallel-shaft helical gear unit	102
Off-center force application, overhung load		Shrink disk connection	120
conversion	46	Speed ratings	11
Oil expansion tank	40	SPIROPLAN® gear units	
Permitted overhung load	44	Type designation	19
RM gear units	48	Spiroplan® gearmotors	
Self-locking	38	Dimension sheets	375
Service factor	41	Selection tables	368
Project planning for RM gear units	48	Structure of the selection tables	118
Project planning procedure	37	Variants	31
R		Splined hollow shaft	120
Reduced backlash gear units	12, 91	Startup	405
Removal of the gear units with hollow shaft and key		Storage conditions	15
With the SEW installation/removal kit	96	Structure of the selection tables	118
Retrofit sets for MOVIMOT®	408	T	
Rubber buffer for FA/FH/FV/FT	120	Tolerances	119
		Flanges	119
		Hollow shafts	119
		Multiple-spline shafts	119
		Shaft ends	119
		Shaft heights	119
		TorqLOC® hollow shaft mounting system	99
		Torque arm	120
		Torque arm position	120



Torque arms		
Available torque arms	108	
Trademarks	10	
Type designation		
Condition monitoring	19	
Connection variants	21	
DR motors	20	
Encoder	21	
Example for a DR gearmotor	23	
Fieldbus interfaces MF	433	
Fieldbus interfaces MQ	435	
Helical gear unit	17	
Helical-bevel gear unit	18	
Helical-worm gear unit	18	
MOVIMOT®	400	
MOVIMOT® with integrated AS-Interface	401	
Options	19	
Parallel-shaft helical gear unit	17	
SPIROPLAN® gear unit	19	
Ventilation	21	
Type designation DR		
Condition monitoring	22	
Other additional features	22	
Output variants	20	
Type designation EDR		
Mechanical attachments	21	
Type designation of AC motors	20	
U		
URM	403	
USB11A	406	
UWS21B	406	
V		
Variants		
Brakemotors	13	
For international markets	13	
Helical gearmotors	24	
Helical-bevel gearmotors	27	
Helical-worm gearmotors	29	
Parallel-shaft helical gearmotors	25	
Spiroplan® gearmotors	31	
Variants, possible		
Reduced backlash	12, 91	
SPIROPLAN® gear units	13	
Ventilation type designation	21	
Vibration sensor		
Part numbers	116	
Technical data	116	
Voltage relay	403	
0 ... 9		
24 V supply	402, 403	

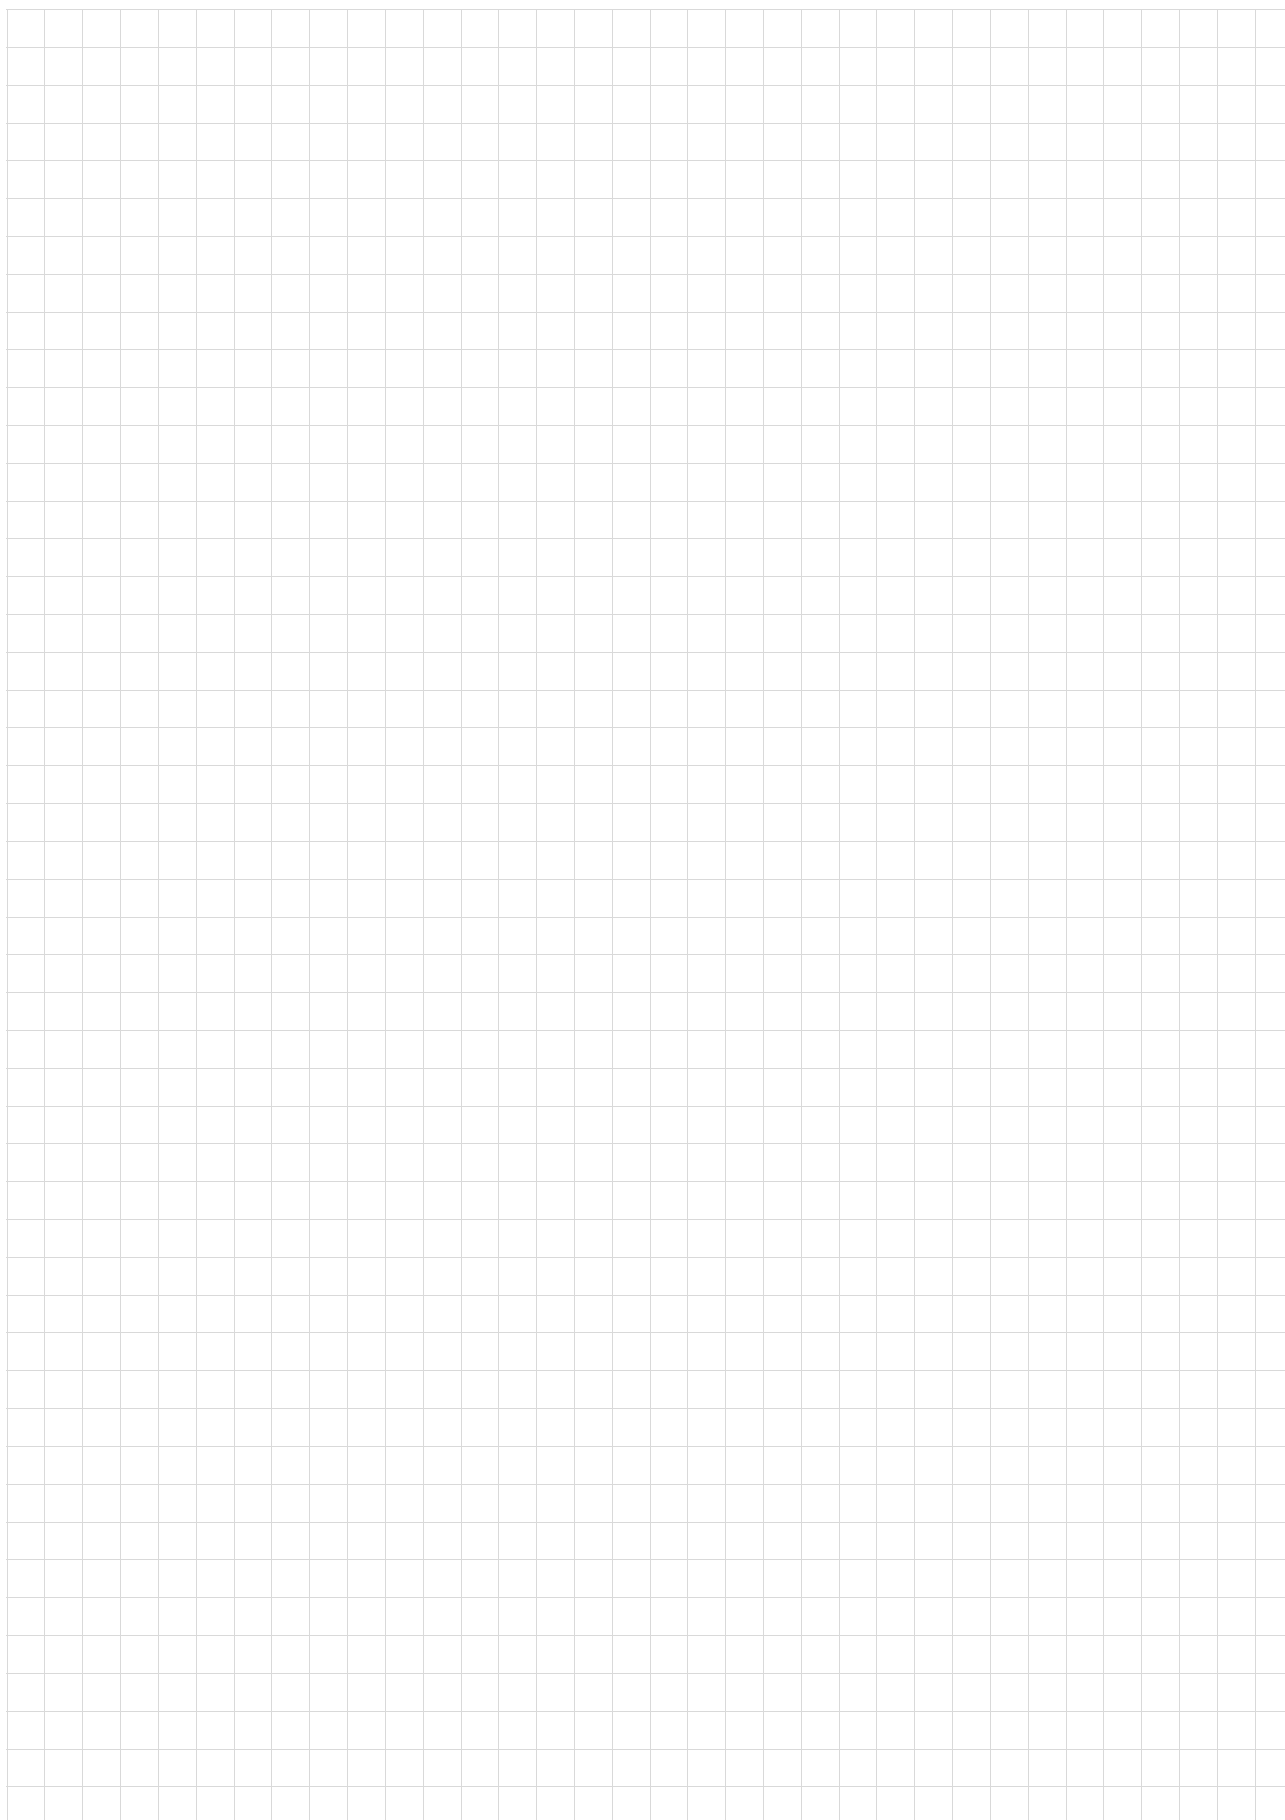

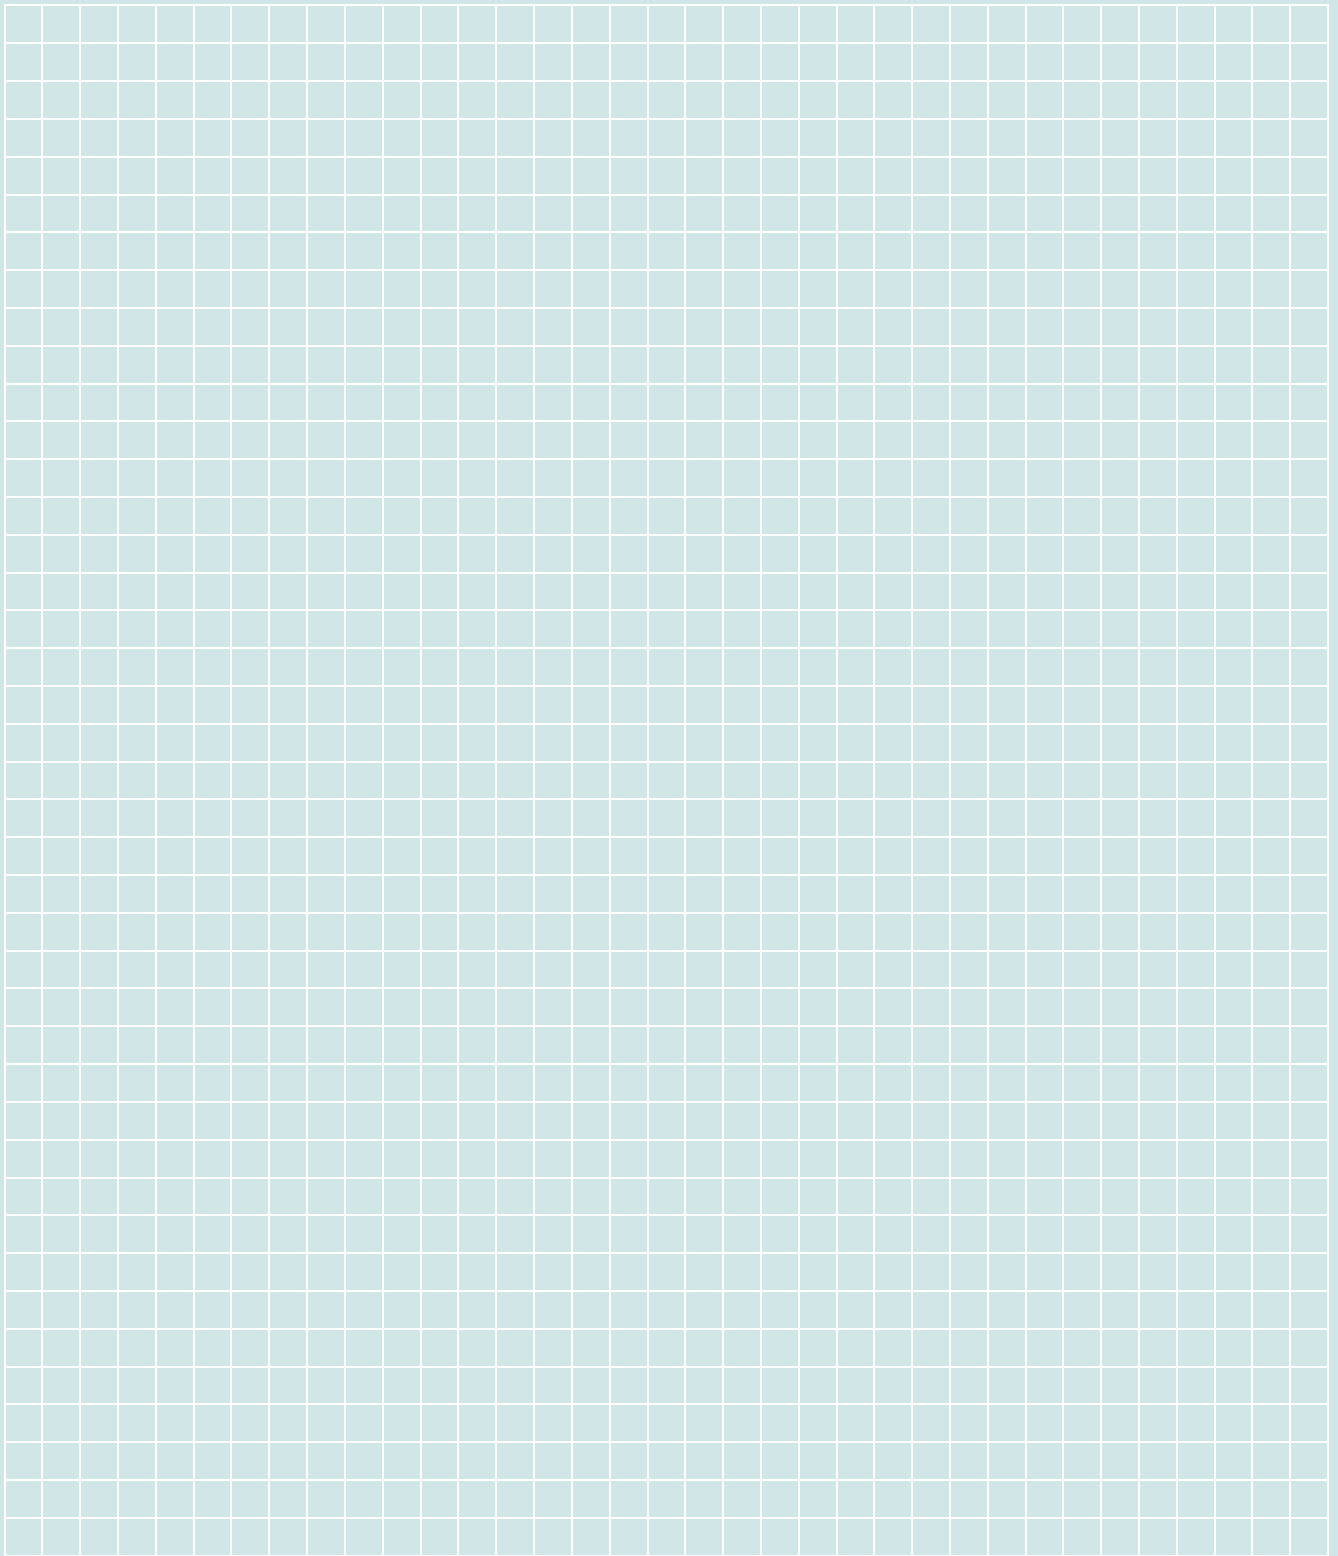



SEW-EURODRIVE
Driving the world

SEW
EURODRIVE

SEW-EURODRIVE GmbH & Co KG
P.O. Box 3023
D-76642 Bruchsal/Germany
Phone +49 7251 75-0
Fax +49 7251 75-1970
sew@sew-eurodrive.com

→ www.sew-eurodrive.com