



SEW
EURODRIVE

Manual



MOVI-C® CONTROLLER advanced with PROFINET IO Fieldbus Interface



Table of contents

1	General information.....	6
1.1	About this documentation	6
1.2	Structure of the safety notes	6
1.2.1	Meaning of signal words	6
1.2.2	Structure of section-related safety notes.....	6
1.2.3	Structure of embedded safety notes	7
1.3	Rights to claim under limited warranty	7
1.4	Exclusion of liability	8
1.5	Other applicable documentation	8
1.6	Product names and trademarks.....	8
1.7	Copyright notice	8
2	Safety notes	9
2.1	Preliminary information	9
2.2	User duties.....	9
2.3	Target group	10
2.4	Designated use	10
2.4.1	Hoist applications	10
2.5	Functional safety technology	11
2.6	Transport.....	11
2.7	Installation/assembly.....	11
2.7.1	Restrictions of use.....	11
2.8	Electrical installation	12
2.8.1	Required preventive measure	12
2.9	Bus systems.....	12
3	Introduction.....	13
3.1	General information	13
3.1.1	Short designation	13
3.1.2	Content of this manual	13
3.1.3	Additional documentation.....	13
3.2	MOVI-C® CONTROLLER advanced UHX45A	14
3.2.1	Device variants.....	14
3.2.2	Nameplate.....	15
3.2.3	Type code	16
3.2.4	Overview of communication interfaces	17
3.2.5	SD memory card OMH45A	18
3.3	MOVISUITE® engineering software	19
3.3.1	Advantages of MOVISUITE®	19
4	Installation notes	20
4.1	Installation accessories.....	20
4.2	Mechanical installation.....	21
4.2.1	Minimum clearance and mounting position.....	21
4.2.2	Control cabinet installation	22
4.2.3	Removing the MOVI-C® CONTROLLER.....	30

4.3	Electrical installation	31
4.3.1	Shielding and routing bus cables	31
4.3.2	Functional description of the terminals.....	32
4.3.3	Voltage supply.....	35
4.3.4	Engineering PC connection.....	37
4.3.5	EtherCAT®/SBus ^{PLUS} master connection	38
4.3.6	CAN system bus connection	39
4.3.7	Connecting the fieldbus slave	39
4.4	Terminal assignment.....	41
4.5	Status LEDs	42
4.5.1	Status LED "L1".....	44
4.5.2	Status LED "L2".....	44
4.5.3	Status LED "L3".....	44
4.5.4	Status LED "L4".....	44
4.5.5	Status LED "L5".....	45
4.5.6	Status LED "L6".....	45
4.5.7	"US1" status LED	45
4.5.8	Status LED "BF" (BUS FAULT).....	46
4.5.9	Status LEDs "L/A" (Link/Activity).....	46
5	Startup with PROFINET IO	47
5.1	Industrial Ethernet networks	47
5.1.1	TCP/IP addressing and subnetworks	47
5.1.2	MAC address	47
5.1.3	IP address	47
5.1.4	Network class	48
5.1.5	Subnetwork mask.....	48
5.1.6	Standard gateway	49
5.1.7	DHCP (Dynamic Host Configuration Protocol).....	49
5.2	Connecting the MOVI-C® CONTROLLER to the PROFINET network	50
5.3	Configuration of the EtherCAT®/SBus ^{PLUS} stations	51
5.3.1	Establishing a connection between engineering PC and MOVI-C® CONTROLLER	51
5.3.2	Scanning the network for devices	53
5.3.3	Applying MOVI-C® devices to MOVISUITE®	54
5.4	Configuration of the fieldbus stations.....	56
5.4.1	Installing the device description file of the MOVI-C® CONTROLLER.....	57
5.4.2	Creating a project in TIA Portal	57
5.4.3	Configuring the PLC in TIA Portal	59
5.4.4	Integrating and configuring MOVI-C® CONTROLLER in the fieldbus network... 60	
5.4.5	Loading the TIA Portal project to the PLC.....	65
5.4.6	Loading the MOVISUITE® project to the MOVI-C® CONTROLLER	68
5.5	Controlling the stations in test run.....	73
5.5.1	Creating a watch table	73
6	Procedure for device replacement.....	78

7	Service	79
7.1	Waste disposal.....	79
8	Technical data.....	80
8.1	Markings	80
8.2	General	81
8.3	Compact controller.....	82
8.4	Master module	83
8.5	Technical data of the PROFINET interface.....	83
8.6	Port overview	84
8.6.1	Interface description.....	84
8.6.2	Engineering interface	84
8.6.3	PROFINET	84
8.7	Dimension drawing MOVI-C® CONTROLLER advanced	85
8.7.1	Compact controller.....	85
8.7.2	Master module	86
	Index	87

1 General information

1.1 About this documentation

The current version of the documentation is the original.

This documentation is an integral part of the product. The documentation is written for all employees who assemble, install, start up, and service this product.

Make sure this documentation is accessible and legible. Ensure that persons responsible for the machinery and its operation as well as persons who work on the product independently have read through the documentation carefully and understood it. If you are unclear about any of the information in this documentation or require further information, contact SEW-EURODRIVE.

1.2 Structure of the safety notes

1.2.1 Meaning of signal words

The following table shows the grading and meaning of the signal words for safety notes.

Signal word	Meaning	Consequences if disregarded
▲ DANGER	Imminent hazard	Severe or fatal injuries
▲ WARNING	Possible dangerous situation	Severe or fatal injuries
▲ CAUTION	Possible dangerous situation	Minor injuries
NOTICE	Possible damage to property	Damage to the product or its environment
INFORMATION	Useful information or tip: Simplifies handling of the product.	

1.2.2 Structure of section-related safety notes

Section-related safety notes do not apply to a specific action but to several actions pertaining to one subject. The hazard symbols used either indicate a general hazard or a specific hazard.

This is the formal structure of a safety note for a specific section:



SIGNAL WORD







Type and source of hazard.

Possible consequence(s) if disregarded.

- Measure(s) to prevent the hazard.

Meaning of the hazard symbols

The hazard symbols in the safety notes have the following meaning:

Hazard symbol	Meaning
	General hazard
	Warning of dangerous electrical voltage
	Warning of hot surfaces
	Warning of risk of crushing
	Warning of suspended load
	Warning of automatic restart

1.2.3 Structure of embedded safety notes

Embedded safety notes are directly integrated into the instructions just before the description of the dangerous action.

This is the formal structure of an embedded safety note:

▲ SIGNAL WORD Type and source of hazard. Possible consequence(s) if disregarded. Measure(s) to prevent the hazard.

1.3 Rights to claim under limited warranty

Read the information in this documentation. This is essential for fault-free operation and fulfillment of any rights to claim under limited warranty. Read the documentation before you start working with the product.

1.4 Exclusion of liability

Read the information in this documentation, otherwise safe operation is impossible. You must comply with the information contained in this documentation to achieve the specified product characteristics and performance features. SEW-EURODRIVE assumes no liability for injury to persons or damage to equipment or property resulting from non-observance of these operating instructions. In such cases, SEW-EURODRIVE assumes no liability for defects.

1.5 Other applicable documentation

Observe the corresponding documentation for all further components.

1.6 Product names and trademarks

The brands and product names in this documentation are trademarks or registered trademarks of their respective titleholders.

1.7 Copyright notice

© 2018 SEW-EURODRIVE. All rights reserved. Unauthorized reproduction, modification, distribution or any other use of the whole or any part of this documentation is strictly prohibited.

2 Safety notes

2.1 Preliminary information

The following general safety notes have the purpose to avoid injury and damage to property. They primarily apply to the use of products described in this documentation. If you use additional components also observe the relevant warning and safety notes.

2.2 User duties

As the user, you must ensure that the basic safety notes are observed and complied with. Make sure that persons responsible for the machinery and its operation as well as persons who work on the device independently have read through the documentation carefully and understood it.

As the user, you must ensure that all of the work listed in the following is carried out only by qualified specialists:

- Setup and installation
- Installation and connection
- Startup
- Maintenance and repairs
- Shutdown
- Disassembly

Ensure that the persons who work on the product pay attention to the following regulations, conditions, documentation, and information:

- National and regional safety and accident prevention regulations
- Warning and safety signs on the product
- All other relevant project planning documents, installation and startup instructions, and wiring diagrams
- Do not assemble, install or operate damaged products
- All system-specific specifications and conditions

Ensure that systems in which the product is installed are equipped with additional monitoring and protection devices. Observe the applicable safety regulations and legislation governing technical work equipment and accident prevention regulations.

2.3 Target group

Specialist for mechanical work	<p>Any mechanical work may only be performed by adequately qualified specialists. Specialists in the context of this documentation are persons familiar with the design, mechanical installation, troubleshooting, and maintenance of the product who possess the following qualifications:</p> <ul style="list-style-type: none"> • Qualification in the mechanical area in accordance with the national regulations • Familiarity with this documentation
Specialist for electrotechnical work	<p>Any electrotechnical work may only be performed by electrically skilled persons with a suitable education. Electrically skilled persons in the context of this documentation are persons familiar with electrical installation, startup, troubleshooting, and maintenance of the product who possess the following qualifications:</p> <ul style="list-style-type: none"> • Qualification in the electrotechnical area in accordance with the national regulations • Familiarity with this documentation
Additional qualification	<p>In addition to that, these persons must be familiar with the valid safety regulations and laws, as well as with the requirements of the standards, directives, and laws specified in this documentation. The persons must have the express authorization of the company to operate, program, parameterize, label, and ground units, systems, and circuits in accordance with the standards of safety technology.</p>
Instructed persons	<p>All work in the areas of transportation, storage, operation and waste disposal must be carried out by persons who are trained appropriately. The purpose of the instruction is that the persons are capable of performing the required tasks and work steps in a safe and correct manner.</p>

2.4 Designated use

The product is intended for control cabinet installation in electrical plants or machines.

In case of installation in electrical systems or machines, startup of the product is prohibited until it is determined that the machine meets the requirements stipulated in the local laws and directives. For Europe, Machinery Directive 2006/42/EC as well as the EMC Directive 2014/30/EU apply. Observe EN 60204-1 (Safety of machinery — electrical equipment of machines).

Technical data and information on the connection conditions are provided on the nameplate and in chapter "Technical data" in the documentation. Always comply with the data and conditions.

Unintended or improper use of the product may result in severe injury to persons and damage to property.

2.4.1 Hoist applications

To avoid danger of fatal injury by falling hoists, observe the following points when using the product in lifting applications:

- Use mechanical protection devices.
- Perform a hoist startup.

2.5 Functional safety technology

The product must not perform any safety functions without a higher-level safety system, unless explicitly allowed by the documentation.

2.6 Transport

Inspect the shipment for damage as soon as you receive the delivery. Inform the shipping company immediately about any damage. If the product is damaged, it must not be assembled, installed or started up.

Observe the following notes when transporting the device:

- Ensure that the product is not subject to mechanical impact during transportation.

If necessary, use suitable, sufficiently dimensioned handling equipment.

Observe the information on climatic conditions in chapter "Technical data" of the documentation.

2.7 Installation/assembly

Ensure that the product is installed and cooled according to the regulations in the documentation.

Protect the product from strong mechanical strain. The product and its mounting parts must never protrude into the path of persons or vehicles. Ensure that components are not deformed and insulation spaces are not changed, particularly during transportation and handling. Electric components must not be mechanically damaged or destroyed.

Observe the notes in chapter Mechanical installation in the documentation.

2.7.1 Restrictions of use

The following applications are prohibited unless the device is explicitly designed for such use:

- Use in potentially explosive atmospheres
- Use in areas exposed to harmful oils, acids, gases, vapors, dust, and radiation
- Operation in applications with impermissibly high mechanical vibration and shock loads in excess of the regulations stipulated in EN 61800-5-1
- Use at an elevation of more than 4000 m above sea level

2.8 Electrical installation

Ensure that all of the required covers are correctly attached after carrying out the electrical installation.

Make sure that preventive measures and protection devices comply with the applicable regulations (e.g. EN 60204-1 or EN 61800-5-1).

2.8.1 Required preventive measure

Make sure that the product is correctly attached to the ground connection.

2.9 Bus systems

A bus system makes it possible to adapt electronic drive components to the particulars of the machinery within wide limits. There is a risk that a change of parameters that cannot be detected externally may result in unexpected (but not uncontrolled) system behavior and may have a negative impact on operational safety, system availability, or data security.

Especially in Ethernet-based networked systems and with engineering interfaces, make sure that unauthorized access is prevented.

Use IT-specific safety standards to increase access protection to the ports. For a port overview, refer to the respective technical data of the device in use.

3 Introduction

3.1 General information

3.1.1 Short designation

The following short designations are used in this documentation.

Type designation	Short designation
MOVI-C® CONTROLLER advanced UHX45A	MOVI-C® CONTROLLER
Higher-level controller	PLC

3.1.2 Content of this manual

This manual describes:

- The installation of the MOVI-C® CONTROLLER
- The interfaces and LEDs of the MOVI-C® CONTROLLER
- The engineering access to the MOVI-C® CONTROLLER
- Configuration and startup of the MOVI-C® CONTROLLER with the PROFINET IO fieldbus interface

3.1.3 Additional documentation

To be able to configure and startup the MOVI-C® CONTROLLER simply and effectively, you should also order the following documentation in addition to this manual:

- "Automation with MOVI-C® CONTROLLER" manual
- "MOVIDRIVE® modular application inverter" product manual
- "MOVIDRIVE® system application inverter" product manual

Always use the latest edition of documentations and software.

The SEW-EURODRIVE website (www.sew-eurodrive.com) provides a wide selection of documents for download in various languages. If required, you can also order printed and bound copies of the documentation from SEW-EURODRIVE.

3.2 MOVI-C® CONTROLLER advanced UHX45A

The MOVI-C® CONTROLLER in the performance class "advanced" is a motion controller for demanding automation tasks. The real-time operating system guarantees very short response times as well as a high-performance connection of system buses from SEW-EURODRIVE and standard fieldbuses.

The MOVI-C® CONTROLLER is suitable for automating machines and cells for up to 8 interpolating axes and 8 auxiliary axes depending on the size of the application program. It can be used as a module controller for complex motion functions such as electronic cams and robotics.


3.2.1 Device variants

MOVI-C® CONTROLLER is available in the following device variants:

Device variant	Fieldbus interface
UHX45A-N	MOVI-C® CONTROLLER with PROFINET IO fieldbus interface for slave connection as compact controller
UHX45A-N /MDM90A	MOVI-C® CONTROLLER with PROFINET IO fieldbus interface for slave connection as master module
UHX45A-E	MOVI-C® CONTROLLER with EtherNet/IP™ or Modbus TCP fieldbus interface for slave connection (in preparation) as compact controller
UHX45A-E /MDM90A	MOVI-C® CONTROLLER with EtherNet/IP™ or Modbus TCP fieldbus interface for slave connection (in preparation) as master module

3.2.2 Nameplate


Compact controller

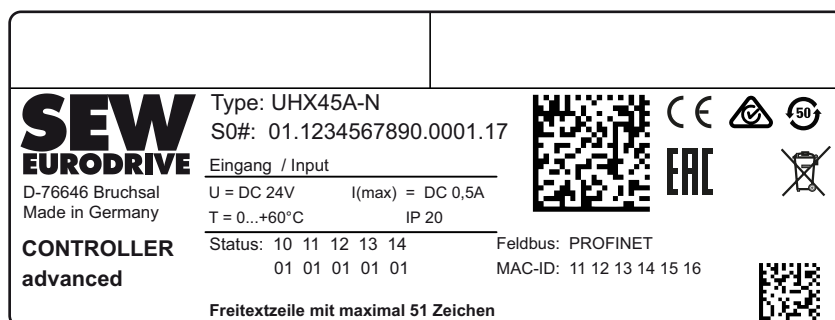

20985730315


Master module

MOVI-C® CONTROLLER

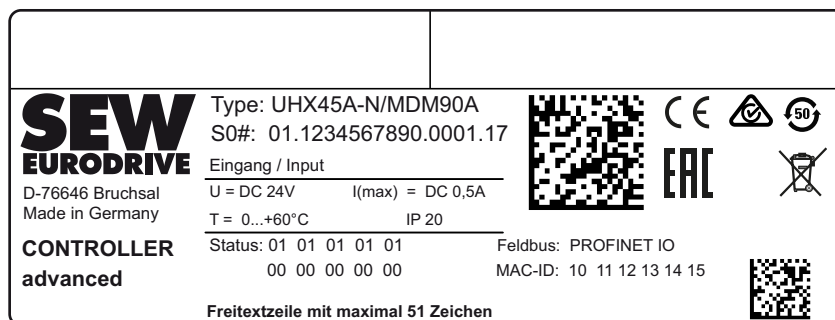

20985775883

L-carrier MDM90A

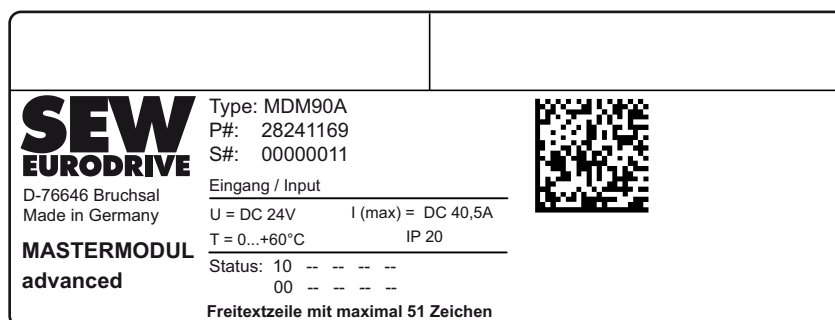

20985733899

3.2.3 Type code

The following tables show the type code structure:

Compact controller

Example: UHX45A-N		
Product name	UHX	MOVI-C® CONTROLLER
Series	45	Advanced
Version	A	Version status
Variants	N	<ul style="list-style-type: none"> • N = with PROFINET IO fieldbus interface • E = with EtherNet/IP™ or Modbus TCP fieldbus interface (in preparation)


Master module

Example: UHX45A-N /MDM90A		
Product name	UHX	MOVI-C® CONTROLLER
Series	45	Advanced
Version	A	Version status
Variants	N	<ul style="list-style-type: none"> • N = with PROFINET IO fieldbus interface • E = with EtherNet/IP™ or Modbus TCP fieldbus interface (in preparation)
Product name	MD	MOVIDRIVE®
Device type	M	Master module
Series	90	Standard variant
Version	A	Version status

3.2.4 Overview of communication interfaces

The MOVI-C® CONTROLLER has various communication interfaces:

- The Ethernet communication interfaces allow for engineering purposes for the MOVI-C® CONTROLLER, for connecting an operator panel as well as for communication with other Ethernet nodes (e.g. with a PLC).
- The EtherCAT®/SBus^{PLUS} interface is used to control drive inverters, I/O modules and other EtherCAT® slave components.

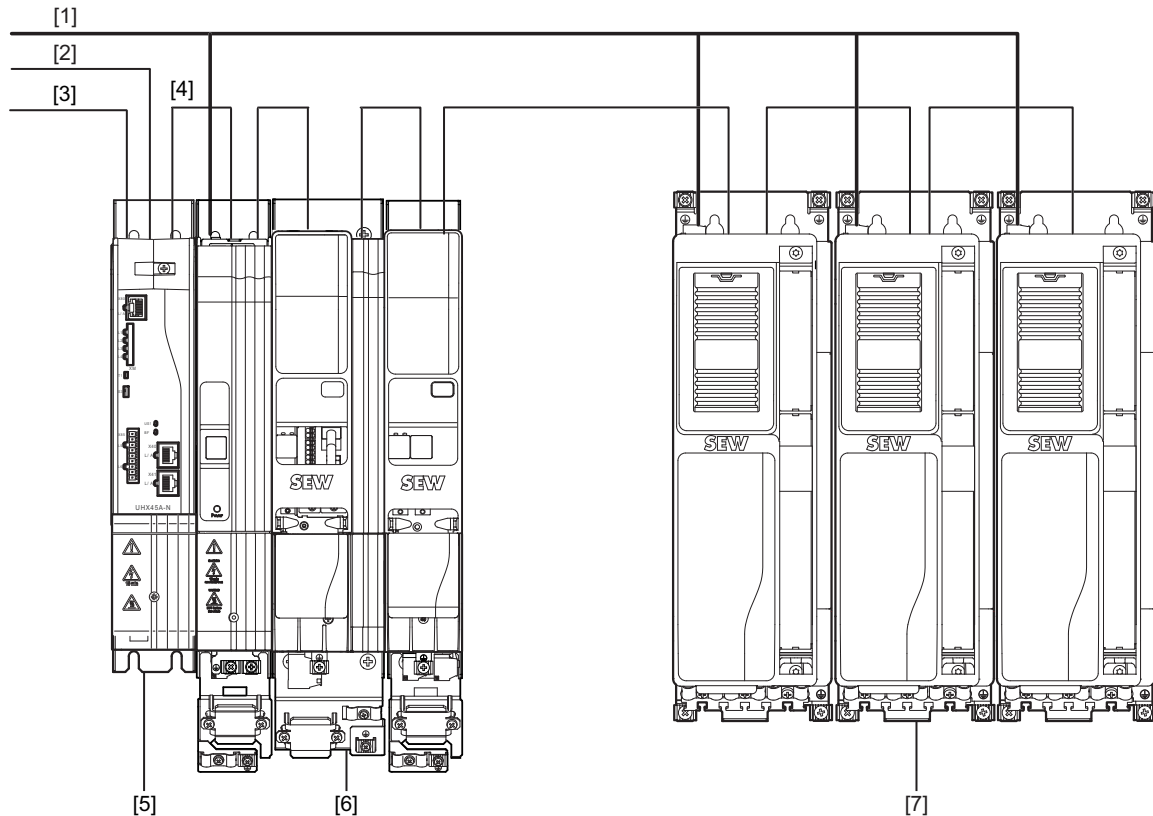

20984773899

- [1] Line voltage
- [2] Fieldbus connection
- [3] Engineering connection
- [4] EtherCAT®/SBus^{PLUS} connection

- [5] MOVI-C® CONTROLLER (master module)
- [6] MOVIDRIVE® modular axis system
- [7] MOVIDRIVE® system

Engineering interface

The following functions can be realized via this interface (X80, X81):

- Engineering of the MOVI-C® CONTROLLER
- PC visualization (e.g. OPC interface)
- Connection to master level

The engineering of the MOVI-C® CONTROLLER comprises the following activities:

- Configuration
- Parameterization
- Programming

Engineering is carried out using the MOVISUITE® engineering software. The software has a number of useful features for startup and diagnostics of all connected SEW-EURODRIVE devices.

EtherCAT®/SBus^{PLUS} interface

The following devices can be connected to the MOVI-C® CONTROLLER via the EtherCAT®/SBus^{PLUS} interface (X30):

- MOVIDRIVE® modular application inverter
- MOVIDRIVE® system application inverter
- MOVI-PLC® I/O system C
- Third-party components with ETG configuration file

The maximum number of application inverters that can be connected to the MOVI-C® CONTROLLER is: 16.

CAN system bus

In preparation

RS485 interface

In preparation

Fieldbus interface

The MOVI-C® CONTROLLER can be connected to a PLC via the fieldbus interfaces (X40, X41).

The fieldbus interface is integrated into the MOVI-C® CONTROLLER.

3.2.5 SD memory card OMH45A

The SD memory card (**S**ecure **D**igital Memory Card) is required to operate the MOVI-C® CONTROLLER, and contains firmware, IEC program, user data (e.g. recipes) as well as parameter sets of the lower-level MOVI-C® inverter by SEW-EURODRIVE. You can use the memory card for data backup and automatic parameterization in the event of an axis replacement. The SD memory card OMH45A is plugged into card slot XM of the MOVI-C® CONTROLLER.

3.3 MOVISUITE® engineering software

The new MOVISUITE® engineering software is the operating platform for all MOVI-C® hardware and software components.

The following MOVI-C® devices are currently supported by MOVISUITE®:

- MOVI-C® CONTROLLER
- MOVIDRIVE® modular application inverter, single-axis module and double-axis module
- MOVIDRIVE® system application inverter

The following engineering tasks can be conveniently performed with MOVISUITE®:

- Configuration
- Startup
- Parameter setting
- Programming
- Diagnostics

3.3.1 Advantages of MOVISUITE®

MOVISUITE® offers the following advantages:

- Easy and intuitive operation
- Project management for storing the devices and data sets
- Convenient forwarding of projects via automatically created e-mails
- Automatic project creation from scanned devices
- Startup preparation in the planning phase even without connected devices
- Design of the drive train from the motor to the gear unit via the product catalog or automatic identification of the gearmotor data by reading the electronic nameplate stored in the motor encoder.
- Product catalog for selecting encoders, brakes, control modes, user units
- Provision of standard drive trains and drive functions summarized in FCBs (function control blocks)
- Convenient, graphical startup and parameterization of the drive train
- Function view with overview of the status of the connected devices
- Creation of an overall system by structuring the devices as needed in the function view
- Easily calling up different manual modes
- Detailed messages and remedial measures in case of malfunction
- Identifying and supporting device replacements
- Synchronization functions for device data
- Data management with clearly marked transfer directions during data transmission
- Diagnostics of the drives with the integrated oscilloscope with up to 10 recording channels
- Integration of the IEC Editor for programming MOVI-C® CONTROLLER
- Integration of MOVIKIT® MultiMotion and MultiMotion Camming (further MOVIKIT® modules will follow)
- Long-term data acquisition on the engineering PC hard disk

4 Installation notes

4.1 Installation accessories

The listed standard accessories are included in the scope of delivery for the basic device.

The accessories can be ordered with the following part numbers:

Compact controller (UHX45A)

Accessory	Part number
Carrier plate UHX45A	28234863
Screw for support plate	00126497
DC 24 V voltage supply connector	19148410
Accessory shield plate UHX45A	28244389

Master module (UHX45A /MDM90A)

Accessory	Part number
L-carrier MDM90A	28241169
Accessory L-carrier MDM90A	28244397
In detail:	In detail:
PE connection	08178798
2 x connection DC 24 V supply voltage	18152694
Pan head screw M6x16	00137596
Pan head screw M4x12	00176230
System bus cable 4-pin, length 0.26 m	18179940
E connector DC 24 V supply voltage	18191711
Touch guard L-carrier MDM90A	18183859
Screw for touch guard	19189451
Accessory shield plate UHX45A	28244389
Fusing for DC 24 V supply voltage: 5 x 20 mm glass tube, 4 A, 125 V, slow-blow	13292668

4.2 Mechanical installation



⚠ CAUTION

Risk of injury to persons and damage to property.

Never install a defective or damaged MOVI-C® CONTROLLER.

- Before installation, check the device for external damage. Replace any damaged device.

NOTICE

Risk of damage to property due to mounting surface with poor conductivity.

Damage to the MOVI-C® CONTROLLER.

- The mounting plate in the control cabinet must be conductive over a large area for the mounting surface of the MOVI-C® CONTROLLER (metallically pure, good conductivity). EMC-compliant installation of the device can only be accomplished with a mounting plate that is conductive over a large area.

NOTICE

Risk of damage to property due to non-compliance with the stipulated tightening torques.

Damage to the MOVI-C® CONTROLLER.

- Always adhere to the stipulated tightening torques. Otherwise, excessive heat can develop which would damage the device.

4.2.1 Minimum clearance and mounting position

MOVI-C® CONTROLLER is installed in the control cabinet. Observe the following for installation:

- To ensure unobstructed cooling of the MOVI-C® CONTROLLER, leave a minimum clearance of 100 mm above and below the device's housing. Make sure air circulation in the clearance is not impaired by cables or other installation equipment.
- Ensure unobstructed cooling air supply and make sure that the MOVI-C® CONTROLLER is not exposed to the warm exhaust air from other devices.
- There is no need for clearance at the sides of the device. You may connect the MOVI-C® CONTROLLER and other devices (e.g. MOVIDRIVE® modular) in series.
- Install the devices only vertically. You must not install them horizontally, tilted or upside down.

4.2.2 Control cabinet installation


Control cabinet installation is shown at an axis system with a MOVI-C® CONTROLLER, a power supply module and several axis modules. The MOVI-C® CONTROLLER can either be used as compact controller or as master module.

Alignment in the axis system

When arranging the axis system, observe that the nominal output current I_N of the axis modules must decrease from left to right. The axis module with the highest nominal output current must be on the right side of the power supply module. All remaining axis modules are installed in descending order regarding their nominal output current.

When used as master module (see figure), as well as when used as compact controller, MOVI-C® CONTROLLER must always be installed left of the power supply module.

In one axis system, up to 15 axis modules can be used, both as single-axis modules and double-axis modules.

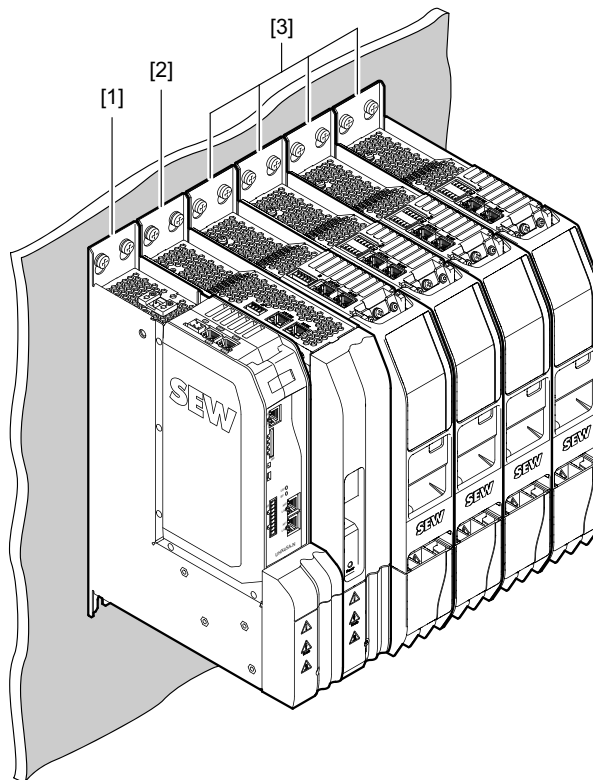


21042940939

- [1] MOVI-C® CONTROLLER
- [2] Power supply module
- [3] Axis module sizes 1

Compact controller

In preparation to the control cabinet installation, MOVI-C® CONTROLLER must be mounted to a carrier plate.

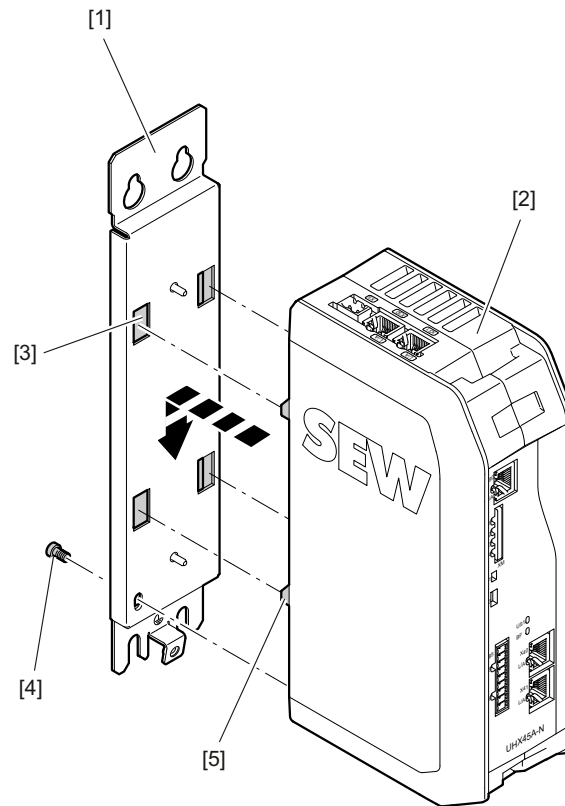

21394946187

- | | | | |
|-----|--------------------|-----|-------|
| [1] | Support plate | [4] | Screw |
| [2] | MOVI-C® CONTROLLER | [5] | Cam |
| [3] | Recess | | |

Mounting the carrier plate

Proceed as follows:

1. Install the housing of the MOVI-C® CONTROLLER [2] so that the cams [5] fit into the recesses [3] at the carrier plate [1].
2. Push the housing of the MOVI-C® CONTROLLER [2] downward to the stop at the cams [5].
3. Tighten the screw [4].

Removing the carrier plate


Proceed as follows:

1. Loosen the screw [4].
2. Pull the housing of the MOVI-C® CONTROLLER [2] upward and remove it toward the front.

Inserting MOVI-C® CONTROLLER

Proceed as follows:


- ✓ The retaining screws [1] and [2] are screwed into the prepared mounting grid in the control cabinet but not tightened.
- 1. Place the MOVI-C® CONTROLLER with the slotted holes in the device base plate onto the retaining screws [1] from the top.

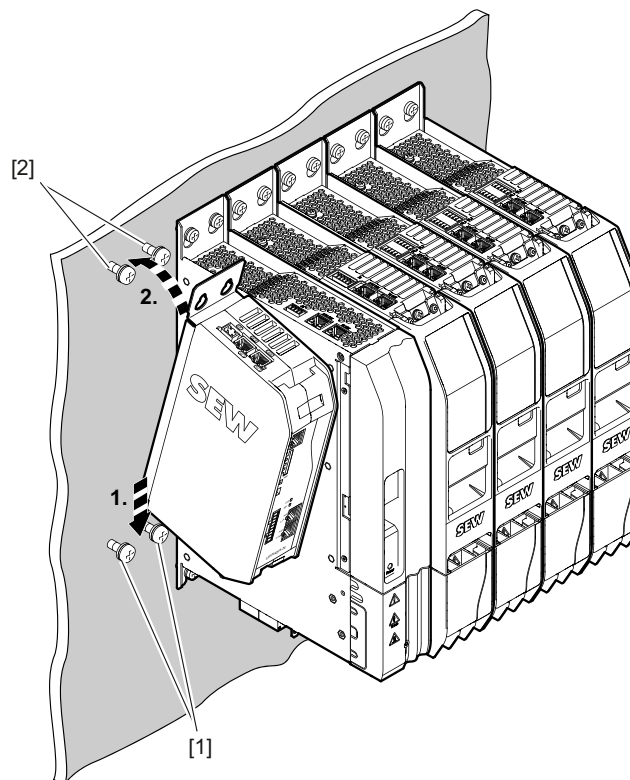

21228343051

- 2. Push the module backwards to insert the retaining screws [2] into the upper holes in the carrier plate.
- 3. Lower the module.
- 4. Tighten the retaining screws [1] and [2].

Master module

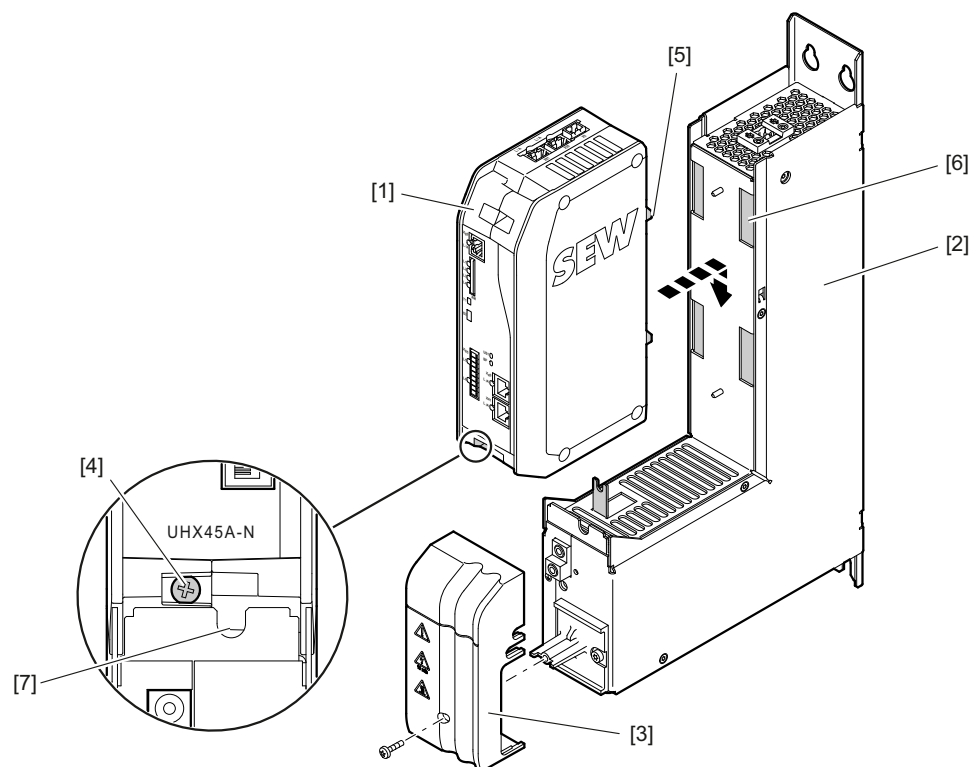

21394940683

- | | | | |
|-----|--------------------|-----|-----------------|
| [1] | MOVİ-C® CONTROLLER | [5] | Cam |
| [2] | L-carrier MDM90A | [6] | Recess for cams |
| [3] | Touch guard | [7] | Pry-out recess |
| [4] | Screw | | |

Mounting the L-carrier

Proceed as follows:

1. Remove the touch guard [3] at the housing of the L-carrier [2]
2. Install the housing of the MOVİ-C® CONTROLLER [1] so that the cams [5] fit into the recesses [6] at the housing of the L-carrier [2].
3. Push the housing of the MOVİ-C® CONTROLLER [1] downward until it touches the housing of the L-carrier.
4. Tighten the screw [4]
5. Install the touch guard [3] again

Removing the L-carrier


Proceed as follows:

1. Remove the touch guard [3] at the housing of the L-carrier [2]
2. Loosen the screw [4]
3. Pull the housing of the MOVİ-C® CONTROLLER [1] upward. Recess [7] can be used to pry out the housing if necessary.
4. Remove MOVİ-C® CONTROLLER housing to the front.

Inserting the master module

Proceed as follows:

- ✓ The retaining screws [1] and [2] are screwed into the prepared mounting grid in the control cabinet but not tightened.
- 1. Place the module with the slotted holes on the unit base plate onto the retaining screws [1] from the top.

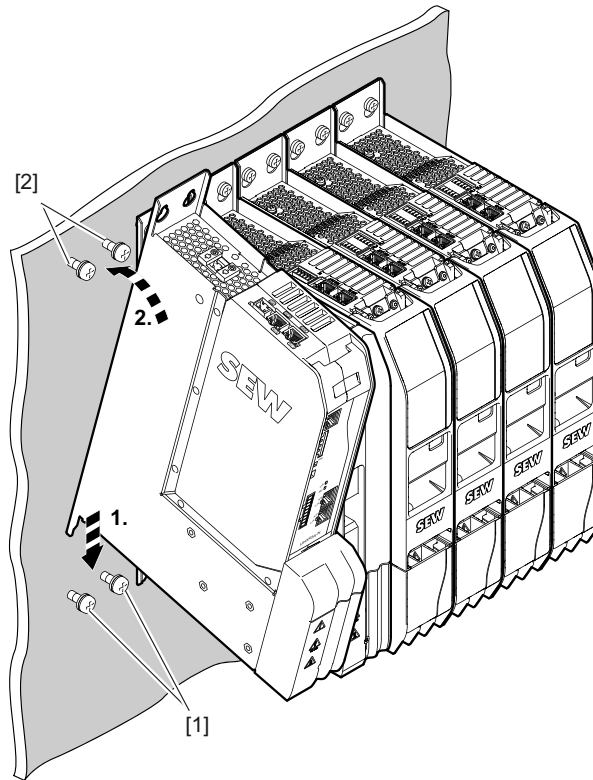


21228294027

2. Push the module backwards to insert the retaining screws [2] into the upper holes in the unit base plate.
3. Lower the module.
4. Tighten the retaining screws [1] and [2].

Removing the touch guard

Proceed as follows:

1. Remove the screws [1] from the touch guard.

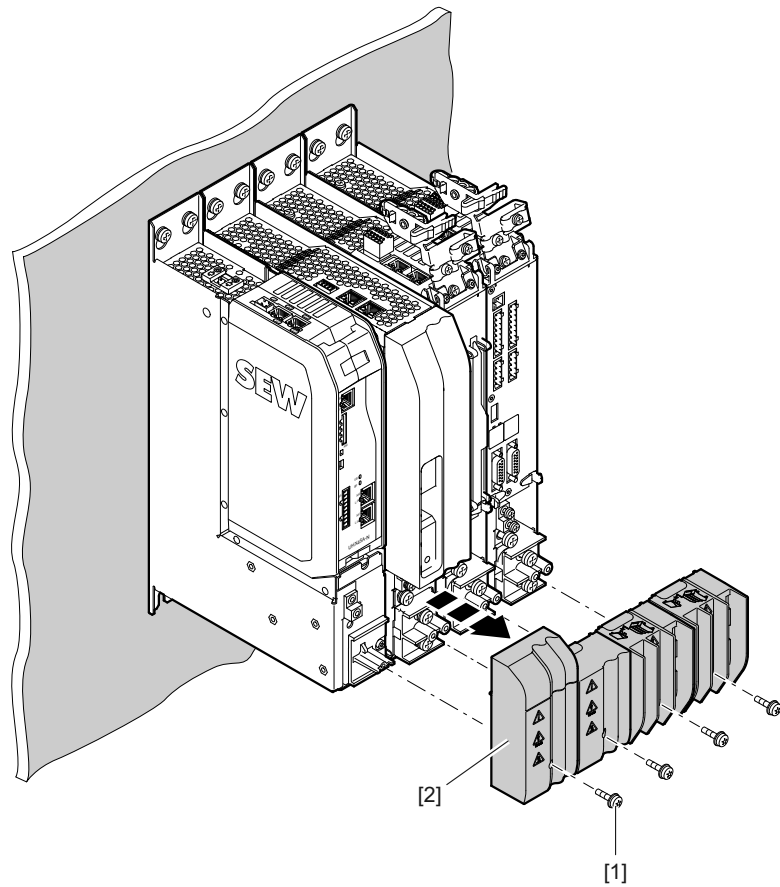



21010480523

2. Remove the touch guard [2].

Installing the busbar

Proceed as follows:

1. Install the busbar [1] for the DC 24 V supply voltage as shown in the figure. Tighten the screws with the specified tightening torque (1.2 – 1.5 Nm).

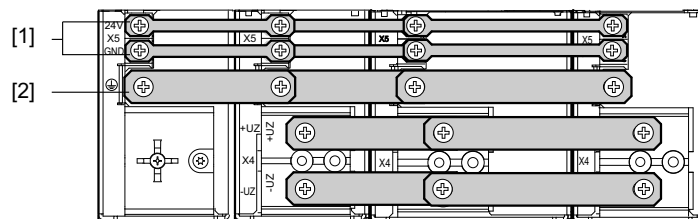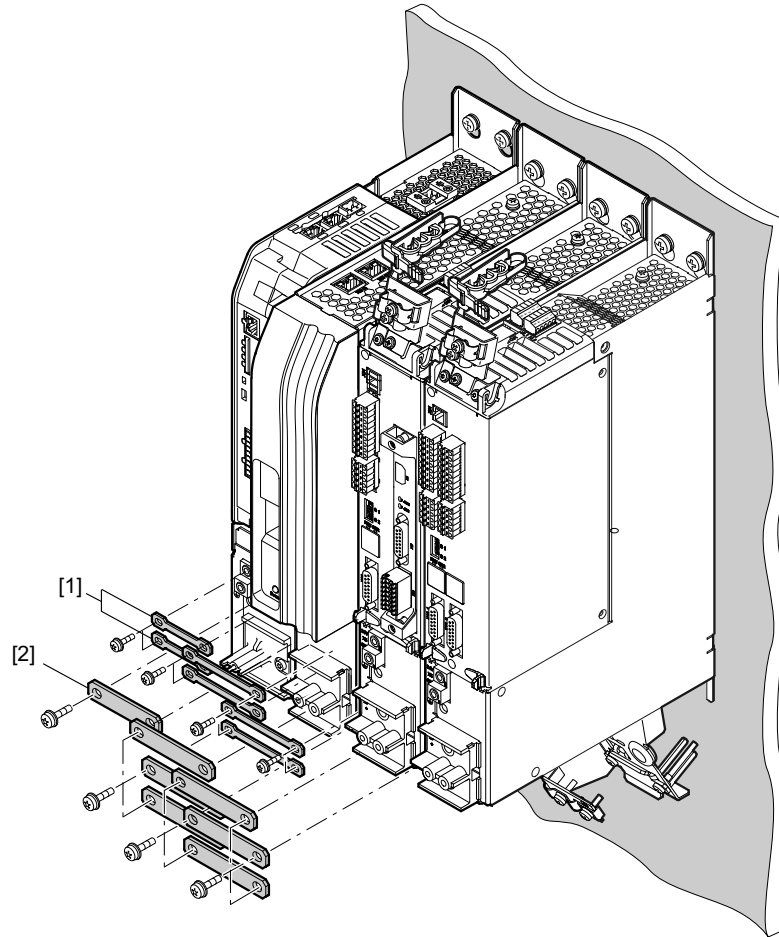

21010487819


2. Install the busbar [2] for the PE connection as shown in the figure. Tighten the screws with the specified tightening torque (3 – 4 Nm).

Installing the touch guard

A closing cover has to be attached to the last module of the axis system.

Proceed as follows:

1. Slide the closing cover [3] onto the touch guard.

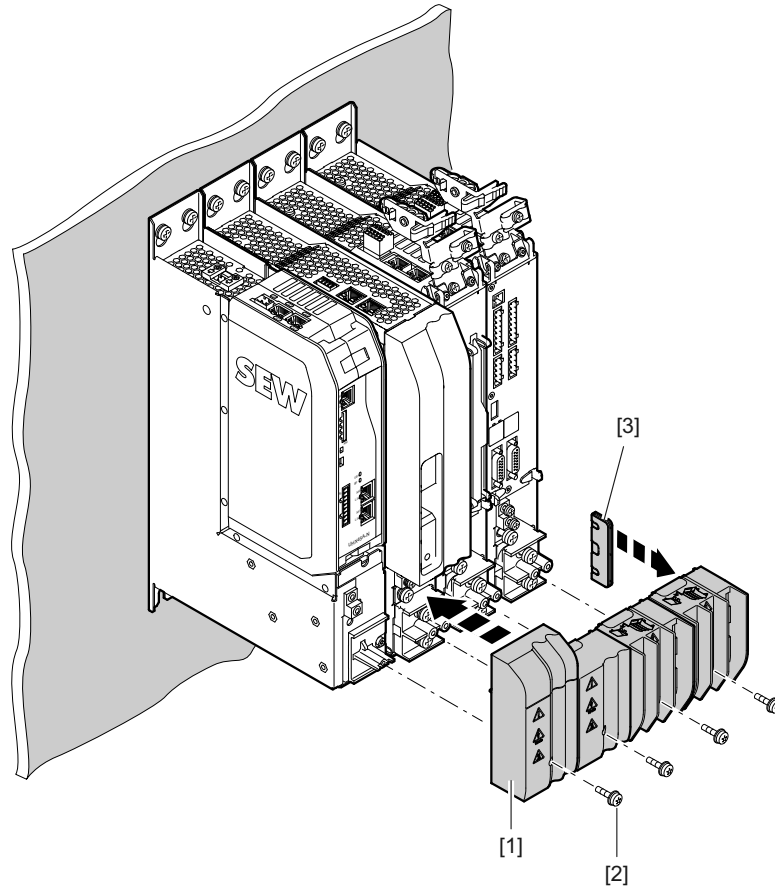


21058855947

2. Install the touch guard [1] on the module.
3. Insert the screw [2] and tighten it securely with the specified tightening torque (0.6 – 0.8 Nm).

Top shield plate

Install the top shield plate as shown in the figure.

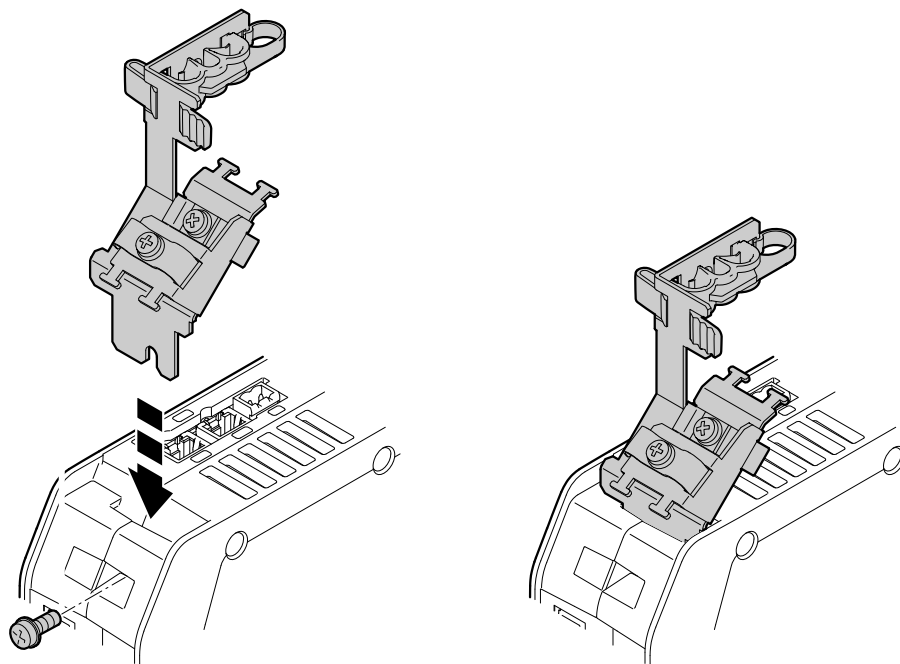

20988935947

4.2.3 Removing the MOVI-C® CONTROLLER

Removal of the compact controller and the master module is performed in reverse order as with installation, see chapter "Compact controller" (→ 23) and "Master module" (→ 25).

Also observe the safety notes in chapter "Electrical installation" (→ 31).

4.3 Electrical installation

INFORMATION



Installation with protective separation.

The device meets all requirements for protective separation of power and electronics connections in accordance with EN 61800-5-1. The connected signal circuits have to meet the requirements according to SELV (**S**afe **E**xtremely **L**ow **V**oltage) or PELV (**P**rotective **E**xtra **L**ow **V**oltage) to ensure protective separation. The installation must meet the requirements for protective separation.

4.3.1 Shielding and routing bus cables

NOTICE

Risk of a compensating current flowing as a result of incorrect bus cable type, improper shielding and/or improperly routed bus cables.

Possible damage to property.

- In case of fluctuations in the ground potential, a compensating current may flow via the bilaterally connected shield that is also connected to the protective earth (PE). Make sure you supply adequate equipotential bonding in accordance with relevant IEC regulations in such a case.


Only use shielded cables and connection elements that meet the requirements of category 5, class D according to IEC 11801 edition 2.0.

Correct shielding of the bus cable attenuates electrical interference that can occur in industrial environments. The following measures ensure the best possible shielding:

- Manually tighten the mounting screws on the connectors, modules, and equipotential bonding conductors.
- Use only connectors with a metal housing or a metalized housing.
- Connect the shielding in the connector over a wide surface area.
- Apply the shielding of the bus cable on both ends.
- Route signal and bus cables in separate cable ducts. Do not route them parallel to power cables (motor leads).
- Use metallic, grounded cable racks in industrial environments.
- Route the signal cable and the corresponding equipotential bonding close to each other using the shortest possible route.
- Avoid using plug connectors to extend bus cables.
- Route the bus cables closely along existing grounding surfaces.

4.3.2 Functional description of the terminals


MOVI-C® CONTROLLER

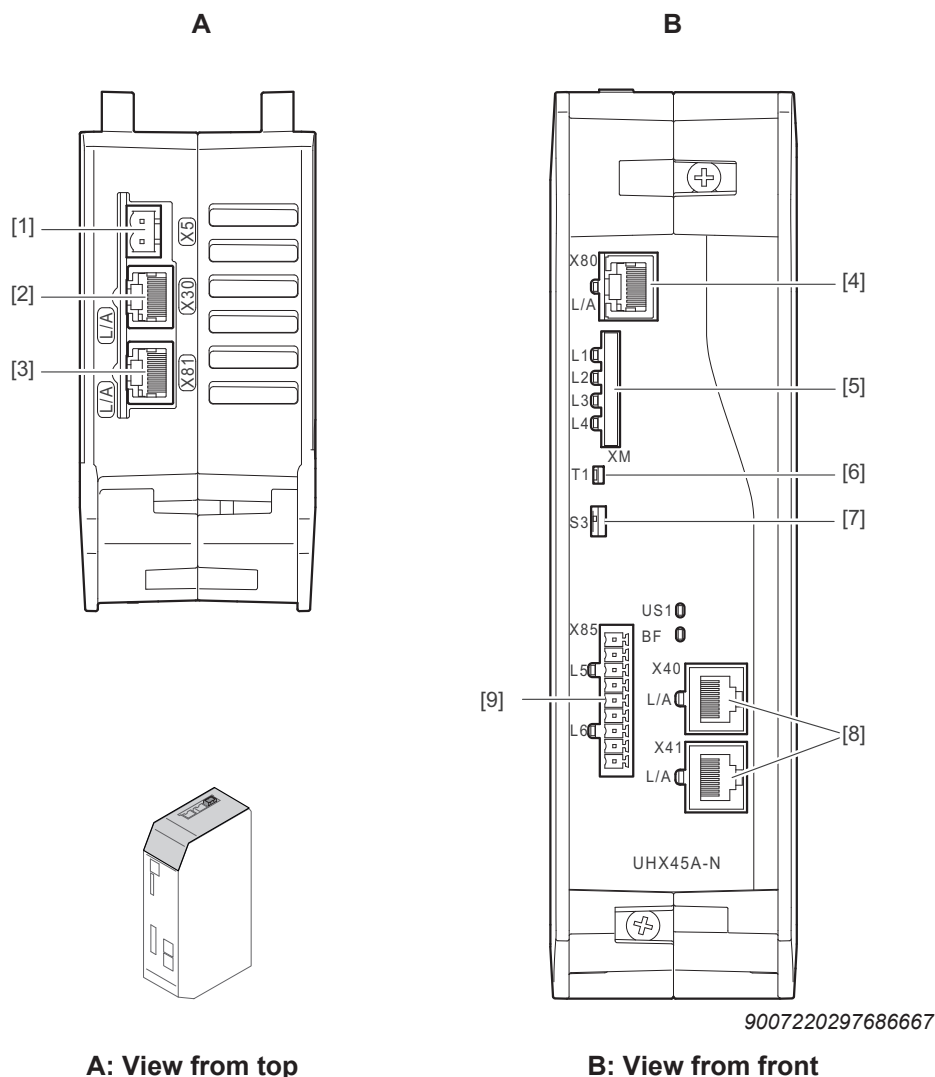

No.	Designation	Ter- minal	Function
[1]	DC 24 V supply voltage connection (2-pin connection)	X5	DC 24 V voltage supply
[2]	EtherCAT®/SBus ^{PLUS} interface (RJ45 socket)	X30	EtherCAT®/SBus ^{PLUS} master connection
[3]	Engineering interface (RJ45 socket)	X81	Engineering PC connection IP address on the SD memory card set by user (standard IP address of the X81 engineering interface on delivery: 10.1.254.128)
[4]	Engineering interface (RJ45 socket)	X80	Engineering PC connection Default IP address: 192.168.10.4 (dependent on the DIP switch setting S3)

No.	Designation	Ter- minal	Function
[5]	SD card slot	XM	Card slot for SD memory card OMH45A (control section with firmware, IEC program, user data) INFORMATION: Make sure the SD memory card is correctly aligned when inserting it: The name-plate must be on the right side of the SD memory card.
[6]	Reset button	T1	Reset
[7]	DIP switch	S3	<ul style="list-style-type: none"> Bottom position: Standard IP address of the X80 engineering interface: 192.168.10.4 (cannot be changed) Top position: IP address on the SD memory card set by user (standard IP address of the X80 engineering interface on delivery: 192.168.10.4)
[8]	Fieldbus interface (RJ45 socket)	X40/X41	<ul style="list-style-type: none"> MOVI-C® CONTROLLER UHX45A-N: Slave connection PROFINET IO MOVI-C® CONTROLLER UHX45A-E: Slave connection EtherNet/IP™ or Mod-bus TCP (in preparation)
[9]	System bus and RS485 interface (9-pin connection)	X85	<ul style="list-style-type: none"> RS485 interface (in preparation) System bus CAN 1 (in preparation) System bus CAN 2 (in preparation)

L-carrier MDM90A

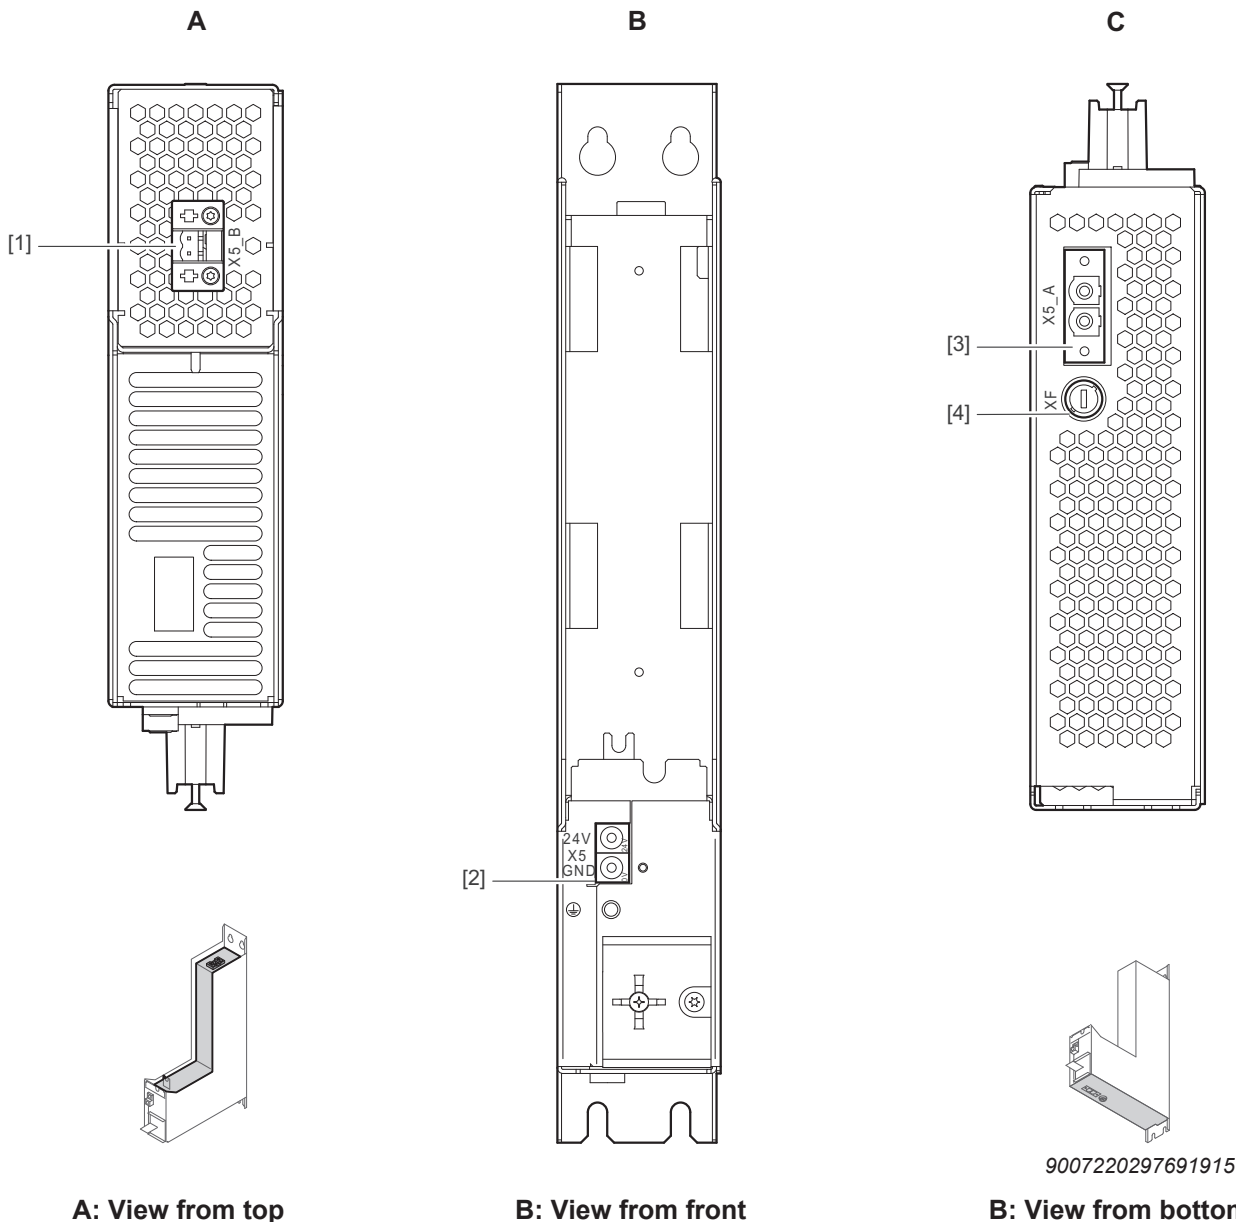

No.	Designation	Ter- minal	Function
[1]	Output for the DC 24 V supply voltage (2-pin connection)	X5_B	Voltage supply of the MOVI-C® CONTROLLER
[2]	Connection DC 24 V supply voltage	X5	Voltage supply of the MOVIDRIVE® axis system
[3]	External DC 24 V supply voltage	X5_A	Voltage supply input of the MOVIDRIVE® axis system and MOVI-C® CONTROLLER
[4]	Fusing for DC 24 V supply voltage: 5 x 20 mm glass tube, 4 A, 125 V, slow-blow	XF	Fusing for voltage supply MOVI-C® CONTROLLER

24777730/EN – 01/2018

4.3.3 Voltage supply


Compact controller

Use an external DC 24 V power supply unit for the voltage supply:

- Power consumption $P_{\max} = 12 \text{ W}$
- Current consumption $I_{\max} = 500 \text{ mA}$ (with DC 24 V supply voltage)

The maximum permitted length of the DC 24 V supply cable is 30 m.

Wiring diagram

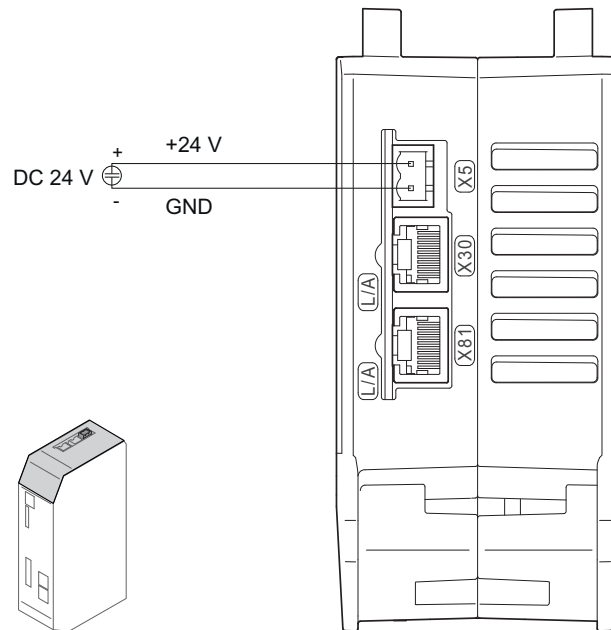


9007220297965451

Master module

Use an external DC 24 V power supply unit for the voltage supply:

- Power consumption $P_{\max} = 972 \text{ W}$
- Current consumption $I_{\max} = 40.5 \text{ A}$ (with DC 24 V supply voltage)

The maximum permitted length of the DC 24 V supply cable is 30 m.

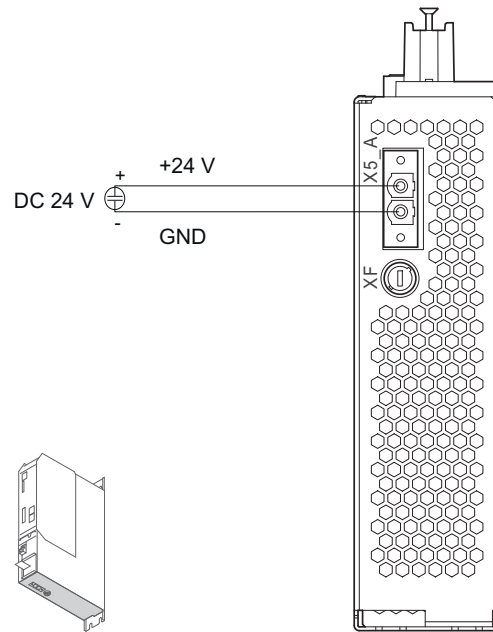
Wiring diagram

9007220694161931

4.3.4 Engineering PC connection

The MOVI-C® CONTROLLER is connected to the X80 engineering interface (RJ45 connector) with the engineering PC or other network stations (e.g. visualization systems). The communication is realized via Ethernet.

The device is connected to the other network stations, using a category 5, class D twisted-pair cable in accordance with IEC 11801, edition 2.0.

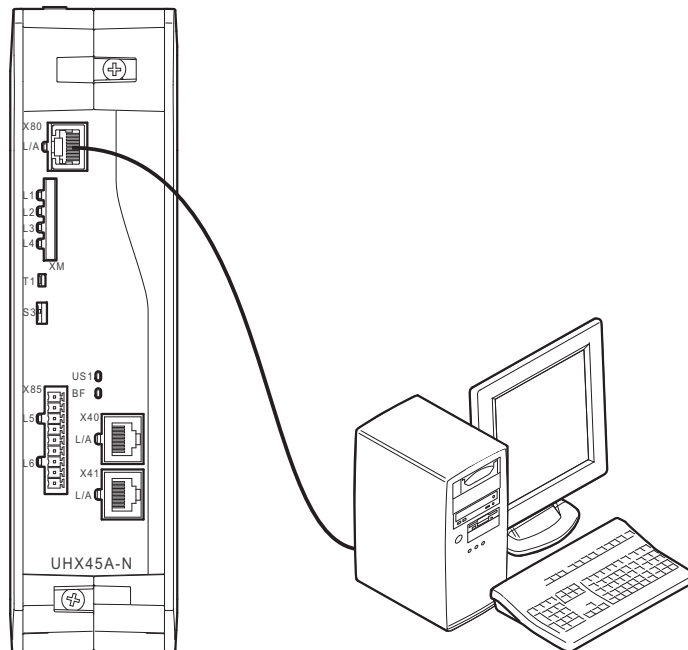

9007220297970187

INFORMATION




According to IEEE 802.3, 200 Edition, the maximum cable length for 10 MBaud/100 MBaud/100 MBaud Ethernet (10BaseT/100BaseT/1000BaseT) between 2 network nodes is 100 m.

4.3.5 EtherCAT®/SBus^{PLUS} master connection

The MOVI-C® CONTROLLER serves as EtherCAT®/SBus^{PLUS} master for the lower-level application inverters (EtherCAT®/SBus^{PLUS} slaves). The communication takes place via the EtherCAT®-based, fast system bus SBus^{PLUS} (terminal X30).

EtherCAT®/SBus^{PLUS} bus topology

EtherCAT®/SBus^{PLUS} is designed for linear bus structure with RJ45 connectors. The EtherCAT®/SBus^{PLUS} slave devices are connected via a shielded twisted-pair cable.

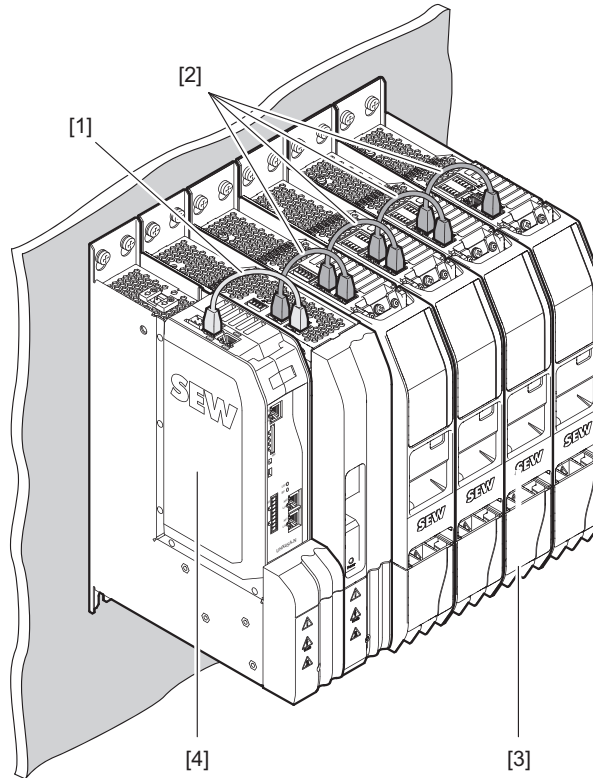

9007220482503307

- [1] System bus cable, 4-pin, color: light gray
- [2] Module bus cable, 8-pin, color: anthracite gray
- [3] MOVIDRIVE® modular
- [4] MOVI-C® CONTROLLER (master module)

INFORMATION



According to IEEE 802.3, 200 Edition, the maximum cable length for 10 MBaud/100 MBaud Ethernet (10BaseT/100BaseT) between 2 EtherCAT®/SBus^{PLUS} stations is 100 m.

Bus termination

Bus termination (for example with bus terminating resistors) is not necessary. The system detects automatically if there is no subsequent device connected to a device.

4.3.6 CAN system bus connection

In preparation


4.3.7 Connecting the fieldbus slave

The MOVI-C® CONTROLLER serves as fieldbus slave for the PLC (fieldbus master). The communication is realized via Ethernet.

The MOVI-C® CONTROLLER is connected to the Ethernet network via the following terminals:

- X40 (RJ45 connector)
- X41 (RJ45 connector)

The device is connected to the other network stations, using a category 5, class D twisted-pair cable in accordance with IEC 11801, edition 2.0.

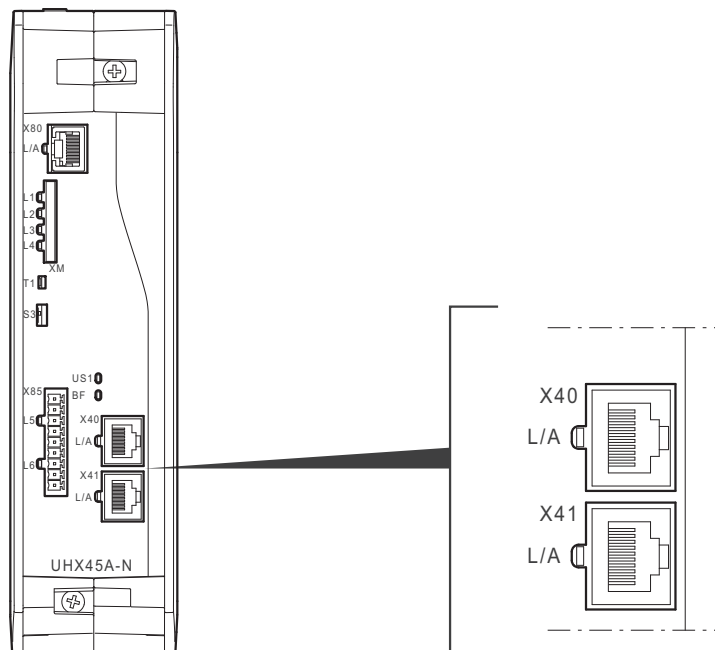

9007220298082955

INFORMATION



According to IEEE 802.3, 200 Edition, the maximum cable length for 10 MBaud/100 MBaud Ethernet (10BaseT/100BaseT) between 2 network nodes is 100 m.

The integrated Ethernet switch

The device is equipped with an integrated 2 port Ethernet switch for connecting the fieldbus technology. The following network topologies are supported:

- Tree topology
- Star topology
- Line topology
- Ring topology

Auto-crossing

The two ports leading out of the Ethernet switch have auto-crossing functionality. You can use both patch and crossover cables to connect to the next Ethernet node.

Auto-negotiation

The baud rate and duplex mode are negotiated by both Ethernet nodes when establishing the connection. For this purpose, both Ethernet ports of the Ethernet connection support an auto-negotiation functionality and work with a baud rate of either 100 Mbit or 10 Mbit in full duplex or half duplex mode.

4.4 Terminal assignment

INFORMATION



Reference potentials inside the device:

The device internal reference potential is designated as GND in the following table.
All reference potentials GND are internally connected to PE.

INFORMATION




The assignment "reserved" means that no cable must be connected to this connection.


Representation	Terminal	Connection		Short description	
	X5:24V	V _I 24 V		DC 24 V supply voltage	
	X5:GND	GND		Reference potential	
	X30			Fast system bus SBus ^{PLUS} based on EtherCAT®	
		10/100 BaseT	1000 BaseT	10/100 BaseT	1000 BaseT
	X80/X81:1	TX+	DA+	Transmit line (+)	Bidirectional pair A
	X80/X81:2	TX-	DA-	Transmit line (-)	Bidirectional pair A
	X80/X81:3	RX+	DB+	Receive line (+)	Bidirectional pair B
	X80/X81:4	Reserved	DC+	–	Bidirectional pair C
	X80/X81:5	Reserved	DC-	–	Bidirectional pair C
	X80/X81:6	RX-	DB-	Receive line (-)	Bidirectional pair B
	X80/X81:7	Reserved	DD+	–	Bidirectional pair D
	X80/X81:8	Reserved	DD-	–	Bidirectional pair D
	X40/X41:1	TX+		Transmit line (+)	
	X40/X41:2	TX-		Transmit line (-)	
	X40/X41:3	RX+		Receive line (+)	
	X40/X41:4	Reserved		–	
	X40/X41:5	Reserved		–	
	X40/X41:6	RX-		Receive line (-)	
	X40/X41:7	Reserved		–	
	X40/X41:8	Reserved		–	

4 Installation notes

Status LEDs

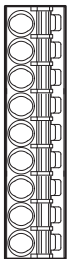Represent- ation	Terminal	Connection	Short description
	1	RS485	RS485 interface (in preparation)
	2		
	3		
	4	CAN 1	System bus CAN 1 – non-floating (in preparation)
	5		
	6	CAN 2	System bus CAN 2 – electrically isolated (in preparation)
	7		
	8		
	9		

4.5 Status LEDs

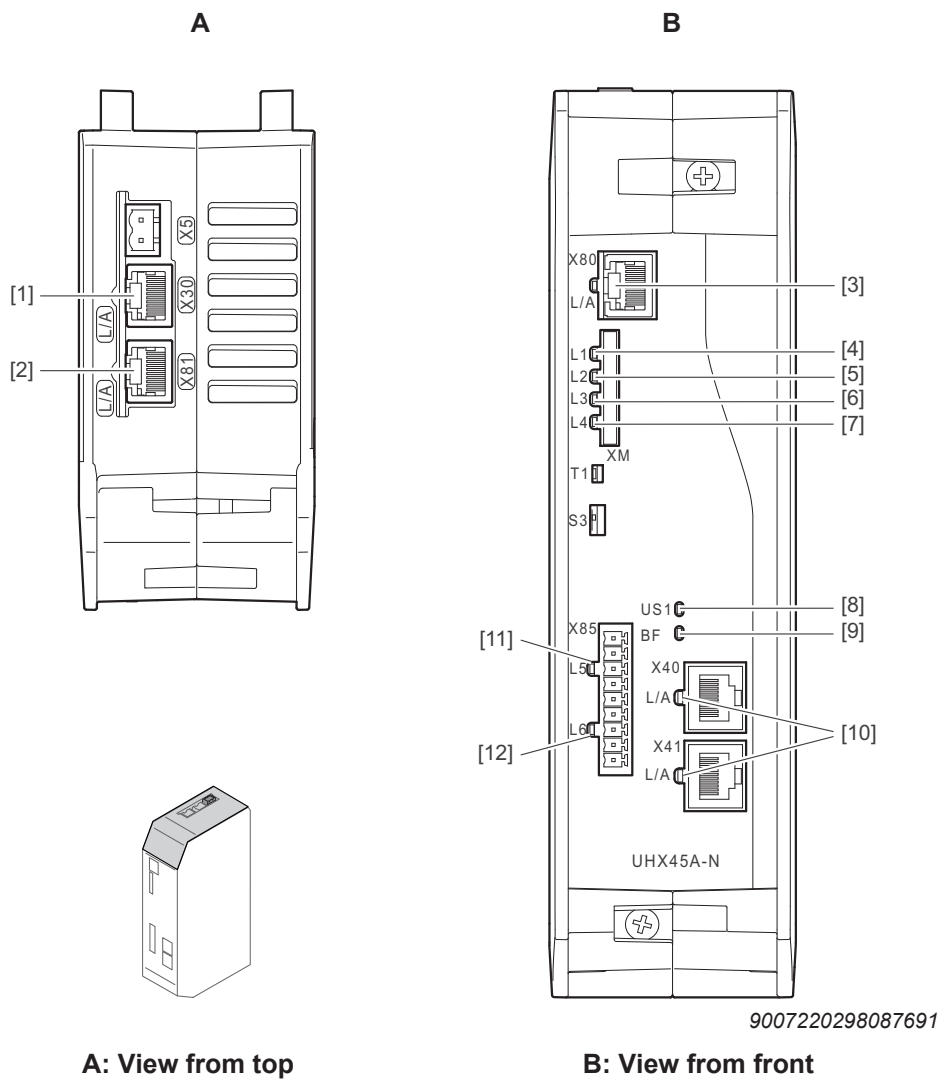

- [1] L/A: Status of the EtherCAT®/SBus^{PLUS} connection
- [2] L/A: Status of the engineering connection (X81)
- [3] L/A: Status of the engineering connection (X81)
- [4] L1: Status of the MOVI-C® CONTROLLER firmware
- [5] L2: Status of the IEC program
- [6] L3: Reserved
- [7] L4: Status of the system bus SBus^{PLUS} (not yet supported)
- [8] US1: Operating state of the fieldbus
- [9] BF: Bus error
- [10] L/A: Status of the fieldbus connection
- [11] L5: Status of system bus CAN 1 (in preparation)
- [12] L6: Status of system bus CAN 2 (in preparation)

4.5.1 Status LED "L1"

Indicates the status of the firmware during the boot phase as well as during operation.

During boot phase

Status	Possible cause	Measure
Red	The firmware of the device fails to boot.	Contact SEW-EURODRIVE service.
Orange	The SD memory card is not inserted.	Insert a SD memory card into the device.
	The data system of the SD memory card is corrupt.	Contact SEW-EURODRIVE service.
Green	The SD memory card has faulty contents.	Contact SEW-EURODRIVE service.
Red, flashing with 1 Hz	The SD memory card has faulty contents. The firmware of the device is faulty.	Contact SEW-EURODRIVE service.

During operation

Status	Possible cause	Measure
Green, flashing with 0.5 Hz	Firmware of the device is running properly.	–
Red, flashing with 0.5 Hz	The firmware of the device is faulty.	Contact SEW-EURODRIVE service.

4.5.2 Status LED "L2"

Indicates the status of the IEC program.

Status	Possible cause	Measure
Off	No IEC program loaded.	Load an IEC program on the device.
Orange, flashing with 0.5 Hz	Program has stopped running.	Start the IEC program.
Red, flashing with 0.5 Hz	The IEC program is faulty.	Check and correct the IEC program.
Green, flashing with 0.5 Hz	IEC program is running correctly.	–

4.5.3 Status LED "L3"

LED	Meaning
–	Is reserved.

4.5.4 Status LED "L4"

Displays the status of the system bus SBus^{PLUS} (not yet supported)

LED	Meaning
–	Is reserved.

4.5.5 Status LED "L5"

In preparation

4.5.6 Status LED "L6"

In preparation

4.5.7 "US1" status LED

Indicates the operating state of the fieldbus. The status LED "US1" meets and expands the requirements of AIDA (Automation Initiative of German Domestic Automobile manufacturers).

Status	Possible cause	Measure
Green	The fieldbus electronics is running properly.	–
Green, flashing Lights up: 0.5 s Disabled: 3 s	The fieldbus electronics is in energy-saving mode (standby mode).	–
Orange, flashing Lights up: 0.25 s Disabled: 0.25 s	The fieldbus electronics is just running up after a reset.	–
Red	Error in the hardware of the device.	Switch the device off and back on again. If the fault occurs again, contact SEW-EURODRIVE service.

4.5.8 Status LED "BF" (BUS FAULT)

Indicates a bus error. The status LED "BF" meets and expands the requirements of AIDA (Automation Initiative of German Domestic Automobile manufacturers).

Status	Possible cause	Measure
Off	There is a controlling connection to the fieldbus master (PLC).	–
Orange	The fieldbus slave (device) does not support the configured functions in the fieldbus master.	Perform the configuration again.
Red	<ul style="list-style-type: none"> No connection could be established to the fieldbus master. The connection to the fieldbus master has been interrupted. 	Check the PROFINET device name in the fieldbus master and fieldbus slave.

4.5.9 Status LEDs "L/A" (Link/Activity)

Indicate the status of the Ethernet connection.

Status LED	Meaning
Green	There is an Ethernet connection.
EtherCAT®/SBus ^{PLUS} interface: Green, flashing	Data is currently being exchanged via Ethernet.
Engineering interface and fieldbus interface: Orange, flashing	Data is currently being exchanged via Ethernet.
Off	There is no Ethernet connection.

5 Startup with PROFINET IO

5.1 Industrial Ethernet networks

5.1.1 TCP/IP addressing and subnetworks

The address of the TCP/IP protocol is set using the following parameters:

- MAC address
- IP address
- Subnet mask
- Standard gateway

The addressing mechanisms and subdivision of the TCP/IP networks into subnetworks are explained in this chapter to help you set the parameters correctly.

5.1.2 MAC address

The MAC (**M**edia **A**ccess **C**ontroller) address is the basis for all address settings. The MAC address is a worldwide unique 6-byte value (48 bits) assigned to the Ethernet device. The MAC address of Ethernet devices from SEW-EURODRIVE is 00-0F69-xx-xx-xx.

The MAC address is difficult to handle for larger networks. This is why freely assignable IP addresses are used.

5.1.3 IP address

The IP address is a 32-bit value that uniquely identifies a node in the network. An IP address is represented by 4 decimal numbers separated by decimal points.

Each decimal number stands for 1 byte (8 bits) of the address and can also be represented using binary code:

Exemplary IP address: 192.168.10.4		
Byte	Decimal	Binary
1	192	11000000
2	168	10101000
3	10	00001010
4	4	00000100

The IP address comprises a network address and a node address.

The part of the IP address that denotes the network and the part that identifies the node is determined by the network class and the subnet mask.

5.1.4 Network class

The first byte of the IP address determines the network class and as such represents the division into network addresses and node addresses:

Range of values (Byte 1 of IP address)	Network class	Example: Complete network address	Meaning
0 – 127	A	10.1.22.3	10 = Network address 1.22.3 = Node address
128 – 191	B	172.16.52.4	172.16 = Network address 52.4 = Node address
192 – 223	C	192.168.10.4	192.168.10 = Network address 4 = Node address

Node addresses that consist only of zeros or ones are not permitted. The smallest address (all bits are zero) describes the network itself and the largest address (all bits are 1) is reserved for the broadcast.

This rough division is not sufficient for a number of networks. The networks also use an explicit, adjustable subnet mask.

5.1.5 Subnetwork mask

A subnet mask is used to divide the network classes into even finer sections. Like the IP address, the subnet mask is represented by 4 decimal numbers separated by decimal points.

Each decimal number stands for 1 byte (8 bits) of the subnet mask and can also be represented using binary code:

Exemplary subnet mask: 255.255.255.128		
Byte	Decimal	Binary
1	255	11111111
2	255	11111111
3	255	11111111
4	128	10000000

The binary representation of the IP address and the subnet mask shows that in the subnet mask, all bits of the network address are set to 1 and only the bits of the node addresses have the value 0:

IP address: 192.168.10.129		Subnet mask: 255.255.255.128
	Bytes 1 – 4	Bytes 1 – 4
Network address	11000000	11111111
	10101000	11111111
	00001010	11111111
Node address	10000001	10000000

The class C network with the network address 192.168.10 is further subdivided into the following 2 networks by the subnet mask 255.255.255.128:

Network address	Node addresses
192.168.10.0	192.168.10.1 – 192.168.10.126
192.168.10.128	192.168.10.129 – 192.168.10.254

The network nodes use a logical AND operation for the IP address and the subnet mask to determine whether there is a communication partner in the same network or in a different network. If the communication partner is in a different network, the standard gateway is addressed for passing on the data.

5.1.6 Standard gateway

The standard gateway is also addressed via a 32-bit address. The 32-bit address is represented by 4 decimal numbers separated by decimal points.

Exemplary standard gateway: 192.168.10.1

The standard gateway establishes a connection to other networks. A network node that wants to address another node uses a logical AND operation of the IP address and subnet mask to determine whether the node is in the same network. If this is not the case, the network node addresses the standard gateway (router), which must be part of the actual network. The standard gateway then takes on the job of transmitting the data packages.

5.1.7 DHCP (Dynamic Host Configuration Protocol)

Instead of setting the 3 parameters IP address, subnet mask and standard gateway manually, they can be assigned automatically by a DHCP server in the Ethernet network.


The IP address is assigned based on a table in the DHCP server. The table contains an assignment of MAC addresses to IP addresses.

5.2 Connecting the MOVI-C® CONTROLLER to the PROFINET network

This examples explains how to connect a MOVI-C® CONTROLLER to a PROFINET network. The following device topology was used in the example:

- SIMATIC S7-300 higher-level controller with CPU 315F-2 PN/DP
- MOVI-C® CONTROLLER advanced, device variant UHX45A-N
- MOVIDRIVE® modular application inverter, MDD90A double-axis module
- MOVIDRIVE® modular application inverter, MDA90A single-axis module

The following figure is a schematic representation of the device topology:

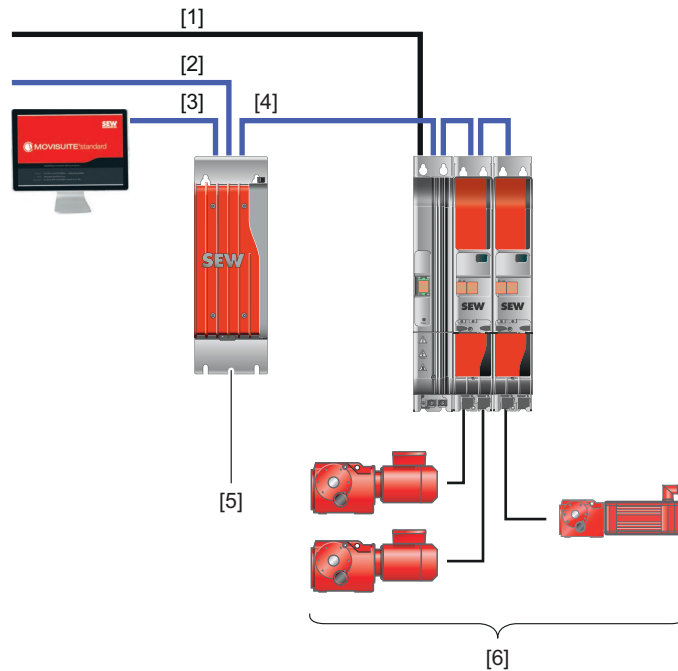

18014415964640907

- | | |
|----------------------------|---|
| [1] Line voltage | [4] EtherCAT®/SBus ^{PLUS} connection |
| [2] Fieldbus connection | [5] MOVI-C® CONTROLLER advanced |
| [3] Engineering connection | [6] MOVIDRIVE® modular axis system |

INFORMATION






It is not possible to program and configure the MOVI-C® CONTROLLER via the field-bus interface.

For configuration and startup of the devices, the following tools are used:

- MOVISUITE® for the MOVI-C® devices from SEW-EURODRIVE
MOVISUITE® has integrated the IEC Editor to program the MOVI-C® CONTROLLER.
- TIA Portal (SIMATIC STEP 7) from Siemens for the PLC

The MOVI-C® CONTROLLER is connected to the PROFINET network in several process steps:

1. "Configuration of the EtherCAT®/SBusPLUS stations" (→  51)
2. "Configuration of the fieldbus stations" (→  56)
3. "Controlling the stations in test run" (→  73)

5.3 Configuration of the EtherCAT®/SBus^{PLUS} stations

In the project example, the following devices are EtherCAT®/SBus^{PLUS} stations:

- The MOVI-C® CONTROLLER serves as EtherCAT®/SBus^{PLUS} master.
- The application inverters serve as EtherCAT®/SBus^{PLUS} slaves.

The configuration of the devices is performed in the MOVISUITE® engineering software.

The EtherCAT®/SBus^{PLUS} stations are configured in several process steps:

1. "Establishing a connection between engineering PC and MOVI-C® CONTROLLER" (→ 51)
2. "Scanning the network for devices" (→ 53)
3. "Applying MOVI-C® devices to MOVISUITE®" (→ 54)

5.3.1 Establishing a connection between engineering PC and MOVI-C® CONTROLLER

For the engineering PC and the MOVI-C® CONTROLLER to communicate via Ethernet, they have to be connected to the same local network. For this purpose, the IP address parameters of the engineering PC must be set to the local network.

INFORMATION




In delivery state, the engineering interface X80, X81 of the MOVI-C® CONTROLLER has the following IP address parameters: Standard IP address 192.168.10.4, subnet mask 255.255.255.0

Proceed as follows:

1. Select the network settings in the Windows control panel.
2. Double-click on the adapter that is physically connected to the engineering interface X80, X81 of the MOVI-C® CONTROLLER.

3. Select the internet protocol version 4 "TCP/IPv4" in the adapter properties.
4. Enter the IP address parameters of the engineering PC in the internet protocol properties. Note that the IP address of the engineering PC is different from the IP address of all other network stations and thus is unique. The network address (here the first 3 address blocks) for all network stations must be identical and the station address (here the last address block) of the engineering PC must be different from the network address of all other stations.

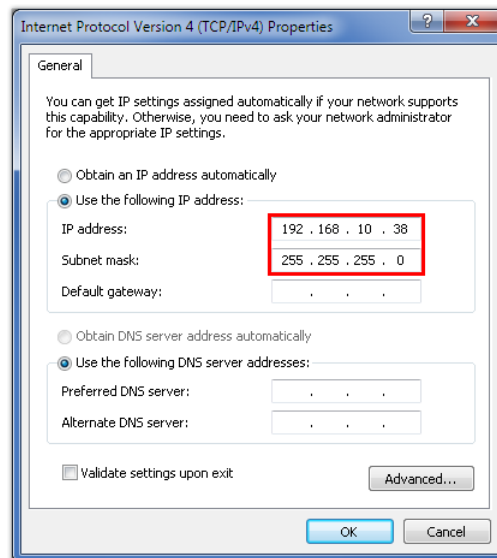


9007216660423563

⇒ In this example, the IP address of the engineering PC is: 192.168.10.38

5.3.2 Scanning the network for devices


Proceed as follows:

- ✓ The connection between the engineering PC and MOVI-C® CONTROLLER is established.
- 1. Start MOVISUITE®.
- 2. Create a new MOVISUITE® project from a network scan.

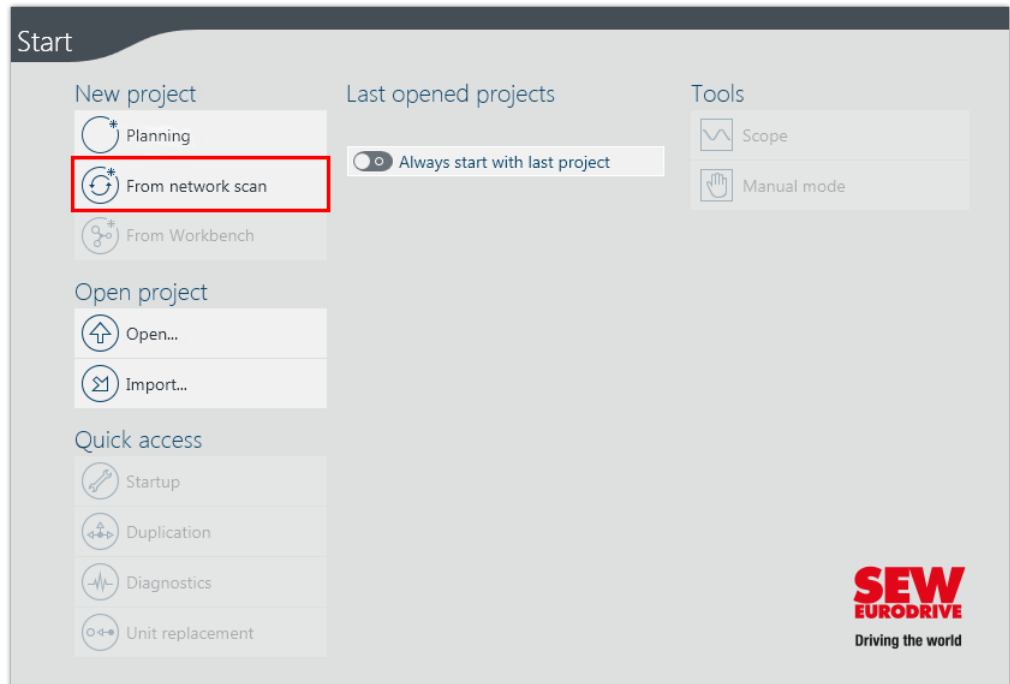

9007216181236875

- 3. Select the network type (Ethernet) and activate the configured adapter (LAN connection). Apply the settings and perform the network scan.

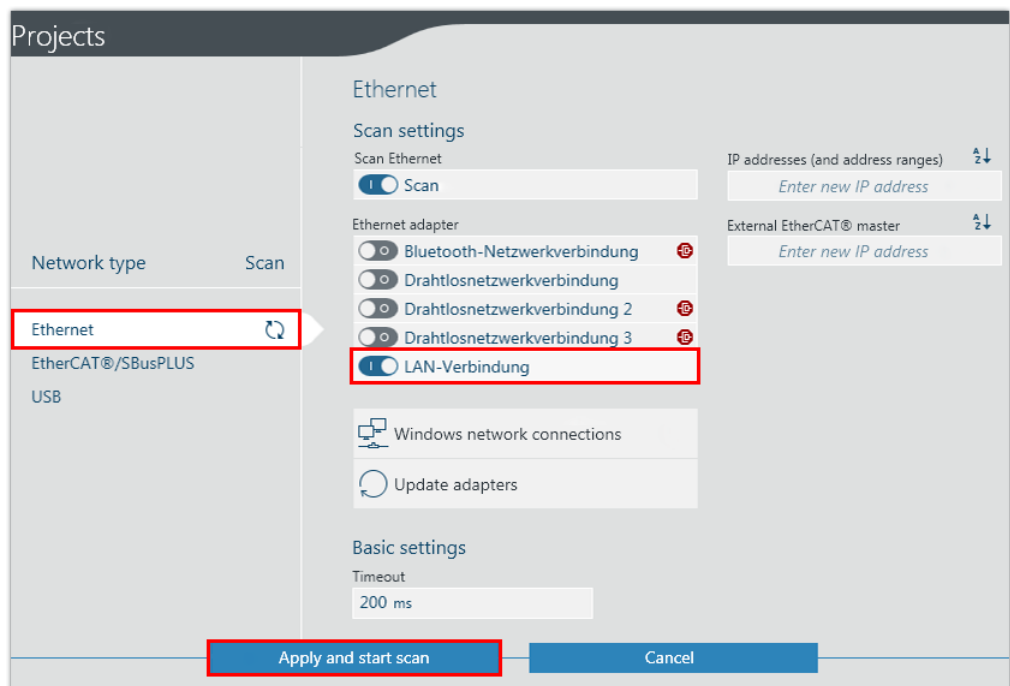

9007216669965195


5.3.3 Applying MOVI-C® devices to MOVISUITE®

The MOVI-C® devices are detected during the network scan.

Proceed as follows:


✓ You started a network scan.

1. Apply the scanned devices to MOVISUITE®.

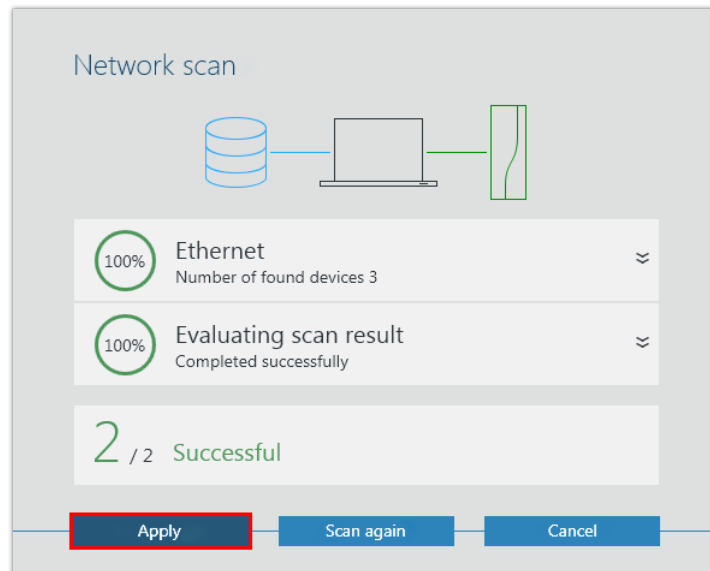

9007216181358219


2. If necessary, load the device data into the MOVISUITE® project. Confirm the message stating that the device data has been successfully transferred.
 - ⇒ The devices are displayed in one of the MOVISUITE® views. The display depends on the view you have used when closing MOVISUITE® for the last time:
 - ⇒ The combined network and function view shows all connected devices detected during the network scan.

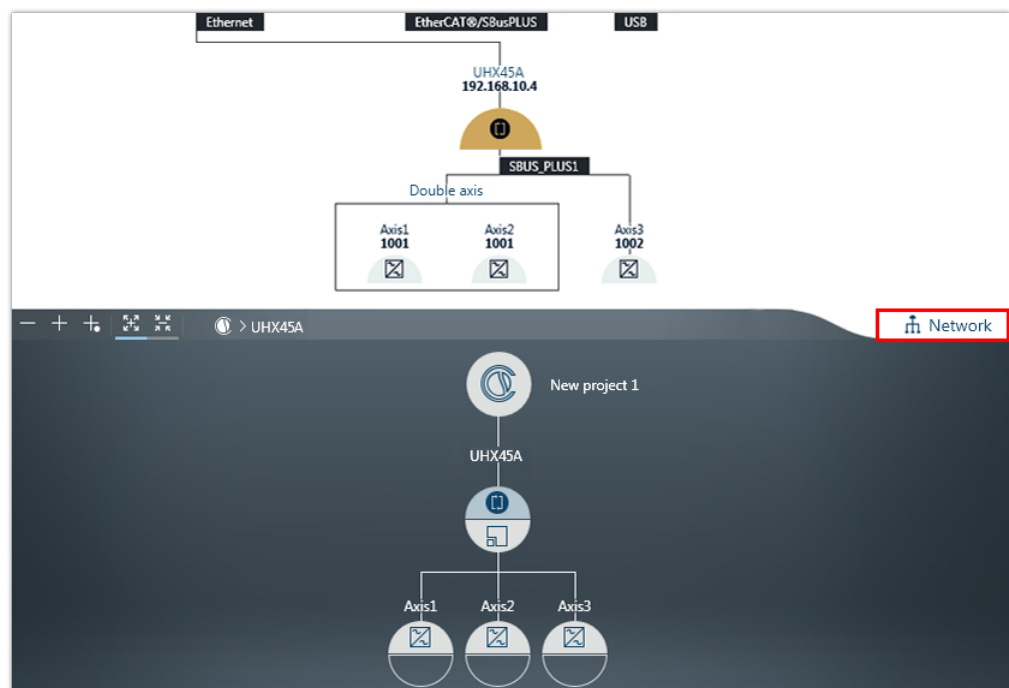

22807231115

2477730/EN – 01/2018

- ⇒ The function view has 2 views. The tree view shows an overview of the entire project. The circle view shows the current node as a large circle in the center of the working area.

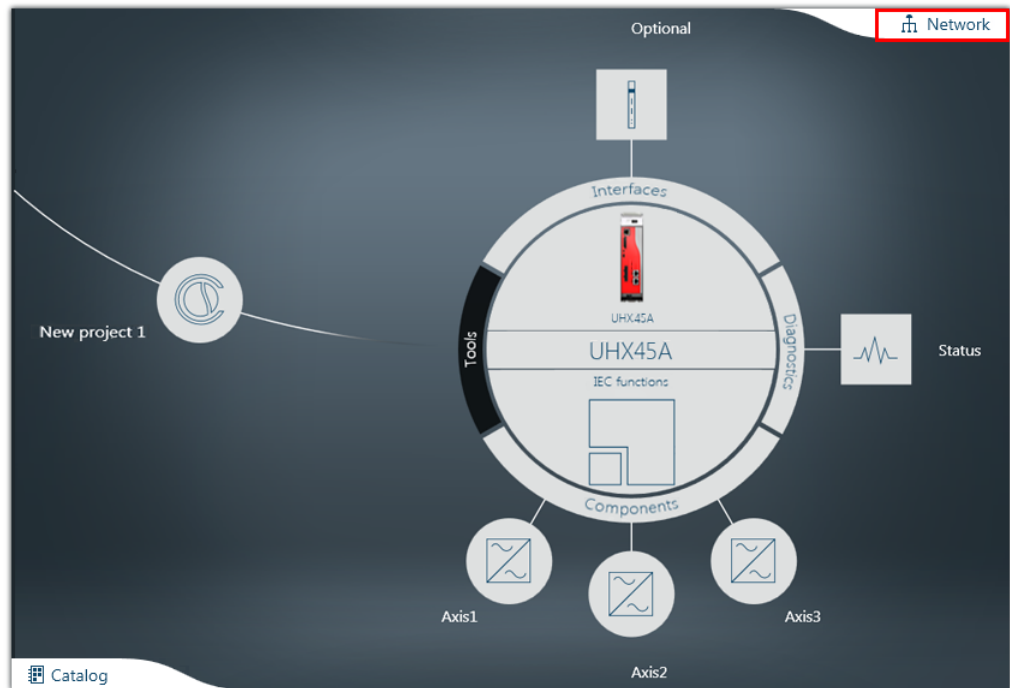

22807235723

3. To switch between the MOVISUITE® views, click the "Network" tab.
4. Enter a name for the MOVI-C® CONTROLLER. The device is shown in the MOVISUITE® project under this name.


INFORMATION



In order for the MOVI-C® CONTROLLER device name to be both PROFINET- and IEC61131-compliant, SEW-EURODRIVE recommends using a name that starts with a letter and does **not** contain any spaces or control characters (hyphen, underscore, period, colon, comma, slash, backslash).

When the MOVISUITE® project is imported into IEC Editor and TIA Portal, both tools convert the name of the MOVI-C® CONTROLLER according to their own internal algorithms. A name according to the naming conventions ensures that the MOVI-C® CONTROLLER appears under the same name in the different tools.

If a name according to the naming conventions is not possible, select a PROFINET-compliant name. In this case, the IEC61131 compliance is automatically created by MOVISUITE®.

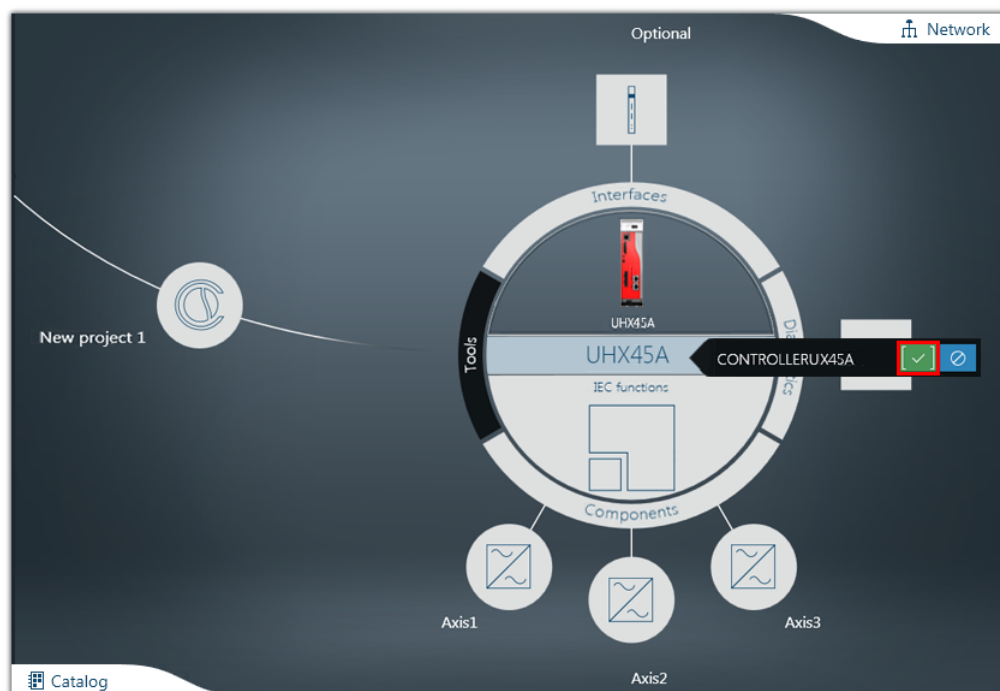

22807240715

⇒ The MOVI-C® CONTROLLER has the following device name in this example:
CONTROLLERUHX45A

5. Save the MOVISUITE® project.

5.4 Configuration of the fieldbus stations

In the exemplary project, the following devices are fieldbus stations:

- The PLC serves as fieldbus master.
- The MOVI-C® CONTROLLER serves as fieldbus slave.

The configuration of the devices is performed in the following tools:

- MOVISUITE®
- IEC Editor (integrated in MOVISUITE®)
- TIA Portal, version V13

The fieldbus stations are configured in several process steps:

1. "Installing the device description file of the MOVI-C® CONTROLLER" (→ 57)
2. "Creating a project in TIA Portal" (→ 57)
3. "Configuring the PLC in TIA Portal" (→ 59)
4. "Integrating and configuring MOVI-C® CONTROLLER in the fieldbus network" (→ 60)
5. "Loading the TIA Portal project to the PLC" (→ 65)
6. "Loading the MOVISUITE® project to the MOVI-C® CONTROLLER" (→ 68)

5.4.1 Installing the device description file of the MOVI-C® CONTROLLER

INFORMATION



A modified device description file can cause malfunctions in the device.

Do **not** change or expand entries in the device description file. SEW-EURODRIVE assumes no liability for malfunctions of the device caused by a modified device description file.


A prerequisite for the correct configuration of the MOVI-C® CONTROLLER with fieldbus interface PROFINET IO is the installation of the device description file (GSDML file) in the TIA Portal. The file contains all relevant data for the engineering and data exchange of the MOVI-C® CONTROLLER.

The latest version of the device description file for the MOVI-C® CONTROLLER with fieldbus interface PROFINET IO is available on the SEW-EURODRIVE website → www.sew-eurodrive.com Search for "GSDML file for PROFINET IO" on the page [Online Support] > [Data & documents] > [Software].

5.4.2 Creating a project in TIA Portal


Proceed as follows:

1. Start the TIA Portal.
2. Create a new TIA Portal project. Enter a project name and determine the storage location of the project.

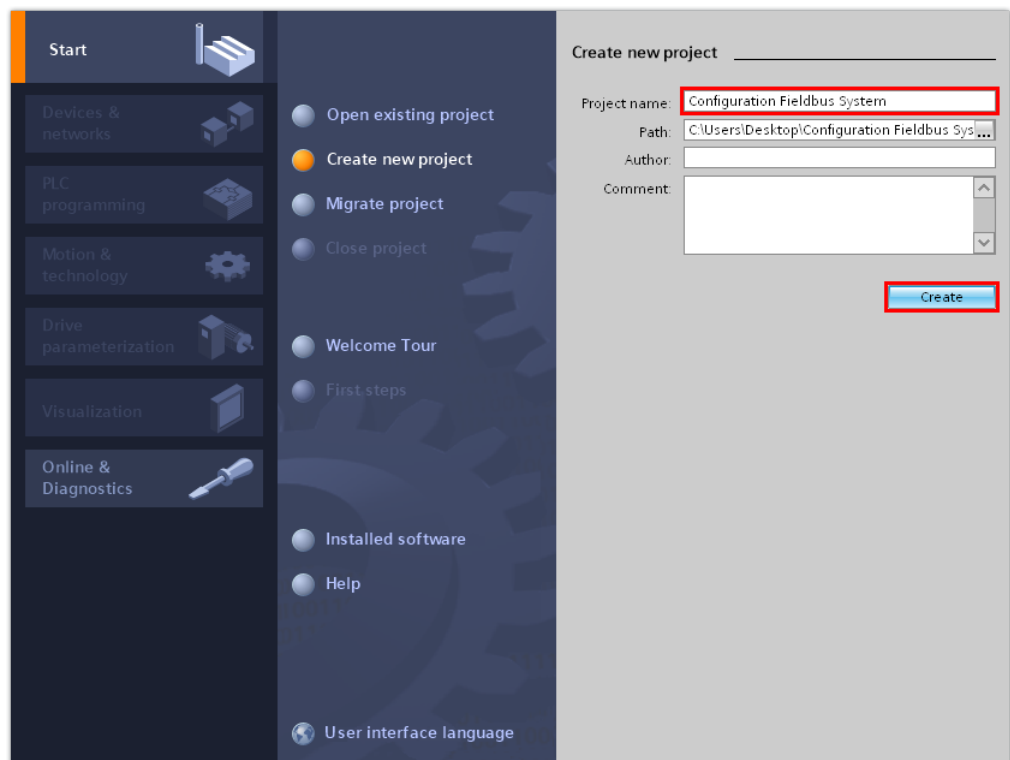

9007216444237067

3. Add the PLC to the project in the "Devices and networks" portal. Enter a device name.

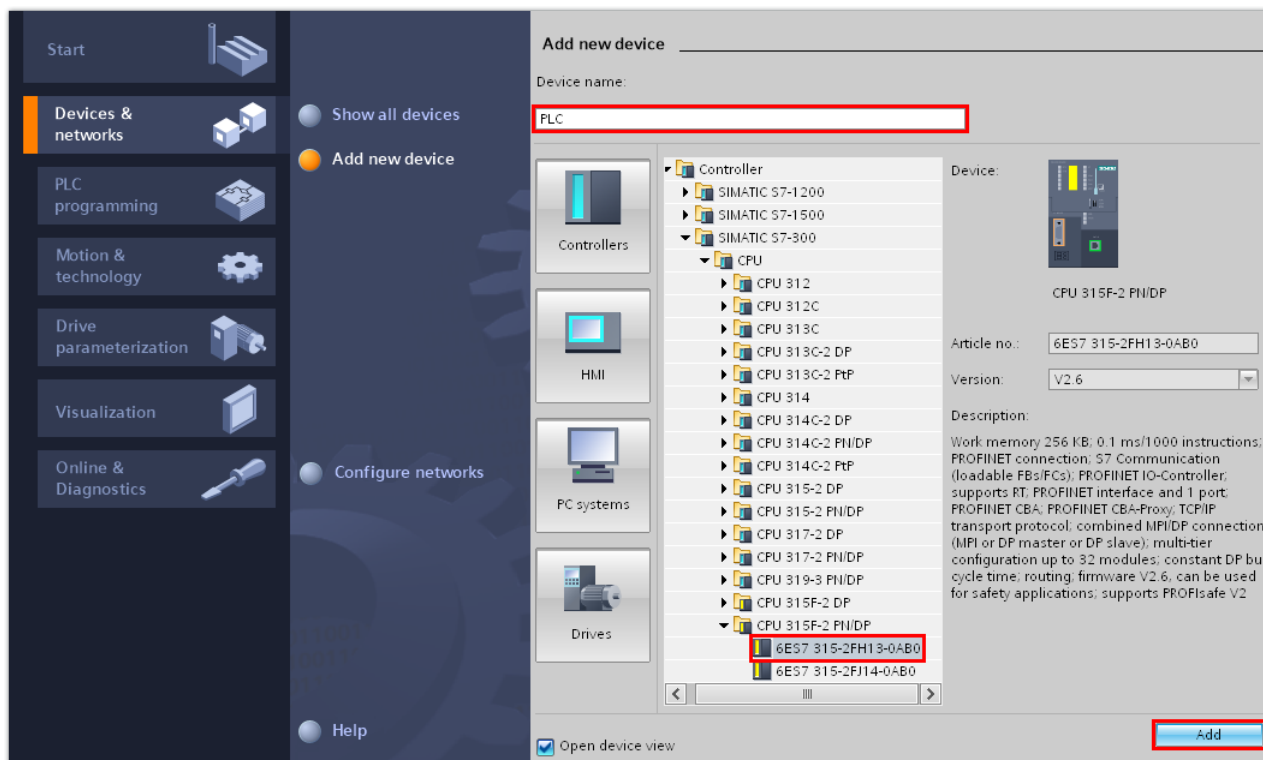

9007216444246283

- ⇒ In this example, the device SIMATIC S7-300 with CPU 315F-2 PN/DP has the device name: PLC
4. To configure the PLC, activate the "Open device view" check box.
- ⇒ The project is created and displayed in the project overview.
 - ⇒ In the hardware and network editor (right section of the screen), the profile rail of the PLC is displayed.


5.4.3 Configuring the PLC in TIA Portal

The properties and parameters of a device can be edited in the hardware and network editor in the inspector window (lower section of the editor).

Proceed as follows:

✓ You have created a new TIA Portal project.

1. Enter the IP address parameters of the PLC in the "Ethernet addresses" tab. Note that the IP address of the PLC is different from the IP address of all other network stations and thus is unique. The network address (here the first 3 address blocks) for all network stations must be identical and the station address (here the last address block) of the PLC must be different from the network address of all other stations.

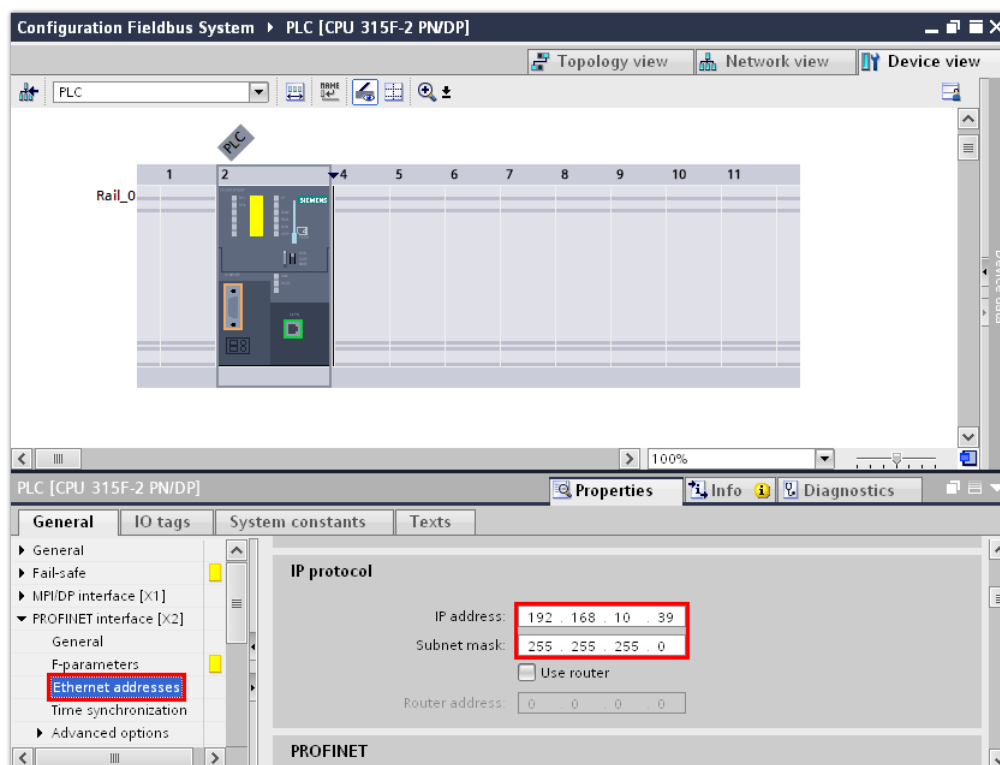

9007216444268555

⇒ In this example, the IP address of the PLC is: 192.168.10.39


5.4.4 Integrating and configuring MOVI-C® CONTROLLER in the fieldbus network

The MOVI-C® CONTROLLER must also be added to the TIA Portal project, connected to the PLC and configured.

During configuration, the MOVI-C® CONTROLLER is assigned a logical name, an IP address and process data with addresses.


Proceed as follows:

- ✓ You have already downloaded the device description file (GSDML file) of the MOVI-C® CONTROLLER from the SEW-EURODRIVE website → **www.sew-eurodrive.com** and saved it locally to the engineering PC.
 - ✓ You have configured the PLC in the TIA Portal.
1. Switch to network view in the hardware and network editor.
 2. Open the PROFINET interface context menu by right-clicking and add the IO system.

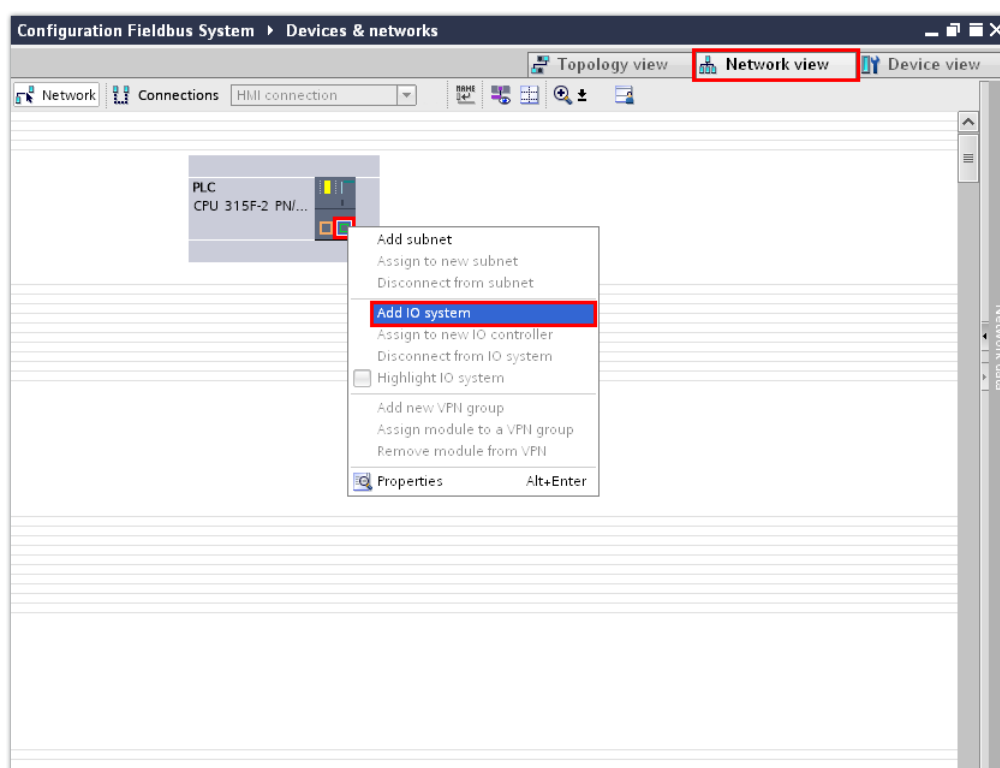


9007216444285963

- Load the device description file to the TIA Portal project.

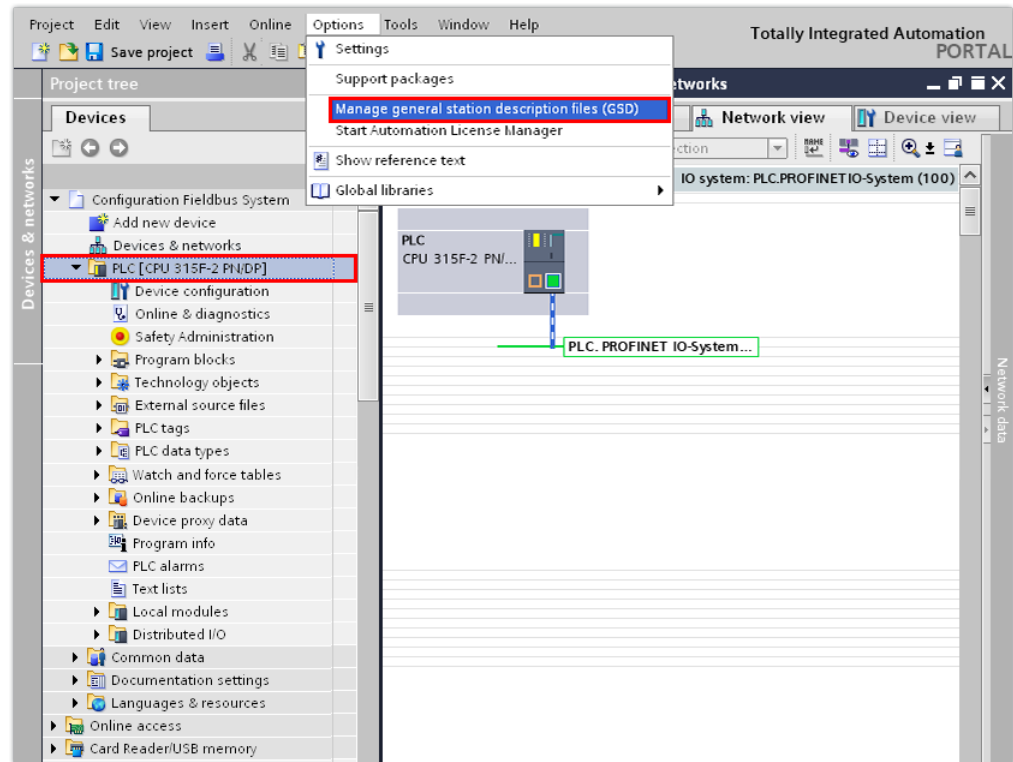


9007216444290827

- Open the hardware catalog in the bar at the right side of the screen. Select the MOVI-C® CONTROLLER from the catalog and insert it at the end of the PROFINET branch using the drag-and-drop function. Assign the device to the suitable controller.

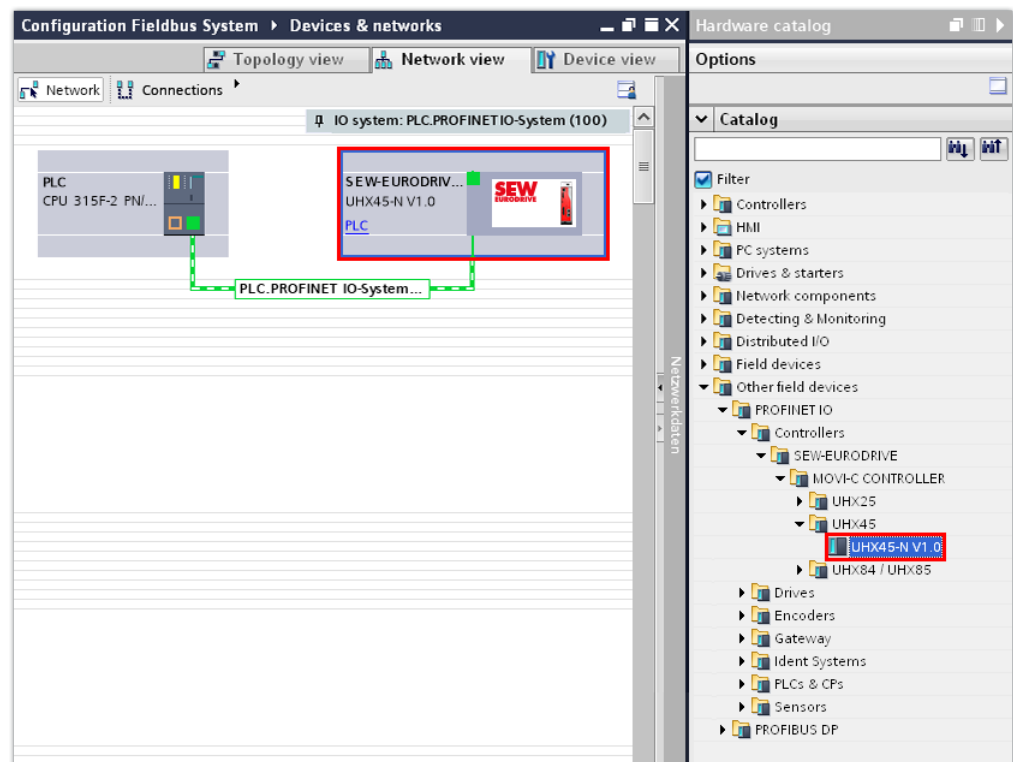

22807251467


- ⇒ In this example, the MOVI-C® CONTROLLER in the UHX45A-N device variant is used and assigned to the controller with the device name "PLC".
- 5. To configure the MOVI-C® CONTROLLER, double-click on the device.
 - ⇒ The device view is displayed.
- 6. Enter the same name for the MOVI-C® CONTROLLER in the inspector window (lower editor section) in the "General" tab as in the MOVISUITE® project. The device is shown in the TIA Portal project under this name.

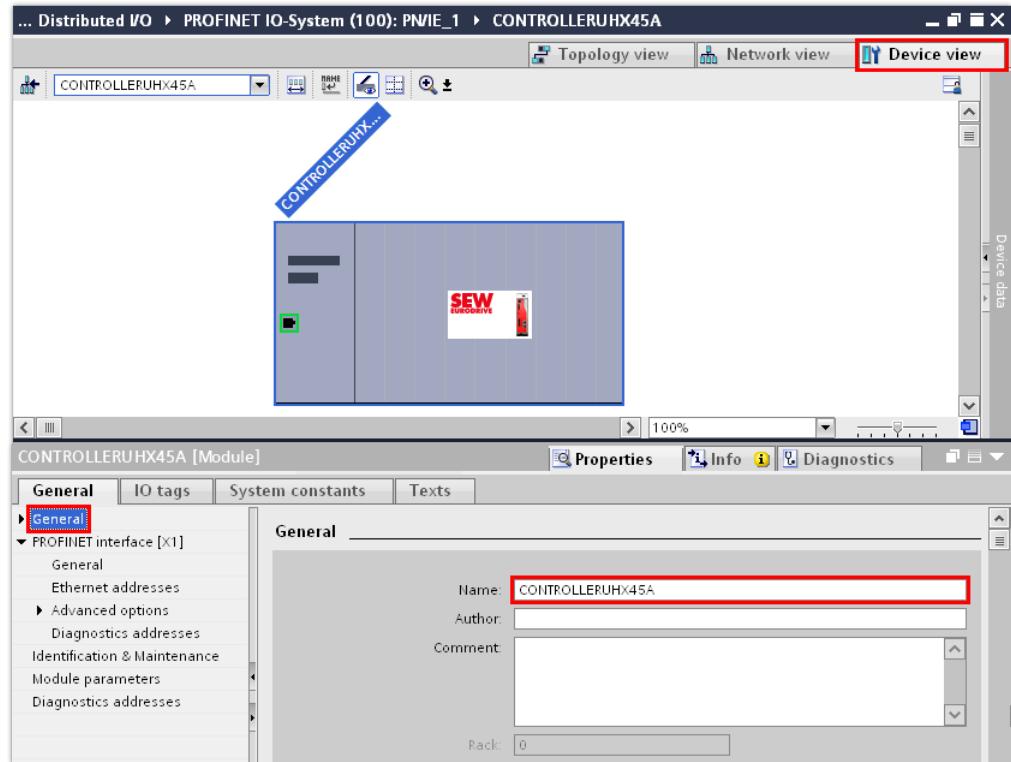

22807268875

- ⇒ The MOVI-C® CONTROLLER has the following project name in this example: CONTROLLERUHX45A


7. Enter the IP address parameters of the MOVI-C® CONTROLLER in the "Ethernet addresses" tab. Note that the IP address of the MOVI-C® CONTROLLER is different from the IP address of all other network stations and thus is unique. The network address (here the first 3 address blocks) for all network stations must be identical and the station address (here the last address block) must be different for all network stations.

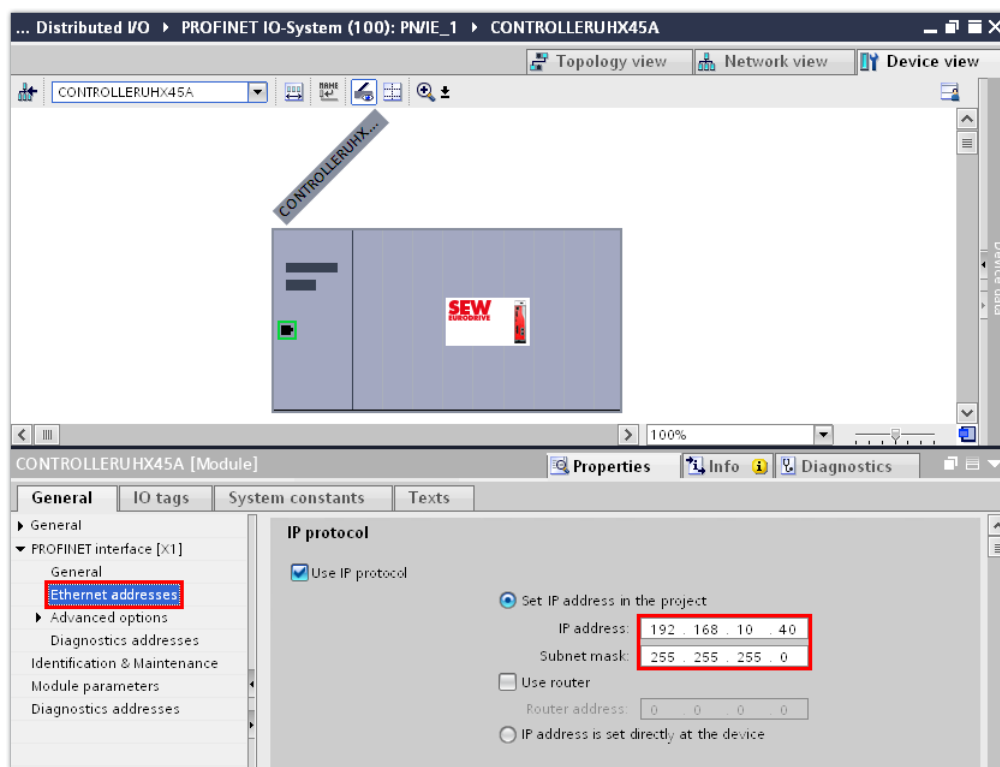

22807273483

- ⇒ In this example, the IP address of the MOVI-C® CONTROLLER is:
192.168.10.40

8. Enter a PROFINET device name for the MOVI-C® CONTROLLER. The PLC addresses the device using this device name. If the "Generate PROFINET device name automatically" check box is activated, the device name is derived from the project name of the device.

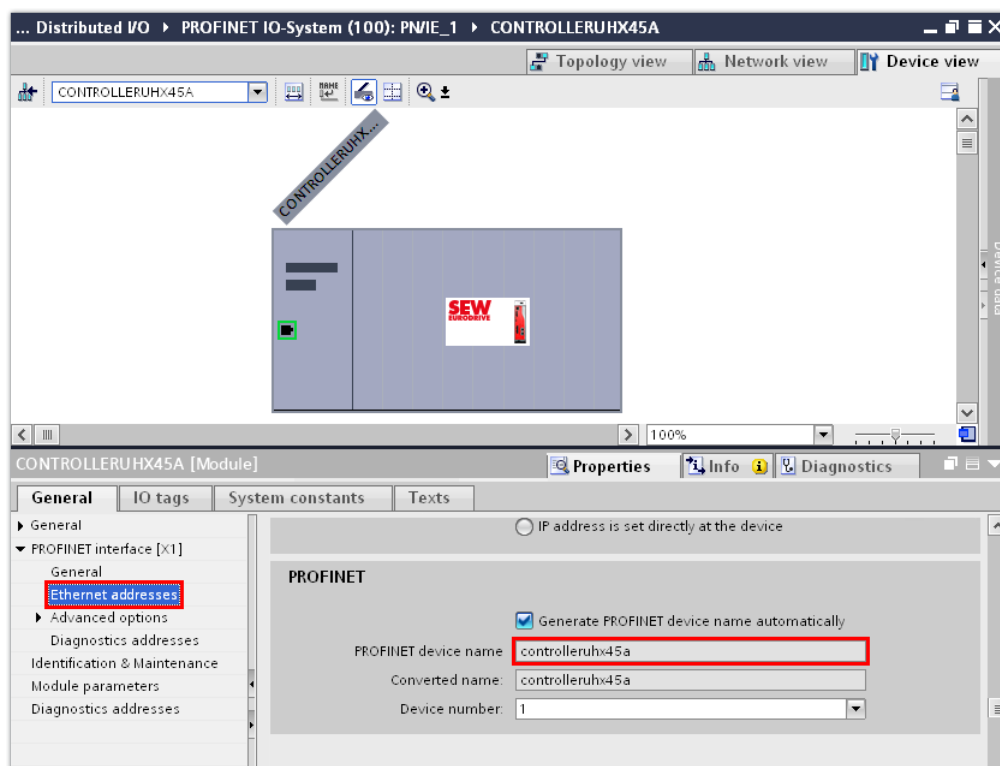

22807303691

9. Open the device overview and the hardware catalog in the bar at the right side of the screen. Select the number of process data words that are to be used for communication with lower-level slaves and add them to the device overview using the drag-and-drop function.

INFORMATION




The first 16 slots are reserved for drive safety functions and further functions.

You can add the standard process data words to the device overview only to slot 17 and higher.

INFORMATION



As an alternative, you can add the process data words by double-clicking the module in the device overview. In this case, they are automatically inserted into the correct slots.

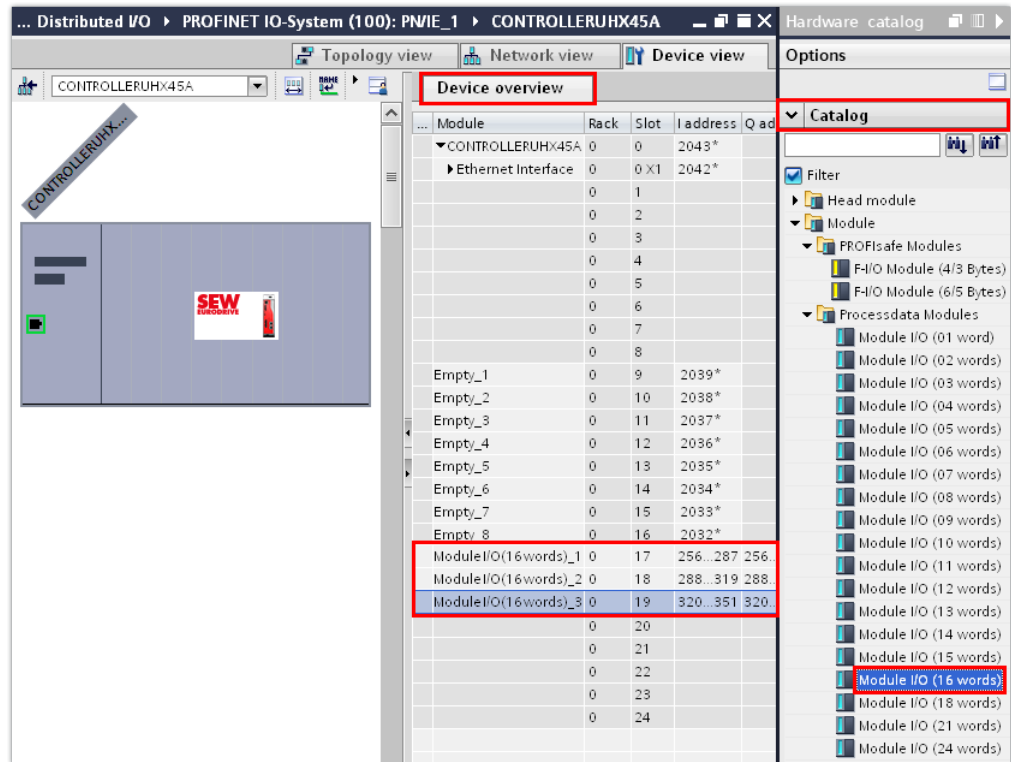

22807308299

- ⇒ In this example, 16 process data words are assigned to the each application inverter module (slave of the MOVI-C® CONTROLLER) for communication.

5.4.5 Loading the TIA Portal project to the PLC


Data (PROFINET device name, IP address, standard process data) that have been assigned to the fieldbus stations during configuration are first only defined in the TIA Portal project on the engineering PC. Only if the project is loaded to the PLC, the data is transferred to the PLC and activated.

Proceed as follows:

- ✓ You configured the MOVI-C® CONTROLLER.


1. Switch to network view in the hardware and network editor.

- Click on the corresponding icons to build the TIA Portal project in machine code of the PLC and load the project to the PLC.

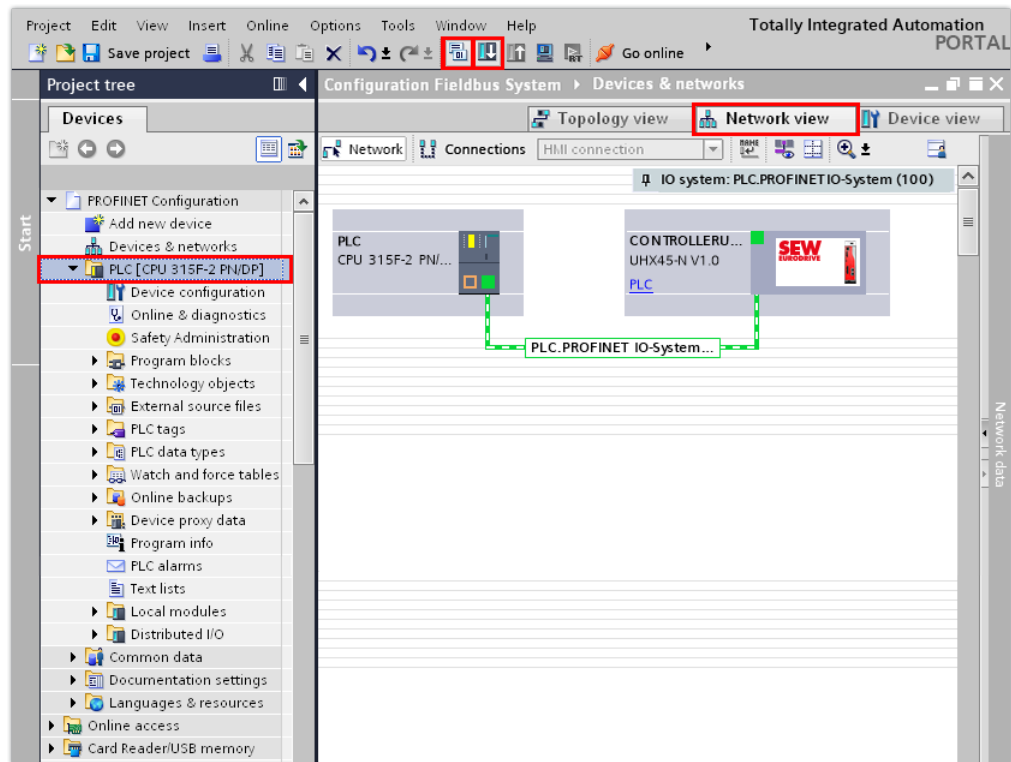


22807314827

- ⇒ A window with settings regarding loading is displayed.
- Set the used programming interface of the PLC and search for compatible stations in the PROFINET network.

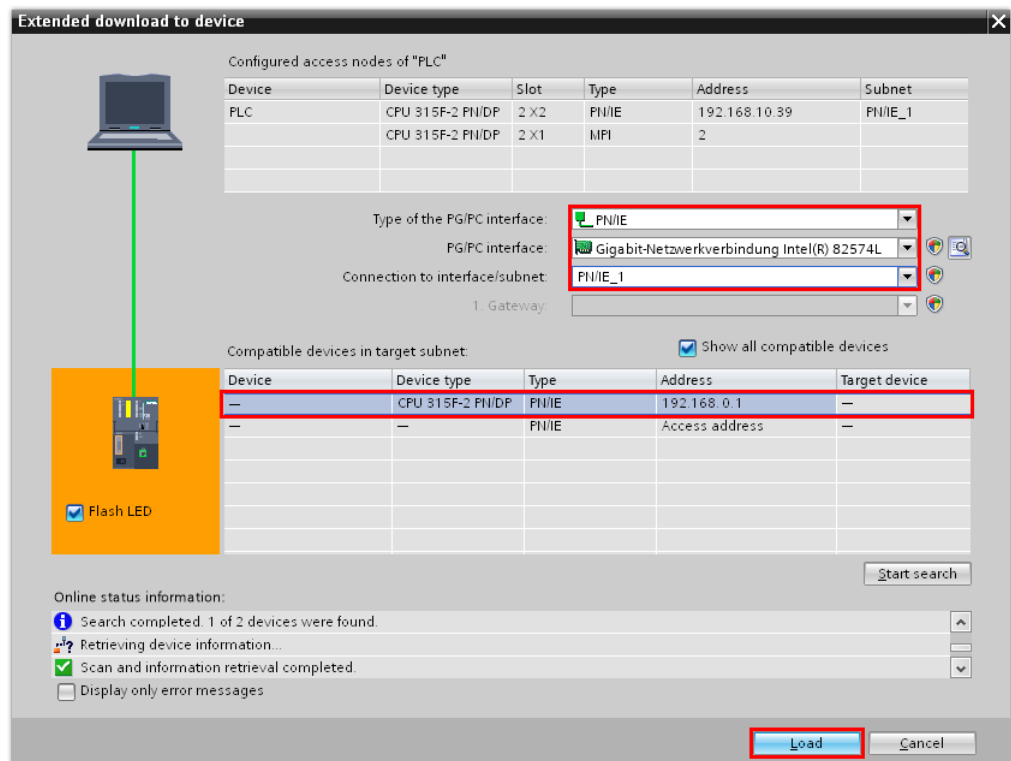


9007216445454987

4. Mark the found PLC and add it to the TIA Portal project.
⇒ The project view is displayed again.
5. If the status LED BF of the MOVI-C® CONTROLLER lights up red (bus error) after the TIA Portal project was transferred to the PLC, you must assign the specified PROFINET device name to the MOVI-C® CONTROLLER. Right-click to open the context menu of the MOVI-C® CONTROLLER and assign a device name.
⇒ A window with settings regarding name assignment is displayed.

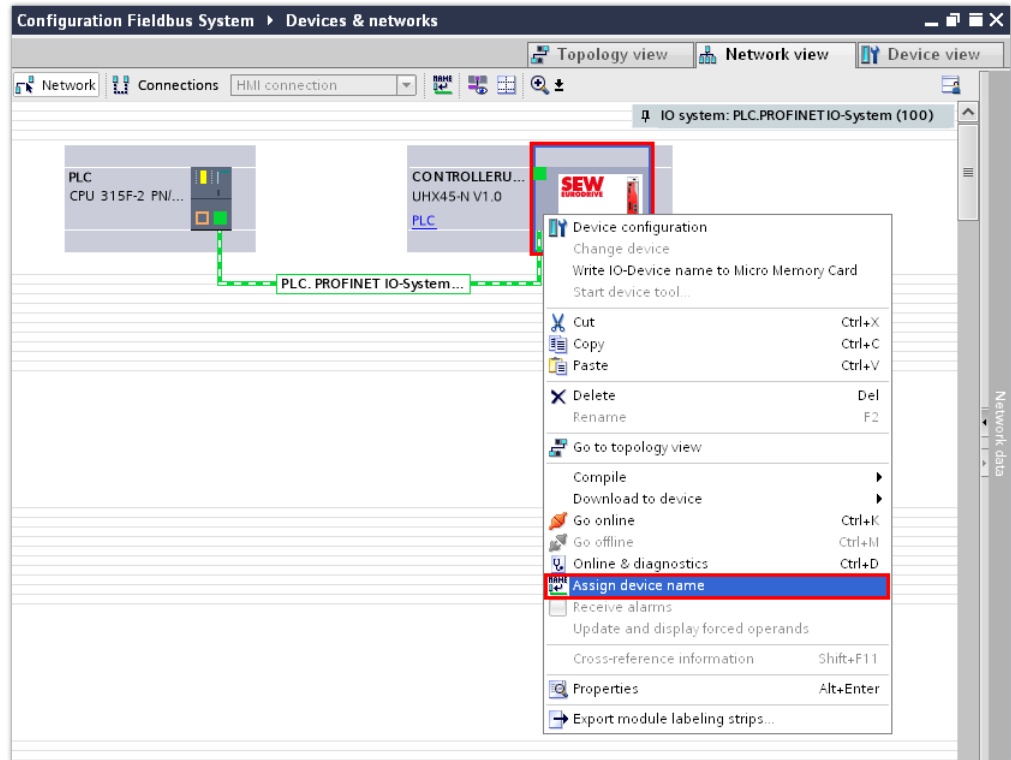

22807319435

6. Select the PROFINET device name of the MOVI-C® CONTROLLER.

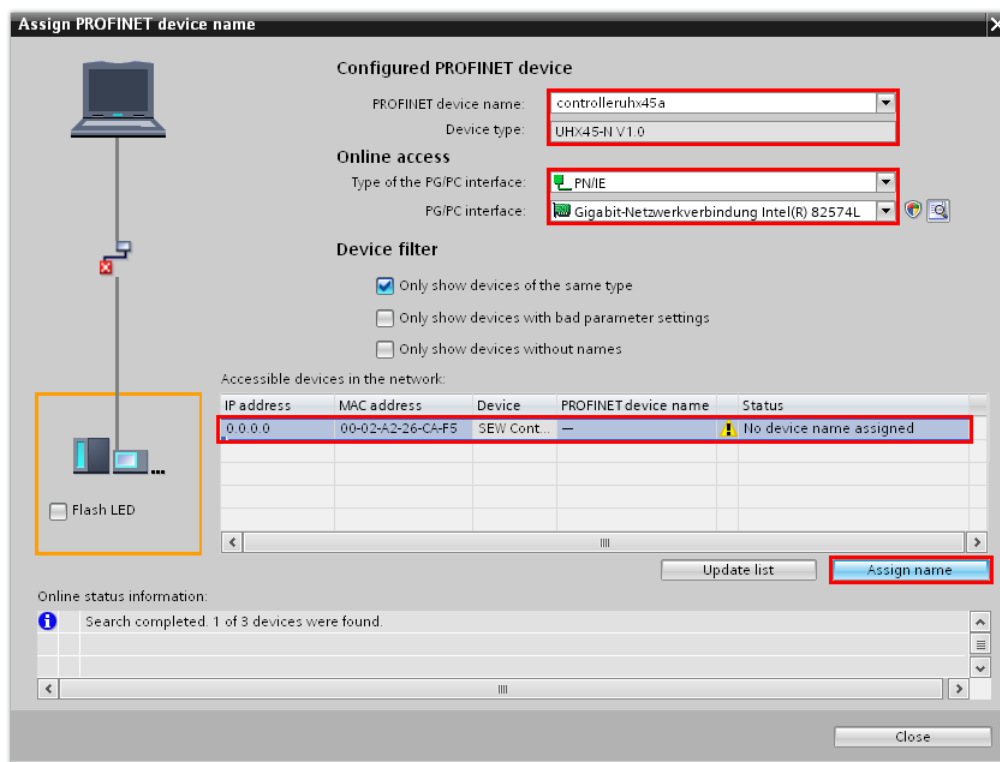

22807324043

7. Set the used programming interface of the MOVI-C® CONTROLLER and refresh the list of stations.
8. Select the MOVI-C® CONTROLLER and assign a device name. This overwrites the suggested name of the device description file (GSDML file).
 - ⇒ If the PROFINET device name has been assigned successfully, MOVI-C® CONTROLLER sends the status "OK". The status LED BF goes out.
9. Save the TIA Portal project.

5.4.6 Loading the MOVISUITE® project to the MOVI-C® CONTROLLER


The fieldbus interface for the slave connection has to be set in the MOVISUITE® project and the device configuration has to be loaded to the MOVI-C® CONTROLLER via the IEC Editor.

Proceed as follows:

- ✓ You integrated the MOVI-C® devices into a MOVISUITE® project.


1. Switch to the MOVISUITE® project.

- Open the configuration of the MOVI-C® CONTROLLER and set the fieldbus protocol.

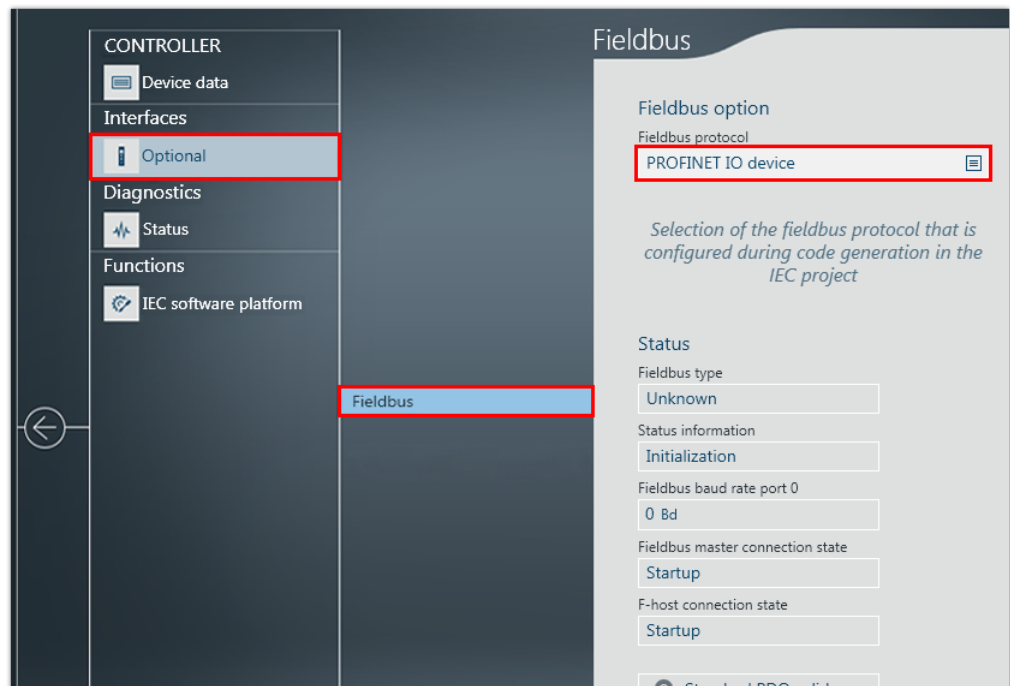

21992990603


- Start the IEC Editor with a new project.

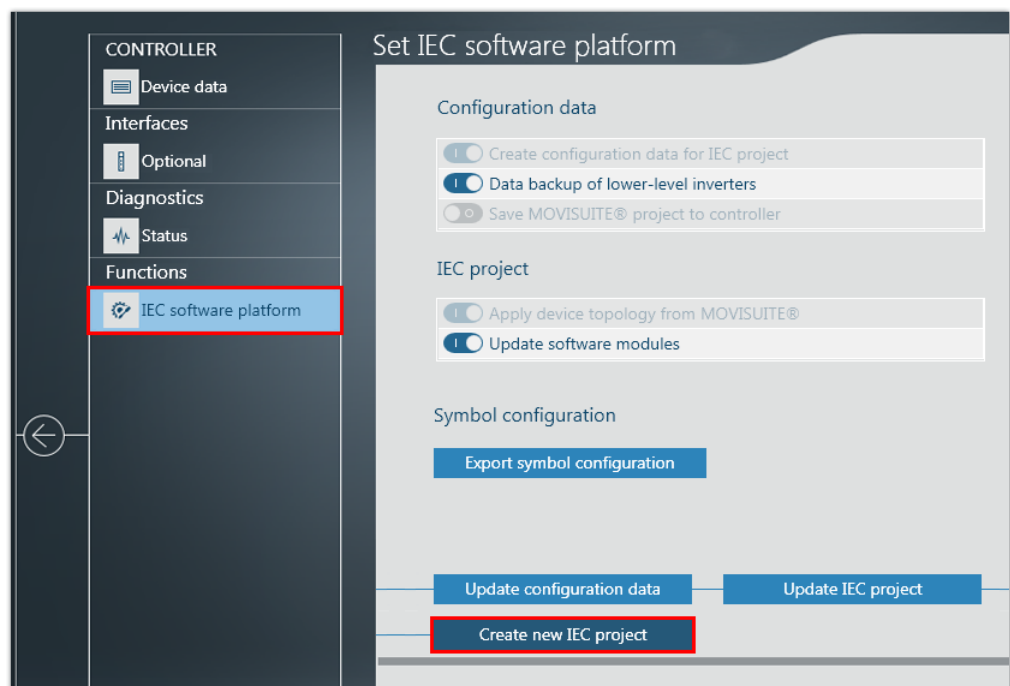

9007216181482891


- ⇒ A message on the used compiler version is displayed.
- Keep the current compiler version. Click the [Cancel] button in the message window.
 - ⇒ A new IEC Editor project is created. The device topology is shown in the device tree.

- To establish a connection from the IEC Editor project to the MOVI-C® CONTROLLER, double-click on the MOVI-C® CONTROLLER in the device tree and scan the network. Add the found device.

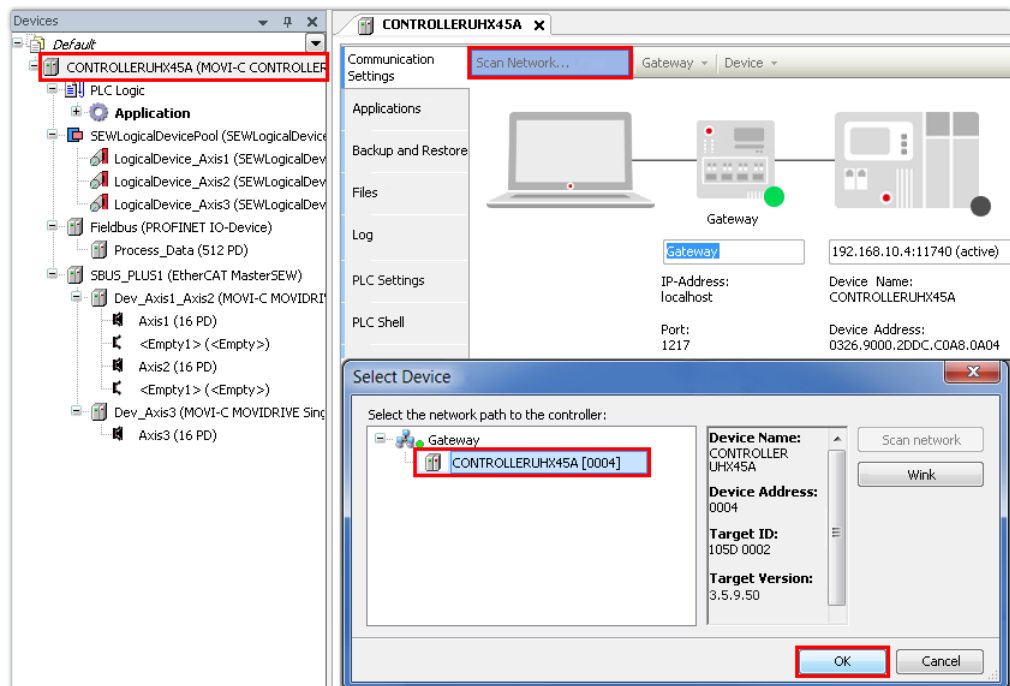


22807346827

- ⇒ If the connection is established, the LED of the MOVI-C® CONTROLLER lights up green.

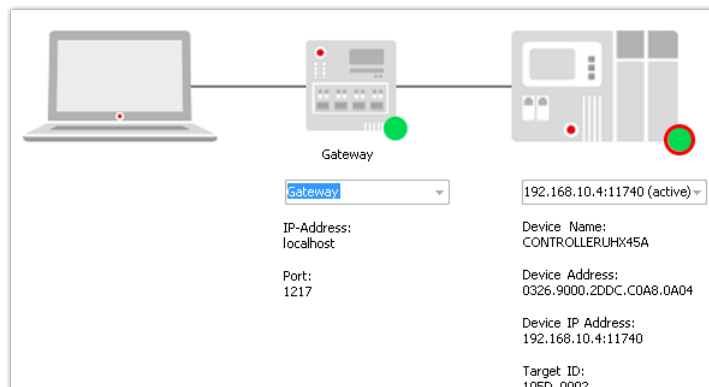


22807245323

6. Build the IEC program in the machine code of the MOVI-C® CONTROLLER.

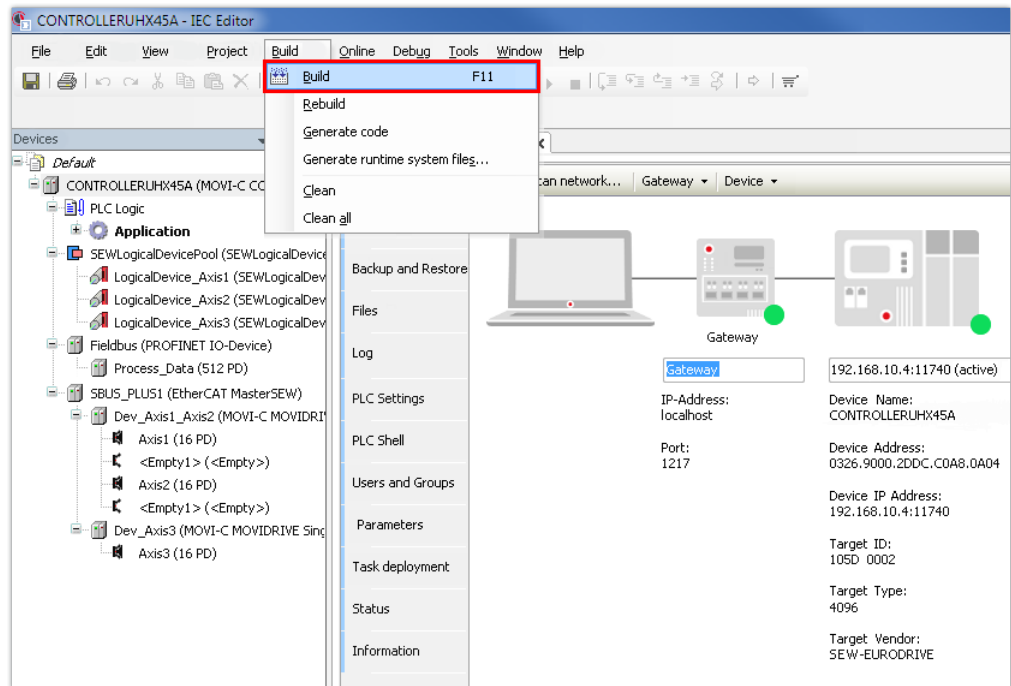

22807351435

7. If the build of the IEC program was successful, the program can be transferred to the MOVI-C® CONTROLLER. For this purpose, log on to the network.

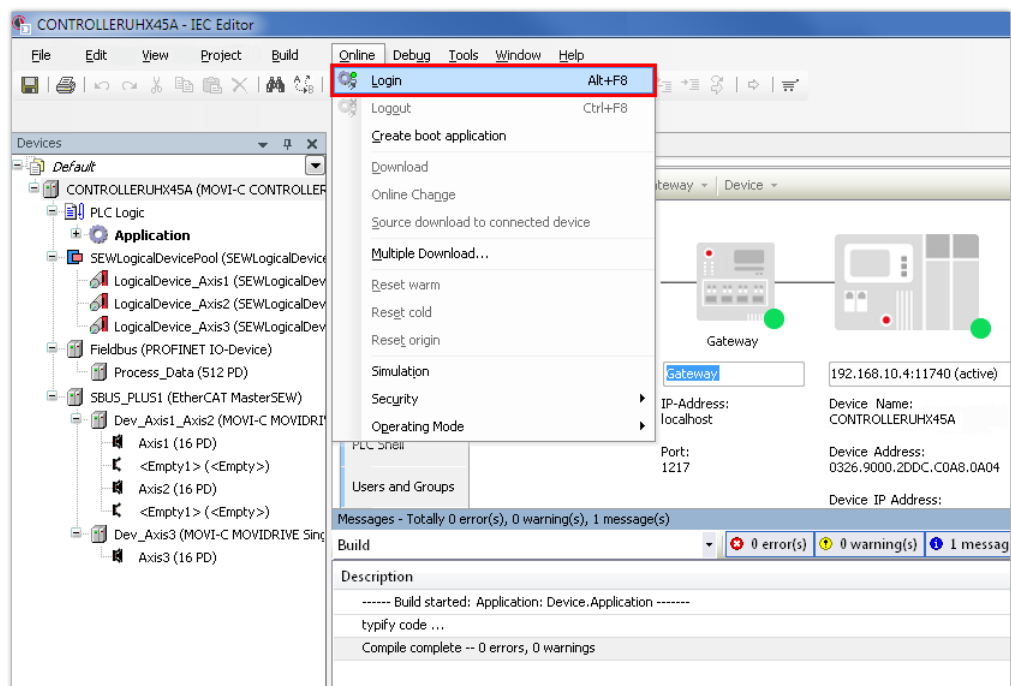


22807368843

⇒ A message is displayed that the IEC program (application) from the IEC Editor program has been created and loaded to the MOVI-C® CONTROLLER.


8. Confirm this message.

9. Start the IEC program.

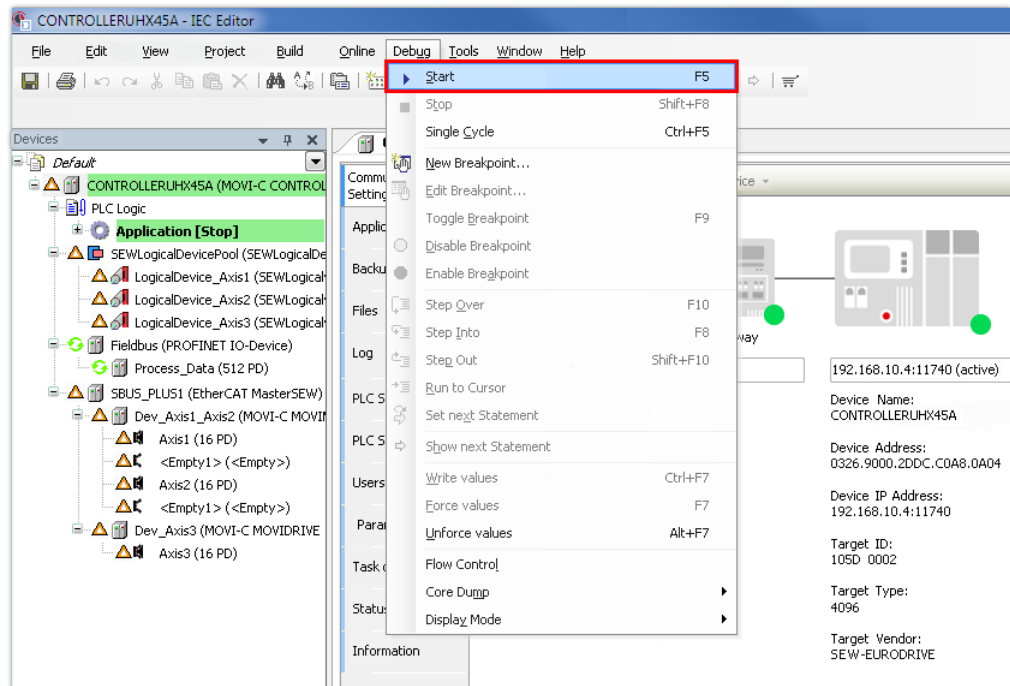


22807373451

- ⇒ The MOVI-C® CONTROLLER starts. The message "RUN" is displayed in the status bar of the IEC editor.
- ⇒ The devices in the device tree get a green circle. The green circle indicates fault-free function of the fieldbus interface but does not indicate the state of communication between MOVI-C® CONTROLLER and PLC.

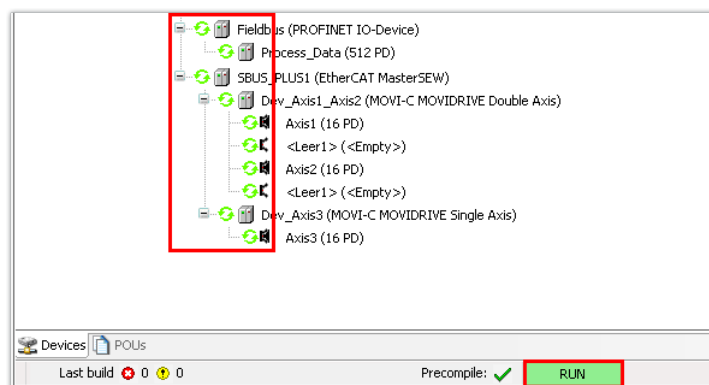

21995908107

10. Create a boot project. This way, the IEC Editor project is stored on the SD memory card of the MOVI-C® CONTROLLER and is still available after a restart of the MOVI-C® CONTROLLER.

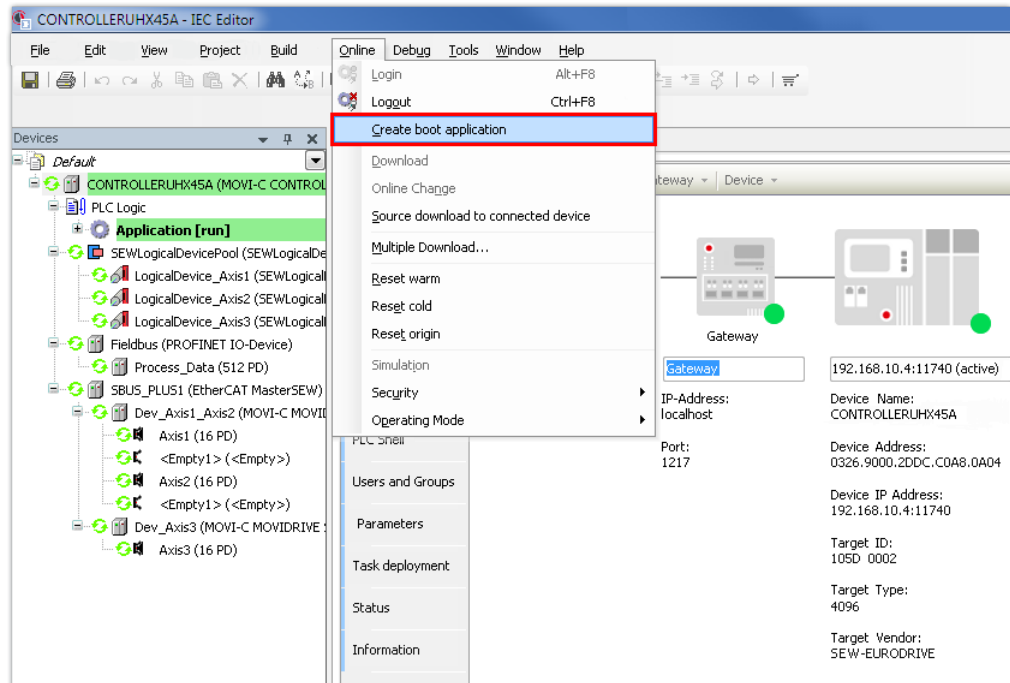

22807393419

- ⇒ Correct process data transfer between PLC and MOVI-C® CONTROLLER can now be tested.

5.5 Controlling the stations in test run

During successful communication between PLC and the MOVI-C® CONTROLLER, process data words are transferred between the devices without faults.

5.5.1 Creating a watch table


Watch tables allow for monitoring and controlling the process data exchange.

Proceed as follows:

- ✓ You loaded the MOVISUITE® project to the MOVI-C® CONTROLLER via the IEC Editor.

1. Switch to the TIA Portal project.

2. Establish an online connection between the PLC and the MOVI-C® CONTROLLER. Click on the "Go online" icon.

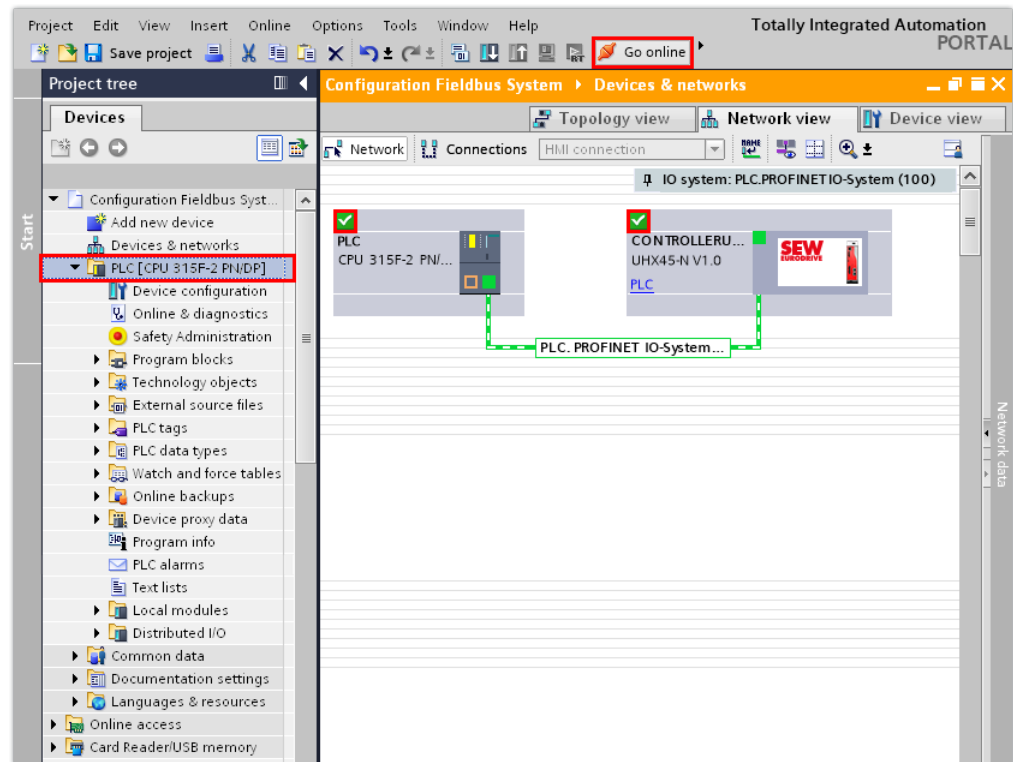

22807328651

- ⇒ In the network view and device view, all addressed stations are shown with a green check mark.
3. Add a new watch table in the "Watch and force tables" subfolder of the PLC.
 4. Enter the addresses of the process data words in the "address" column. The input addresses and output addresses define which process data word is used to address a station. Make sure that the process data words are in the address range of the stations and that the address ranges for input data words and output data words are identical.

5. Enter test values for some process output data words in the "Modify value" column. Read the address of the process output data words from the table in the device overview of the MOVI-C® CONTROLLER. The values are sent to the MOVI-C® CONTROLLER if communication has been established successfully.

Name	Address	Display format	Monitor value	Modify value	
1	%QW256	Hex		16#1111	<input checked="" type="checkbox"/>
2	%QW258	Hex		16#2222	<input checked="" type="checkbox"/>
3	%QW260	Hex		16#3333	<input checked="" type="checkbox"/>
4	%QW262	Hex		16#4444	<input checked="" type="checkbox"/>
5	%QW264	Hex			<input type="checkbox"/>
6	%QW266	Hex			<input type="checkbox"/>
7	%QW268	Hex			<input type="checkbox"/>
8	%QW270	Hex			<input type="checkbox"/>
9	%QW272	Hex			<input type="checkbox"/>
10	%MW256	Hex			<input type="checkbox"/>
11	%MW258	Hex			<input type="checkbox"/>
12	%MW260	Hex			<input type="checkbox"/>
13	%MW262	Hex			<input type="checkbox"/>
14	%MW264	Hex			<input type="checkbox"/>
15	%MW266	Hex			<input type="checkbox"/>
16	%MW268	Hex			<input type="checkbox"/>
17	%MW270	Hex			<input type="checkbox"/>
18	%MW272	Hex			<input type="checkbox"/>
19	<Add new>				<input type="checkbox"/>
20					<input type="checkbox"/>
21					<input type="checkbox"/>
22					<input type="checkbox"/>
23					<input type="checkbox"/>
24					<input type="checkbox"/>
25					<input type="checkbox"/>
26					<input type="checkbox"/>
27					<input type="checkbox"/>
28					<input type="checkbox"/>

9007216726400011

- ⇒ In this example, test values are entered for the first 4 process output data words.

6. Click the respective icons in the toolbar to first start variable monitoring (glasses icon) and then to control the active variables (flash icon).
 - ⇒ The set test values of the process output data words are transferred to the "Monitor value" column. The PLC sent the test values to the MOVI-C® CONTROLLER.

Name	Address	Display format	Monitor value	Modify value
%QW256	16#1111	Hex	16#1111	<input checked="" type="checkbox"/>
%QW258	16#2222	Hex	16#2222	<input checked="" type="checkbox"/>
%QW260	16#3333	Hex	16#3333	<input checked="" type="checkbox"/>
%QW262	16#4444	Hex	16#4444	<input checked="" type="checkbox"/>
%QW264	16#0000	Hex	16#0000	<input type="checkbox"/>
%QW266	16#0000	Hex	16#0000	<input type="checkbox"/>
%QW268	16#0000	Hex	16#0000	<input type="checkbox"/>
%QW270	16#0000	Hex	16#0000	<input type="checkbox"/>
%QW272	16#0000	Hex	16#0000	<input type="checkbox"/>
%MW256	16#0000	Hex	16#0000	<input type="checkbox"/>
%MW258	16#0000	Hex	16#0000	<input type="checkbox"/>
%MW260	16#0000	Hex	16#0000	<input type="checkbox"/>
%MW262	16#0000	Hex	16#0000	<input type="checkbox"/>
%MW264	16#0000	Hex	16#0000	<input type="checkbox"/>
%MW266	16#0000	Hex	16#0000	<input type="checkbox"/>
%MW268	16#0000	Hex	16#0000	<input type="checkbox"/>
%MW270	16#0000	Hex	16#0000	<input type="checkbox"/>
%MW272	16#0000	Hex	16#0000	<input type="checkbox"/>
<Add new>				<input type="checkbox"/>

9007216726404619


7. Switch to the IEC Editor project.
8. Double click the process data of the PROFINET device in the device tree and check if the values of the process input words of the MOVI-C® CONTROLLER are identical to the sent test values.

Variable	Mapping	Channel	Address	Type	Default Value	Current Value
In[0]		In	%IW2000	WORD		16#1111
In[1]		In	%IW2001	WORD		16#2222
In[2]		In	%IW2002	WORD		16#3333
In[3]		In	%IW2003	WORD		16#4444
In[4]		In	%IW2004	WORD		16#0000
In[5]		In	%IW2005	WORD		16#0000
In[6]		In	%IW2006	WORD		16#0000
In[7]		In	%IW2007	WORD		16#0000
In[8]		In	%IW2008	WORD		16#0000
In[9]		In	%IW2009	WORD		16#0000
In[10]		In	%IW2010	WORD		16#0000
In[11]		In	%IW2011	WORD		16#0000
In[12]		In	%IW2012	WORD		16#0000
In[13]		In	%IW2013	WORD		16#0000
In[14]		In	%IW2014	WORD		16#0000
In[15]		In	%IW2015	WORD		16#0000
In[16]		In	%IW2016	WORD		16#0000
In[17]		In	%IW2017	WORD		16#0000
In[18]		In	%IW2018	WORD		16#0000
In[19]		In	%IW2019	WORD		16#0000

22843732107

- ⇒ If the test values sent by the PLC arrived at the MOVI-C® CONTROLLER, the communication has been established successfully.

6 Procedure for device replacement

When replacing a MOVI-C® CONTROLLER, proceed as described in chapter "Installation notes" (→  20). Insert the SD memory card of the previous MOVI-C® CONTROLLER into the new MOVI-C® CONTROLLER.

The variable values stored remanently on the MOVI-C® CONTROLLER are not stored on the SD memory card by default. Select one of the following procedures to store variable values on the SD memory card:

- Program the application (IEC program) accordingly.
- Load the data backup into the engineering software MOVISUITE® via the project management (in preparation).

INFORMATION



For information on replacing the drives, refer to the manual of the corresponding application inverter.

7 Service

7.1 Waste disposal

Dispose the product and all parts separately in accordance with their material structure and the national regulations. Put the product through a recycling process or contact a specialist waste disposal company. If possible, divide the product into the following categories:

- Copper
- Electronic parts
- Plastics









This product contains batteries or accumulators. Dispose this product and the batteries or accumulators separately from the municipal waste according to the national regulations.

8 Technical data

8.1 Markings

The MOVI-C® CONTROLLER complies with the following directives and guidelines:

Marking	Meaning
	CE mark to state compliance with the following European guidelines: <ul style="list-style-type: none"> • EMC Directive 2014/30/EU
	EAC marking (E urasian C onformity) to certify the conformity with the safety requirements of the Customs Union of Russia, Kazakhstan, and Belarus
	In preparation: UL-mark to confirm UL (U nderwriters L aboratory) In combination with the registration number the mark is also valid for CSA (C anadian S tandards A ssociation).
	RCM logo (R egulatory C ompliance M ark) to confirm compliance with the technical regulations of the A ustralian C ommunications and M edia A uthority ACMA
	RoHS Directive (R estriction of H azardous S ubstances) of the People's Republic of China to confirm compliance with the regulations of the ACPEIP (A dministration on the C ontrol of P ollution caused by E letronic I nformation P roducts)
	WEEE Directive 2012/19/EU (W aste of E lectrical and E lectronic E quip-ment) of the European Union on specific recycling of batteries

8.2 General

General technical data	
Interference immunity	Meets EN 61800-3; 2. Environment
Interference emission	Limit value category C2 to EN 61800-3
Ambient temperature ϑ_{amb}	0 °C – +60 °C
Type of cooling	Convection cooling

Environmental conditions	
Climatic requirements	<ul style="list-style-type: none"> Extended storage: EN 60721-3-1 class 1K2 temperature -25 °C – +70 °C Transportation: EN 60721-3-2 class 2K3 temperature -25 °C – +70 °C Operation (fixed installation, weatherproof): EN 60721-3-3 class 3K3 temperature 0 °C – +60 °C
Chemically active substances	<ul style="list-style-type: none"> Extended storage: EN 60721-3-1 class 1C2 Transportation: EN 60721-3-2 class 2C2 Operation (fixed installation, weatherproof): EN 60721-3-3 class 3C2
Mechanically active substances	<ul style="list-style-type: none"> Extended storage: EN 60721-3-3 class 1S1 Transportation: EN 60721-3-3 class 2S1 Operation (fixed installation, weatherproof): EN 60721-3-3 class 3S1
Vibration testing	<ul style="list-style-type: none"> 3M5 according to EN 60721-3-3 5M1 according to EN 60721-3-5

Degree of protection	
Degree of protection	IP20 according to EN 60529
Pollution class	2 according to IEC 60664-1
Overvoltage category	III according to IEC 60664-1
Installation altitude	Maximum 3800 m (above sea level)

8.3 Compact controller

MOVI-C® CONTROLLER advanced UHX45A	
Electrical supply	<ul style="list-style-type: none"> Power consumption: $P_{\max} = 12 \text{ W}$ Supply voltage $V = \text{DC } 24 \text{ V}$ (-15% / +20%) according to IEC 61131-2 Current consumption $I_{\max} = 500 \text{ mA}$ (with DC 24 V supply voltage) The MOVI-C® CONTROLLER has to be supplied by an external voltage source.
Memory	<ul style="list-style-type: none"> Retain data: 32 kB Retain persistent: 2 kB Program memory: 2 MB for application, including IEC libraries Data memory: 6 MB
OMH45A SD memory card in the XM SD card slot	<ul style="list-style-type: none"> PC-readable Contents: <ul style="list-style-type: none"> – Firmware – IEC program – Application data 512 MB memory
X5 DC 24 V supply voltage connection (2-pin connection)	<p>Connection type: Plug connector</p> <ul style="list-style-type: none"> 1 core: $0.25 \text{ mm}^2 - 2.5 \text{ mm}^2$ 2 cores: $0.5 \text{ mm}^2 - 1.5 \text{ mm}^2$ (TWIN-AEH¹⁾)
X30 (RJ45 socket) EtherCAT®/SBus ^{PLUS} interface	Fast system bus SBus ^{PLUS} based on EtherCAT® for master connection
X40/X41 fieldbus interface (RJ45 socket)	<p>Fieldbus interfaces for slave connection:</p> <ul style="list-style-type: none"> MOVI-C® CONTROLLER UHX45A-N: PROFINET IO MOVI-C® CONTROLLER UHX45A-E: EtherNet/IP™ or Modbus TCP (in preparation)
X80/X81 Engineering interface (RJ45 socket)	<ul style="list-style-type: none"> TCP/IP Possible connections: Engineering PC, visualization, other controller Engineering for all SEW-EURODRIVE components connected to the MOVI-C® CONTROLLER can be performed via the MOVI-C® CONTROLLER.
X85 System bus and RS485 interface (9-pin connection)	<p>Connection type: Plug connector, 1 core: $0.25 \text{ mm}^2 - 0.75 \text{ mm}^2$</p>

1) AEH: Conductor end sleeve

8.4 Master module

MOVI-C® CONTROLLER advanced UHX45A /MDM90A	
Electrical supply	<ul style="list-style-type: none"> Power consumption: $P_{\max} = 972 \text{ W}$ Supply voltage $V = \text{DC } 24 \text{ V}$ (-15% / +20%) according to IEC 61131-2 Current consumption $I_{\max} = 40.5 \text{ A}$ (with DC 24 V supply voltage)
X5_A External DC 24 V supply voltage (2-pin connection)	Connection type: Plug connector with strain relief <ul style="list-style-type: none"> 1 core: $0.5 \text{ mm}^2 - 16 \text{ mm}^2$ 2 cores: $0.25 \text{ mm}^2 - 6 \text{ mm}^2$ (TWIN-AEH¹⁾) Tightening torque: 1.7 – 1.8 Nm
X5_B Output for the DC 24 V supply voltage (2-pin connection)	Connection type: Plug connector via prefabricated connection
X5 Connection DC 24 V supply voltage	Connection type: CU bars $2 \times 5 \text{ mm}^2$, M4 screw fitting
PE connection	Connection type: CU bar $3 \times 14 \text{ mm}^2$, M6 screw fitting
XF Safe DC 24 V supply voltage	Type: 5 x 20 mm glass tube, 4 A, 125 V, slow-blow

1) AEH: Conductor end sleeve

8.5 Technical data of the PROFINET interface

MOVI-C® CONTROLLER advanced UHX45A	
Manufacturer ID	010Ahex
Device ID	13dez
Connection technology	RJ45
Baud rate	100 MBd, full duplex
Network protocols	ARP, ICMP
Application protocols	PROFINET IO, HTTP, SNMP, SEW Application Services
Port numbers used	80, 161, 310, PROFINET DCE/RPC Ports (dynamic via end point mapper)
Conformance class	C
Application profiles	PROFIsafe, PROFIenergy (in preparation)
Permitted cable types	Category 5 and higher, class D according to IEC 11801
Maximum cable length (switch to switch)	100 m
GSD file name	GSDML-Vx.yz-SEW-MOVI-C-CONTROLLER-UHX25-UHX45-yyyymmdd-hhmmss

2477730/EN – 01/2018

8.6 Port overview

8.6.1 Interface description

The Ethernet interfaces of the MOVI-C® CONTROLLER have the following functions:

- X30 – EtherCAT®/SBus^{PLUS} interface for master connection
- X40/X41 – Fieldbus interface for slave connection
- X80/X81 – Engineering interface
- X85 – System bus interface and RS485 interface

8.6.2 Engineering interface



Port	TCP/UDP	Function	Authorization
21	TCP	FTP	Reading from and writing to the file system
23	TCP	Telnet	Reading OEM diagnostic data
310	TCP	Data streaming	Reading and writing of all indexed parameters
11740 – 11743	TCP	CODESYS engineering	Read and write
1740 - 1743	UDP	CODESYS engineering	Read and write

8.6.3 PROFINET

Port	TCP/UDP	Function	Authorization
Dynamic port definition via End Point Mapper	UDP	PROFINET DCE/RPC	Reading and writing on all indexed parameters
Ethertype 8892hex		Process data exchange	Controlling connection
Ethertype 88B5hex		Address Editor from SEW-EURODRIVE	Reading and writing of all address parameters of the Ethernet interface
310	TCP	Data streaming	Reading and writing of all indexed parameters
161	UDP	SNMP	Reading on MIBs


8.7 Dimension drawing MOVI-C® CONTROLLER advanced

8.7.1 Compact controller

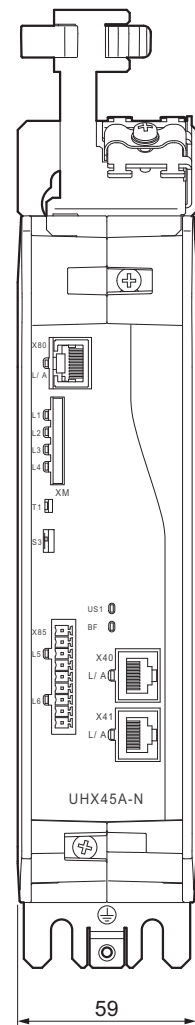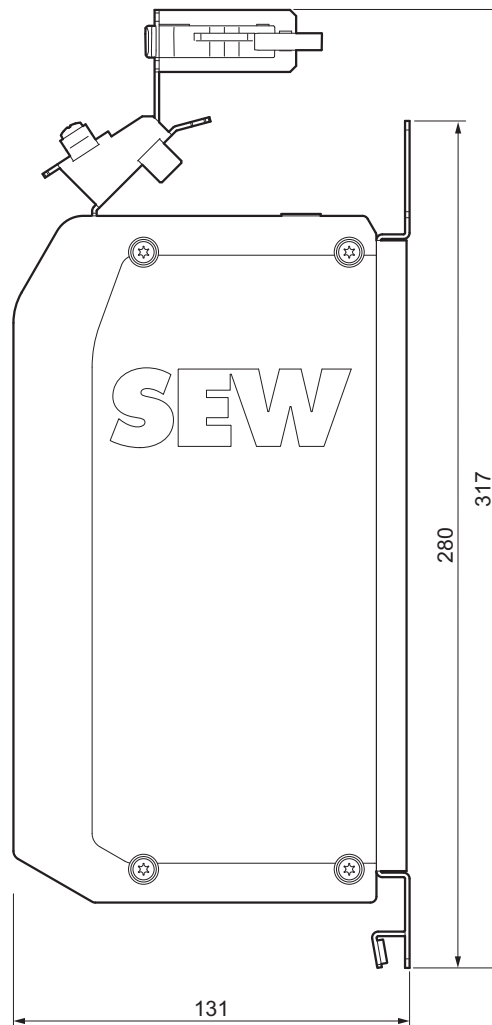

21043377035

8.7.2 Master module

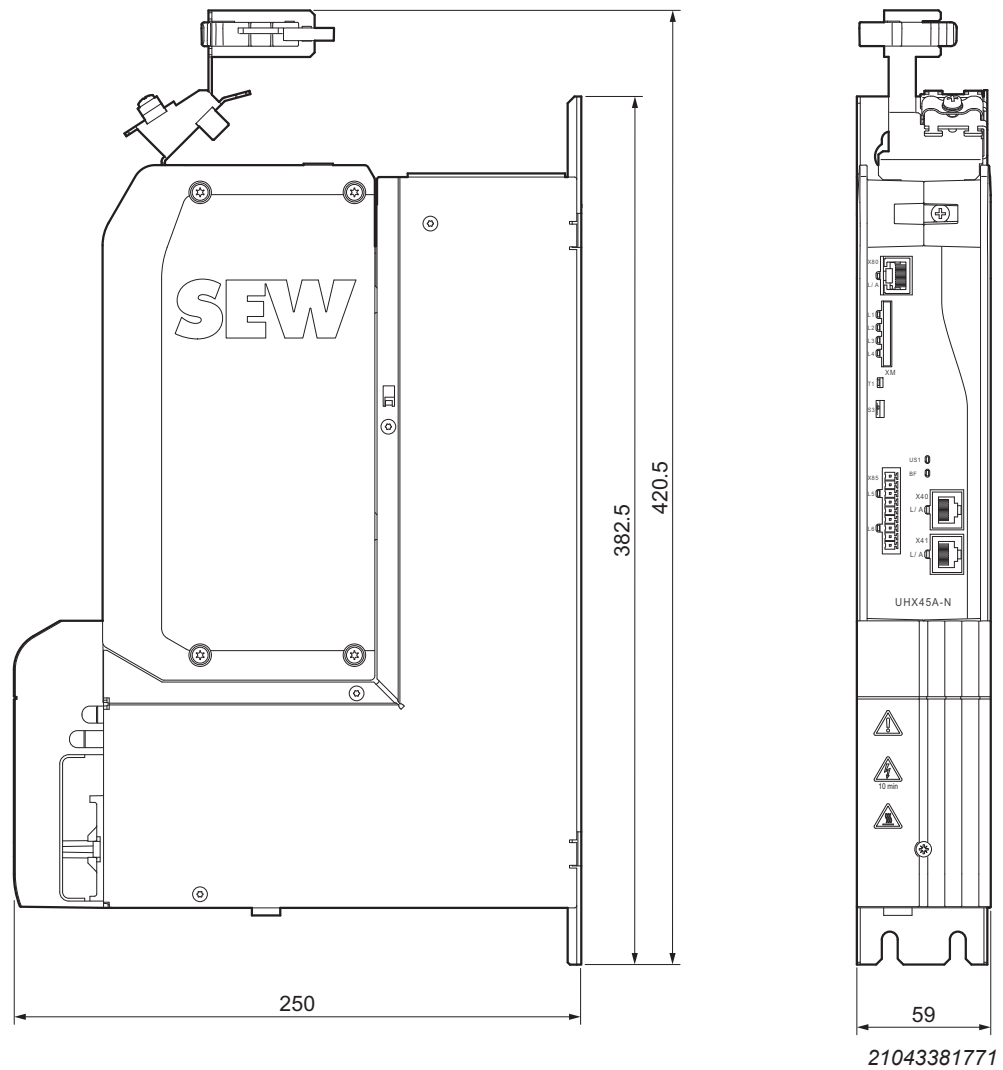

Index

A

Accessories	20
Additional documentation	13
Arrangement of the axis modules within the axis system	22
Assign PROFINET device name of the MOVI-C [®] CONTROLLER	60
Auto-crossing	40
Auto-negotiation	40

C

Checking communication via process data	73
Communication interfaces	17
Engineering	18
EtherCAT [®] /SBusPLUS	18
Fieldbus	18
Compact controller	
Elements	23
Installing a module	24
Mounting the carrier plate	23
Removing the carrier plate	23
Technical data	82
Voltage supply	35
Configuration	
EtherCAT [®] /SBusPLUS stations	51
Fieldbus stations	56
Configuring EtherCAT [®] /SBusPLUS stations	51
Configuring fieldbus stations	56
Connection	
Engineering PC	37
EtherCAT [®] /SBusPLUS master	38
Fieldbus slave	39
Content of the manual	13
Copyright notice	8

D

Designated use	10
Device description file	57
Device replacement	78
Device topology example	50
DHCP	
Description	49

Dimension drawing	85
Dynamic Host Configuration Protocol, see DHCP	49

E

Electrical installation	12
Safety notes	12
Electrical installation, protective separation	31
Embedded safety notes	7
Engineering interface	18
Engineering PC	
Connect to the local network	51
Connection to MOVI-C [®] CONTROLLER	51
Setting the IP address parameters	51
Engineering software	19
EtherCAT [®] /SBusPLUS	
Connection master	38
Interface	18
Ethernet net	
Ethernet switch	40
Network topologies	40
Shielding and routing bus cables	31
Ethernet switch	40
Auto-crossing	40
Auto-negotiation	40
Exclusion of liability	8

F

Fieldbus interface	18
Setting	68
Functional description	
MOVI-C [®] CONTROLLER	14
Terminals L carrier	34
Terminals MOVI-C [®] CONTROLLER	32
Functional safety technology	
Safety note	11

G

GSDML file, see device description file	57
---	----

H

Hazard symbols	
Meaning	7

I

IEC Editor	
Configuring MOVI-C® CONTROLLER.....	68
Watching the process data word exchange ...	73
Installation	
Safety notes	11
Installation, position and minimum clearance.....	21
Installing the busbar	28
Installing the shield plate	30
Interface	
Engineering	18
EtherCAT®/SBusPLUS	18
Fieldbus	18
IP address	47
IP address parameters	47
Setting at PLC	59
Setting for MOVI-C® CONTROLLER.....	60
Setting via engineering PC	51

L

L-carrier	
Mounting	25
Removing	25
LEDs.....	42
BF (BUS FAULT).....	46
L/A (Link/Activity).....	46
L1	44
L2	44
L3	44
L5	45
L6	45
US1	45
Lifting applications	10

M

MAC address.....	47
Markings.....	80
Master module	
Elements	25
Installing a module	26
Installing the busbar	28
Installing the touch guard	29
Mounting the L-carrier	25
Removing the L-carrier	25

Removing the touch guards	27
Technical data	83
Voltage supply	36
Mechanical installation	
Arrangement of the axis modules within the axis system	22
Control cabinet installation	22
Installing the shield plate	30
Minimum clearance	21
Mounting position	21
Removing the MOVI-C® CONTROLLER	30
MOVI-C® CONTROLLER	
Communication interfaces.....	17
Connection to engineering PC	51
Device variants.....	14
Dimension drawing.....	85
Engineering	18
Functional description	14
General technical data	81
Installing device description file.....	57
Integrating in PROFINET network.....	60
LEDs.....	42
Loading IEC program	68
Markings	80
Nameplate	15
Removing	30
SD memory card OMH45A.....	18
Setting fieldbus interface	68
Transferring process data words.....	73
Type code.....	16
Voltage supply	35, 36
MOVI-C® devices	
Example topology in the PROFINET network	50
Including in MOVISUITE®	54
MOVISUITE®	19
Advantages	19
Applying MOVI-C® devices.....	54
Create project.....	53
Scanning network.....	53
N	
Network class	48
Notes	
Designation in the documentation	6
Meaning of the hazard symbols	7

O

Ordering spare parts 20

P**PLC**

Configure 59

Loading project 65

Transferring process data words 73

Process data words

Determining number 60

Exchanging between PLC and MOVI-C®
CONTROLLER 73

Product names 8

PROFINET IO interface, technical data 83

PROFINET network

Device topology example 50

Integrating MOVI-C® CONTROLLER 60

Protective separation 31

R

Removing the MOVI-C® CONTROLLER 30

Restrictions to application 11

Rights to claim under limited warranty 7

S

Safety functions 11

Safety notes

Bus systems 12

Designation in the documentation 6

Installation 11

Meaning of the hazard symbols 7

Preliminary information 9

Setup 11

Structure of embedded 7

Structure of the section-related 6

SD memory card OMH45A 18

Section-related safety notes 6

Short designation in the manual 13

Signal words in safety notes 6

Standard accessories 20

Standard gateway 49

Status LEDs 42

BF (BUS FAULT) 46

L/A (Link/Activity) 46

L1 44

L2 44

L3 44

L5 45

L6 45

US1 45

Subnet mask 48

Support plate

Mounting 23

Removing 23

T

Target group 10

TCP/IP protocol

Description 47

DHCP 49

IP address 47

MAC address 47

Network class 48

Standard gateway 49

Subnet mask 48

Technical data 80

Terminals

Assignment 41

Functional description 32

TIA Portal

Configuring PLC 59

Create project 57

Creating a watch table 73

Loading the project to the PLC 65

Testing connection PLC – MOVI-C®
CONTROLLER 73

Touch guard

Attaching to the module 29

From the module 27

Trademarks 8

Transportation 11

V**Voltage supply**

Technical data 35, 36

Wiring diagram 35, 36

W

Waste disposal 79

Wiring diagram voltage supply 35, 36







SEW-EURODRIVE
Driving the world

SEW
EURODRIVE

SEW-EURODRIVE GmbH & Co KG
Ernst-Blickle-Str. 42
76646 BRUCHSAL
GERMANY
Tel. +49 7251 75-0
Fax +49 7251 75-1970
sew@sew-eurodrive.com
→ www.sew-eurodrive.com