MOVIDRIVE® Drive Inverters

Addendum to the Operating Instructions

DKB11A Heat Sink for Brake Resistors in Flatpack Design

Edition 04/99

This addendum does not replace the detailed Operating Instructions!

Startup only by trained personnel in compliance with relevant accident prevention regulations and MOVIDRIVE® Operating Instructions!

Please refer to MOVIDRIVE® Operating Instructions for detailed information about assembly, installation and startup.

DKB11A Heat Sink for Brake Resistors in Flatpack Design

Part number 814 345 5

With the DKB11A heat sink, brake resistors BW...-003 and BW...-005 in flatpack design can be mounted below MOVIDRIVE® drive inverters in a space-conserving manner.

The resistors are placed in the heat sink and secured with the enclosed screws (M4 × 20).

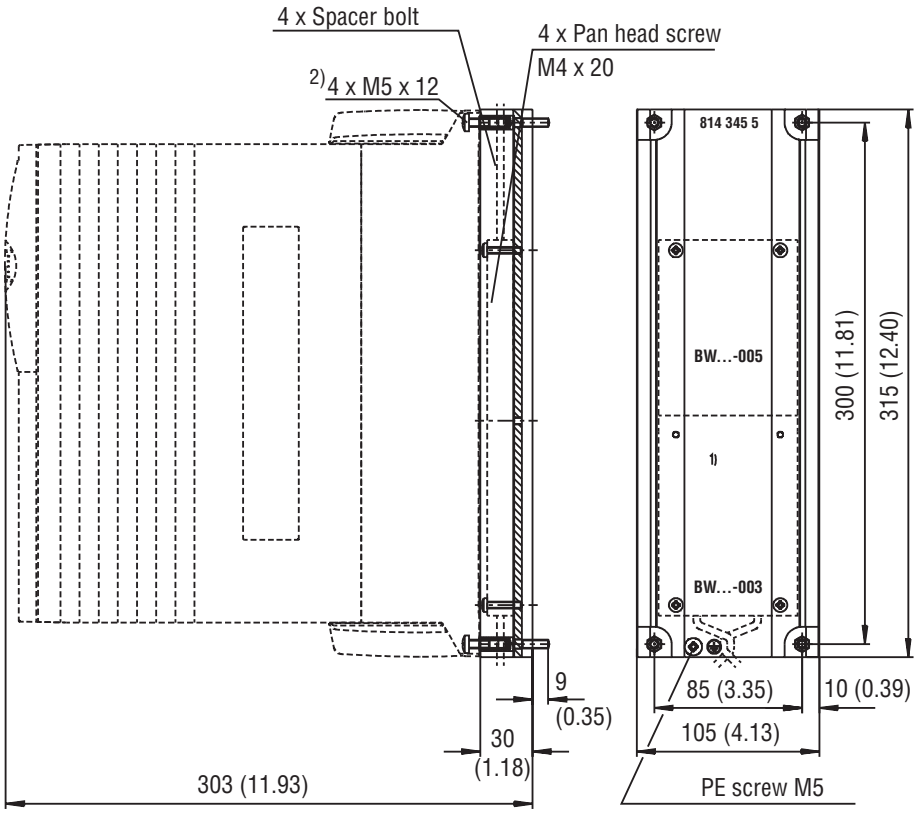

02281AEN

Fig. 1: DKB11A Heat sink for brake resistors in flatpack design, dimensions in mm (in)

1) Mounting surface for BW...-003 to BW...-005
2) Retaining screws not included

09180362 / 0499

SEW-EURODRIVE GmbH & Co ♦ P.O. Box 3023 ♦ D-76642 Bruchsal ♦ Tel. +49-7251-75-0 ♦ Fax +49-7251-75-1970 ♦ Telex 7 822 391