




SEW
EURODRIVE

Assembly and Operating Instructions

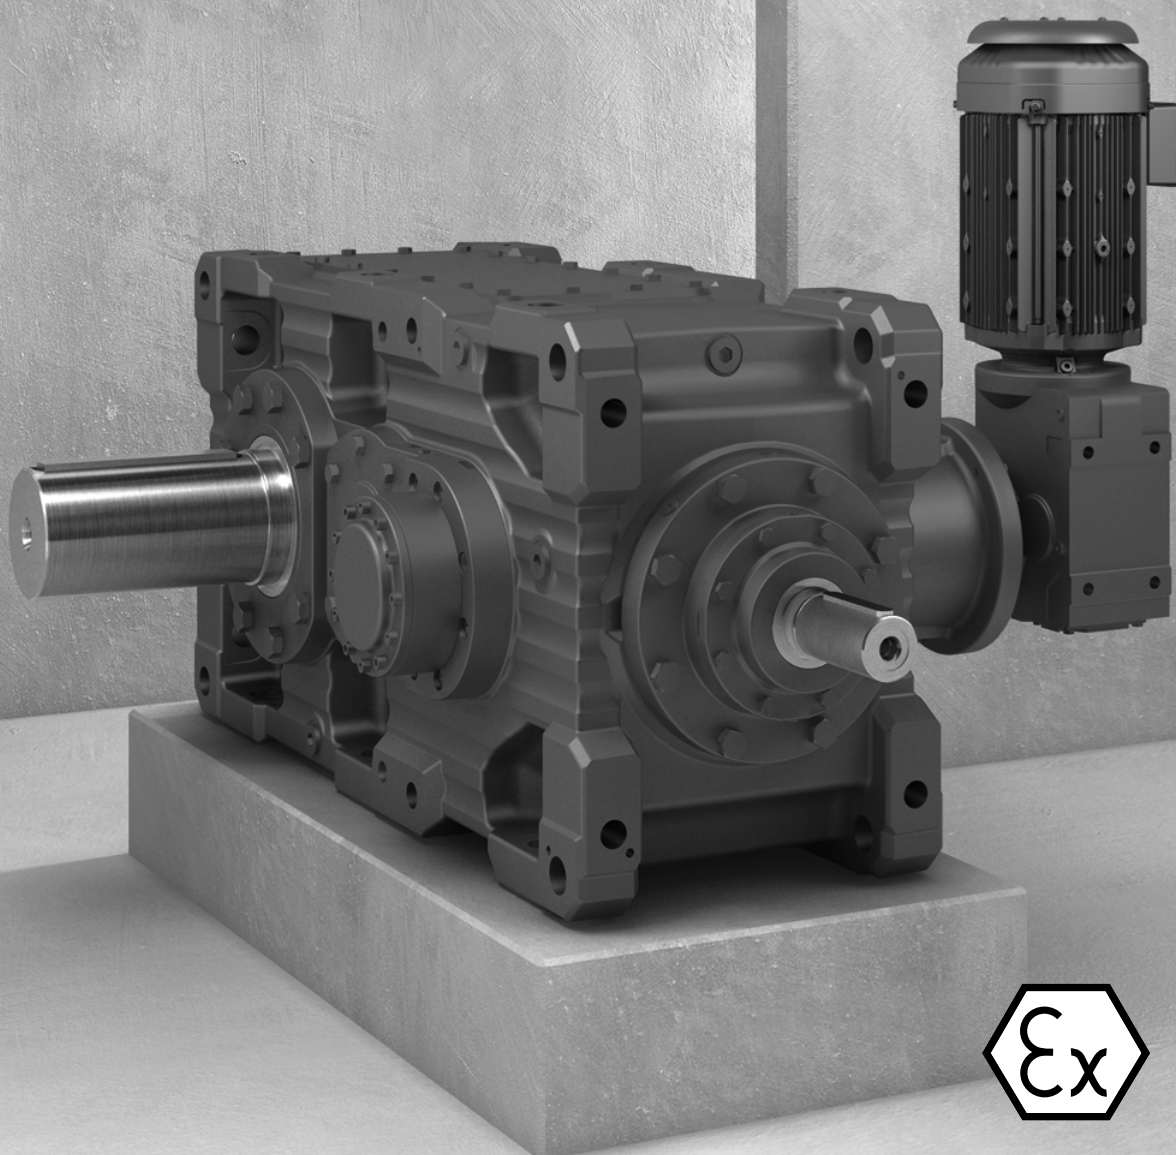

Industrial Gear Units
Bevel-Helical Gear Unit Series X..
Bucket Elevator Drives
Torque Classes from 6.8 to 270 kNm





Contents

1	General information	7
1.1	How to use the operating instructions	7
1.2	Structure of the safety notes	7
1.3	Rights to claim under warranty	8
1.4	Exclusion of liability	8
1.5	Copyright.....	8
2	Safety notes	9
2.1	Preliminary remark	9
2.2	General information	9
2.3	Target group	9
2.4	Designated use	10
2.5	Other applicable documentation	10
2.6	Safety symbols on the gear unit.....	11
2.7	Symbols on the packaging.....	14
2.8	Transport.....	15
2.9	Storage and transport conditions	18
3	Structure of the bucket elevator drive	20
3.1	Bucket elevator drive	20
3.2	Auxiliary drive	21
3.3	Overrunning clutch	22
3.4	Speed monitoring.....	23
3.5	Torque-limited backstop.....	25
3.6	Gear ratio of the backstop.....	26
3.7	Position of motor terminal box and cable entry	27
3.8	Nameplate.....	28
3.9	Type designations.....	29
3.10	Mounting positions	33
3.11	Mounting positions and standard mounting surfaces.....	34
3.12	Fixed and variable pivoted mounting positions	35
3.13	Input and output shaft	41
3.14	Shaft positions, directions of rotation, backstops, auxiliary drives	43
3.15	Direction of rotation dependencies	44
3.16	Coating and surface protection systems	45
3.17	Lubrication	46
3.18	Accessories.....	47
4	Design of options and accessories	48
4.1	Shaft end pump /SEP	48
4.2	Motor pump /ONP	49
4.3	Torque arm /T	49
4.4	Flange couplings with cylindrical interference fit /FC	50
4.5	Backstop	51
4.6	Motor adapter /MA	52
4.7	V-belt drives /VBD.....	53



4.8	Drive packages on a steel frame	54
4.9	Cooling types	56
4.10	Fan /FAN.....	56
4.11	Water cooling cover /CCV.....	58
4.12	Water cooling cartridge /CCT.....	59
4.13	Oil-water cooler for splash lubrication /OWC	61
4.14	Oil-air cooler for splash lubrication /OAC	61
4.15	Oil-water cooler for pressure lubrication /OWP	61
4.16	Oil-air cooler for pressure lubrication /OAP	61
4.17	Oil heater /OH	62
4.18	Pressure switch /PS	63
4.19	Temperature sensor /PT100	63
4.20	Temperature switch /NTB	63
4.21	Temperature switch /TSK	63
5	Checklist	64
5.1	Before startup	64
5.2	During startup	65
6	Assembly/installation	66
6.1	Required tools/resources	66
6.2	Tolerances	66
6.3	Notes on installation/assembly	67
6.4	Prerequisite for assembly	70
6.5	Installing the gear unit.....	70
6.6	Gear unit mounting in potentially-explosive atmospheres	72
6.7	Gear units and gearmotor in equipment groups I and II	73
6.8	Speed monitoring.....	76
6.9	Filling the bevel-helical gear unit and auxiliary drive adapter with oil	80
6.10	Gear units delivered with oil fill (option)	83
6.11	Gear units with solid shaft.....	84
6.12	Flange couplings with cylindrical interference fit /FC	85
6.13	Flange couplings with keyway	94
6.14	Output shaft as a hollow shaft with keyed connection /..A.....	100
6.15	Output shaft as a hollow shaft with shrink disk /..H.....	115
6.16	Output shaft as hollow shaft with splining /..V.....	132
6.17	Changing the Direction of Rotation	139
6.18	Torque arm /T	145
6.19	Couplings	148
6.20	Motor adapter /MA	150
6.21	V-belt drives /VBD.....	157
6.22	Base frame /BF	169
6.23	Swing base /SB.....	169
6.24	Fan /FAN.....	169
6.25	Water cooling cover /CCV.....	170
6.26	Water cooling cartridge /CCT.....	172
6.27	Oil-water cooler for splash lubrication /OWC	177



6.28	Oil-air cooler for splash lubrication /OAC	177
6.29	Oil-water cooler for pressure lubrication /OWP	177
6.30	Oil-air cooler for pressure lubrication /OAP	177
6.31	Oil heater /OH	178
6.32	Pressure switch /PS	181
6.33	Temperature sensor /PT100	183
6.34	Temperature sensor /PT100 (metallic)	185
6.35	Temperature switch /NTB	187
6.36	Temperature switch /TSK	189
6.37	Brake.....	190
7	Startup.....	191
7.1	Notes on startup.....	191
7.2	Starting up gear units in potentially explosive atmospheres	192
7.3	Startup sequence	193
7.4	Shaft end pump /SEP	196
7.5	Motor pump /ONP	196
7.6	Water cooling cover /CCV.....	197
7.7	Water cooling cartridge /CCT.....	198
7.8	Oil-water cooler with motor pump for splash lubrication /OWC	199
7.9	Oil-air cooler with motor pump for splash lubrication /OAC	199
7.10	Oil-water cooler for pressure lubrication /OWP	199
7.11	Oil-air cooler with motor pump for pressure lubrication /OAP	199
7.12	Oil heater /OH	200
7.13	Backstop /BS	200
7.14	Torque-limited backstop.....	201
7.15	Starting up the gear unit at low ambient temperatures	201
7.16	Measuring the surface and oil temperatures.....	201
7.17	Gear unit shutdown/conservation	202
8	Inspection/maintenance	204
8.1	Preliminary work regarding inspection and maintenance	204
8.2	Inspection and maintenance intervals.....	206
8.3	Lubricant change intervals	207
8.4	Check oil level on bevel-helical gear unit.....	208
8.5	Checking the oil consistency.....	213
8.6	Change oil of bevel-helical gear unit and auxiliary drive adapter.....	214
8.7	Checking and cleaning the breather	217
8.8	Refilling the sealing grease	217
8.9	Motor pump /ONP	217
8.10	Fan /FAN.....	217
8.11	Water cooling cover /CCV.....	219
8.12	Water cooling cartridge /CCT.....	221
8.13	Oil-water cooler for splash lubrication /OWC	224
8.14	Oil-air cooler for splash lubrication /OAC	224
8.15	Oil-water cooler for pressure lubrication /OWP.....	224
8.16	Oil-air cooler for pressure lubrication /OAP	224



Contents

8.17	Oil heater /OH	225
8.18	Torque-limited backstop	226
9	Lubricants	228
9.1	Lubricant selection	228
9.2	Lubricant table	229
9.3	Lubricant fill quantities	231
9.4	Sealing greases / rolling bearing greases	233
10	Malfunctions/remedy	234
10.1	Troubleshooting information	234
10.2	Customer service	234
10.3	Possible malfunctions/remedy	235
10.4	Disposal	238
11	Declaration of conformity	239
12	Address list	242
	Index	254



1 General information

1.1 How to use the operating instructions

Operating instructions are an integral part of the product and contain important information for operation and service. The operating instructions are written for all employees who assemble, install, start up, and service the product.

The operating instructions must be legible and accessible at all times. Make sure that staff responsible for the plant and its operation as well as persons who work independently on the unit, have read the operating instructions carefully and understood them. If you are unclear about any of the information in this documentation, or if you require further information, contact SEW-EURODRIVE.

1.2 Structure of the safety notes

1.2.1 Meaning of signal words

The following table shows the grading and meaning of the signal words for safety notes, notes on potential risks of damage to property, and other notes.

Signal word	Meaning	Consequences if disregarded
▲ DANGER	Imminent danger	Severe or fatal injuries
▲ WARNING	Possible dangerous situation	Severe or fatal injuries
▲ CAUTION	Possible dangerous situation	Minor injuries
NOTICE	Possible damage to property	Damage to the drive system or its environment
NOTE ON EXPLOSION PROTECTION	Important note on explosion protection	Suspension of explosion protection and resulting hazards
INFORMATION	Useful information or tip: Simplifies the handling of the drive system.	

1.2.2 Design of the section-related safety notes

Section-related safety notes do not apply to a specific action, but to several actions pertaining to one subject. The symbols used either indicate a general hazard or a specific hazard.

This is the formal structure of a safety note for a specific section:



▲ SIGNAL WORD

Type and source of danger.

Possible consequence(s) if disregarded.

- Measure(s) to prevent the danger.

1.2.3 Design of the embedded safety notes

Embedded safety notes are directly integrated into the instructions just before the description of the dangerous action.

This is the formal structure of an embedded safety note:

- **▲ SIGNAL WORD** Type and source of hazard.



General information

Rights to claim under warranty

Possible consequence(s) if disregarded.

- Measure(s) to prevent the hazard.

1.3 Rights to claim under warranty

A requirement of fault-free operation and fulfillment of any rights to claim under limited warranty is that you adhere to the information in the operating instructions. Therefore, read the operating instructions before you start working with the unit.

1.4 Exclusion of liability

You must comply with the information contained in these operating instructions to ensure safe operation of the X series gear units and to achieve the specified product characteristics and performance requirements. SEW-EURODRIVE assumes no liability for injury to persons or damage to equipment or property resulting from non-observance of these operating instructions. In such cases, any liability for defects is excluded.

1.5 Copyright

© 2013 – SEW-EURODRIVE. All rights reserved.

Unauthorized duplication, modification, distribution or any other use of the whole or any part of this documentation is strictly prohibited.



2 Safety notes

The following basic safety notes must be read carefully to prevent injury to persons and damage to property. The operator must ensure that the basic safety notes are read and adhered to. Make sure that persons responsible for the system and its operation, as well as persons who work independently on the unit, have read through the operating instructions carefully and understood them. If you are unclear about any of the information in this documentation, or if you require further information, please contact SEW-EURODRIVE.

2.1 Preliminary remark

The following safety notes are primarily concerned with the use of gear units. If you use gearmotors, also refer to the safety notes for motors in the corresponding operating instructions.

Also observe the supplementary safety notes in the individual sections of these operating instructions.

2.2 General information



INFORMATION on explosion protection

Never install or start up damaged products. Submit a complaint to the shipping company immediately in the event of damage.

Explosive gas mixtures or concentrations of dust can lead to severe or fatal injuries in conjunction with hot, live, or moving parts of electrical machinery.

All work related to transportation, storage, setup/mounting, connection, startup, maintenance and repair may only be carried out by qualified personnel, in strict observance of:

- The relevant detailed operating instructions
- The warning and safety signs on the motor/gearmotor
- All other project planning documents, operating instructions and wiring diagrams related to the drive
- The specific regulations and requirements for the system
- The national / regional regulations governing safety and the prevention of accidents

Removing covers without authorization, improper use or incorrect installation and operation may result in severe injuries to persons or damage to machinery.

Refer to the documentation for additional information.

2.3 Target group

Any mechanical work may only be performed by adequately qualified personnel. Qualified persons in line with Directive 1999/92/EC and these operating instructions are persons who are familiar with the setup, mechanical installation, troubleshooting, and maintenance for this product. Further, they are qualified as follows:

- Training in mechanical engineering, e.g. as a mechanic or mechatronics technician (final examinations must have been passed).
- They are familiar with these operating instructions.



Any electronic work may only be performed by adequately qualified electricians. Skilled persons (electrically) in line with Directive 1999/92/EC and these operating instructions are persons who are familiar with the electrical installation, startup, troubleshooting, and maintenance for this product. Further, they are qualified as follows:

- Training in electrical engineering, e.g. as an electrician or mechatronics technician (final examinations must have been passed).
- They are familiar with these operating instructions.

Any work in further areas of transportation, storage, operation and waste disposal may only be carried out by persons who are trained appropriately.

All qualified personnel must wear appropriate protective clothing.

2.4 Designated use

The gear units are intended for industrial systems and may only be used in accordance with the information provided in SEW-EURODRIVE's technical documentation and the information given on the nameplate. They meet the requirements of the applicable standards and regulations and comply with the following directives and standards regarding explosion protection:

- Directive 94/9/EC
- EN 13463/1
- EN 13463/5
- EN 13463/8
- EN / IEC 60079-11



INFORMATION on explosion protection

- A drive motor connected to the gear unit is only allowed to be operated under the conditions described in chapter "Starting up gear units in potentially explosive atmospheres".
- A motor mounted to the gear unit may only be operated on a frequency inverter if the data on the gear unit nameplate is met!
- A motor mounted to a gear unit by means of an adapter or belt may only be operated if the data on the gear unit nameplate is met.
- There may be no aggressive substances in the vicinity that could damage the paint and seals.
- SEW-EURODRIVE delivers the gear units with a painting that complies with the requirements for preventing electrostatic charging according to EN / IEC 60079-0. If you have to repaint a gear unit, you have to meet the requirements for preventing electrostatic charging according to EN / IEC 60079-0.

2.5 Other applicable documentation

The following publications and documents have to be observed as well:

- Operating instructions: "AC Motors"
- Operating instructions: Gear Unit Series R..7, F..7, K..7, S..7, SPIROPLAN®
- Operating instructions of any attached options
- Catalog: Helical and Bevel-Helical Gear Units X.. Series



- Catalog: Bevel-Helical Gear Units X.. Series Bucket Elevator Drives

2.6 Safety symbols on the gear unit













⚠ CAUTION

Safety symbols or signs can become dirty or illegible over time.

Risk of injury due to illegible symbols.

- Always make sure that safety, warning, and operating notes are legible.
- Replace damaged safety symbols and signs.







The safety symbols on the gear unit must be observed. They have the following meaning:

Safety symbols	Meaning
	Indicates the bleeder screw .
	Indicates the oil filling location . Also serves as proper venting during the oil change.
	Indicates the oil drain .
	Indicates the position of the breather . Serves to avoid mistaking the oil measuring position for the venting position.
	Indicates the positions for relubrication and makes it easier to find the locations to be lubricated. Helps avoid bearing damage.
	Indicates the water supply and serves to locate the connection option.
	Indicates the water return and serves to locate the connection option.
	Indicates the oil supply and serves to locate the connection option.
	Indicates the oil return and serves to locate the connection option.
	Indicates the position of the temperature sensor / temperature switch .


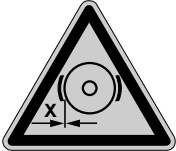


Safety notes

Safety symbols on the gear unit

Safety symbols	Meaning
	Indicates the grease drain plug and serves to locate the grease drain. Helps avoid bearing damage.
	Helps avoid errors caused by lack of understanding. Read the information in the operating instructions.
	For pivoted mounting positions, this symbol on the information sign indicates the mounting position of the gear unit for checking the oil .
	Caution: Burns caused by hot surface.
	Caution: Removing the dipstick during operation may result in damage to the gear unit.
	Caution: Risk of burns due to hot gear oil.



After startup, you may remove the following labels from the gear unit.

Meaning	
The brake is not set at the factory.	
<div> <div> VORSICHT NOTICE ATTENTION PRECAUCIÓN VOORZICHTIG OSTROŻNIE </div> <div> <div>  </div> <div>  </div> <div> 18855199 </div> </div> <div> <div> DE Die Bremse ist ab Werk nicht eingestellt. Mögliche Sachschäden! • Bremse vor der Inbetriebnahme gemäß Betriebsanleitung einstellen </div> <div> EN The brake has not been set at the factory Potential damage to property! • Prior to startup, set the brake according to the operating instructions. </div> <div> F Le frein n'est pas réglé d'usine Risque de dommages matériels ! • Avant la mise en service, régler le frein conformément aux instructions de la notice d'exploitation. </div> <div> ES El freno no viene ajustado de fábrica. ¡Posibles daños materiales! • Antes de la puesta en marcha, ajustar el freno según las instrucciones de funcionamiento. </div> <div> NL De rem is niet af fabriek ingesteld. Mogelijke materiële schade! • Rem voor de inbedrijfstelling conform technische handleiding instellen. </div> <div> PL Hamulec nie jest ustawiony fabrycznie. Możliwe straty rzeczowe! • Przed uruchomieniem należy ustawić hamulec zgodnie z wytycznymi z instrukcji obsługi. </div> </div> </div>	





Meaning



The coupling is supplied without grease.

VORSICHT NOTICE ATTENTION PRECAUCIÓN VOORZICHTIG OSTROŻNIE					
  18977405	(DE) Kupplung wird ohne Fett geliefert. Mögliche Sachschäden! • Vor der Inbetriebnahme Kupplung mit Fett befüllen.		(EN) Coupling delivered without grease Possible damage to property. • Fill coupling with grease prior to startup.		
	(F) L'accouplement est livré sans graisse. Risque de dommages matériels ! • Avant la mise en service, remplir l'accouplement de graisse.		(ES) El acoplamiento se suministra sin grasa. ¡Posibles daños materiales! • Llenar el acoplamiento con grasa antes de la puesta en marcha.		
	(NL) Koppeling wordt zonder vet geleverd. Mogelijke materiële schade! • Koppeling vóór de inbedrijfstelling met vet vullen.		(PL) Sprzęgło dostarczane jest bez smaru. Możliwe szkody materialne! • Przed uruchomieniem należy wypełnić sprzęgło smarem.		

The coupling is supplied without oil.

VORSICHT NOTICE ATTENTION PRECAUCIÓN VOORZICHTIG OSTROŻNIE					
  18977413	(DE) Kupplung wird ohne Öl geliefert. Mögliche Sachschäden! • Vor der Inbetriebnahme Kupplung mit Öl befüllen.		(EN) Coupling delivered without oil Possible damage to property. • Fill coupling with oil prior to startup.		
	(F) L'accouplement est livré sans huile. Risque de dommages matériels ! • Avant la mise en service, remplir l'accouplement d'huile.		(ES) El acoplamiento se suministra sin aceite. ¡Posibles daños materiales! • Llenar el acoplamiento con aceite antes de la puesta en marcha.		
	(NL) Koppeling wordt zonder olie geleverd. Mogelijke materiële schade! • Koppeling vóór de inbedrijfstelling met olie vullen.		(PL) Sprzęgło dostarczane jest bez oleju. Możliwe szkody materialne! • Przed uruchomieniem należy wypełnić sprzęgło olejem.		



The gear unit is protected against corrosion with VCI.

VORSICHT NOTICE ATTENTION PRECAUCIÓN VOORZICHTIG OSTROŻNIE					
  18977421	(DE) Getriebe ist mit VCI rostgeschützt. Nicht öffnen! Mögliche Sachschäden! • Vor der Inbetriebnahme Vorarbeiten gemäß Betriebsanleitung durchführen. • Keine offene Flamme!		(EN) Gear unit with VCI corrosion protection. Do not open! Potential damage to property! • Prior to startup, perform preliminary work according to operating instructions • No open flames!		
	(F) Réducteur protégé contre la corrosion avec VCI. Ne pas ouvrir Risque de dommages matériels ! • Avant la mise en service, réaliser les travaux préliminaires indiqués dans la notice d'exploitation. • Pas de flammes ouvertes !		(ES) Reductor está protegido con VCI contra la corrosión. ¡No abrir! ¡Posibles daños materiales! • Antes de la puesta en marcha, efectuar los trabajos preparatorios según las instrucciones de funcionamiento. • No debe haber fuego abierto.		
	(NL) Tandwielkast is met VCI tegen corrosie beschermd. Niet openen! Mogelijke materiële schade! • Vóór de inbedrijfstelling voorbereidingen conform technische handleiding uitvoeren. • Geen open vuur!		(PL) Przekładnia zabezpieczona jest przed korozją za pomocą środka VCI. Nie otwierać! Możliwe straty rzeczowe! • Przed uruchomieniem należy przeprowadzić czynności przygotowawcze zgodnie z informacjami zawartymi w instrukcji obsługi! • Unikać otwartych płomieni!		




Safety notes

Symbols on the packaging

Meaning	
The gear unit is supplied without oil.	
VORSICHT NOTICE ATTENTION PRECAUCIÓN VOORZICHTIG OSTROŻNIE	
<div></div> <div></div> <div>18977383</div>	<div>(DE)</div> <div>Getriebe wird ohne Öl geliefert.</div> <div>Mögliche Sachschäden!</div> <div><ul style="list-style-type: none">• Vor der Inbetriebnahme Ölbefüllung gemäß Betriebsanleitung durchführen.</div>
	<div>(EN)</div> <div>Gear unit is delivered without oil.</div> <div>Potential damage to property!</div> <div><ul style="list-style-type: none">• Prior to startup, fill in oil according to operating instructions.</div>
	<div>(F)</div> <div>Le réducteur ne contient pas d'huile à la livraison.</div> <div>Dommages matériels possibles !</div> <div><ul style="list-style-type: none">• Avant la mise en service, effectuer le remplissage d'huile conformément à la notice d'exploitation.</div>
	<div>(ES)</div> <div>El reductor se suministra sin aceite.</div> <div>¡Posibles daños materiales!</div> <div><ul style="list-style-type: none">• Antes de la puesta en marcha, efectuar el llenado de aceite según las instrucciones de funcionamiento.</div>
<div>(NL)</div> <div>Tandwielkast wordt zonder olie geleverd.</div> <div>Mogelijke materiële schade!</div> <div><ul style="list-style-type: none">• Vóór de inbedrijfstelling olie conform technische handleiding bijvullen.</div>	<div>(PL)</div> <div>Przekładnia dostarczana jest bez oleju.</div> <div>Możliwe straty rzeczowe!</div> <div><ul style="list-style-type: none">• Przed uruchomieniem należy wlać olej zgodnie z informacjami zawartymi w instrukcji obsługi.</div>

2.7 Symbols on the packaging

The symbols on the packaging must be observed. They have the following meaning:

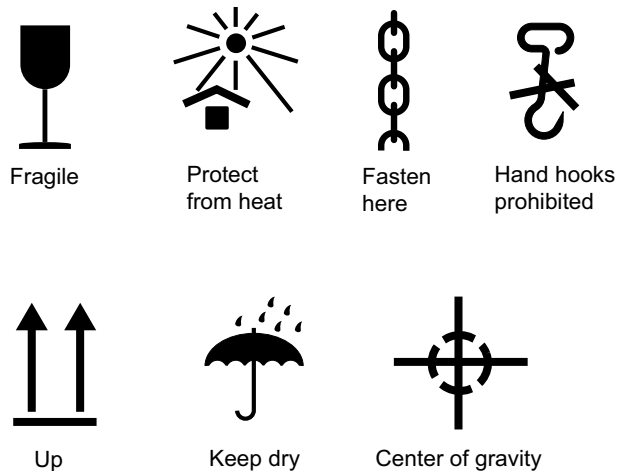

1811486091



2.8 Transport

2.8.1 General information



⚠ WARNING

Suspended loads can fall.

Severe or fatal injuries.

- Do not stand under the suspended load.
- Secure the danger zone.
- Use suitable, sufficiently rated and undamaged handling equipment.
- Consider the gear unit dimensions, the center of gravity and the weight that has to be moved when selecting lifting equipment or crane (see dimension drawing).



⚠ CAUTION

Risk of slipping of unsecured mount-on components, e.g. keys.

Potential risk of crushing due to falling parts.

- Secure the mount-on components.



⚠ CAUTION

Risk of slipping due to lubricant leaking from damaged seals.

Minor injuries.

- Check the gear unit and mount-on components for leaking lubricant.



NOTICE

Improper transport can damage the gear unit.

Possible damage to property.

- Note the following:
- Inspect the shipment for any damage that may have occurred in transit as soon as you receive the delivery. Inform the shipping company immediately about any damage. It may be necessary to suspend startup.
- The weight of the gear unit (without oil) is indicated on the nameplate or on the dimension sheet. Observe the loads and specifications given on the nameplate.
- If possible, transport the gear unit without oil fill. If this is not possible, note that the weight indicated on the nameplate refers only to the gear unit without oil fill, and replace the breather filter with a screw plug.
- Transport the gear unit in such a way that the lifting gear is tensioned only vertically.
- The gear unit must be transported in a manner that prevents damage to the gear unit and to mount-on components. For example, impacts against exposed shaft ends can damage the gear unit.




Safety notes

Transport

- Use only the provided eyebolts to transport the gear unit [1]. Keep in mind that the auxiliary drive [2] and auxiliary drive adapter [3] must not be used as load bearing device.

The following figure shows an example of how the gear unit can be transported.

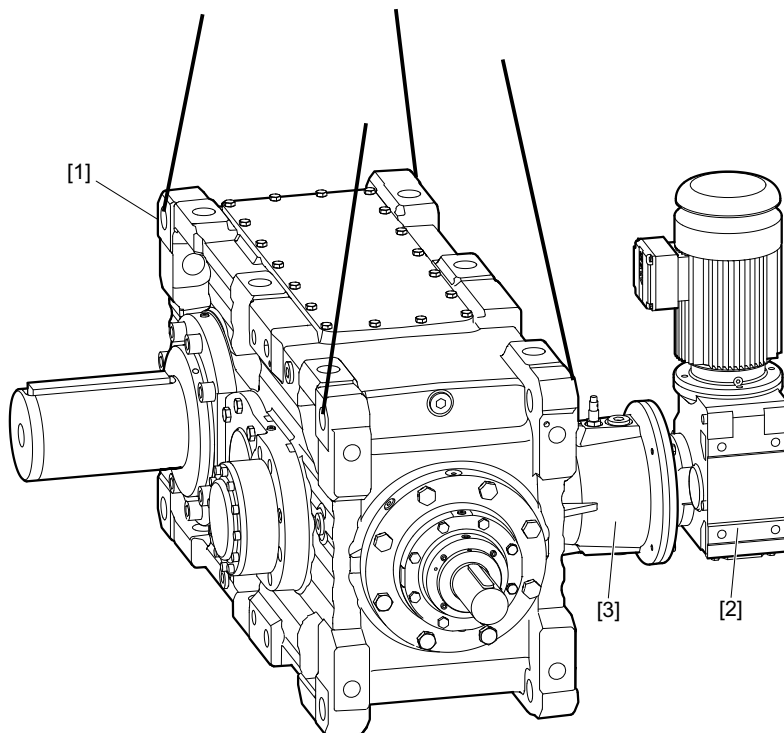




2.8.2 Gear units on swing base/base plate

Gear units on a swing base/base plate may only be transported using vertically tensioned lifting cables [1] or chains.

The following figure illustrates how to transport the gear unit.

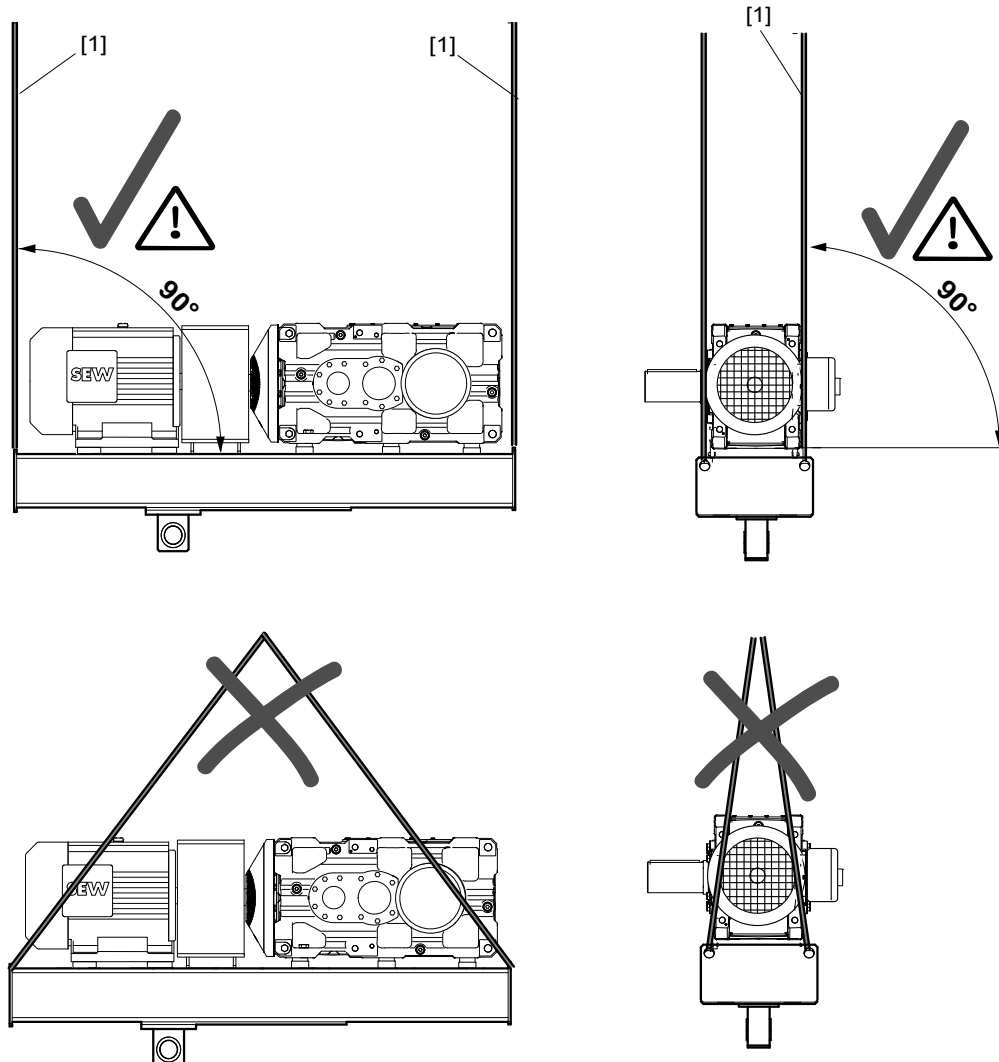

181714571



2.9 Storage and transport conditions

The gear units can be provided with the following protection and packaging types depending on the storage and transport conditions.

2.9.1 Internal conservation

Standard corrosion protection

After the test run, the test oil fill is drained out of the gear unit. The remaining oil film protects the gear unit against corrosion for a limited period of time.

Long-term corrosion protection

After the test run, the test oil fill is drained out of the gear unit and the interior space is filled with a vapor phase inhibitor. The breather filter is replaced by a screw plug and enclosed with the gear unit.

2.9.2 Exterior corrosion protection

The following measures are taken for exterior corrosion protection:

- Anti-corrosion agent is applied to bare, non-painted functional surfaces of shafts, flanges, mounting and foot surfaces of the housing. Remove it only using an appropriate solvent which is not harmful to the oil seal.
- Small spare parts and loose pieces, such as bolts, nuts, etc., are packed in corrosion protection plastic bags (VCI corrosion protection bags).
- Threaded holes and blind holes are covered by plastic plugs.
- If the gear unit is stored longer than 6 months, regularly check the protective coating of unpainted areas as well as the paint coating. Areas in which the protective coating and/or painting has been damaged may have to be repainted.

2.9.3 Packaging

Standard packaging

The gear unit is delivered on a pallet without cover.

Application: Land transport

Long-term packaging

The gear unit is delivered in a wooden box that is also appropriate for sea transport.

Application: Sea transport and/or for long-term storage



2.9.4 Storage conditions



NOTICE

Improper storage may result in damages to the gear unit.

Possible damage to property.

- During storage up to startup, the gear unit must be stored in a shock-free manner to prevent damage to the rolling bearing races!
- The output shaft must be rotated at least one full rotation every 6 months so that the position of the rolling elements in the bearings of the input and output shafts changes.



INFORMATION

The gear units are delivered without oil as standard; different protection systems are required depending on the storage period and storage conditions as shown in the table below.

Corrosion protection + packaging	Storage location	Storage duration
Standard corrosion protection + standard packaging	Under roof and enclosed at constant temperature and atmospheric humidity (5 °C < ϑ < 60 °C, < 50 % relative humidity). No sudden temperature fluctuations. Controlled ventilation with filter (free from dust and dirt). No aggressive vapors, no shocks.	Max. 6 months with intact surface protection.
Long-term corrosion protection + standard packaging	Under roof and enclosed at constant temperature and atmospheric humidity (5 °C < ϑ < 60 °C, < 50 % relative humidity). No sudden temperature fluctuations. Controlled ventilation of the storage location with filter (free from dust and dirt). No aggressive vapors, no shocks.	Max. 3 years with regular inspection and checking for intactness.
Long-term corrosion protection + Long-term packaging	With roof, protected against rain and shocks.	Max. 3 years with regular inspection and checking for intactness.



INFORMATION

If stored in tropical zones, provide for sufficient protection against insect damage. Contact SEW-EURODRIVE for differing requirements.



3 Structure of the bucket elevator drive

3.1 Bucket elevator drive


The bucket elevator drive is a three-stage bevel-helical gear unit of the X series [1] with backstop [2] and auxiliary drive [5].

The auxiliary drive is connected via an auxiliary drive adapter [4] and an overrunning clutch [3].



INFORMATION

Three-stage bevel-helical gear units [1] are delivered **without** lubricant fill. The auxiliary drive [2] is already filled **with** lubricant.

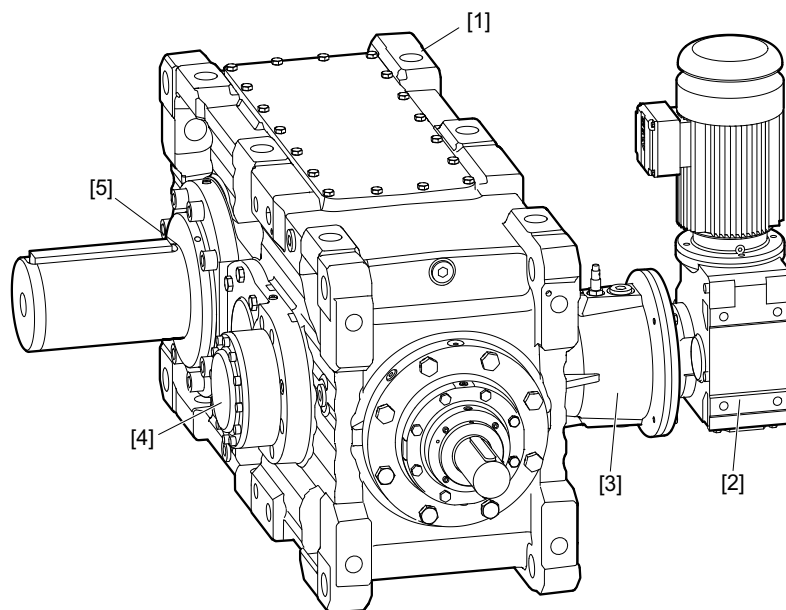

9007199739595787

- [1] Three-stage bevel-helical gear unit X.K..
- [2] Auxiliary drive
- [3] Auxiliary drive adapter with overrunning clutch and encoder for speed monitoring
- [4] Backstop



3.2 Auxiliary drive



NOTICE

The auxiliary drive must be protected from overload.

Possible damage to property.

- The bucket elevator may only be operated via the auxiliary drive without load, i.e. with empty buckets.

The auxiliary drive [2] is available in "empty buckets" design (solely for maintenance purposes) or "full buckets" design. The auxiliary drive is mounted to the bevel-helical gear unit [1] via an auxiliary drive adapter [3]. Refer to the order documents for the exact output torque ratings in auxiliary drive operation.

Electrically interlock the main drive and auxiliary drive in such a way that only one of the two motors can be switched on at a time.

The auxiliary drive has its own oil circulation which is separated from the oil circulation of the bevel-helical gear unit. The auxiliary drive is delivered filled with oil.

3.2.1 IEC motor standard IE1 and IE2

The explosion-proof EDR motors meet the efficiency level requirements of the IEC motor standard. In ATEX areas, the energy-efficient EDRE motors according to IE2 motor standard can be installed.

IE2 motor standard: High efficiency

- High levels of efficiency
- **EDRE** type AC motors (explosion-proof, energy-efficient motors)
- Copper or aluminum die-cast rotor cage
- Operating mode: S1

INFORMATION

- The typical use of the auxiliary drive is not continuous duty S1. However, since the ATEX explosion protection requirements must be met, the EDRE motors are designed for S1 duty.
- Due to the stricter requirements for explosion protection, the motor for the auxiliary drive in ATEX design must be selected specifically for each motor. This is why the selection tables in the catalog for bucket elevator drives are not suitable for selecting the auxiliary drive motor.
- For more information, please contact SEW-EURODRIVE.



3.3 Overrunning clutch


The overrunning clutch [1] is a part of the auxiliary drive adapter [1] and allows for operation in one direction of rotation via the auxiliary drive [3].

The gear unit can be operated in two ways:

- Operation via main drive: The overrunning clutch [1] disengages the auxiliary drive [3], preventing the auxiliary drive [3] from rotating. The overrunning clutch is free-wheeling.
- Operation via auxiliary drive: The overrunning clutch [2] locks and drives the pinion shaft of the gear unit. In this case, the input shaft of the bevel-helical gear unit [1] is rotating slowly (driving operation).

The rotary motion of the input shaft of the bevel-helical gear unit [4] must not be obstructed. A brake [6] on the input side of the main drive [5] must be released for operation via the auxiliary drive [3].

The overrunning clutch [1] is integrated in the oil circuit of the bevel-helical gear unit [4]. This means maintenance and oil change for the overrunning clutch and the bevel-helical gear unit are carried out at the same time.

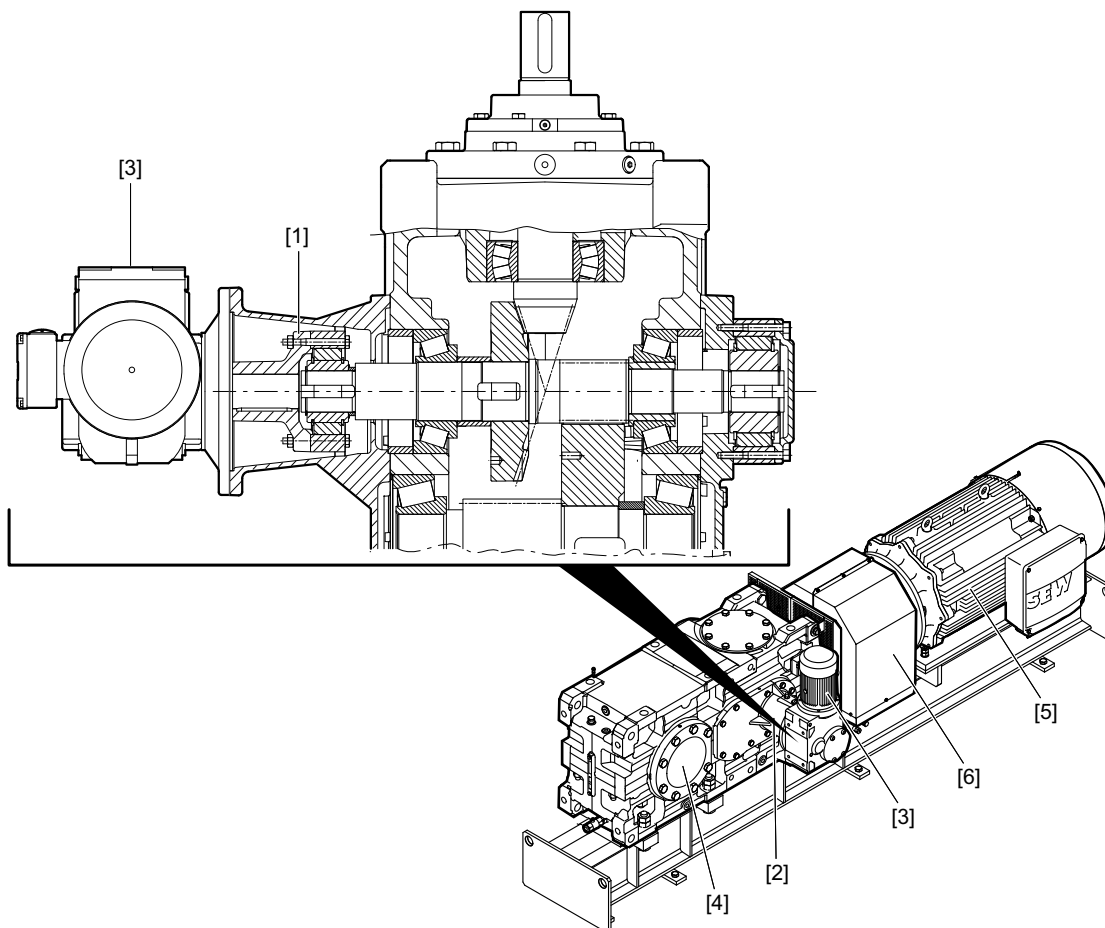

9370348427



3.4 Speed monitoring



NOTICE

In case of a malfunction of the overrunning clutch, the auxiliary drive can be destroyed due to overspeed.

Possible damage to property.


- The overrunning clutch must be equipped with a speed monitoring function for safety reasons. Observe the manufacturer's operating instructions.



INFORMATION

Please contact SEW-EURODRIVE if other components than those listed here are used for speed monitoring.

The incremental encoder is included in the standard scope of delivery. The speed monitor and the isolation amplifier, which are not included, can be ordered separately from SEW-EURODRIVE.

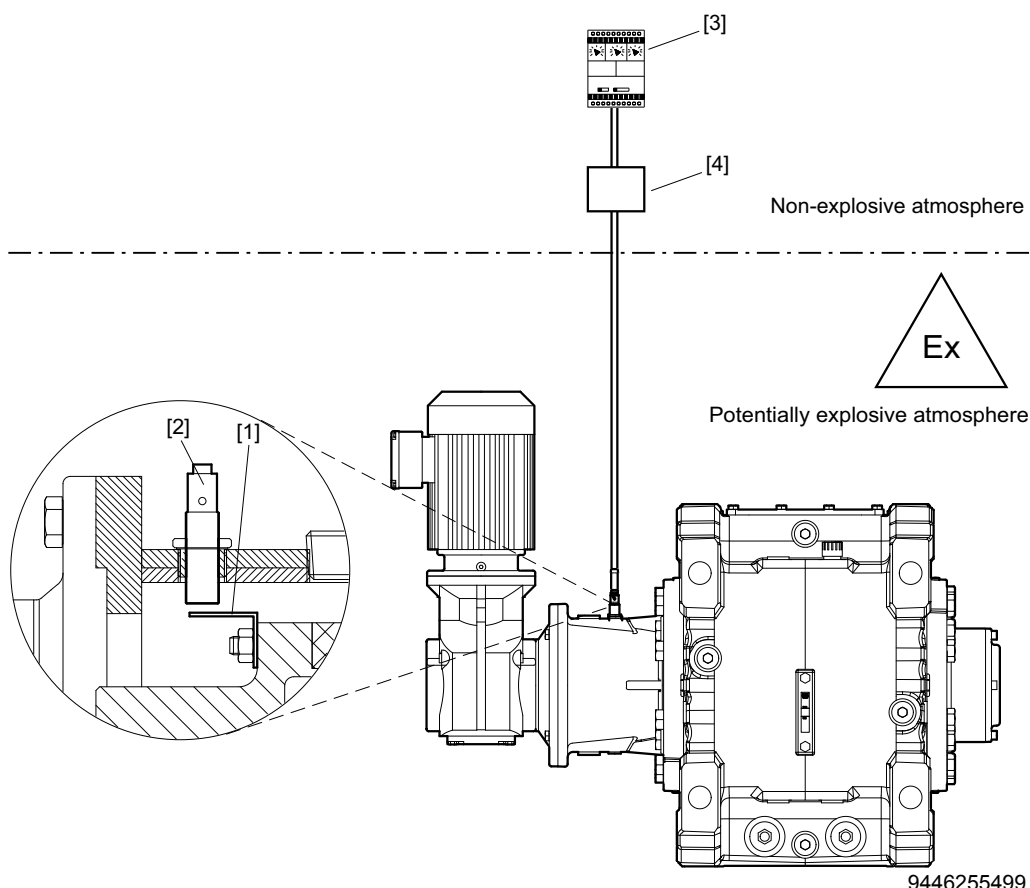

9446255499

- [1] Trip cam
- [2] Inductive incremental encoder
- [3] Speed monitor (optional)
- [4] Isolation amplifier (optional)

The speed of the overrunning clutch is detected in a contactless manner via trip cam [1] and an inductive incremental encoder [2]. The speed monitor [3] compares the pulses with a preset switching speed, see chapter "Startup" (page 193).



Structure of the bucket elevator drive

Speed monitoring

If the switching speed is exceeded (e.g. due to a malfunction of the overrunning clutch), the output relay switches (optionally NC contact or NO contact). The connection must be made in such a way that the main drive is switched off in this situation. Overspeed at the auxiliary drive will be prevented in this way.



INFORMATION on explosion protection

The inductive encoder must be connected with an isolation amplifier and a speed monitor. These components must be located outside the potentially explosive atmosphere.

The isolated switch amplifier must enable intrinsically safe switching operations.

SEW-EURODRIVE recommends:

- N0531A isolation amplifier
 - Evaluation unit DD0096 (AC 230 V / DC 24 V) or DD0116 (AC 110 V).
-



3.5 Torque-limited backstop



INFORMATION on explosion protection

Regular operation of the backstop below the lift-off speed is not permitted, except during the temporary starting and braking process and in auxiliary drive mode. The permitted minimum speed rating is listed on the nameplate.




NOTICE

Operating the motor in the blocking direction could destroy the backstop.

Possible damage to property

- Do not start up the motor in the blocking direction. Ensure a correct voltage supply to the motor, so that it rotates in the required direction. Operating the motor in the blocking direction could destroy the backstop.
- For changes of the blocking direction, refer to chapter "Changing the direction of rotation" (page 139).

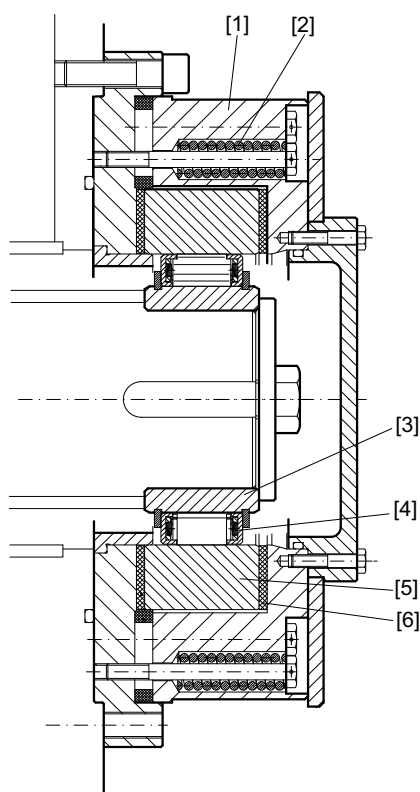

539377931

- | | |
|-------------------------|---------------------|
| [1] Housing | [4] Freewheel cage |
| [2] Compression springs | [5] Outer ring |
| [3] Inner ring | [6] Friction lining |

Torque-controlled backstops are used in dual drives where both drives are equipped with a backstop.

The torque limitation prevents the restoring torque from being unevenly distributed to the individual backstops. Dynamic torque peaks are also reduced during the blocking phase.

As with a backstop without torque control, the locking torque is transmitted to the outer ring via sprags.



Structure of the bucket elevator drive

Gear ratio of the backstop


However, for a torque-controlled backstop, the outer ring [5] is not securely bolted on the gear unit housing. It is held between two friction linings [6]. The friction linings are loaded via a housing [1] with screws and compression springs [2].



INFORMATION

The slip torque is factory-set. Changing the slip torque is not permitted.

3.6 Gear ratio of the backstop

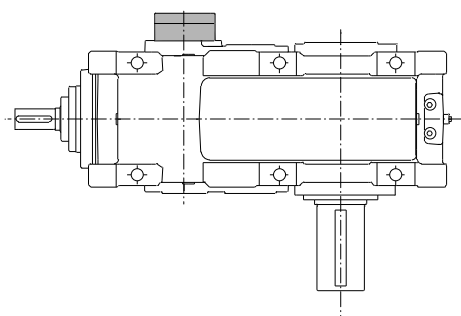

6144189579

X3K..	i_{tot}	X3K..	i_{tot}
X3K.100	14 - 80	X3K.210	14 - 80
X3K.110	16 - 90	X3K.220	12.5 - 71
X3K.120	12.5 - 71	X3K.230	14 - 80
X3K.130	16 - 90	X3K.240	12.5 - 71
X3K.140	12.5 - 71	X3K.250	14 - 80
X3K.150	16 - 90	X3K.260	12.5 - 71
X3K.160	12.5 - 71	X3K.270	14 - 80
X3K.170	16 - 90	X3K.280	16 - 90
X3K.180	12.5 - 71	X3K.290	12.5 - 71
X3K.190	14 - 80	X3K.300	14 - 80
X3K.200	12.5 - 71	X3K.310	12.5 - 71
X3K.210	14 - 80	X3K.320	14 - 80



3.7 Position of motor terminal box and cable entry

The position of the motor terminal box has so far been indicated with 0°, 90°, 180° or 270° as viewed onto the fan guard (see figure below). A change in the product standard EN 60034 specifies that the following designations will have to be used for terminal box positions for foot-mounted motors in the future:

- As viewed onto the output shaft = A-end
- Designation as R (right), B (bottom), L (left) and T (top)


This new designation applies to foot-mounted motors without a gear unit in mounting position B3 (= M1). The previous designation is maintained for gearmotors. The following figure shows both designations. If the mounting position of the motor changes, R, B, L and T are rotated accordingly.

The position of the cable entry can be selected as well. Available positions are "X" (= standard position), "1", "2" or "3" (see the following figure)

INFORMATION



Unless other information is given regarding the terminal box, the 0° type (R) with "X" cable entry will be supplied.

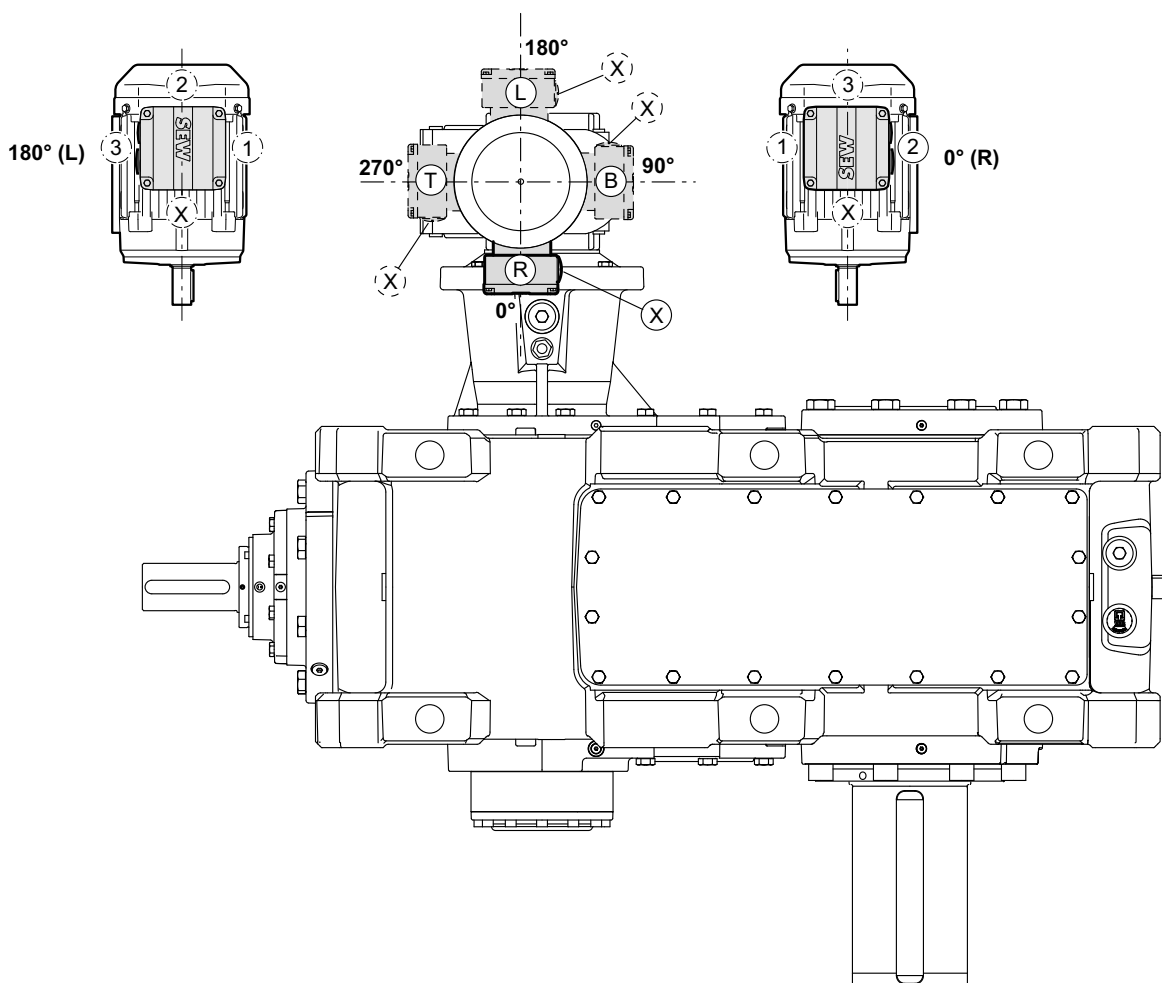

6065949067



Structure of the bucket elevator drive Nameplate

3.8 Nameplate

The following example shows the structure of the nameplate. The oil quantity specified on the nameplate refers only to the basic unit.

SEW-EURODRIVE		Bruchsal/Germany	
Type	X3FS190/B		
Nr.	01.1234567812.0001.06		
	min.	nom.	max.
PK1 [kW]	36	180	180
MK2 [Nm]	43300	43300	43300
n1 [1/min]	296	1480	1480
n2 [1/min]	7,6	37,9	37,9
IM	M2-M1/32V		
	II2GD c.k T4/T120 °C IP65		
Made in Germany			
Qty of greasing points	2	Fans	0
Mass [kg]	1340	Year	2012
CLP HC460 - Synthetic Oil - 90 ltr.			

27021598394773131

Type		Type designation
No.		Serial number
P _{K1}	[kW]	Operating power on the input shaft (HSS)
M _{K2}	[Nm]	Gear unit output torque
n ₁	[rpm]	Input speed (HSS)
n ₂	[rpm]	Output speed (LSS)
min.		Minimum operating point
norm.		Normal operating point
max.		Maximum operating point
i		Exact gear unit ratio
F _S		Service factor
P _M	[kW]	Nominal motor power
T _a	[°C]	Deviation from standard temperature range (−20 °C to +40 °C)
IM		Mounting position and mounting surface
Empty field		Text for special markings
Qty of greasing points		Number of greasing points
Fans		Number of installed fans
Mass	[kg]	Weight of the gear unit
Year		Year of manufacture
		Oil grade and viscosity class / oil quantity



INFORMATION on explosion protection


In some cases, SEW gear units may only be operated in compliance with special measures. These cases are indicated by an "X" on the nameplate (see text field, e.g. II2GD c.k T4/T120 °C X IP65). These special measures may be necessary for various reasons (e.g. intermittent operation only, etc.). Special measures are documented in an addendum to the operating instructions. The addendum to the operating instructions must be adhered to.



3.9 Type designations

3.9.1 Gear unit


The following example shows the structure of the type designation:

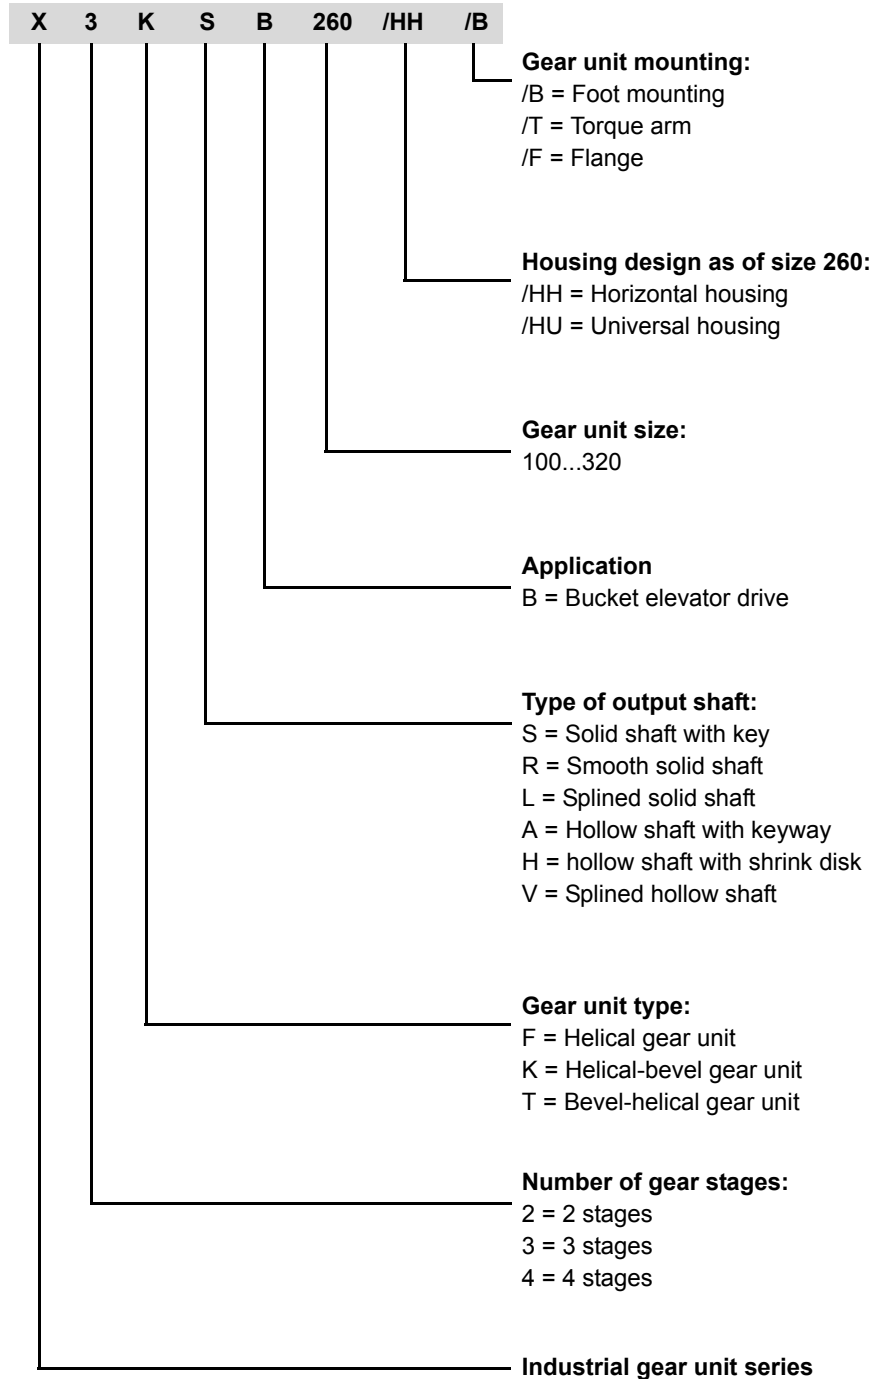



3.9.2 Oil supply systems


The gear unit can be equipped with an oil supply system for cooling and lubrication purposes. The following example shows the structure of the type designation:

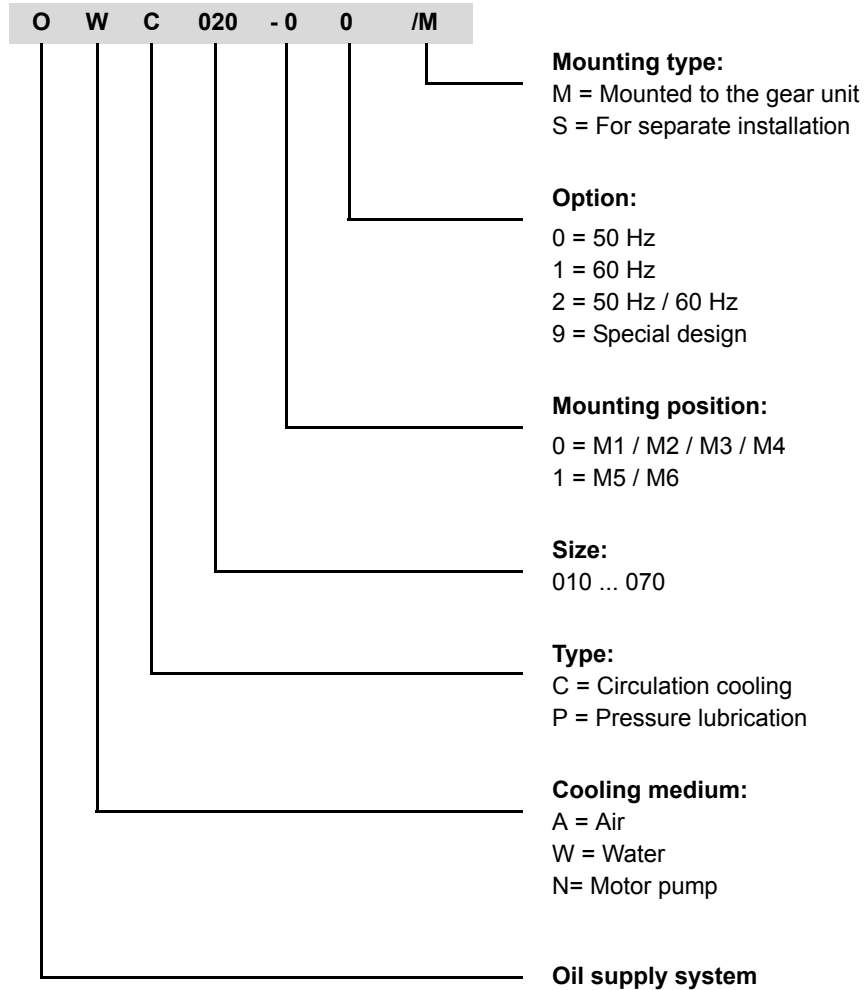



3.9.3 Flange couplings

The following example shows the structure of the type designation:

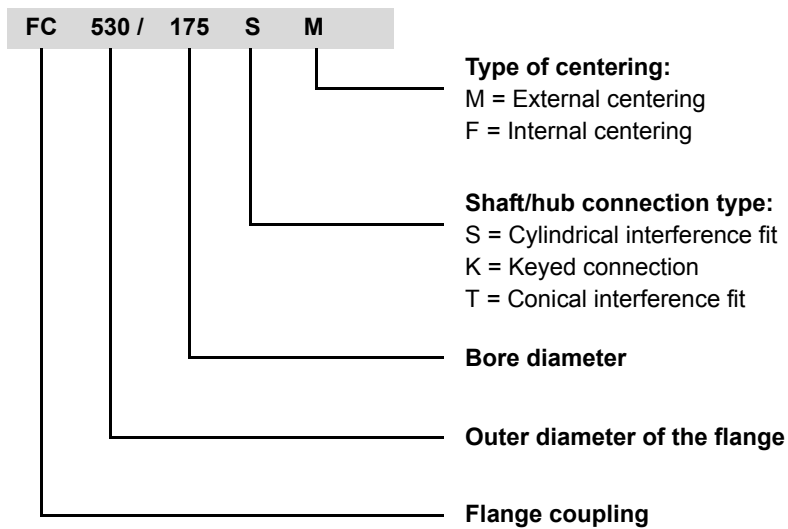



3.9.4 Abbreviations for optional accessories

The table shows the abbreviations used and what they mean.

Abbreviation	Meaning
/BF	Base frame
/BS	Backstop
/BSL	Torque-limited backstop
/CCV	Water cooling cover
/CCT	Water cooling cartridge
/F	Mounting flange
/FC	Flange coupling
/FAN	Fan
/FAN-ADV	Fan, Advanced variant
/ET	Oil expansion tank
/HH	Horizontal housing
/HU	Universal housing
/HSST	Through-going input shaft
/LSST	Through-going output shaft
/MA	Motor adapter
/SB	Swing base
/SEP	Shaft end pump
/T	Torque bracket
/OAC	Circulation cooling oil-air cooler with motor pump
/OWC	Circulation cooling oil-water cooler with motor pump
/OAP	Circulation cooling oil-air cooler with pressure lubrication and motor pump
/OWP	Circulation cooling oil-water cooler with pressure lubrication and motor pump
/ONP	Pressure lubrication and motor pump
/OD	Oil dipstick
/ODV	Oil drain valve
/OLG	Oil level glass
/OH	Oil heater
/VBD	V-belt drives


All options are part of the type designation except for mounting flange, torque arm, horizontal and universal housing.



3.10 Mounting positions

The mounting position defines the spatial orientation of the gear unit housing and is designated **M1...M6**.

With the alternative mounting positions, there might be limitations regarding certain options. Contact SEW-EURODRIVE in this case.

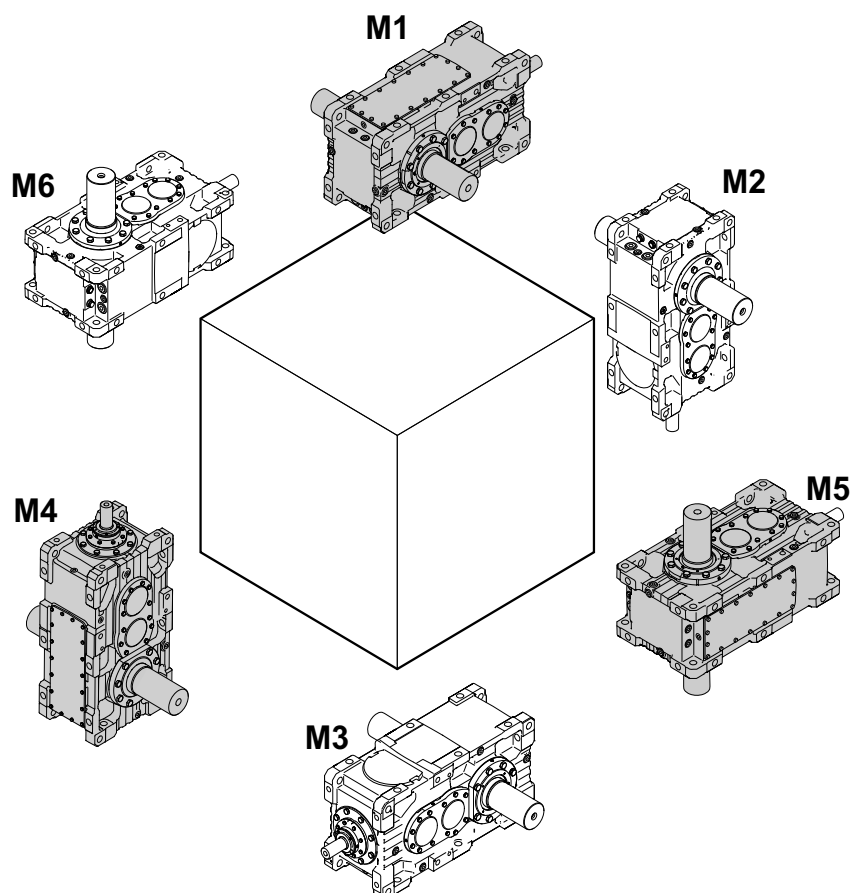

6068016395



Structure of the bucket elevator drive

Mounting positions and standard mounting surfaces

3.11 Mounting positions and standard mounting surfaces


A certain standard mounting surface is assigned to each mounting position:



INFORMATION

- The mounting position and/or mounting surface must not differ from the order.
- A deviation of $\pm 1^\circ$ is permitted.
- Other mounting surfaces are possible in combination with a certain mounting position. Refer to the order-specific dimension drawing.

The following figure provides an overview of mounting positions and standard mounting surfaces.

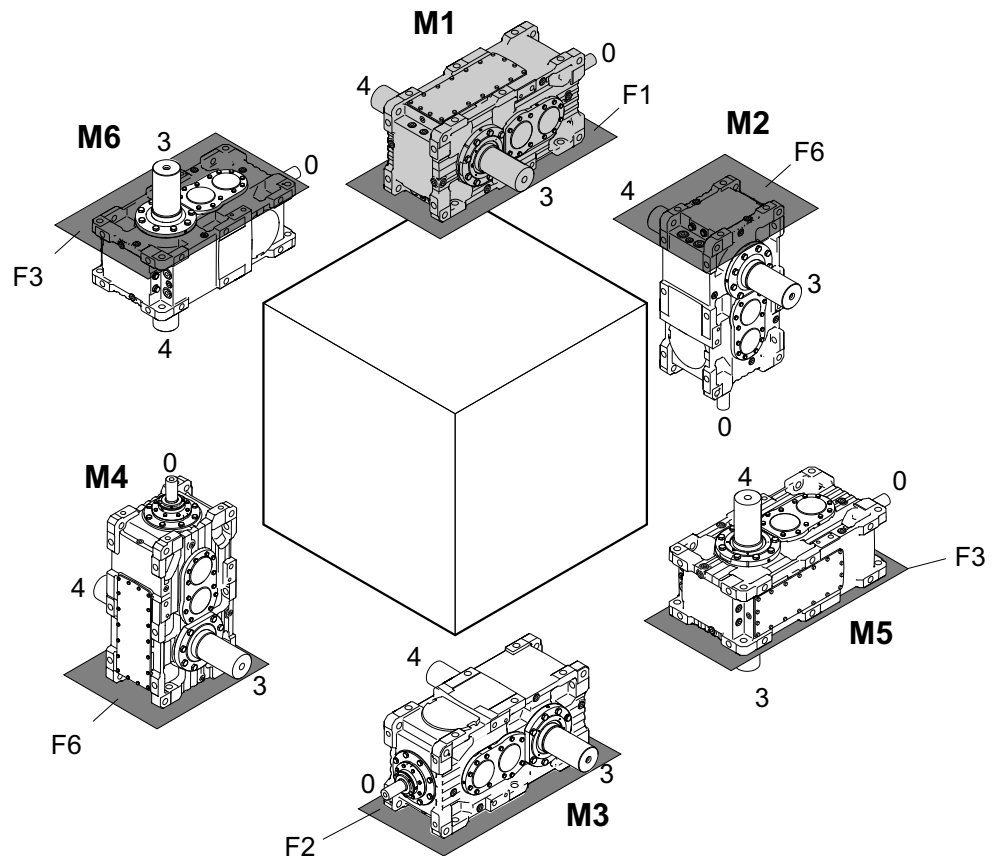

6068024587



INFORMATION

If you install the gear unit in mounting position M2, make sure that the customer's mounting structure leaves enough room for the breather valve and the oil dipstick.



3.12 Fixed and variable pivoted mounting positions


→ The following definition for fixed and variable pivoted mounting positions applies as of 2013.

Mounting positions deviating from the standard are differentiated between **fixed** and **variable** pivoted mounting positions.



INFORMATION

- Fixed and variable pivoted mounting positions are only possible after consultation with SEW-EURODRIVE. Observe the order documents, such as the dimension sheet.
- Fixed and variable pivoted mounting positions might involve restrictions concerning accessories and technical data. Also, delivery times might be longer. Consult SEW-EURODRIVE.

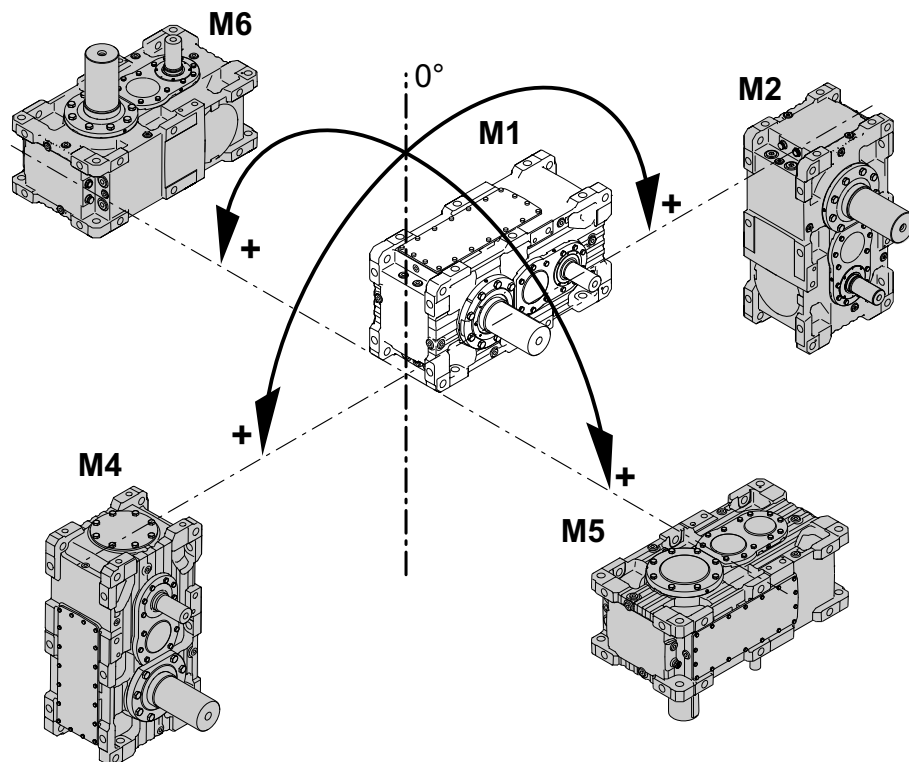

8021651467



Structure of the bucket elevator drive

Fixed and variable pivoted mounting positions

3.12.1 Fixed pivoted mounting position

Definition: Gear units with fixed pivoted mounting position have a fixed mounting position that differs from the standard.

This means the gear unit does not change its mounting position during operation.

Example: The type designation is set up as follows:

M1-M4/9°


M1 = initial mounting position

M4 = pivoting direction

9° = fixed pivoting angle

Pivoted from mounting position M1 to M4 by 9°.

This results in the following fixed pivoted mounting position:

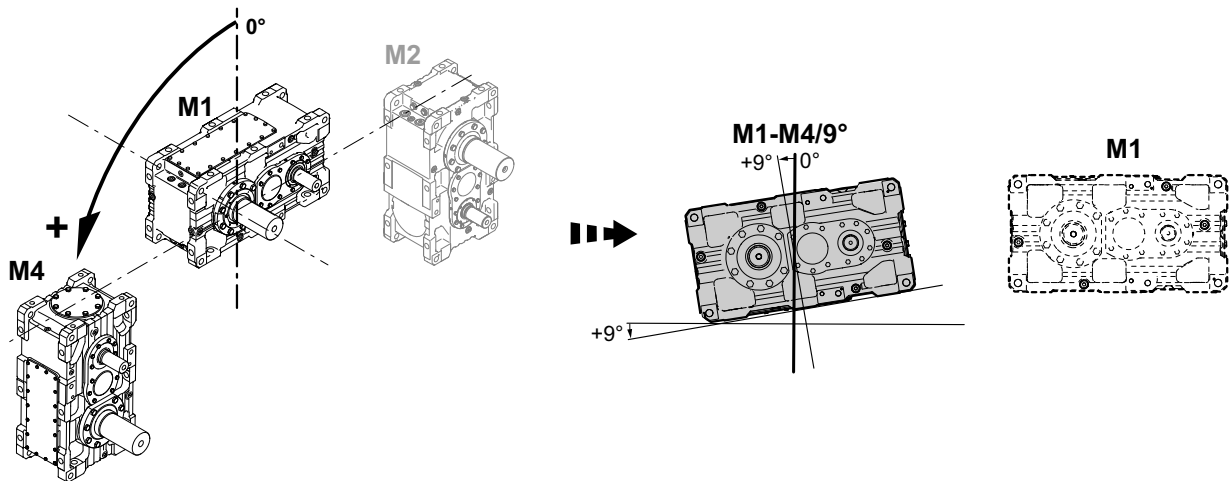

8021656843

The oil level is checked in the selected fixed pivoted mounting position.

The fixed pivoted mounting position is shown on the nameplate as follows:

SEW-EURODRIVE		Bruchsal/Germany	
Type	X3FS190/B		
Nr.	01.1234567812.0001.06		
	min.	norm.	max.
PK1 [kW]	36	180	180
MK2 [Nm]	43300	43300	43300
n1 [1/min]	296	1480	1480
n2 [1/min]	7,6	37,9	37,9
IM	M1-M4/9°/F1		
Made in Germany			
Qty of greasing points	2	Fans	0
Mass [kg]	1340	Year	2012
CLP HC460 - Synthetic Oil - 90 ltr.			


9447817867



3.12.2 Variable pivoted mounting position

Definition: Gear units with variable mounting position can change the mounting position **variably** during operation within the specified max./min. range.

Example: The gear unit is operated in variable pivoted mounting position M1 to M6 = 9° and M1 to M5 = 12°.

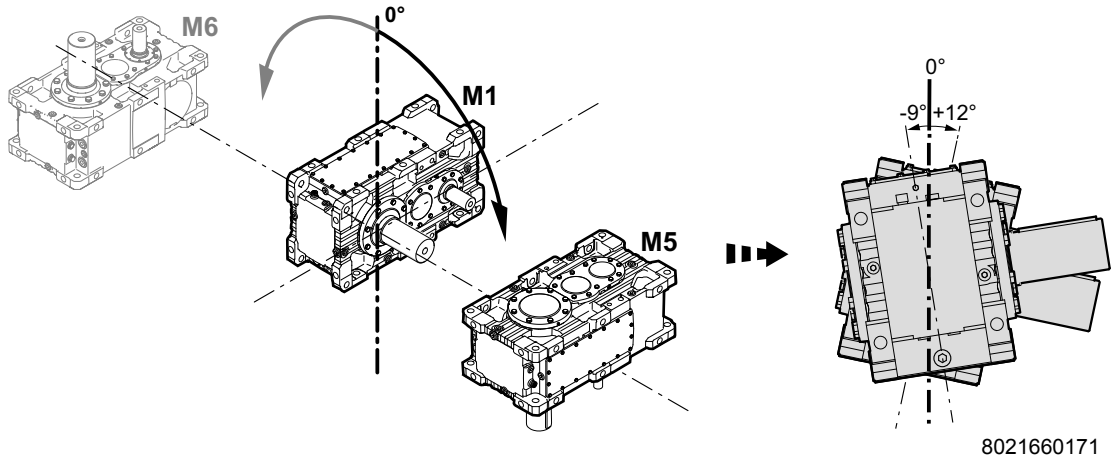


Step 1:

The largest pivoting angle determines the positive pivoting direction ($12^\circ > 9^\circ$). In this example, this is 12° towards M5.

$12^\circ \rightarrow$ pivoted from M1 to M5 by $+12^\circ$

$9^\circ \rightarrow$ pivoted from M1 to M5 by -9°

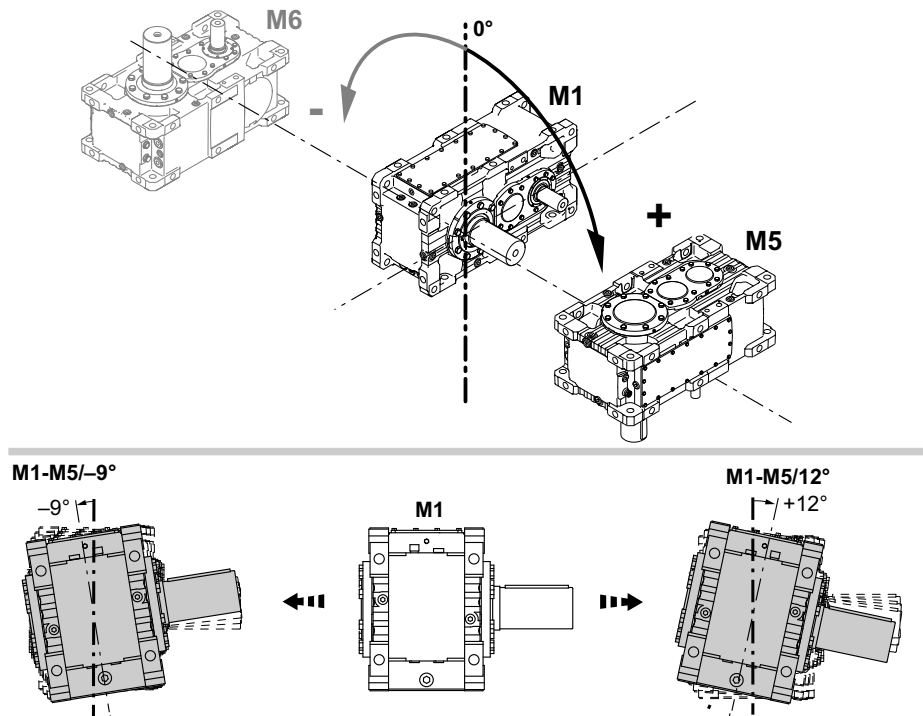



Structure of the bucket elevator drive

Fixed and variable pivoted mounting positions

The type designation for this example is:

M1-M5/-9°...12°


M1 = initial mounting position

M5 = pivoting direction

12° = pivoted from M1 to M5 by 12°

-9° = pivoted from M1 to M5 by -9° (= pivoted from M1 to M6 by 9°)

The variable pivoted mounting position is shown on the nameplate as follows:




SEW-EURODRIVE		Bruchsal/Germany	
Type	X3FS190/B		
Nr.	01.1234567812.0001.06		
	min.	norm.	max.
PK1 [kW]	36	180	180
MK2 [Nm]	43300	43300	43300
n1 [1/min]	296	1480	1480
n2 [1/min]	7,6	37,9	37,9
IM	M1-M5/-9...12°/F1		
Made in Germany			
Qty of greasing points	2	Fans	0
Mass [kg]	1340	Year	2012
CLP HC460 - Synthetic Oil - 90 ltr.			

9447823755

Step 2:

For variable pivoted mounting positions, the customer must determine the pivoting angle in which the oil level is checked.

An additional nameplate is used to clearly indicate the oil check angle. This nameplate lists the mounting position for the oil level check.

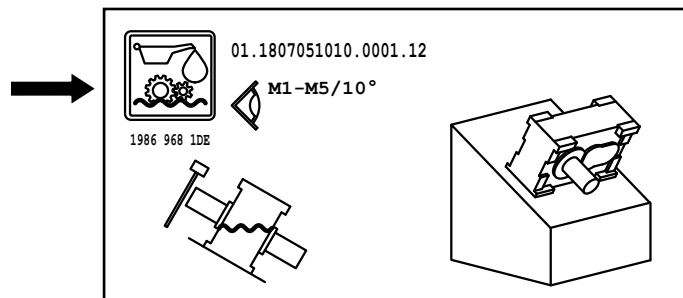

8021670539



3.12.3 Combination of variable and fixed pivoted mounting positions

Fixed and variable pivoted mounting positions can be combined.

Example:

The following example shows a combination of fixed and variable pivoted mounting position.

The type designation is set up as follows:

M1-M4/9° (fixed pivoted mounting position)

M1 = initial mounting position

M4 = pivoting direction

9° = fixed pivoting angle

M1-M5/-9°...12° (variable pivoted mounting position)

M1 = initial mounting position

M5 = pivoting direction

12° = 12° from M1 to M5

-9° = -9° from M1 to M5 (= 9° from M1 to M6)

The variable and fixed pivoted mounting position is shown on the nameplate as follows:

SEW-EURODRIVE		Bruchsal/Germany	
Type	X3FS190/B		
Nr.	01.1234567812.0001.06		
	min.	nom.	max.
PK1 [kW]	36	180	180
MK2 [Nm]	43300	43300	43300
n1 [1/min]	296	1480	1480
n2 [1/min]	7,6	37,9	37,9
i	39,06		
Fs	1,5		
PM [kW]	0		
Ta [°C]	1743 895 0.11		
IM	M1-M4/9° M1-M5/-9...12°/F1		
Made in Germany			
Qty of greasing points	2	Fans	0
Mass [kg]	1340		
Year	2012		
CLP HC460 - Synthetic Oil - 90 ltr.			

9447918987

When combining fixed and variable pivoted mounting position, the customer must determine the variable pivoting angle in which the oil level is checked. The fixed angle for the oil level check is already defined.


The gear unit has an additional nameplate to ensure correct oil level checks. This nameplate lists the mounting position for the oil level check.



Structure of the bucket elevator drive

Fixed and variable pivoted mounting positions

In this example, the operator checks the oil level at M1-M4/9° M1-M5/10°.

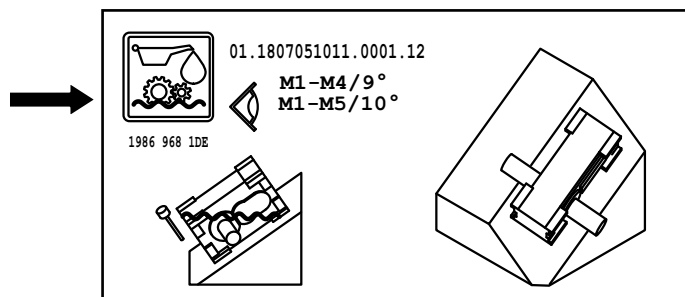


8021678603



3.13 Input and output shaft

There are two types of shafts:


- High-speed shaft (**HSS**)
- Low-speed shaft (**LSS**)

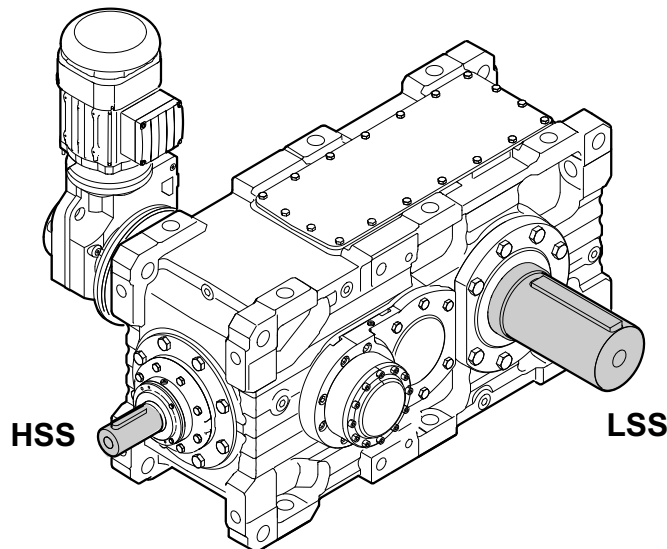

6065865995

3.13.1 Input shaft

The input shaft is provided with a closed keyway according to DIN 6885/T1 and a center bore (according to DIN 332). The matching key according to DIN 6885/T1 - form A is included in the scope of delivery.

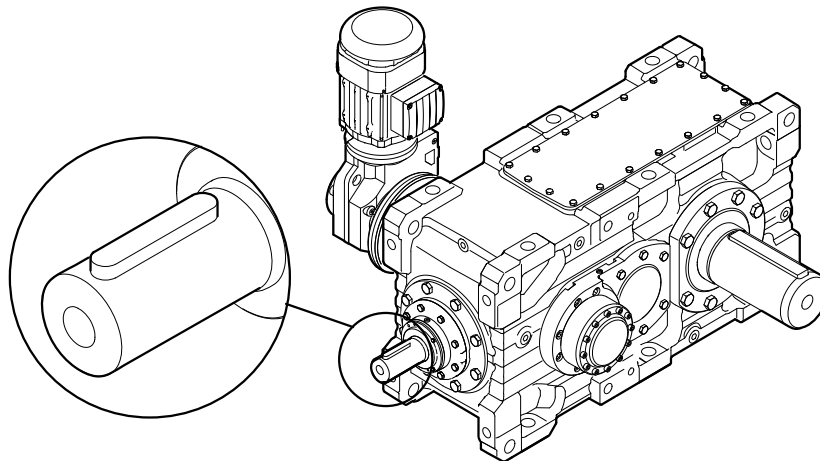


6065882891



3.13.2 Output shaft as a solid shaft with key /..S


The output shaft is provided with a closed keyway according to DIN 6885/T1 and a center bore (according to DIN 332). The scope of delivery includes a key according to DIN 6885/T1 - form B. The shaft has an insertion area with a reduced diameter to simplify the mounting of output elements, such as a coupling hub.

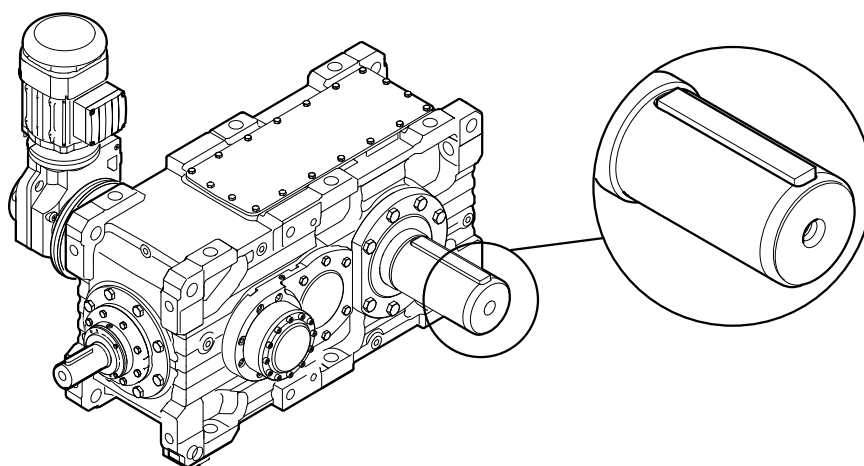

6065885579

3.13.3 Smooth output shaft /..R

The gear units are available with a smooth output shaft to install non-positive output elements, such as flange couplings with a cylindrical interference fit. The shaft's face has a center bore according to DIN 332. The insertion area with reduced diameter facilitates the mounting of output elements.

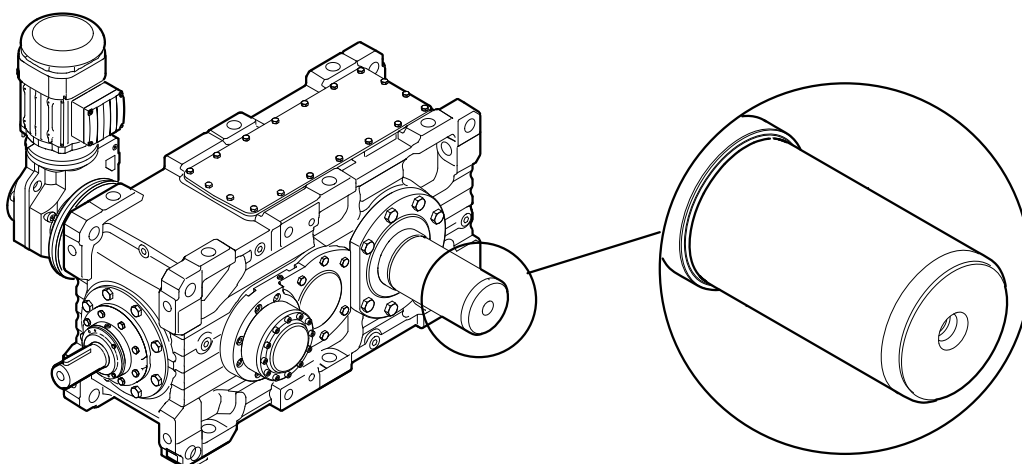


6065888267



3.14 Shaft positions, directions of rotation, backstops, auxiliary drives

The following figures show the standard variants of the bucket elevator gear units. The auxiliary drives are mounted in mounting position M4A with motor terminal box position 0°.

The shaft positions (**03** and **04**) and corresponding directions of rotation shown in the following diagrams apply to solid and hollow output shafts (LSS).

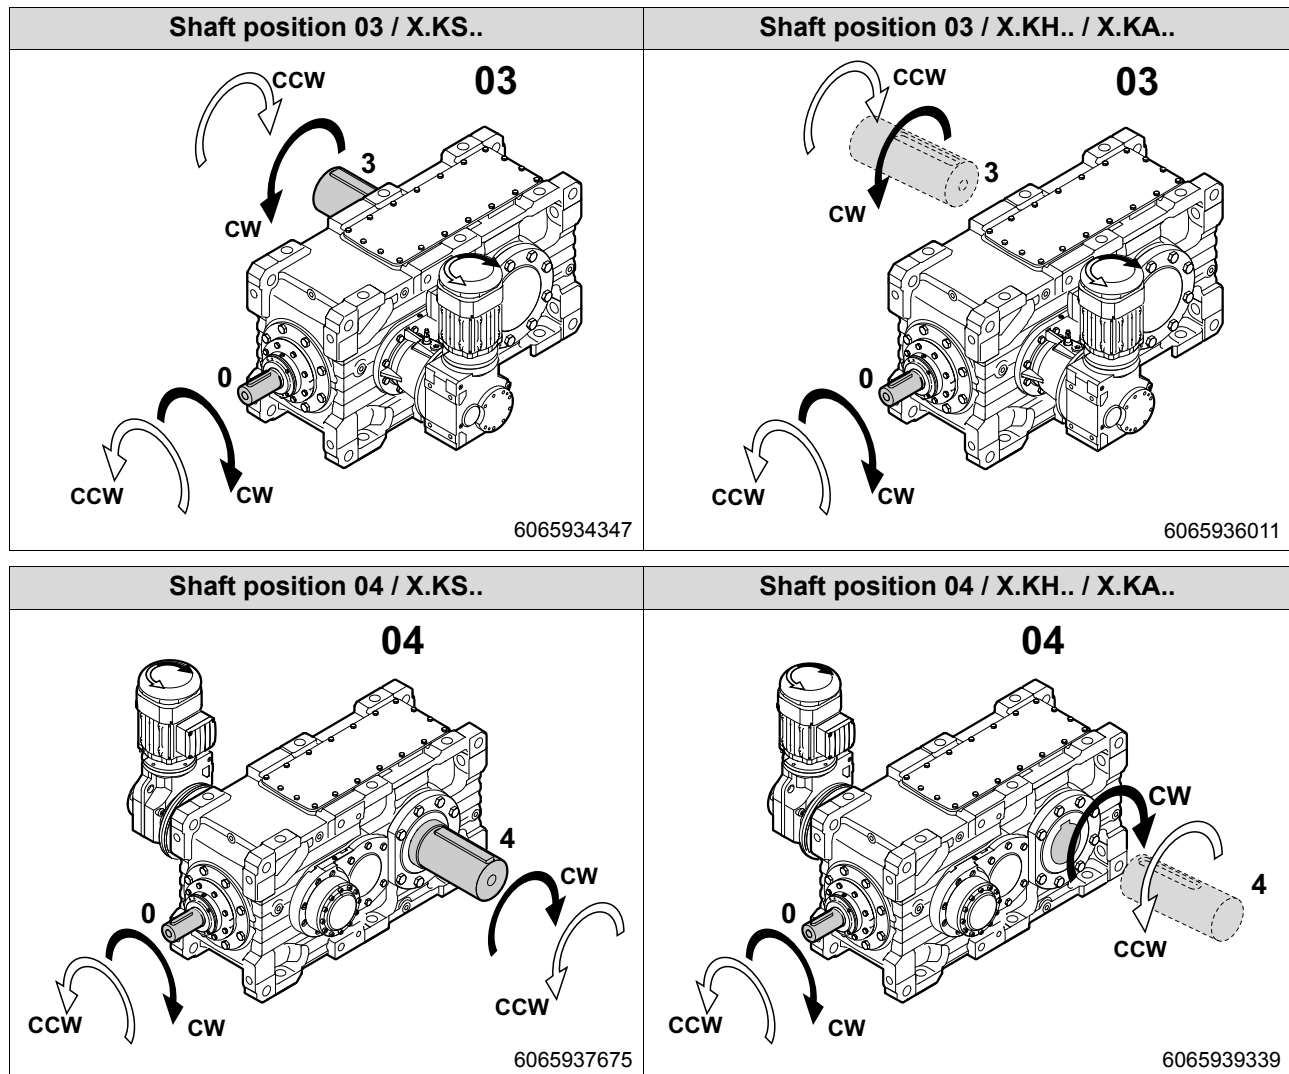



Structure of the bucket elevator drive

Direction of rotation dependencies

3.15 Direction of rotation dependencies

3.15.1 Standard

Shaft position	03	04	034 ¹⁾	043 ¹⁾
End gear pos.	4	3	3	4
X2K...				
X3K...				
X4K...				

3.15.2 Direction of rotation reversal

Shaft position	03 ¹⁾	04 ¹⁾
End gear pos.	3	4
X2K...		
X3K...		
X4K...		

= Position of the backstop

= Alternative backstop position (depending on size and gear ratio)

* = Consult SEW-EURODRIVE when using a backstop

1) Note the restrictions regarding external forces on the LSS



3.16 Coating and surface protection systems

The following table gives an overview of coating and surface protection systems.

SEW design	OS 1 Low environmental impact	OS 2 Medium environmental impact	OS 3 High environmental impact
<p>Used as surface protection under typical ambient conditions</p> <p>Corrosion categories DIN EN ISO 12944-2</p>	<p>Suited for environments prone to condensation and atmospheres with low humidity or contamination, such as outdoor applications under roof or with protection, unheated buildings where condensation can build up. According to corrosivity category C2 (low)</p>	<p>Suited for environments with high humidity or moderate atmospheric contamination, such as applications outdoors subject to direct weathering. According to corrosivity category C3 (moderate)</p>	<p>Suitable for environments with high humidity and occasionally severe atmospheric and chemical contamination. Occasionally acidic or caustic wet cleaning. Also for applications in coastal areas with moderate salt load. According to corrosivity category C4 (high)</p>
Sample applications	<ul style="list-style-type: none"> • Systems in saw mills • Agitators and mixers 	<ul style="list-style-type: none"> • Applications in gravel plants • Cable cars 	<ul style="list-style-type: none"> • Port cranes • Sewage treatment plants • Mining applications
Condensation test ISO 6270	120 h	120 h	240 h
Salt spray test ISO 7253	–	240 h	480 h
Top coat color ¹⁾	RAL 7031	RAL 7031	RAL 7031
Color according to RAL	Yes	Yes	Yes
Uncoated parts: shaft end/flanges	Water and hand perspiration repelling rust preventive applied at the factory for external preservation.		

1) Standard color



INFORMATION

Sheet metal parts (e.g. protection covers, fan guard) are painted in RAL 1003.



3.17 Lubrication

3.17.1 Lubrication types

- Splash lubrication** The oil level is low; gearing and bearing parts that are not immersed in the oil bath are lubricated by splashing oil. Standard lubrication type for horizontal mounting positions (M1 or M3).
- Oil bath lubrication** The gear unit is (almost) completely filled with oil; all gearing and bearing positions are submerged in the oil bath either completely or partly.
- Standard lubrication type with oil expansion tank for:
 - Swiveling mounting positions with horizontal gear units beyond a certain inclination angle (depending on type of gear unit, version and size)
 - Vertical gear units (mounting position M5)
 - Upright mounting position (M4) with X.K.. gear units
 - Standard lubrication type without oil expansion tank for:
 - Upright mounting position (M4) with X.F.. / X.T.. gear units
- Pressure lubrication** The gear unit is equipped with a pump (shaft end pump or motor pump). The oil level is low and might even be reduced when compared to splash lubrication. The gearing and bearing parts that are not immersed in the oil bath are lubricated by oil through lubrication lines.
- Pressure lubrication is used when
- Splash lubrication is not possible (see the relevant mounting positions and variants under "Bath lubrication"),
 - Oil bath lubrication is not desired or is not advantageous for thermal reasons,
 - Drywell sealing system is required (only with a vertical output shaft with LSS facing down),
 - High input speeds are present and the speed limit for the other types of lubrication is exceeded (dependant on the gear unit size, variant, and number of stages).



3.18 Accessories

The following chapter describes the accessories for the several types of lubrication.




INFORMATION

The position of accessories may vary depending on gear unit type and size.

3.18.1 General accessories

The following figure shows the general accessories.

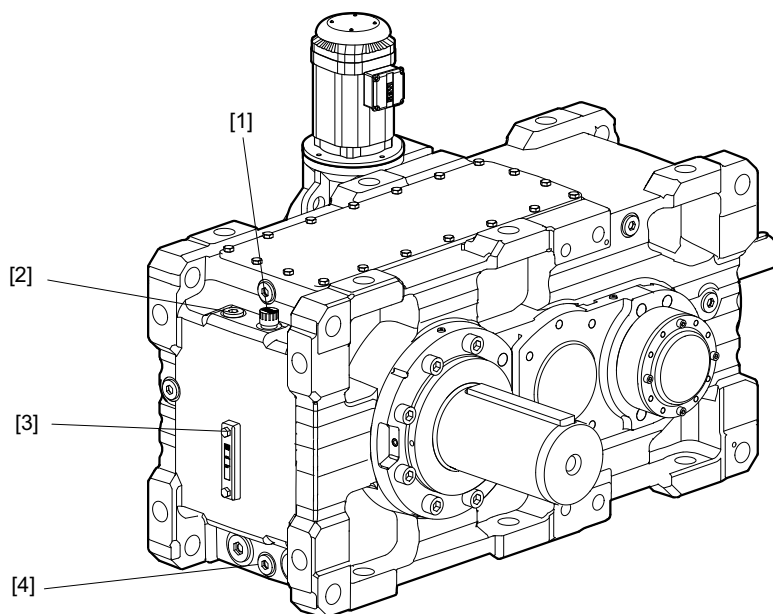

2671413899

- | | |
|-----------------------------|---------------------|
| [1] Oil dipstick (optional) | [3] Oil level glass |
| [2] Gear unit venting | [4] Oil drain |

Visual oil level check

The following types are available as standard for gear units in **M1** mounting position with splash lubrication:

- Oil dipstick for gear unit sizes X.100 to X.170
- Oil level glass for gear unit sizes X.180 to X.320

For other mounting positions and types of lubrication, the gear unit is equipped with an oil dipstick as standard.

Breather

The purpose of gear unit breather is to prevent that non-permitted pressure occurs from heating during operation. The gear units are normally equipped with a high-quality breather filter with a filter mesh of 2 µm.

Oil drain


The gear unit is equipped with an oil drain plug as standard. An oil drain valve may be provided as option. This valve allows for a drain pipe to be easily attached when changing the gear unit oil.



4 Design of options and accessories

4.1 Shaft end pump /SEP

The figure shows the shaft end pump in M5 mounting position as an example.

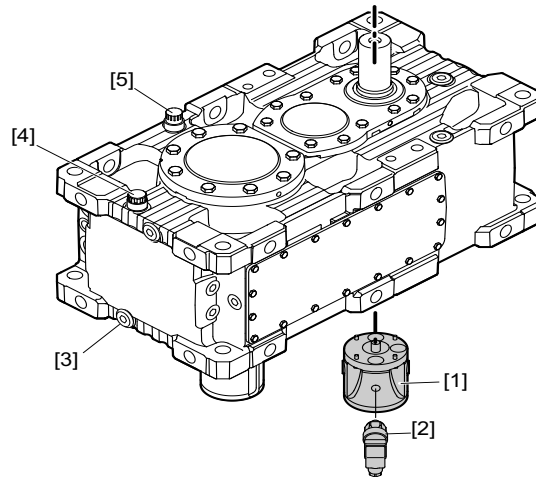

9007199962408331

- | | |
|---------------------|-----------------------|
| [1] Shaft end pump | [4] Gear unit venting |
| [2] Pressure switch | [5] Oil dipstick |
| [3] Oil drain | |

A direction-independent shaft end pump [1] supplies all bearing points and gearing outside the oil sump with oil via a tube system.

The shaft end pump [1] is mounted externally to the gear unit and is driven by the input shaft or intermediate shaft of the gear unit. This ensures a high degree of reliability of the pump functions.

The shaft end pump [1] is available in 5 different pump sizes. The adequate flow rate for the specific application depends on the following factors:

- Oil quantity required to supply the lubrication points
- Pump position (connected to input shaft or intermediate shaft)
- Gear unit reduction ratio
- Dimensioned for a speed of the gear unit



INFORMATION

- Proper functioning of the shaft end pump is monitored via the connected pressure switch. Refer to chapter "Pressure switch" (page 63) for information.
- Consult SEW-EURODRIVE for information on the pump size selection.
- A minimum input speed is required for the shaft end pump to operate properly. If you use variable input speeds (e.g. inverter-controlled drives) or if you intend to change the input speed of a gear unit equipped with a shaft end pump, it is essential that you contact SEW-EURODRIVE.



4.2 Motor pump /ONP



INFORMATION


For descriptions on the unit structure, refer to the manufacturer's documentation and the addendum to the operating instructions "Motor Pump /ONP".

4.3 Torque arm /T

A torque arm is available as option for shaft-mounted gear units to support the reaction torque. The torque arm can bear tensile stress as well as thrust loads.

The length of the torque arm can be adjusted within a certain range.

The torque arm consists of a yoke with bolt [1], a threaded bolt [2], a maintenance-free joint head [3], and a yoke plate with bolt [4]. The design using the joint head allows for compensating assembly tolerances and operational displacements. Constraining forces on the output shaft are avoided in this way.

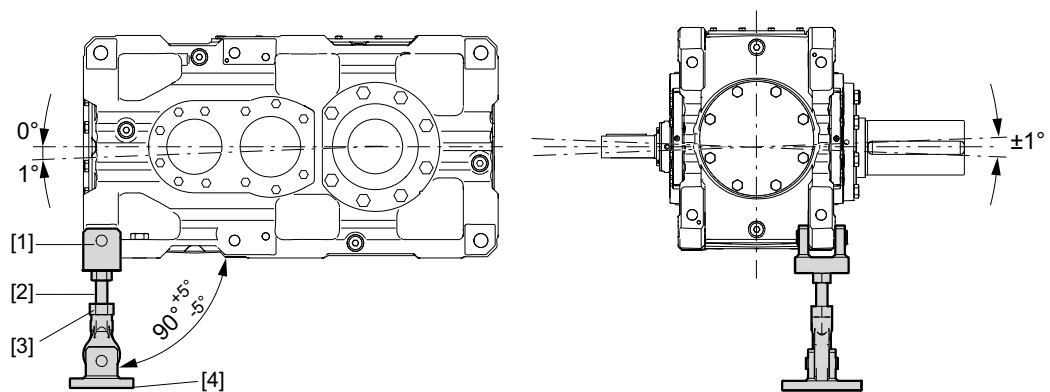

359126795

- [1] Yoke with bolt
- [2] Threaded bolt with nut
- [3] Joint head
- [4] Yoke plate with bolt



INFORMATION

The fan X.K.. cannot be used together with a torque arm because the fan guard is mounted to the attachment point of the torque arm.




4.4 Flange couplings with cylindrical interference fit /FC

Flange couplings [1] are rigid couplings for connecting 2 shafts [2].

They are suitable for operation in both directions of rotation, but cannot compensate any shaft misalignments.

Torque between the shaft and the coupling is transmitted via a cylindrical interference fit. Both coupling halves are mounted together at their flanges. The couplings are equipped with several disassembly bores [3] for removing the interference fit hydraulically.

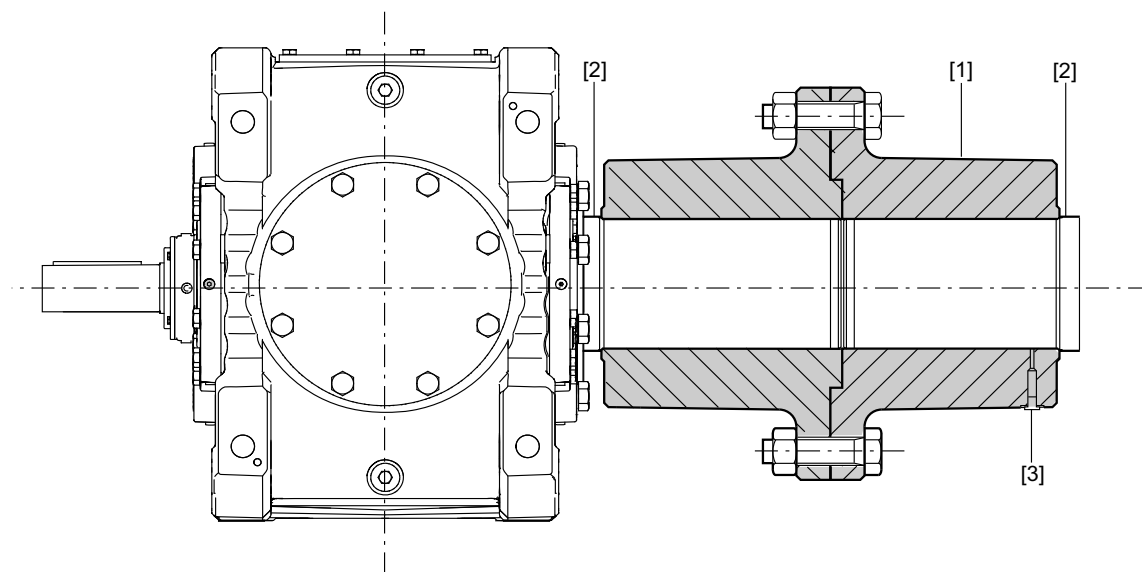


9007200206609291



4.5 Backstop

The purpose of a backstop is to prevent undesirable reverse rotation. During operation, the backstop permits rotation in only one specified direction of rotation.

The backstop functions by using centrifugal lift-off sprags. Once the lift-off speed is reached, the sprags completely lift off from the contact surface of the outer ring. The backstop is lubricated with gear oil.

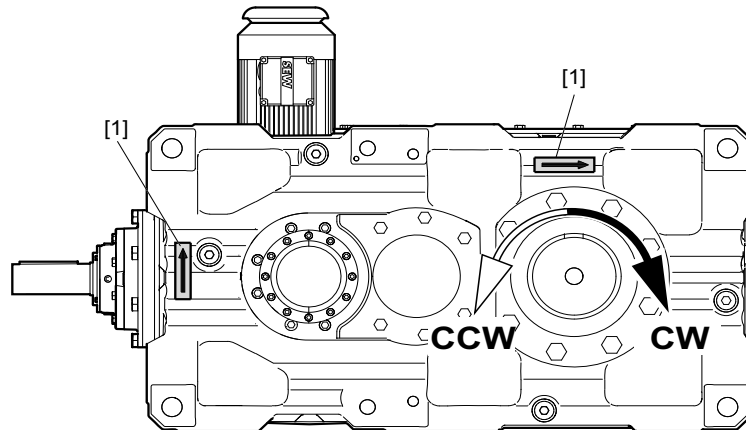

527646219

The direction of rotation is determined with a view to the output shaft (LSS).

- CW = Clockwise
- CCW = Counterclockwise

The permitted direction of rotation [1] is indicated on the housing.

INFORMATION



If the drive has a through-going output shaft, the direction of rotation of the backstop should be given as viewed towards shaft position 3.

Contact SEW-EURODRIVE for differing requirements.

The backstop might wear off when operated below lift-off speed.

In the following cases **always** contact SEW-EURODRIVE for specifying the maintenance intervals:

- Input speed rates $n_1 < 950$ rpm
- or any of the following gear unit designs:

n_1 [rpm]	Size X3K..	
950...1150	X100...130	all i_N
	X140...170	$i_N \geq 31.5$
	X180...280	$i_N \geq 50$
1150...1400	X100...110	$i_N \geq 25$
	X120...130	$i_N \geq 40$
	X140...170	$i_N \geq 50$
	X180...280	$i_N \geq 63$
> 1400	X100...130	$i_N \geq 35.5$
	X140...170	$i_N \geq 63$

n_1 = Input speed (HSS)

i_N = Nominal gear unit ratio



4.6 Motor adapter /MA

Motor adapters [1] are available for mounting:


- **IEC (B5) motors** of sizes 100 to 355
- **NEMA ("C" face) motors** of sizes 182 to 449



INFORMATION

- The gear unit must be mounted in such a way that liquids cannot enter the motor adapter (HSS end) and accumulate there. Otherwise, the oil seal can be damaged, and subsequent damage can create a possible ignition source.
- An elastic claw coupling is included in the scope of delivery of the motor adapter.
- All motor adapters can be equipped with a fan for 2- and 3-stage gear units.

The following figure shows an example of the motor adapter [1] connected to the gear unit:

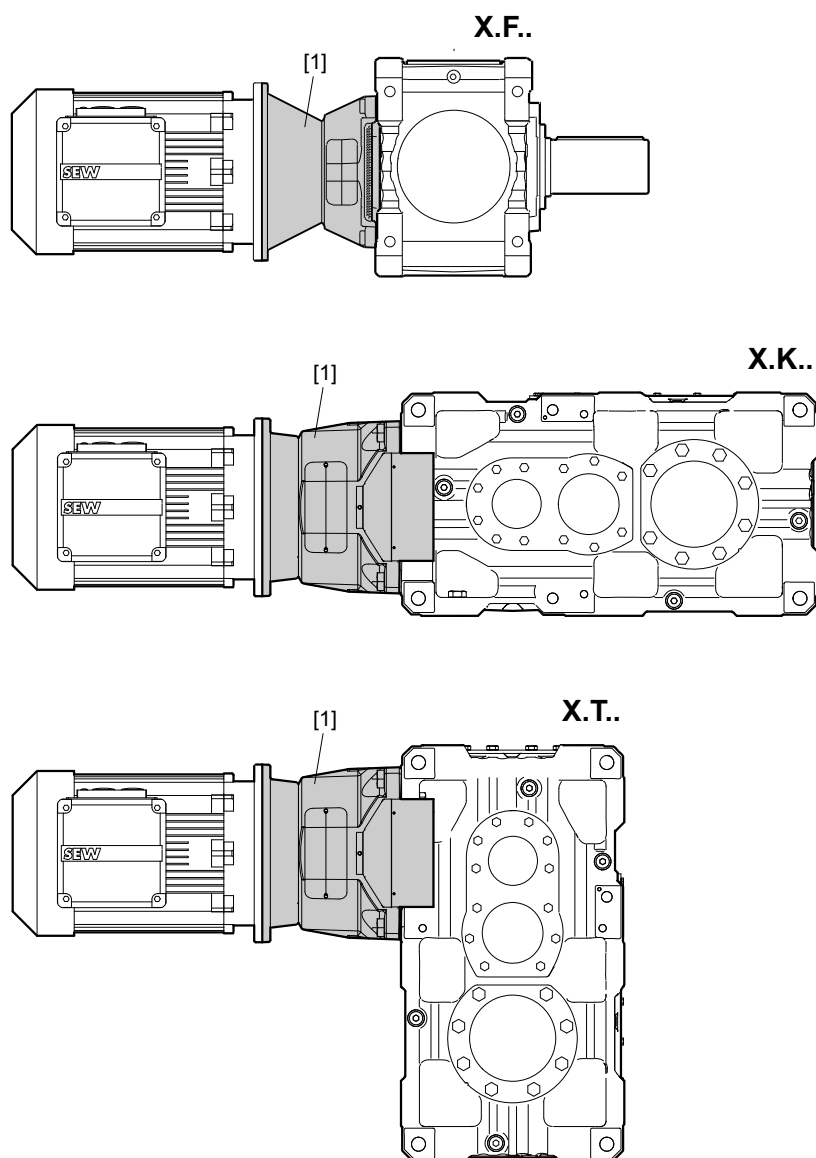

1397425803



4.7 V-belt drives /VBD



⚠ WARNING

Observe the maximum circumferential velocity according to the respective manufacturer specifications.

Severe or fatal injuries.

- Belt pulley may be destroyed due to excessive speed rates.



NOTICE

Exceeding the permitted overhung loads can damage the unit.

Possible damage to property.

- Check the tension of the belts using a suitable measuring device. Observe chapter "Installation / assembly / V-belt drives /VBD" (page 157).
- Observe the operating instructions of the motor.



INFORMATION


In standard design, V-belt drives cannot be combined with a mounting flange or a fan as these options would collide with the V-belt drive.

V-belt drives are used wherever you need to adjust the total ratio or wherever the installation space requires a certain motor configuration.


The standard scope of delivery comprises motor scoop, belt pulleys, V-belt, and protective cover for the V-belt. As an alternative, the drive can be supplied as completely mounted unit with motor.

The following figures show the basic structure of a gear unit with V-belt drive.

X.F..

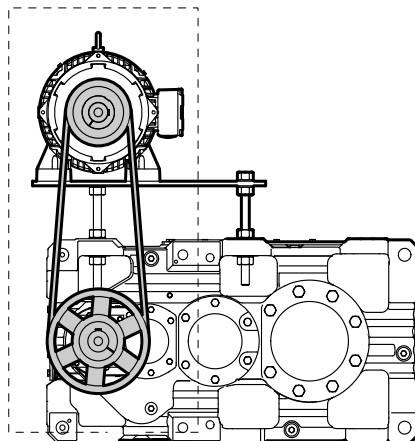

X.K..

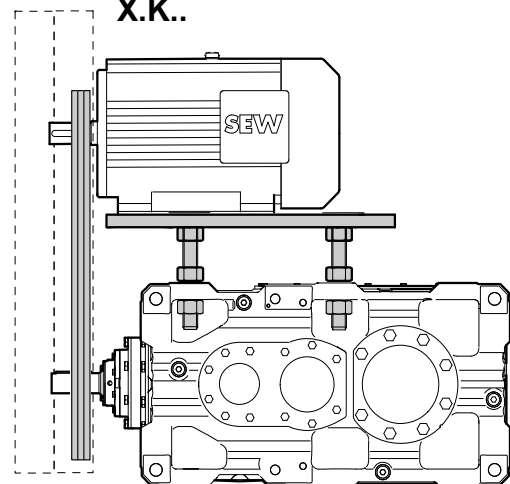

953104395



4.8 Drive packages on a steel frame

For gear units in a horizontal mounting position, complete pre-assembled drive packages on a steel frame (swing base or base frame) are available.


4.8.1 Swing base /SB

A swing base is a steel frame [1] that accommodates the gear unit, (hydro) coupling and motor (and brake, if required), including protection devices, such as a guard, etc. A swing base is normally used for:

- Hollow shaft gear units or
- solid shaft gear units with flange coupling on the output shaft.

The steel frame [1] is supported by a torque arm [2].

Example: Swing base with coupling

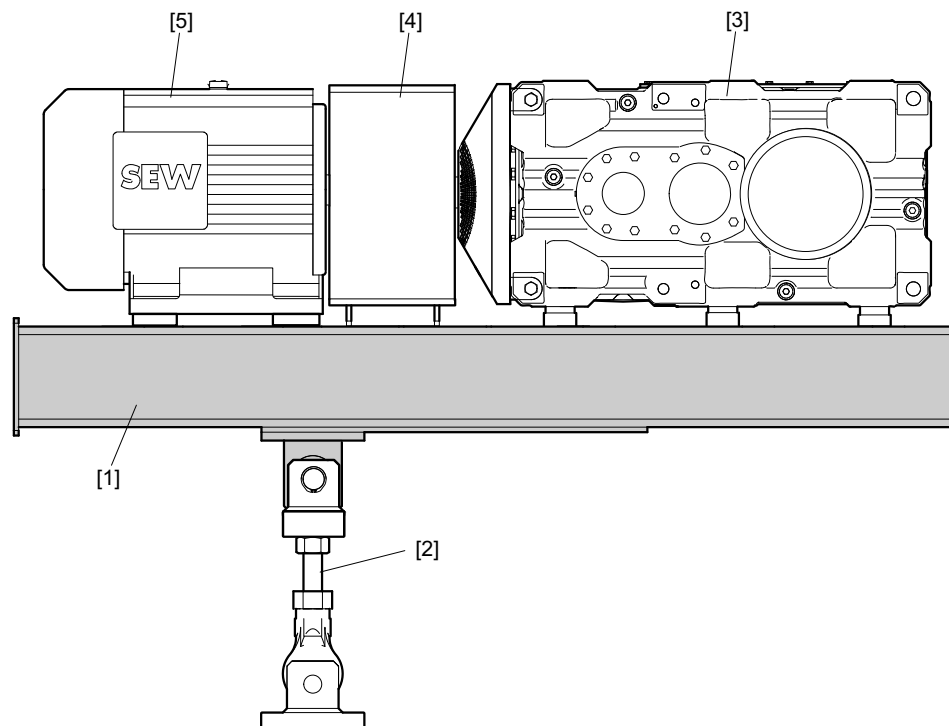

216568971

- [1] Swing base
- [2] Torque arm (optional)
- [3] Bevel-helical gear unit
- [4] Coupling with protection cover
- [5] Motor




4.8.2 Base frame /BF

For gear units in a horizontal mounting position, complete pre-assembled drive packages on a base frame are available.

A base frame is a steel frame [1] that accommodates the gear unit, (hydro) coupling and motor (and brake, if required), including protection devices, such as guards, etc. The steel frame is supported by several foot mountings [2]. Such a frame is usually used for solid shaft gear units with elastic coupling on the output shaft.

Example: Base frame with coupling

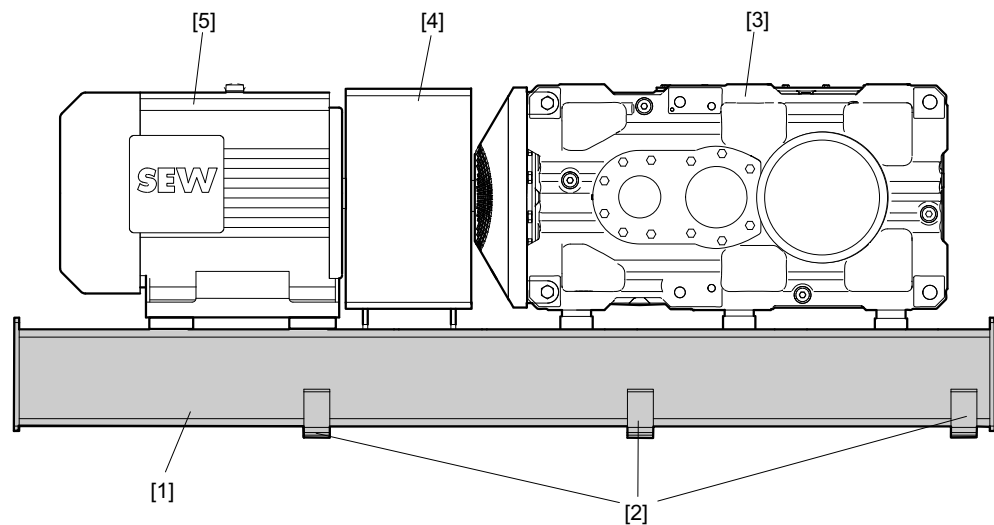

219858571

- [1] Base frame
- [2] Foot mounting
- [3] Bevel-helical gear unit
- [4] Protection cover for coupling
- [5] Motor



4.9 Cooling types

4.9.1 Fan cooling

A fan is installed on the gear unit input shaft. Its airflow improves the transmission of heat from the gear unit surface to the environment. Refer to chapter "Fan" (page 56) for further information.

4.9.2 Built-in cooling

This refers to cooling systems installed directly in the gear unit housing or mounted very close to it, e.g. a water cooling cover or a water cooling cartridge.

4.9.3 Circulation cooling


The gear unit oil is pumped out of the gear unit to an external heat exchanger by a pump (motor pump or shaft end pump). This normally involves oil supply systems with oil/water or oil/air heat exchangers.

4.10 Fan /FAN

To raise the thermal rating or when the ambient conditions change after gear unit startup, a fan may be retrofitted. The direction of rotation of the gear unit does not influence the operation of the fan.

The following types of fans are available:

4.10.1 X.K.. Fan (standard) /FAN

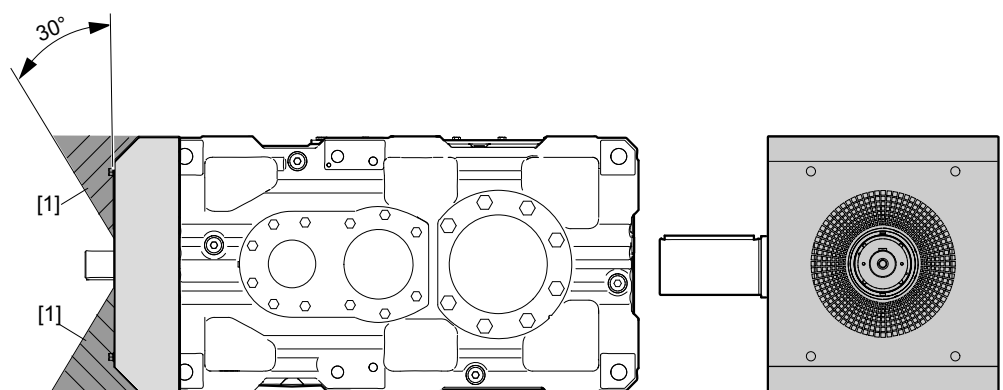

674450059


[1] Air intake must be kept clear

4.10.2 X3K.. Advanced (option) /FAN-ADV

When the type X3K.. Advanced is used, the connection element (e.g. hydraulic centrifugal coupling) can be mounted flush to the fan guard.



The air intake clearance is integrated into the fan guard.

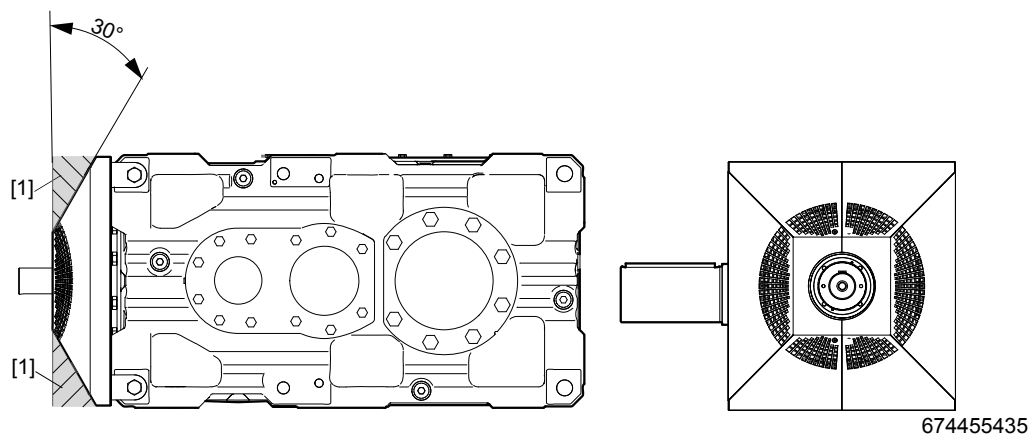

[1] Air intake clearance



INFORMATION

The X3K.. Advanced fan cannot be used together with a torque arm because the fan guard is mounted to the attachment point of the torque arm.



4.11 Water cooling cover /CCV

The water cooling cover is located on the gear unit's assembly opening and is provided with cooling water through a water connection. The customer is to provide for the water connection.


The amount of heat that can be dissipated depends on the intake temperature and the flow rate of the cooling medium that flows through the unit. The data given in the technical specifications must be observed.



INFORMATION

Consult SEW-EURODRIVE if you use chemically aggressive cooling media, such as brackish water or salt water.

4.11.1 Structure

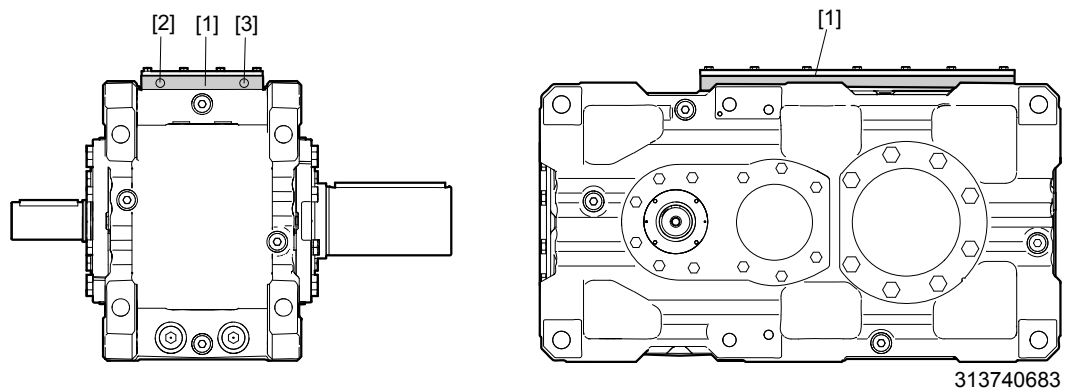

- [1] Water cooling cover [3] Return
[2] Supply

The water cooling cover [1] is made of a corrosion-resistant aluminum alloy. Two bores with pipe threads are available to connect to the cooling circuit.

- Sizes X100-130: G3/8"
- Sizes X180-210: G1/2"

The piping is not included in the scope of delivery. Gear units with water cooling cover are delivered completely assembled.

A water cooling cover can be retrofitted. Consult SEW-EURODRIVE.

4.11.2 Notes on connection and operation

A cooling water volume flow (water inflow temperature 15 °C) depending on the gear unit size is necessary according to the following table to achieve the thermal rating given in the catalog. The cooling capacity of the water cooling cover changes when the cooling water quantity or temperature changes or when specific cooling media are used. Consult SEW-EURODRIVE if required.

Size	Cooling water flow rate [l/min]	Size	Cooling water flow rate [l/min]
X100-110	4	X180-190	8
X120-130	5	X200-210	11



4.12 Water cooling cartridge /CCT

The water cooling cartridge is mounted in the gear unit's oil sump and is provided with cooling water through a water connection. The customer is to provide for the water connection.


The amount of heat that can be dissipated depends on the inlet temperature and the flow rate of the cooling medium flowing through it. For the number of water cooling cartridges, refer to the technical specification. The data given in the technical specifications must be observed.



INFORMATION

Consult SEW-EURODRIVE if you use chemically aggressive cooling media, such as brackish water or salt water.

4.12.1 Structure

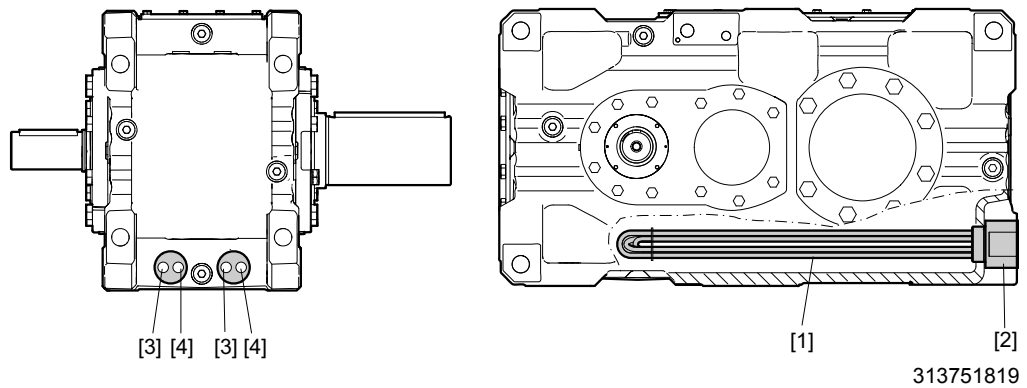

- | | |
|-----------------------------------|------------|
| [1] Cooling pipes | [3] Return |
| [2] Tube plate with adapter piece | [4] Supply |

The water cooling cartridge consists of 3 main parts:

- Cooling pipes (CuNi alloy)
- Tube plate (brass)
- Adapter piece (brass; gray cast iron; steel)

For connection to the cooling circuit, the following 2 bores with

- Pipe thread G1/4" for sizes X140-170
- Pipe thread G1/2" for sizes X180-320

are available. The piping is not included in the scope of delivery.

Gear units with water cooling cartridge are delivered completely assembled.

Water cooling cartridges can be retrofitted to a certain extent. Consult SEW-EURODRIVE.



INFORMATION

The cooling circuit must be connected in parallel for gear units with 2 water cooling cartridges. Observe chapter "Water cooling cartridge /CCT" (page 172).



4.12.2 Notes on connection and operation

To achieve the thermal rating specified in the selection tables of the X.. Series Industrial Gear Units catalog, different cooling water flow rates are required depending on the size, mounting position, and type of lubrication. The following table lists approximate values for the flow rate for the M5 mounting position (water inflow temperature 15 °C).

Contact SEW-EURODRIVE when using another cooling water flow rate, another cooling water temperature, special cooling media (the cooling capacity of the water-cooling cartridge changes), aggressive cooling media, such as brackish water or salt water.

The cooling water quantity has to be dimensioned individually for each cooling cartridge.

Twice the cooling water volume flow is required for 2 cooling cartridges.

Size	Cooling water flow rate [l/min] / per cooling cartridge			Max. cooling water flow rate [l/min]
	2-stage	3-stage	4-stage	
X140-150	10	8	3	15
X160-170	12	10	4	
X180-190	16	13	5	
X200-210	19	15	6	28
X220-230	23	19	8	
X240-250	24	21	9	
X260-270	17	16	6	
X280-300	18	18	7	25
X310-320	22	22	9	



4.13 Oil-water cooler for splash lubrication /OWC



INFORMATION

For descriptions on the unit structure, refer to the manufacturer's documentation and the addendum to the operating instructions "Oil-water cooler for splash lubrication /OWC".

4.14 Oil-air cooler for splash lubrication /OAC



INFORMATION

For descriptions on the unit structure, refer to the manufacturer's documentation and the addendum to the operating instructions "Oil-air cooler for splash lubrication /OAC".

4.15 Oil-water cooler for pressure lubrication /OWP



INFORMATION

For descriptions on the unit structure, refer to the manufacturer's documentation and the addendum to the operating instructions "Oil-water cooler for pressure lubrication /OWP".

4.16 Oil-air cooler for pressure lubrication /OAP



INFORMATION

For descriptions on the unit structure, refer to the manufacturer's documentation and the addendum to the operating instructions "Oil-air cooler for pressure lubrication /OAP".



4.17 Oil heater /OH


An oil heater may be required to ensure lubrication during a cold gear unit startup when the ambient temperature is low.

4.17.1 Structure

The oil heater consists of 3 main parts:

- Heating element in the oil sump ("oil heater") with terminal box
- (Thermostat, if not integrated in the oil heater)
- Oil level monitoring

The following figure shows a design example:

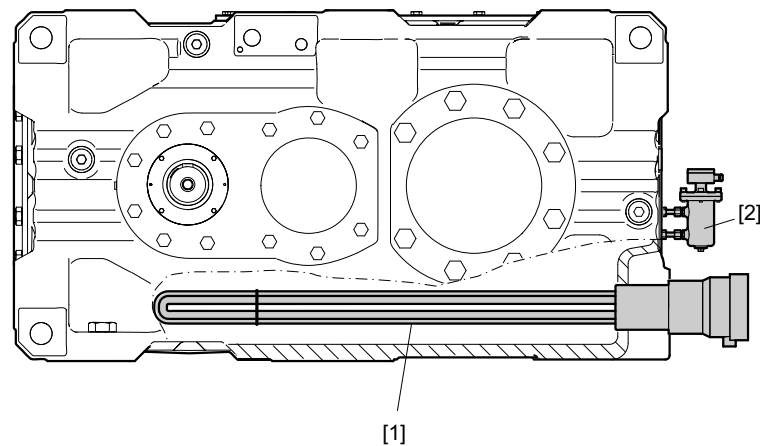

5821869579

[1] Oil heater

[2] Oil level monitoring



INFORMATION

The position of the thermostat, the oil heater and oil level monitoring varies with design and mounting position of the gear unit.



4.18 Pressure switch /PS

All gear units with pressure lubrication are equipped with a pressure switch for function monitoring.

The pressure switch is to be connected and integrated into the system in such a way that the gear unit can only be operated when the oil pump is building up pressure. A short-term compensation (max 20 s) during startup is permitted.

Customers are responsible for the electrical connection and the evaluation of the signal.

4.19 Temperature sensor /PT100

A temperature sensor PT100 can be used to measure the temperature of the oil in the gear unit.

The temperature sensor is located in the gear unit's oil sump. The exact position depends on the gear unit version and position of the shaft.

4.20 Temperature switch /NTB

A temperature switch with preset switching temperatures of 70, 80, 90 or 100 °C is used for monitoring the gear unit oil temperature.

For various functions, the temperature switch is also used as limit value switch, for example

- a pre-alarm
or
- main alarm for switching off the main motor.

To guarantee a long service life and functioning under all conditions, it is recommended to use a relay in the power circuit instead of a direct connection through the temperature switch.

The temperature switch is located in the gear unit's oil sump. The exact position depends on the gear unit version and position of the shaft.

4.21 Temperature switch /TSK

The TSK temperature switch is used in conjunction with oil supply systems for circulation cooling. It is provided with two fixed switching points (40 °C and 90 °C) for controlling and monitoring the system.

The temperature switch is integrated in the oil supply system circuit as follows:

- The cooling system is activated when the oil temperature reaches 40 °C
- Warning signal or disconnection of the gear unit when the oil temperature exceeds 90 °C (usually an indication of a malfunction of the oil supply system)

To guarantee a long service life and functioning under all conditions, using a relay in the power circuit instead of a direct connection through the temperature switch is recommended.

The temperature switch is located in the gear unit's oil sump. The exact position depends on the gear unit model and position of the shaft.



Checklist

Before startup

5 Checklist

5.1 Before startup

This checklist contains an overview of the points that must be checked **before startup** of a gear unit in a potentially explosive area in accordance with Directive 94/9/EC.

Check the following points before starting up a gear unit in a potentially explosive area	Information in section ...
Inspect the shipment for any damage that may have occurred in transit as soon as you receive the delivery. Inform the shipping company immediately about any damage. It may be necessary to preclude startup. Remove any transportation fixtures prior to startup.	2.8
Compare the data on the nameplate of the drive with the specifications for operation in a potentially explosive area on site: <ul style="list-style-type: none"> • Equipment group • Explosion protection category • Explosion protection zone • Temperature class • Maximum surface temperature 	6.7 and 7.2
Have arrangements been made to prevent explosive atmospheres, oils, acids, gases, vapors or radiation during installation of the gear unit?	6.4
Does the ambient temperature comply with the specifications (nameplate and order confirmation)?	6.7.2
Have measures been taken to ensure that the gear units are sufficiently ventilated and that they are not heated by an external heat source (e.g. the coupling)? The cooling air must not exceed a temperature of 40 °C.	4 and 6
Does the mounting position correspond to the specification on the nameplate? Please note: Contact SEW-EURODRIVE before you change the mounting position. Otherwise, the ATEX certification may no longer be valid.	3.11
Does the oil level for this mounting position comply with the information on the nameplate?	8.4
Do you have unobstructed access to all oil filling and oil drain screws as well as the breather plugs and valves?	6.3
Are all the components approved for ATEX?	6
Have you checked that the values on the nameplate of the gear unit are not exceeded?	7.2
When installing gear units with hollow shaft: <ul style="list-style-type: none"> • Was the protective cover mounted according to the instructions (dust-proof)? 	6.14
When installing a motor to the input shaft using a V-belt drive: <ul style="list-style-type: none"> • Does the belt have sufficient attenuation resistance ($< 10^9 \Omega$) between the input shaft and the motor shaft? • Was the belt tension measured with a suitable preload measuring instrument to avoid impermissibly high overhung loads? • Before installing a protective cover: Has the manufacturer of the protective cover performed a risk analysis to prove that no sources of ignition or combustion (e.g. risk of sparks from contact between the protective cover and rotating parts) can occur? (If you are not using the protective cover from SEW-EURODRIVE). 	6.21
For motors operated on the supply system: <ul style="list-style-type: none"> • Check that the data specified on the nameplate of the gear unit and the motor corresponds to real conditions at the location where the drive is to be installed. 	7.2
Check that oil level monitoring and oil heater have been set and connected properly.	6.31
General information on how to mount accessories: If operators have changed the gear unit after having installed it into the system, they must re-assess the gear unit in terms of additional/new ignition sources.	
For equipment group I, category M2, operators must ensure that the gear unit is switched off in an explosive atmosphere.	
In the event of the "long-term storage" option, has the loosely enclosed plug been replaced by the respective screw plug (see dimension sheet for position) and has thread locking compound been applied?	6.10



5.2 During startup

This checklist includes all activities that have to be performed **during startup** on page 124.

Check the following points during gear unit start up in a potentially explosive area	Information in section ...
Measure the surface temperature after approx. 6 hours. The temperature may not differ from the ambient temperature by more than 70 K. If the value is > 70 K, switch the drive off immediately and contact SEW-EURODRIVE.	7.16
Measure the oil temperature. Base the oil change intervals on this value (see chapter 8.3).	8.3



6 Assembly/installation

6.1 Required tools/resources

Not included in the scope of delivery:

- Set of wrenches
- Torque wrench
- Mounting device
- Compensation elements (shims, spacing rings)
- Fasteners for input and output elements
- Lubricant (e.g. NOCO[®] fluid from SEW-EURODRIVE) → except for hollow shaft gear units
- For hollow shaft gear units → aids for assembly/disassembly onto the machine shaft
- Fastening parts for the gear unit base

6.2 Tolerances

Observe the following tolerances.

6.2.1 Shaft end

Diameter tolerance in accordance with DIN 748:

Ø = Smooth output shaft / ..R → ISO v6

Ø = Output shaft as a solid shaft with key /..S → ISO m6

Center bores according to DIN 332, part 2 (type D..):

Ø > 16...21 mm → M6	Ø > 50...85 mm → M20
Ø > 21...24 mm → M8	Ø > 85...130 mm → M24
Ø > 24...30 mm → M10	Ø > 130...225 mm ¹⁾ → M30
Ø > 30...38 mm → M12	Ø > 225...320 mm ¹⁾ → M36
Ø > 38...50 mm → M16	Ø > 320...500 mm ¹⁾ → M42

1) Dimensions not according to DIN 332; the thread depth including the counterbore is at least twice that of the nominal thread diameter

Keys according to DIN 6885 (domed type)

6.2.2 Hollow shaft

Diameter tolerance:

- Ø → ISO H7 for hollow shafts with shrink disk
- Ø → ISO H8 for hollow shafts with keyway

6.2.3 Mounting flange

Centering shoulder tolerance: ISO f7



6.3 Notes on installation/assembly



⚠ WARNING

Risk of crushing if the drive starts up unintentionally.

Severe or fatal injuries.

- De-energize the motor before you start working on the unit.
- Secure the motor against unintended power-up.



⚠ WARNING

A customer machine that is not appropriately secured can fall during gear unit installation or removal.

Severe or fatal injuries.

- Safeguard the customer machine against unintentional movement when installing or removing the gear unit.



⚠ WARNING

Danger of burns due to hot gear unit and hot gear unit oil.

Serious injury.

- Let the gear unit cool down before you start working on it.
- Carefully remove the oil level plug and oil drain plug.



⚠ CAUTION

Danger due to unsecured mount-on components, e.g. keys.

Potential risk of crushing due to falling parts.

- Install appropriate protective devices.
- Secure the mount-on components.



⚠ CAUTION

Risk of slipping due to lubricant leaking from damaged seals.

Minor injuries.

- Check the gear unit and mount-on components for leaking lubricant.



⚠ CAUTION

Risk of injury due to protruding parts.

Minor injuries.

- Gear units and mount-on components must not protrude into footways.



NOTICE

Improper installation and mounting may result in damage to the gear unit.

Possible damage to property.

- Note the following:
- Before releasing shaft connections, make sure there are no active torsional moments present (tensions within the system).
- Make sure that the customer components are designed for the load.



- The most important technical data is provided on the nameplate.
Additional data relevant for operation is available in drawings, on the order confirmation or any order-specific documentation.
- The mounting position may only be changed after consultation with SEW-EURO-DRIVE. The warranty will become void without prior consultation.
- Do not modify the gear unit or the mount-on components without prior consultation of SEW-EURODRIVE.
- Protect rotating drive parts, such as couplings, gears, or belt drives against contact using suitable devices.
- Install/mount the gear unit only in the specified mounting position on a level, vibration-damping, and torsionally rigid support structure. Do not twist housing legs and mounting flanges against each other.
- Make sure that the oil level and oil drain plugs, as well as the breather plugs are freely accessible.
- When installing a filter in the OAP and OWP cooling units, make sure there is sufficient height for removing the filter element and the filter hood.
- Use plastic inserts if there is a risk of electrochemical corrosion between the gear unit and the driven machine (connection between different metals such as cast iron and high-grade steel). Also install the bolts with plastic washers. Always ground the gear unit housing.
- It is important that only authorized personnel is allowed to assemble gear head units with motors and adapters. Consult SEW-EURODRIVE.
- Do not weld anywhere on the drive. Do not use the drive as a ground point for welding work. Welding may destroy gearing parts and bearings.
- Units installed outdoors must be protected from the sun. Install suitable protective devices, such as covers or roofs. Avoid any heat accumulation. The operator must ensure that foreign objects do not impair the function of the gear unit (e.g. falling objects or coverings).
- Protect the gear unit from direct cold air currents. Condensation may cause water to accumulate in the oil.
- Gear units are supplied with a coating suitable for use in damp areas or in the open air. Repair any damage to the paint work (e.g. on the breather).
- Do not modify the existing piping.
- For gear units that are filled with oil at the factory, check to see that the breather plug is installed before you start up the gear unit.
- Observe the safety notes in the individual chapters!



INFORMATION on explosion protection

- The gear unit must be mounted in such a way that liquids cannot enter the motor adapter (HSS end) or the mounting flange (LSS end) and accumulate there. Otherwise, the oil seal can be damaged, and subsequent damage can create a possible ignition source.
- When repairing paint damage, make sure the paint is suited for use in the respective explosive atmosphere (DIN EN 13463-1).
- Depending on the order, the gear unit can be delivered with or without oil. Observe the information on the nameplate.
- The mounting position may only be changed after consultation with SEW-EURO-DRIVE. Warranty as well as ATEX approval will become void without prior consultation.
- Customers may not use their own spacers in addition.
- Make sure that the gear unit housing is grounded. Electrical mount-on components, such as motors, frequency inverters, etc., must be grounded separately.
- Use belts with sufficient electrical bleeder resistance $< 10^9 \Omega$ only.
 - These have to meet the requirements set forth in IEC 60695-11-10, category FV-0.
 - Power transmission elements should be balanced after fitting and must not give rise to any impermissible radial or axial forces (see the "Gearmotors" or "Explosion-Proof Drives" catalog for permitted values).
- Observe the instructions in chapter "Installing the gear unit".



6.4 Prerequisite for assembly

Check that the following conditions have been met:

- The information on the motor's nameplate must match the voltage supply system.
- The drive has not been damaged during transportation or storage.
- Ambient temperature according to the technical documentation, nameplate and lubricant table.



NOTE on explosion protection

- The drive must **not** be assembled in the following ambient conditions:
 - Potentially explosive area
 - Oils
 - Acid
 - Gases
 - Vapors
 - Radiation

6.4.1 Extended storage of gear units

Important: The service life of the lubricant in the bearings is reduced if the unit is stored for ≥ 1 year (only applies to bearings with grease lubrication).

Replace the provided breather filter with the screw plug.

6.5 Installing the gear unit



NOTE on explosion protection

Processes that cause strong electrical charge due to fast moving particles on the coating must be excluded (e.g. due to fluid liquids and solids)!

6.5.1 Foot-mounted gear units

The following table shows the thread sizes and the tightening torques of the individual gear unit sizes (foot mounting).

Size	Screw/nut	Tightening torque Strength class 8.8 [Nm]
X100-110	M20	464
X120-130	M24	798
X140-150	M30	1597
X160-170	M36	2778
X180-190		
X200-230	M42	3995
X240-280	M48	6022
X290-320	M56	9650



INFORMATION

The bolts must not be lubricated during assembly.



6.5.2 Tightening torques for retaining screws

Tighten the screws of gear unit mount-on parts and protection covers using the following tightening torque.



INFORMATION

The tightening torques do not apply to mounting types like flange coupling, torque arm, mounting flange, hollow shaft with shrink disk etc. Those are described in the individual chapters.

Bolt/nut	Tightening torque Strength class 8.8 [Nm]
M6	11
M8	27
M10	54
M12	93



INFORMATION

The bolts must not be lubricated during assembly.

6.5.3 Foundation

To ensure quick and successful mounting, the type of foundation should be correctly selected and the mounting carefully planned in advance. Foundation drawings with all necessary construction and dimension details should be available.

To avoid harmful vibrations and oscillations, adequate rigidity must be ensured when mounting the gear unit on a steel construction. The foundation must be dimensioned according to weight and torque of the gear unit by taking account of the forces acting on the gear unit.

Tighten retaining screws or nuts to the specified torque. Use the screws and tightening torques specified in chapter "Installing the gear unit" (page 70).



NOTICE

An improper foundation may result in damage to the gear unit.

Possible damage to property.

- The foundation must be level and flat; the gear unit may not be deformed when the retaining screws are tightened. Unevenness must be leveled out appropriately.
- Observe the weight specified on the nameplate.



Assembly/installation

Gear unit mounting in potentially-explosive atmospheres

6.5.4 Aligning the shaft axis



⚠ WARNING

Shafts can break if shaft axes are not aligned exactly.

Severe or fatal injuries.

- Refer to the separate operation instructions regarding the requirements of the couplings.

The service life of the shafts, bearings and couplings depends on the precision of the alignment of the shaft axes with each other.

Always try to achieve zero misalignment. When doing so, you should also consult the special operating instructions regarding the requirements of the couplings, for example.

6.6 Gear unit mounting in potentially-explosive atmospheres



INFORMATION on explosion protection

- Make sure to observe the safety notes in chapter 2 when installing the gear unit in a potentially explosive atmosphere.
 - Processes that cause strong electrical charge are not permitted.
-



6.7 Gear units and gearmotor in equipment groups I and II



INFORMATION on explosion protection

Explosion-proof X series gear unit correspond with the design requirements for equipment groups I and II.

The operating instructions describe the use of a gear unit in potentially explosive atmospheres. Potentially explosive atmospheres are specified in EC Directive 94/9/EC.

Explosion-proof X... series industrial gear units from SEW-EURODRIVE meet the following construction requirements:

- Equipment group I, category M2 (underground mining and their above-ground systems that may be subject to hazards from firedamp and/or flammable dusts).
- Equipment group II, category 2G or 3G (potentially explosive gas atmosphere), 2D or 3D (potentially explosive dust atmosphere).

This means the gear units are suitable for use in the following zones:

- **Underground mining hazardous area 2:**

Underground areas of mines and their underground systems that may be subject to hazards from firedamp and/or flammable dusts.

Comment: The gear units must be switched off if there is a potentially explosive atmosphere.

- **Industrial areas above ground:**

Equipment of this category is intended for use in potentially explosive atmospheres with a mixture of air and gas, vapors, mists, or dust/air occurring occasionally or briefly.



Assembly/installation

Gear units and gearmotor in equipment groups I and II

6.7.1 Temperature class

The maximum surface temperature differs depending on power, speed, housing size, lubrication type, reduction ratio, mounting position, etc.

The classification into temperature classes depends on the maximum surface temperature.

- **Equipment of group I**

The following maximum surface temperature must not be exceeded:

- 150 °C on surfaces where carbon dust can accumulate.
- Or 450 °C on surfaces where an accumulation of carbon dust is not expected (e.g. inside an IP 5X housing)

- **Equipment of group II G**

Equipment of group II G must be categorized in a temperature class that depends on the maximum surface temperature specified in the table.

Temperature class	Maximum surface temperature in °C
T1	450
T2	300
T3	200
T4	135
T5	100
T6	85

For information on temperature classes and surface temperatures of the electrical and electromechanical equipment used, refer to the nameplate of the equipment and to the declaration of conformity according to directive 94/9/EC.

- **Equipment of group II D**

Equipment of group II D must be clearly defined according to the actual maximum surface temperature. They are marked accordingly.

6.7.2 Ambient temperature

Gear units in equipment groups I and II may only be operated at ambient temperatures of –20 °C to +40 °C.



NOTE on explosion protection

Any ambient temperatures deviating from this range have to be listed on the nameplate.



6.7.3 Surface temperature

The maximum surface temperature of category "I M2" as well as II2D and II3D, II2G and II3G gear units differs depending on the power rating, speed, reduction ratio, and mounting position.

The permitted temperature classes and the surface temperature must be indicated on the nameplate and must not be exceeded. Other temperatures are only permitted after consultation with SEW-EURODRIVE.

The system operator must ensure that the accumulation of dust does not exceed a maximum thickness of 5 mm in accordance with DIN EN 60079-17.

6.7.4 Degree of protection

The IP code on the nameplate indicates the degree of protection.

6.7.5 Ambient conditions

Provide for sufficient ventilation for the gear units and prevent external heat generation (e.g. via couplings).

6.7.6 Output power and output torque

Ensure that the output torque, speed and permitted overhung and axial loads are maintained according to the data given on the nameplate.

6.7.7 Special designs

Special designs (e.g. modified output shaft) may only be operated in potentially explosive atmospheres after prior approval by SEW-EURODRIVE.



6.8 Speed monitoring

The speed is monitored with an inductive incremental encoder.




INFORMATION on explosion protection

The inductive encoder must be connected with an isolation amplifier and a speed monitor. These components must be located outside the potentially explosive atmosphere.

The isolated switch amplifier must enable intrinsically safe switching operations.

SEW-EURODRIVE recommends:

- N0531A isolation amplifier
- Evaluation unit DD0096 (AC 230 V / DC 24 V) or DD0116 (AC 110 V).

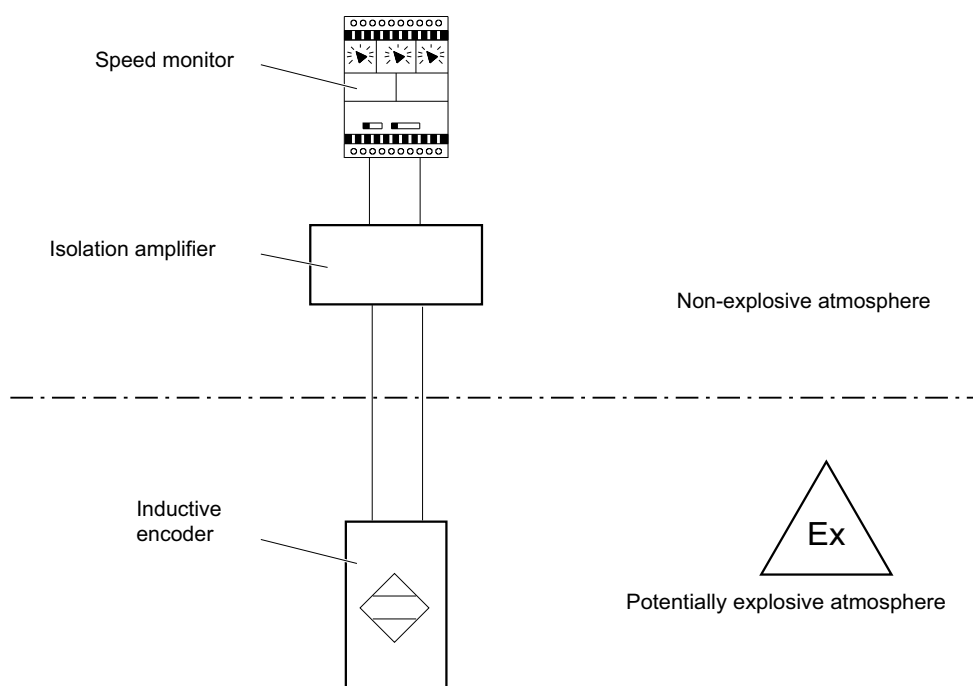


9381009291



6.8.1 Speed monitor


The speed monitor is not included in the scope of delivery. The following figure shows the SEW speed monitor.

Electrical connection

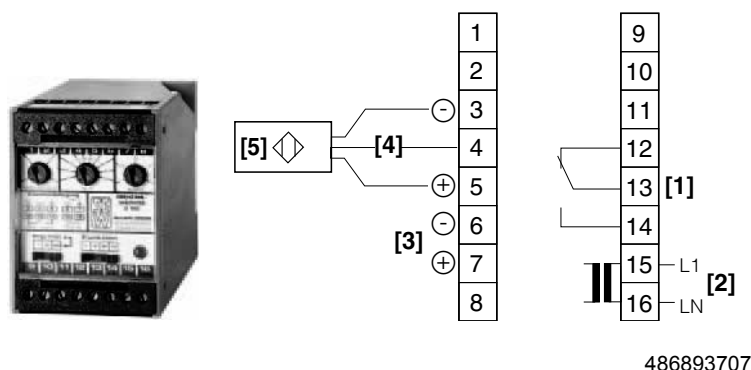

- [1] Relay output
- [2] AC 110 V, AC 230 V supply voltage (47...63 Hz)
- [3] DC 24 V supply voltage
- [4] Signal
- [5] Encoder

Dimension drawing

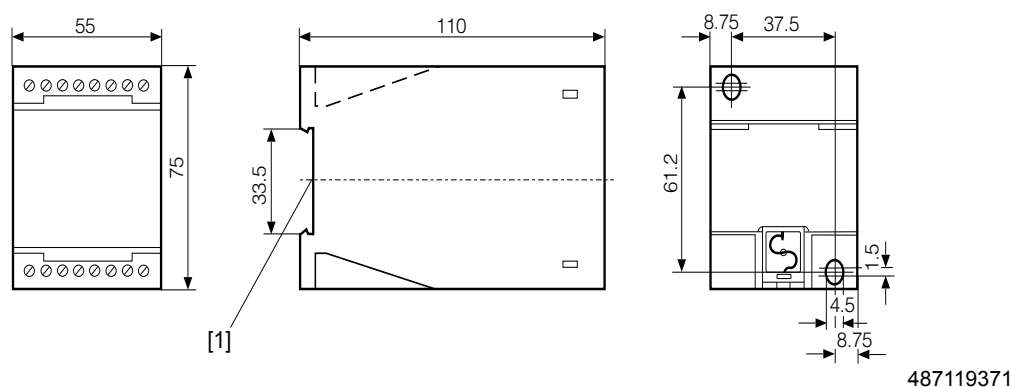

- [1] DIN rail mounting


Technical data

- Operating voltage: AC 230 V or DC 24 V (part number 106 710 9)
- Operating voltage: AC 110 V (part number 106 781 8)
- Maximum switching capability of the output relay: 1250 VA (max. AC 8 A)
- Reference speed, starting bypass and switching hysteresis can be set on the speed monitor (see chapter "Starting up the speed monitor" (page 193)).
- Degree of protection: IP 40 (IP 20 terminals)



6.8.2 Inductive incremental encoder

Dimensions

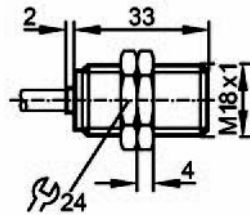

366524939

Connect the UL-registered inductive incremental encoder to the speed monitor as follows:


- Via a two-core cable with a maximum length of 14 m. For explosion group IIC: maximum cable length 3 m. A longer cable is possible with a larger cable cross section. Contact SEW-EURODRIVE in this case.
- With a cable cross section of 0.5 mm².
- Route the signal lines separately (not in multicore cables) and shield them, if necessary.



INFORMATION

The cable (2 m) between encoder and isolated switch amplifier is included in the scope of delivery.

Electrical connection

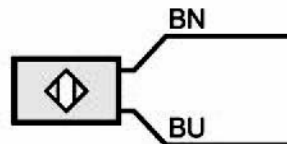

3745234315

[BN] Brown
[BU] Blue



Technical data

Electrical design		Connection to certified, intrinsically safe circuits with maximum values $U = 15 \text{ V}$ / $I = 50 \text{ mA}$ / $P = 120 \text{ mW}$
Nominal voltage	[V]	8.2 DC (1 k Ω)
Supply voltage	[V]	7.5...30 DC when used outside the potentially explosive atmosphere
Current carrying capacity	[mA]	< 30 when used outside the potentially explosive atmosphere
Real switching distance	[mm]	5 \pm 10 %
Switching frequency	[Hz]	720
Ambient temperature	[°C]	-20...70
Degree of protection, protection class		IP 67, II
Approval		PTB 01 ATEX 2191 BVS 04 ATEX E153 IECEX BVS 06.0003 TIIS TC16108
Unit designation		II 2G EEx ia IIC T6 Ta: -20 ... 70 °C (0.41 ... 0.49 in) II 1D Ex iaD 20 T 90°C Ta: -20 ... 70 °C (0.41 ... 0.49 in) Ex ia IIC T6 Ta: -20 ... 70 °C (0.41 ... 0.49 in)



Assembly/installation

Filling the bevel-helical gear unit and auxiliary drive adapter with oil

6.9 Filling the bevel-helical gear unit and auxiliary drive adapter with oil

6.9.1 Notes



⚠ WARNING

Risk of crushing if the drive starts up unintentionally.

Severe or fatal injuries.

- Disconnect the main motor and the gearmotor from the power supply before you start working on them.
- Secure the main motor and the gearmotor against unintended power-up.



NOTICE

Improper oil filling may cause damage to the gear unit.

Possible damage to property.

- Note the following:



INFORMATION on explosion protection

- The oil level and drain plugs as well as the breather valves must be easily accessible.
- Check the correct oil fill specified for the relevant mounting position prior to startup. (Data on the nameplate).

- Fill in the oil only when the bevel-helical gear unit is in the intended mounting position.
- The overrunning clutch and the bevel-helical gear unit X.K.. have a **common oil chamber**. This means maintenance and oil change for the overrunning clutch and the bevel-helical gear unit are carried out at the same time.
- The X.K.. bevel-helical gear unit and the auxiliary drive have a **separate oil chamber**.

- Fill the gear unit with the oil grade and oil quantity specified on the nameplate. The oil quantity specified on the nameplate is an approximate quantity. The mark on the oil level glass or oil dipstick is the decisive indicator for the correct oil level.

When additional attachments, e.g. an oil supply system, are mounted to the gear unit, the oil fill quantity is higher. In this case, observe the respective SEW operating instructions for the oil supply system. For more information, refer to chapter "Changing the oil of the bevel-helical gear unit" (page 214).

- For gear units with external supply pipes, e.g. oil-air cooler, establish the connections prior to the filling process.
- Make sure the oil has ambient temperature when filling it into the gear unit.
- Use a funnel to fill the oil (max. filter mesh 25 µm).
- Observe the additional notes depending on the lubrication type in the following chapters.



6.9.2 Gear units with shaft end pump /SEP



NOTICE

Improper installation and mounting of the shaft end pump [1] can damage the gear unit.

Possible damage to property.

- Note the following:

- Fill the gear unit with the oil type and oil quantity corresponding to the nameplate data, see chapter "Changing the oil of the bevel-helical gear unit and the auxiliary drive adapter" (page 214).
- Check the oil level at the oil level glass, oil dipstick or oil sight glass. For additional information, refer to chapter "Checking the oil level of the bevel-helical gear unit" (page 208).
- Directly before taking the gear unit into operation the first time, open the screw plug [3] and fill the shaft end pump [1] completely with oil. After having filled the oil, close the screw plug [3].

This procedure must be repeated after a standstill period of more than 6 months.

For detailed information, refer to chapter "Shaft end pump /SEP" (page 196) and the manufacturer documentation.


The following figures show the gear units in mounting positions M1, M4 and M5 with the corresponding screw plugs [3] and pressure switch [2].



Assembly/installation

Filling the bevel-helical gear unit and auxiliary drive adapter with oil

Mounting position
M1

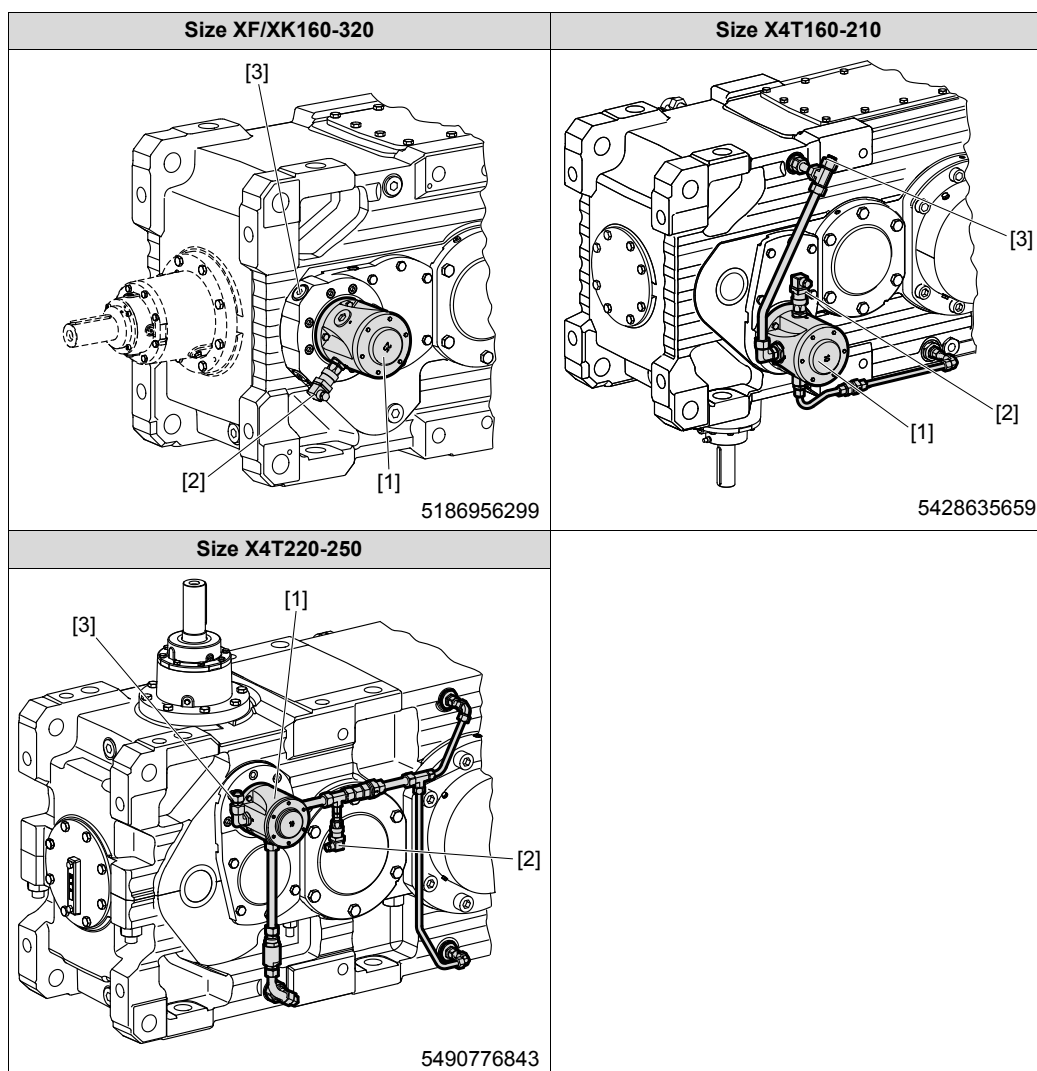

Pressure switch

Gear units with shaft end pump [1] are equipped with a pressure switch [2] for function monitoring as standard. Connection has to be carried out by the customer. Observe chapter "Pressure switch /PS" (page 181).



6.10 Gear units delivered with oil fill (option)



NOTICE


Improper startup can result in damage to the gear unit.

Possible damage to property.

- It is important that gear units with shaft end pump, motor pump or user-installed cooling system is vented before they are taken into operation the first time.

For gear units that are delivered with oil fill, the breather plug must be installed prior to startup. The breather valve is enclosed with the delivery.

The following illustration serves as an example. The position of the breather valve is specified in the order documents.

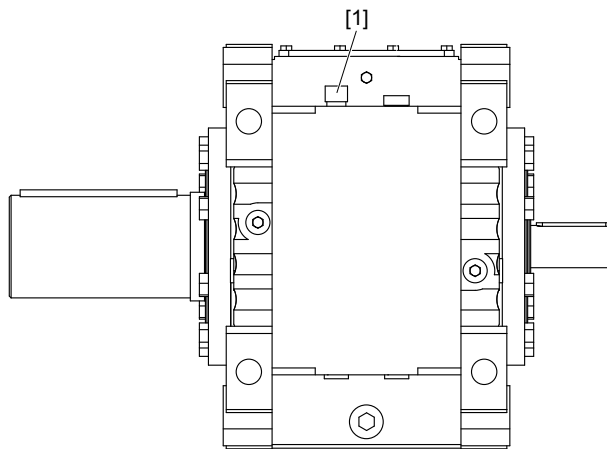

4688864907

1. Remove the closing plug.
2. Wet the thread of the breather valve [1] with a suitable, liquid threadlocker and screw the breather valve [1] into the gear unit.
3. Check the oil level. Observe the information in chapter "Checking the oil level of the bevel-helical gear unit" (page 208).



6.11 Gear units with solid shaft

6.11.1 Mounting input and output components



NOTICE

Bearing, housing or shaft may be damaged due to improper assembly.

Possible damage to property.


- Only use a mounting device for installing input and output elements. Use the center bore and the thread on the shaft end for positioning.
- Never force belt pulleys, couplings, pinions, etc. onto the shaft end by hitting them with a hammer. This may damage the bearing, the housing and the shaft.
- If belt pulleys are used, make sure the belt is tensioned correctly in accordance with the manufacturer's instructions.




INFORMATION on explosion protection

Use only input and output elements with ATEX approval, if these are subject to Directive 94/9/EC.


The following figure shows a mounting device for installing couplings or hubs on gear unit or motor shaft ends. It may be possible to dispense with the thrust bearing on the mounting device.

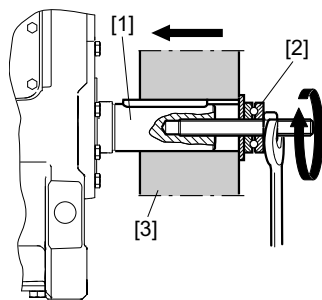

356867979

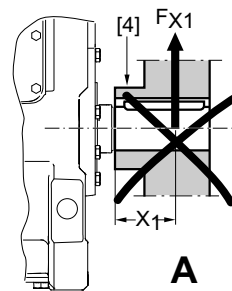

A

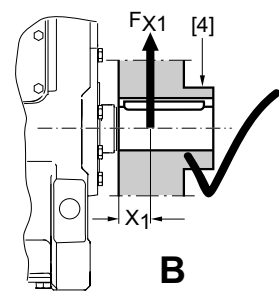

B

651876363

- [1] Shaft end
- [2] Thrust bearing
- [3] Coupling hub
- [4] Hub

- A Incorrect
- B Correct

Avoid impermissibly high overhung loads: Install gear or chain sprockets according to illustration **B**.



INFORMATION

Mounting is easier if you first apply lubricant to the output element and/or heat it up briefly (to 80 ... 100 °C).



Assembly/installation

Flange couplings with cylindrical interference fit /FC

6.12.2 Mounting the coupling onto the machine shaft

1. Clean the shaft and bore of the flange coupling thoroughly and remove any grease. The disassembly bores of the coupling must also be free from dirt.

- **NOTICE** Improper assembly may damage the coupling.

Possible damage to property.

- Make sure that the shaft and bore are completely free from grease to ensure proper functioning of the interference fit. Do not use assembly paste during assembly.

2. Heat the flange coupling to a joining temperature of 230 °C as long as no special joining temperature is specified for the order.

- **CAUTION** The required assembly clearance is achieved only by heating the coupling.


Caution Danger of burns during the entire assembly process!

- Make sure that hot parts cannot be touched unintentionally.

- **NOTICE** Radiant heat from the flange coupling can damage adjacent elements.

Possible damage to property.

- Protect adjacent elements (e.g. oil seals) with suitable heat shields.

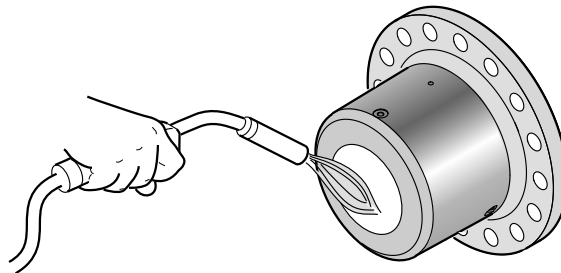


1153862283



3. Mount the flange coupling quickly onto the shaft up against the shaft shoulder.

- **INFORMATION** Prepare mounting tools and the process carefully, so that the coupling can be fitted to the shaft quickly. During the cooling process, the coupling must be secured on the shaft.
- **INFORMATION** Once the coupling has cooled down, spray the disassembly bores with clean mineral oil and close them using the supplied screw plugs.

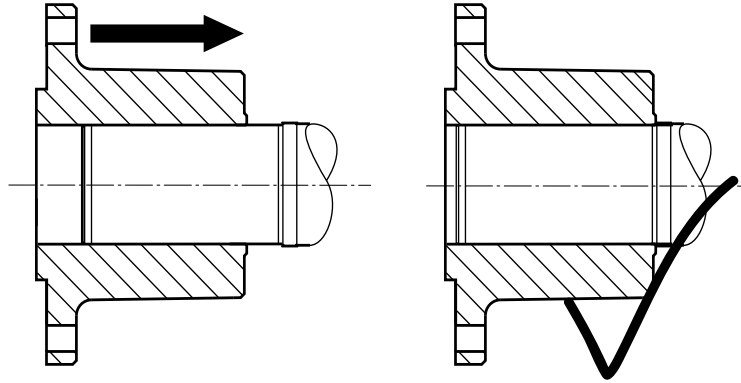

1153865867



Assembly/installation

Flange couplings with cylindrical interference fit /FC

6.12.3 Mounting the flange connection




NOTICE

Improper assembly may damage the coupling.

Possible damage to property.


- Note that the flange coupling cannot compensate shaft misalignments.

1. Clean the flange surfaces [1] of the coupling halves [2].

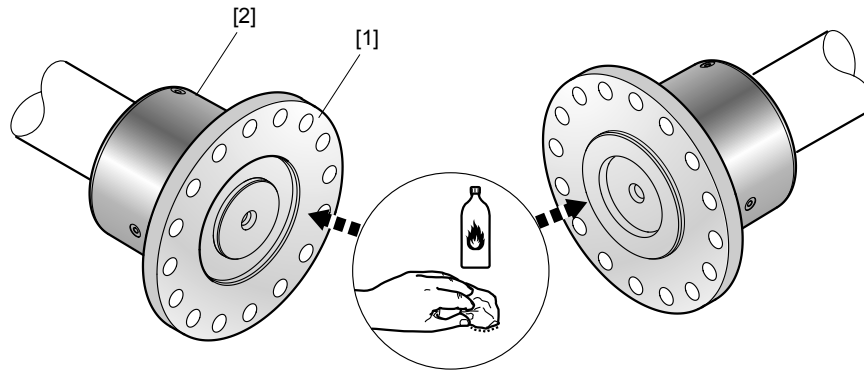

992697355

2. Align the bore patterns of the two coupling halves [2] and join the flange coupling.


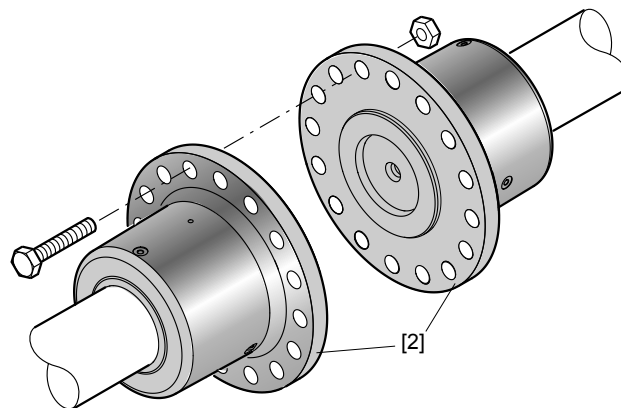


992700555



3. Mount the bolts [3] and tighten them in diametrically opposite sequence with the tightening torques in the following table.

- **INFORMATION** Do not lubricate the bolts [3] during assembly.

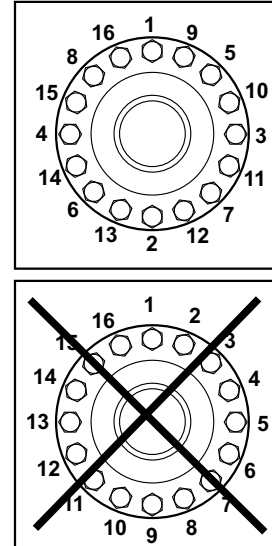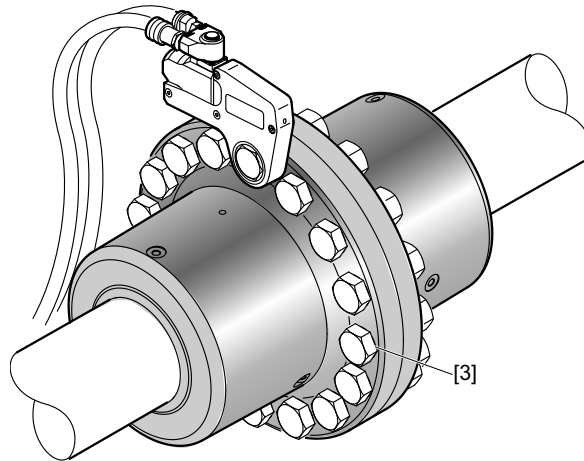

992703755

Size	Bolt size	Tightening torque Strength class 10.9 [Nm]
X100-110	M20	661
X120-130	M24	1136
X140-150	M30	2274
X160-170	M36	3957
X180-190		
X200-230	M42	5610
X240-280	M48	8475
X290-320	M56	13583



Assembly/installation

Flange couplings with cylindrical interference fit /FC

6.12.4 Removing the coupling from the shaft

Notes



⚠ CAUTION

Risk of jamming and crushing due to improper removal of heavy components.

Risk of injury.

- Disassemble the flange coupling properly.
- Observe the following disassembly instructions.




NOTICE

Improper disassembly may damage the output shaft bearing.

Possible damage to property.

- Do not apply any tools between the coupling and the gear unit housing.

To remove the coupling [1], the interference fit must first be widened hydraulically. The remaining holding force must then be overcome with a pull-off device [2]. The following figure shows an exemplary design of a hydraulic puller.

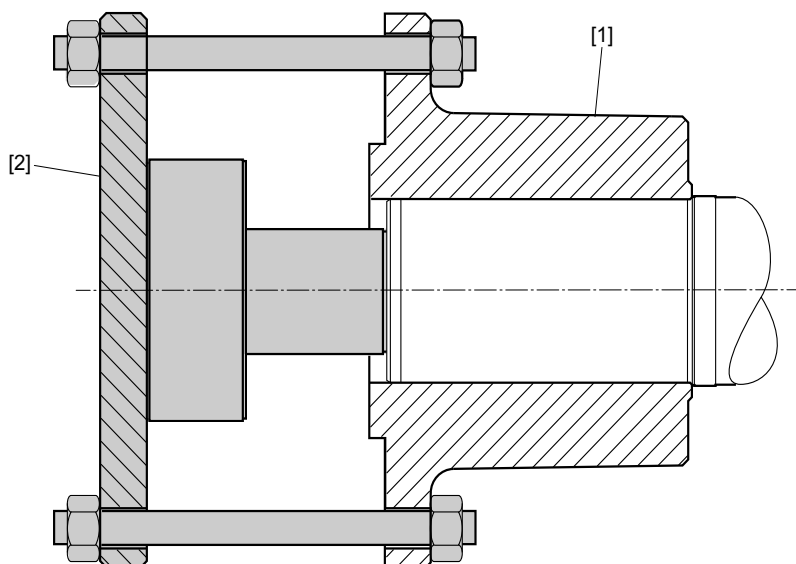

1071755147

For disassembling the coupling, one oil pump is required per disassembly bore.




The data required for the extractor is listed in the following table.

Size	Oil pressure required for disassembly [bar]	Number of disassembly bores/number of required oil pumps	Fitting of the pressure oil bores in the flange coupling	Required axial force of the pull-off device [kN]
X100-110	1600	2	G 1/4"	85
X120-130		2		115
X140-150		2		160
X160-170		2		190
X180-190		3		220
X200-210		3		280
X220-230		3		360
X240-260		3		420
X270-280		3		490
X290-300		3		550
X310-320		3		670

Procedure

- Loosen the bolts [1] and separate the flange coupling. Remove the screw plugs [2] of the disassembly bores.
- INFORMATION** Prepare disassembly tools and the process carefully, so that the coupling can be removed from the shaft quickly.

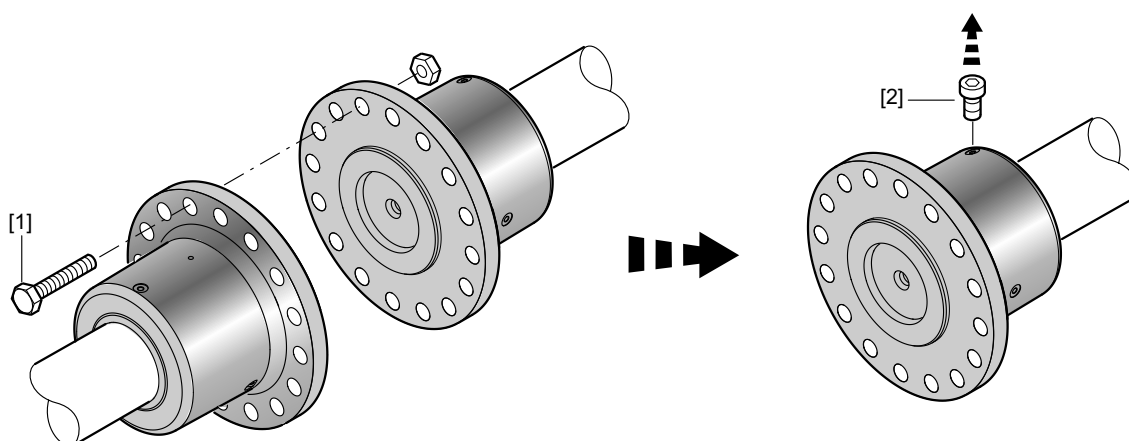

1105822859




Assembly/installation

Flange couplings with cylindrical interference fit /FC


2. Connect the first oil pump [3] to the disassembly bore closest to the flange [4] and apply pressure until oil comes out of the second disassembly bore [5]. Depending on the size, this bore can also be located on the flange surface of the coupling.

- **INFORMATION** It is essential that you observe the safety notes of the manufacturers of the hydraulic devices during the disassembly process.

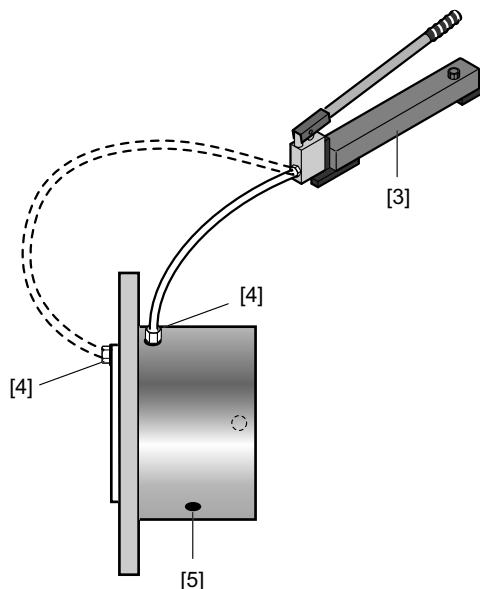

1000632331


3. Connect the next oil pump [6] to this bore [5] and press in oil until it comes out at the next disassembly bore [7].

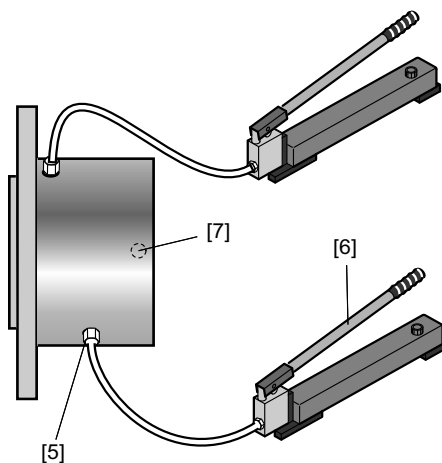

1002542475




4. Repeat this process until all disassembly bores are connected to an oil pump and pressure is applied. At the last disassembly bore [7], the pressure must be increased until at both front faces of the coupling [8] oil comes out in the shape of a ring.
 - **INFORMATION** The coupling can also be disassembled with only one oil pump. In this case, the individual disassembly bores must be blocked after pressure has been applied. Provide for a consistent pressure throughout the disassembly procedure.
 - **INFORMATION** Before removing the coupling, keep the oil pressure constant for 30 minutes to create an evenly distributed oil film inside the interference fit. The pressure must be kept constant during this time and the remaining disassembly process at all bores.

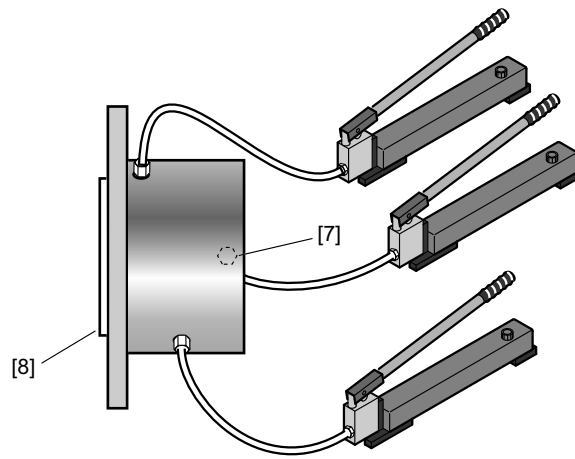

1002549387

5. Install the pull-off device [3]. Remove the coupling from the shaft. Since the oil pressure breaks down after the last disassembly bore has been reached, the required force for removing the coupling is significantly higher at the end.

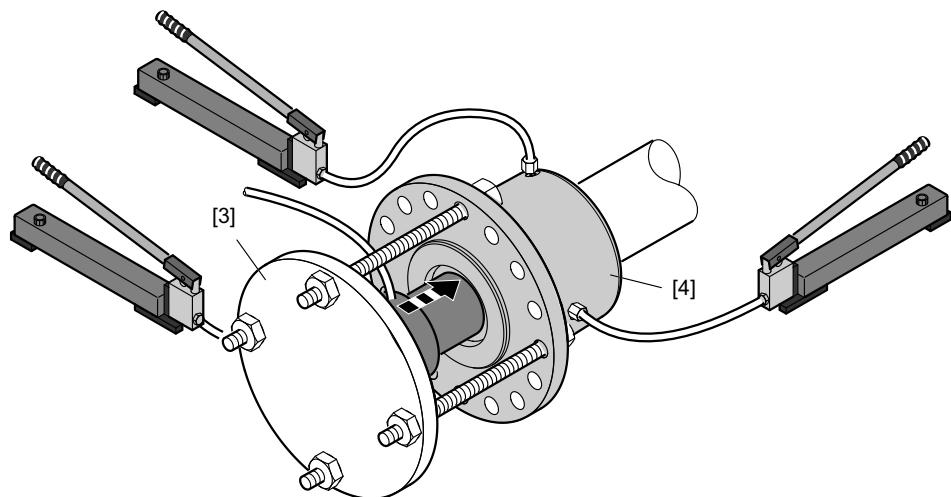

1000624651

6. Check the condition of the shaft and the coupling bore after the disassembly process. Damaged parts must be replaced.



6.13 Flange couplings with keyway

6.13.1 Dimensions of the machine shaft




INFORMATION

Make sure the dimensions of the machine shaft correspond to SEW specifications.

6.13.2 Mounting the coupling onto the machine shaft


1. Make sure the dimensions of the machine shaft correspond to SEW specifications.
2. Clean the shaft and bore of the flange coupling thoroughly and remove any grease.
 - **▲NOTICE** Improper assembly may damage the coupling.
Possible damage to property.
 - Make sure that the shaft and bore are completely free from grease to ensure proper functioning of the interference fit / keyed connection. Do not use assembly paste during assembly.
3. Heat the flange coupling half [1] to a joining temperature of 130 °C, as long as no special joining temperature is specified for the order.
 - **▲CAUTION** The required assembly clearance is achieved only by heating the coupling.
Caution Danger of burns during the entire assembly process!
 - Make sure that hot parts cannot be touched unintentionally.
 - **▲NOTICE** Radiant heat from the flange coupling half [1] can damage adjacent elements.
Possible damage to property.
 - Protect adjacent elements (e.g. oil seals) with suitable heat shields.

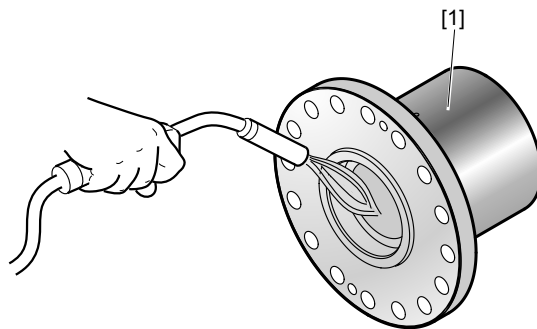

4349544459



4. Mount the flange coupling half [1] quickly onto the gear unit shaft all the way to the shaft shoulder [2].
 - **INFORMATION** Prepare mounting tools and the process carefully, so that the coupling can be fitted to the shaft quickly. During the cooling process, the coupling must be secured on the shaft.

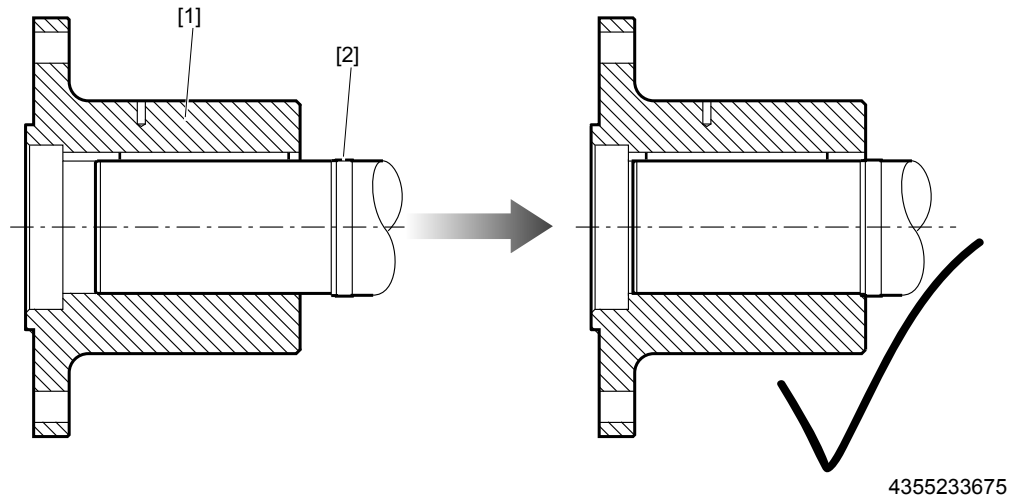



Assembly/installation

Flange couplings with keyway

6.13.3 Mounting the flange connection




NOTICE

Improper assembly may damage the flange coupling.

Possible damage to property.


- Note that the flange coupling cannot compensate shaft misalignments.

1. Clean the flange surfaces [1] of the flange coupling halves [2].

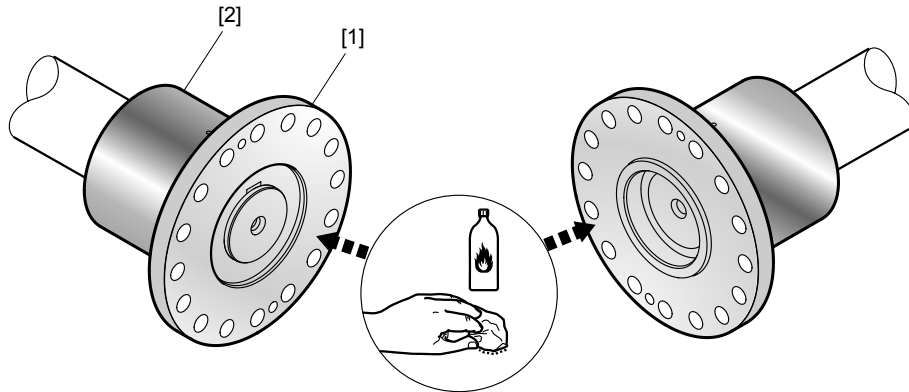

4349540107


2. Mount the end plate [3] to the gear unit shaft [5] with screws [4].

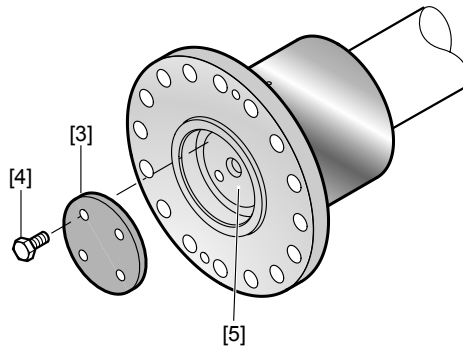

4364607755






3. Align the bore patterns of the two flange coupling halves [6] and join the flange coupling.

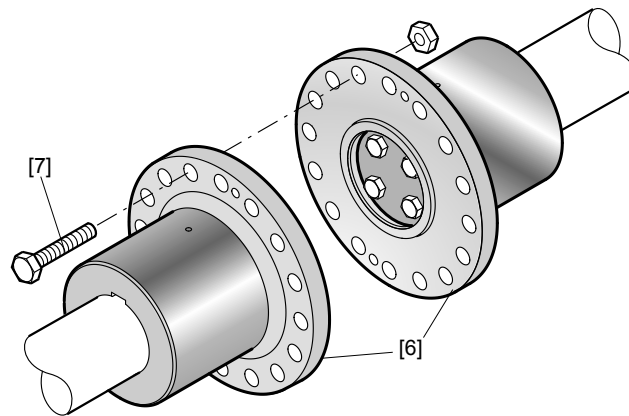

4349546635

4. Mount the bolts [7] and tighten them in diametrically opposite sequence with the tightening torques given in the following table.

- **INFORMATION** Do not lubricate the bolts [3] during assembly.

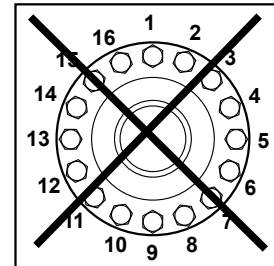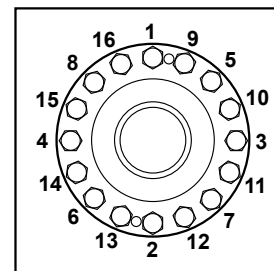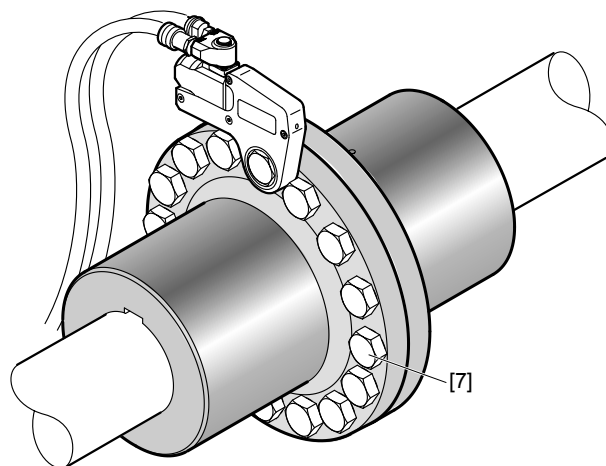

4355231243

Size	Bolt size	Tightening torque Strength class 10.9 [Nm]
X100-110	M20	661
X120-130	M24	1136
X140-150	M30	2274
X160-170	M36	3957
X180-190		
X200-230	M42	5610
X240-280	M48	8475
X290-320	M56	13583



6.13.4 Removing the coupling from the shaft



⚠ CAUTION

Risk of jamming and crushing due to improper removal of heavy components.

Risk of injury.

- Disassemble the flange coupling properly.
- Observe the following disassembly instructions.



NOTICE


Improper disassembly may damage the output shaft bearing.

Possible damage to property.

- Do not apply any tools between the coupling and the gear unit housing.


1. Loosen the bolts [7] and separate the flange coupling [6]

- **INFORMATION** Prepare disassembly tools and the process carefully, so that the coupling can be removed from the shaft quickly.

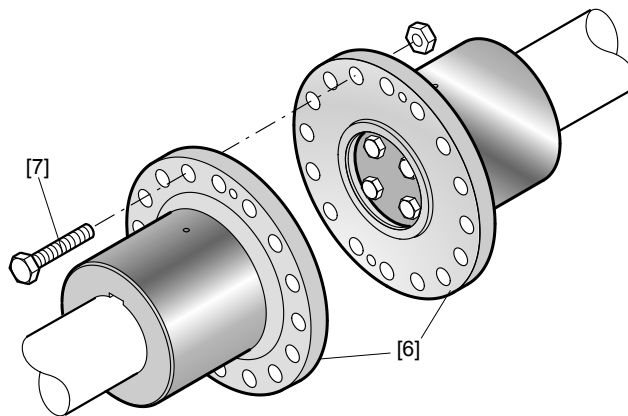

4349546635


2. Loosen the retaining screws [4] and remove the end plate [3] from the gear unit shaft [5].

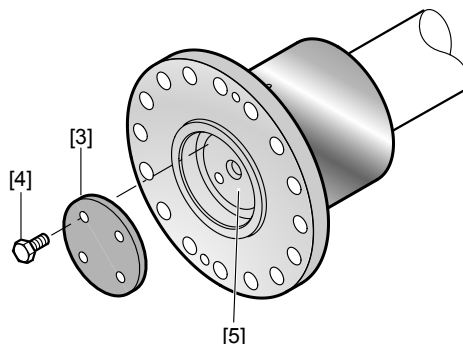

4364607755



3. Install the pull-off device [8]. Remove the flange coupling half [6] from the shaft [5].

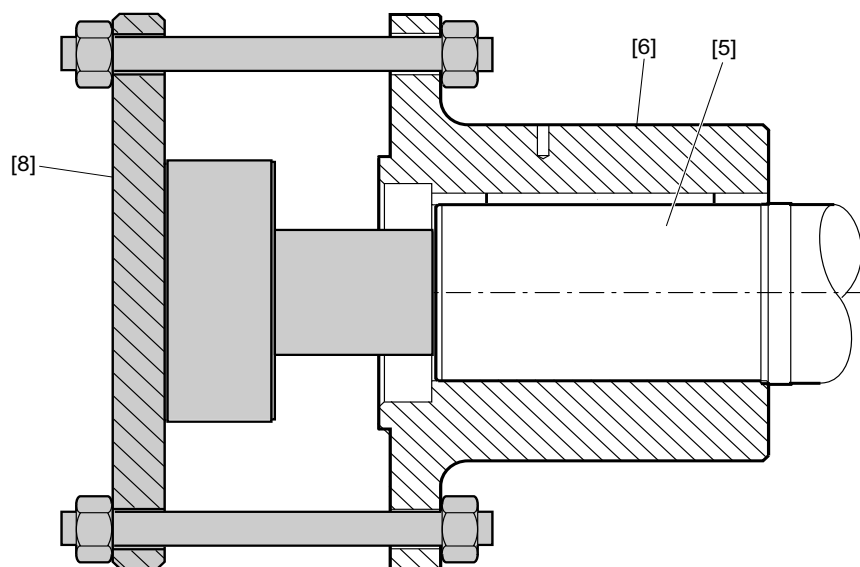

4349542283

4. Check the condition of the shaft and the flange coupling after the disassembly process. Damaged parts must be replaced.



Assembly/installation

Output shaft as a hollow shaft with keyed connection /..A

6.14 Output shaft as a hollow shaft with keyed connection /..A



INFORMATION on explosion protection

Only drive components with ATEX certification are permitted, assuming that these components are covered by Directive 94/9/EC.

6.14.1 General information

The material of the machine shaft as well as the keyed connection should be dimensioned by the customer according to the loads that will occur. The shaft material should have a yield point of at least 320 N/mm².

The minimum key length given in the dimension sheets (see next page) must be observed. If a longer key is used, it should be aligned symmetrically to the hollow shaft.

With a through-going machine shaft or axial forces, SEW-EURODRIVE recommends that the machine shaft be designed with a contact shoulder. It should be secured with a suitable thread locker to prevent the retaining screw of the machine shaft from loosening in the case of a reversing load direction. If necessary, two eccentric retaining screws may be used.



6.14.2 Thread sizes/tightening torques

SEW-EURODRIVE recommends the following thread sizes and tightening torques:

Size	Recommended thread size		Tightening torque [Nm] Retaining screw [6] ¹⁾ Strength class 8.8
	Ejector screw [8] ¹⁾ (threads in the end plate)	<ul style="list-style-type: none"> Threaded rod [2]¹⁾ Nut (DIN 934) [5]¹⁾ Retaining screw [6]¹⁾ strength class 8.8 	
X..A100	M24	M20	410
X..A110-150	M30	M24	710
X..A160-230	M36	M30	1450
X..A240-300	M42	M36	2500
X..A310-320	M48	M42	4600

1) See subsequent pages

Size	Thread size for 6 x retaining screws [3] ¹⁾ Strength class 10.9	Tightening torques		2 x retaining rings (bore) DIN 472
		Assembly/oper- ating state [Nm]	Disassembly [Nm]	
X..A100	-	-	-	75x2.5
X..A110	-	-	-	85x2.5
X..A120	-	-	-	95x3
X..A130	-	-	-	105x4
X..A140	-	-	-	115x4
X..A150	-	-	-	125x4
X..A160	-	-	-	135x4
X..A170-190	M10x30	48	Apply hand pressure	-
X..A200-230	M12x30	86	Apply hand pressure	-
X..A240-300	M16x40	210	Apply hand pressure	-
X..A310-320	M20x50	410	Apply hand pressure	-


1) see subsequent pages



Assembly/installation

Output shaft as a hollow shaft with keyed connection /..A

6.14.3 Dimensions of the machine shaft

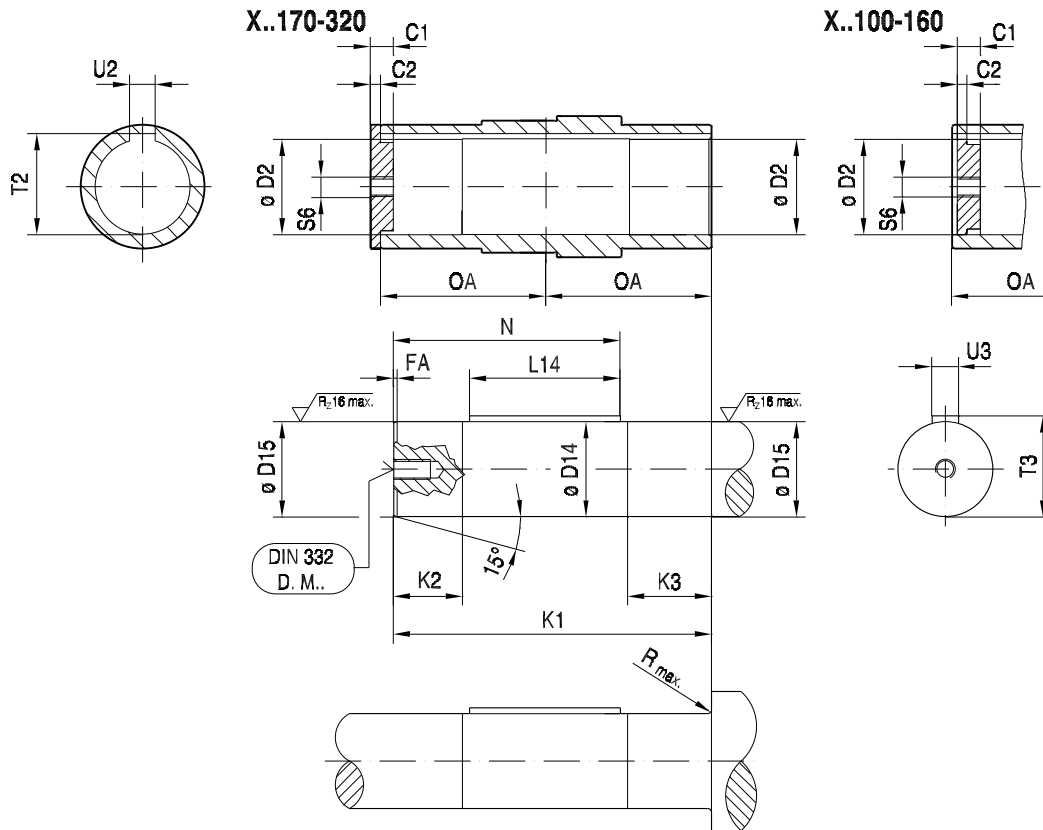

X.F/X.K X.T	C1	C2	Ø D2	Ø D14	Ø D15	FA	K1	K2	K3	L14	N	OA	Rmax.	S6	T2	T3	U2	U3	DIN 332 D.M..
X..A100	25	12	75 ^{H8}	75 _{h11}	75 _{js7}	2	312	47.5	81	90	205	173	1.6	M24	80.4	80	20 ^{JS9}	20 _{h9}	M20
X..A110	30	14	85 ^{H8}	85 _{h11}	85 _{js7}	2	312.5	45	84	100	210	176	1.6	M24	90.4	90	22 ^{JS9}	22 _{h9}	M20
X..A120	30	14	95 ^{H8}	95 _{h11}	95 _{js7}	2	342	53	92	140	244.5	190.5	1.6	M30	100.4	100	25 ^{JS9}	25 _{h9}	M24
X..A130	30	14	105 ^{H8}	105 _{h11}	105 _{js7}	2	347	68	109	160	258	194	1.6	M30	111.4	111	28 ^{JS9}	28 _{h9}	M24
X..A140	30	14	115 ^{H8}	115 _{h11}	115 _{js7}	2	403	61	102	200	306	222	1.6	M30	122.4	122	32 ^{JS9}	32 _{h9}	M24
X..A150	30	14	125 ^{H8}	125 _{h11}	125 _{js7}	3	408	76	117	200	308.5	224.5	1.6	M30	132.4	132	32 ^{JS9}	32 _{h9}	M24
X..A160	36	16	135 ^{H8}	135 _{h11}	135 _{js7}	3	465	80	127	250	361	256	1.6	M36	143.4	143	36 ^{JS9}	36 _{h9}	M30
X..A170	36	17	150 ^{H8}	150 _{h11}	150 _{js7}	3	493	96	115	280	377	256	1.6	M36	158.4	158	36 ^{JS9}	36 _{h9}	M30
X..A180	36	17	165 ^{H8}	165 _{h11}	165 _{js7}	3	565	109	128	300	423	292	2	M36	174.4	174	40 ^{JS9}	40 _{h9}	M30
X..A190	36	17	165 ^{H8}	165 _{h11}	165 _{js7}	3	565	109	128	300	423	292	2	M36	174.4	174	40 ^{JS9}	40 _{h9}	M30
X..A200	36	17	180 ^{H8}	180 _{h11}	180 _{js7}	3	620	130	149	320	460.5	319.5	2	M36	190.4	190	45 ^{JS9}	45 _{h9}	M30
X..A210	36	17	190 ^{H8}	190 _{h11}	190 _{js7}	3	620	130	149	320	460.5	319.5	2	M36	200.4	200	45 ^{JS9}	45 _{h9}	M30
X..A220	36	17	210 ^{H8}	210 _{h11}	210 _{js7}	3	686	133	152	370	518.5	352.5	2.5	M36	221.4	221	50 ^{JS9}	50 _{h9}	M30
X2KA220	36	17	210 ^{H8}	210 _{h11}	210 _{js7}	3	756	133	152	370	554	388	2.5	M36	221.4	221	50 ^{JS9}	50 _{h9}	M30
X..A230	36	17	210 ^{H8}	210 _{h11}	210 _{js7}	3	686	133	152	370	518.5	352.5	2.5	M36	221.4	221	50 ^{JS9}	50 _{h9}	M30
X2KA230	36	17	210 ^{H8}	210 _{h11}	210 _{js7}	3	756	133	152	370	554	388	2.5	M36	221.4	221	50 ^{JS9}	50 _{h9}	M30
X..A240	45	22	230 ^{H8}	230 _{h11}	230 _{js7}	3	778	147	170	370	562.5	400.5	2.5	M42	241.4	241	50 ^{JS9}	50 _{h9}	M36
X2KA240	45	22	230 ^{H8}	230 _{h11}	230 _{js7}	3	853	147	170	370	600	438	2.5	M42	241.4	241	50 ^{JS9}	50 _{h9}	M36
X..A250	45	22	240 ^{H8}	240 _{h11}	240 _{js7}	3	778	147	170	370	562.5	400.5	2.5	M42	252.4	252	56 ^{JS9}	56 _{h9}	M36
X2KA250	45	22	240 ^{H8}	240 _{h11}	240 _{js7}	3	853	147	170	370	600	438	2.5	M42	252.4	252	56 ^{JS9}	56 _{h9}	M36
X..A260	45	22	240 ^{H8}	240 _{h11}	240 _{js7}	3	851	143	166	450	639	437	2.5	M42	252.4	252	56 ^{JS9}	56 _{h9}	M36
X..A270	45	22	275 ^{H8}	275 _{h11}	275 _{js7}	4	877	158	181	450	652	450	5	M42	287.4	287	63 ^{JS9}	63 _{h9}	M36
X..A280	45	22	275 ^{H8}	275 _{h11}	275 _{js7}	4	877	158	181	500	677	450	5	M42	287.4	287	63 ^{JS9}	63 _{h9}	M36
X..A290	45	22	290 ^{H8}	290 _{h11}	290 _{js7}	4	961	160	183	500	719	492	5	M42	302.4	302	63 ^{JS9}	63 _{h9}	M36
X..A300	45	22	290 ^{H8}	290 _{h11}	290 _{js7}	4	961	160	183	500	719	492	5	M42	302.4	302	63 ^{JS9}	63 _{h9}	M36
X..A310	55	28	320 ^{H8}	320 _{h11}	320 _{js7}	4	1030	170	197	560	781.5	528.5	5	M42	334.4	334	70 ^{JS9}	70 _{h9}	M36
X..A320	55	28	320 ^{H8}	320 _{h11}	320 _{js7}	4	1030	170	197	560	781.5	528.5	5	M42	334.4	334	70 ^{JS9}	70 _{h9}	M36



6.14.4 Mounting the gear unit onto the machine shaft



INFORMATION

Make sure the dimensions of the machine shaft correspond to SEW specifications
→ see previous page.


Sizes X100-160



INFORMATION

- Included in the scope of delivery:
 - 2 x retaining rings [8], [9] and end plate [4]
- **Not** included in the scope of delivery:
 - Threaded rod [2], nut [5], retaining screw [6], ejector screw [8]

1. Apply NOCO[®] fluid to the hollow shaft [7] and the end of the machine shaft [1].

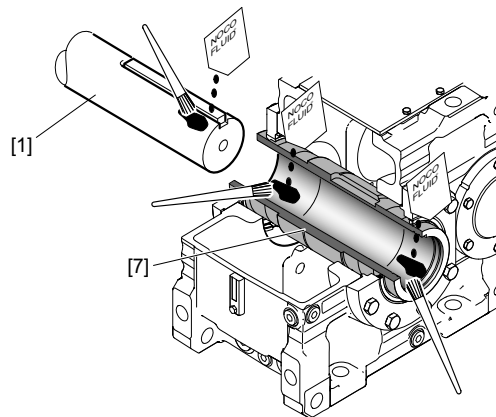

[1] Machine shaft

[7] Hollow shaft

9007199565088907




Assembly/installation

Output shaft as a hollow shaft with keyed connection /..A

2. Attach the inner retaining ring [8] to the hollow shaft [7]. Secure the end plate [4] using the outer retaining ring [9]. Thread the threaded rod [2] into the machine shaft [1]. Observe the tightening torques in section "Thread size/tightening torques" (page 101).

- **INFORMATION** Applying lubricant to the threaded rod and nut prior to assembly makes the job easier.

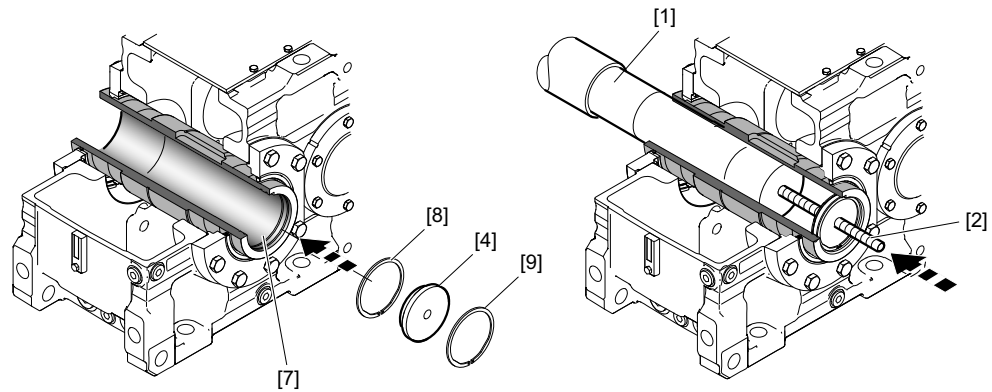


2888325003

[1] Machine shaft
[2] Threaded rod
[4] End plate

[7] Hollow shaft
[8] Inner retaining ring
[9] Outer retaining ring

3. Tighten the machine shaft [1] with the nut [5] until the shaft end of the machine shaft [1] and the end plate [4] meet.

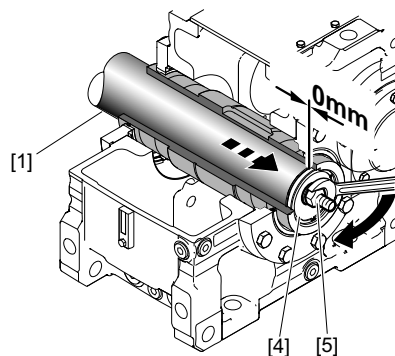


2879305611

[1] Machine shaft
[4] End plate
[5] Nut




4. Loosen the nut [5]. Screw the threaded rod [2] out.

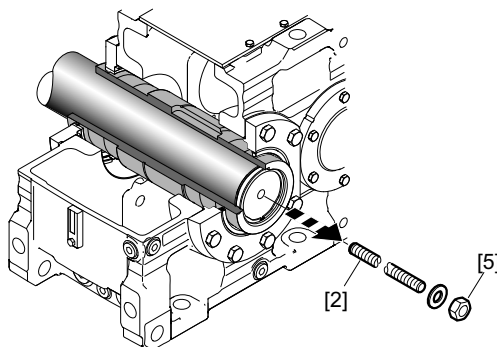

2887985163

[2] Threaded rod
[5] Nut

5. Secure the machine shaft [1] with the retaining screw [6]. The retaining screw should also be locked with a suitable thread locker. Observe the tightening torques in section "Thread sizes / tightening torques" (page 101).

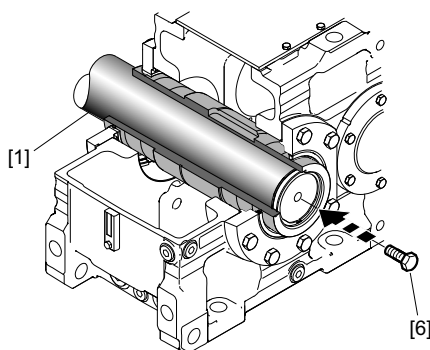

2879305611

[1] Machine shaft
[6] Retaining screw



NOTICE

Improper assembly of the protection cover may result in risk of injury due to rotating parts. Dust and dirt may damage the sealing system of the gear unit.

Risk of injury to persons and damage to property.

- Be sure to properly attach the protection cover after completing assembly (dust proof).



INFORMATION on explosion protection

When mounting the protection cover, make sure it entirely covers the gasket to guarantee it is dust-proof.

If the gear unit is subject to increased vibrations during operation, additionally secure the screws against loosening (e.g. using Loctite®).



Assembly/installation

Output shaft as a hollow shaft with keyed connection /..A



INFORMATION on explosion protection

Covers can be omitted if they cannot be mounted due to special designs, such as continuous shafts. In this case, the machine or system manufacturer must deliver suitable accessories that offer a degree of protection stipulated in DIN EN 13463.

If special maintenance work is necessary for this, it must be described in the operating instructions corresponding to the machine or components.


Sizes X170-320



INFORMATION

- Included in the scope of delivery:
 - Retaining screws [3] and end plate [4]
- **Not** included in the scope of delivery:
 - Threaded rod [2], nut [5], retaining screw [6], ejector screw [8]

1. Apply NOCO[®] fluid to the hollow shaft [7] and the end of the machine shaft [1].

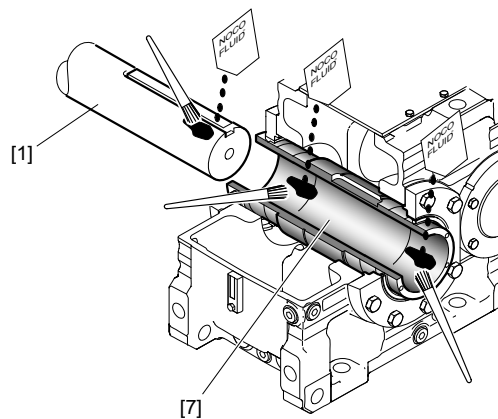

2879253259


[1] Machine shaft

[7] Hollow shaft

2. Use the retaining screws [3] to attach the end plate [4] centrically to the hollow shaft [7] and screw the threaded rod [2] onto the machine shaft [1]. Observe the tightening torques in section "Thread size/tightening torques" (page 101).



- **INFORMATION** Applying lubricant to the threaded rod and nut prior to assembly makes the job easier.

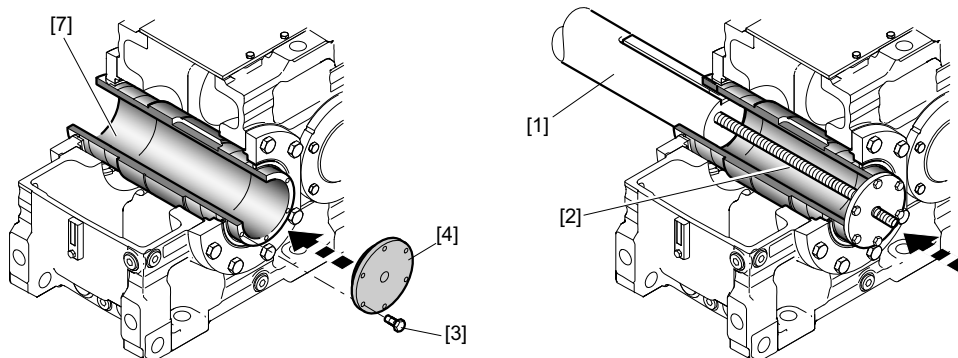

310352011

[1] Machine shaft
[2] Threaded rod


[3] Retaining screws
[4] End plate
[7] Hollow shaft



Assembly/installation

Output shaft as a hollow shaft with keyed connection /..A

3. Tighten the machine shaft [1] with the nut [5] until the shaft end of the machine shaft [1] and the end plate [4] meet.

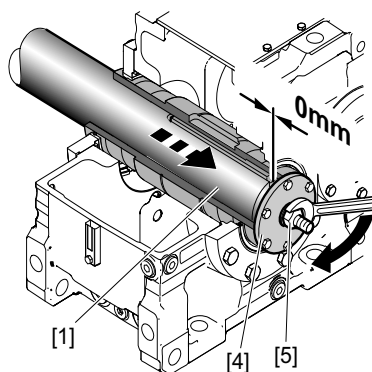


310407307

[1] Machine shaft

[4] End plate

[5] Nut

4. Loosen the nut [5]. Screw the threaded rod [2] out.

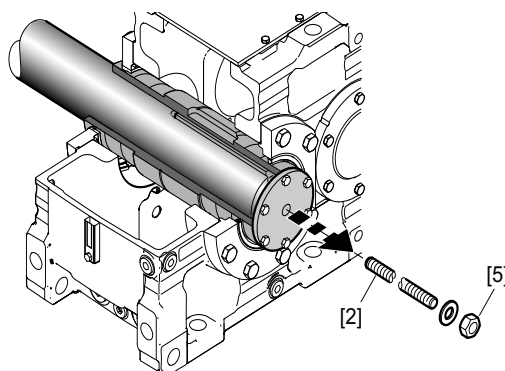


310655244

[2] Threaded rod

[5] Nut



5. Secure the machine shaft [1] with the retaining screw [6]. The retaining screw should also be locked with a suitable thread locker. Observe the tightening torques in section "Thread size/tightening torques" (page 101).

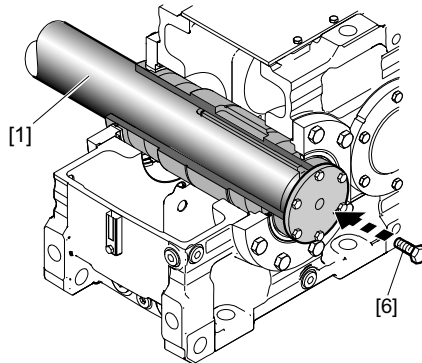

310415883

[1] Machine shaft
[6] Retaining screw



NOTICE

Improper assembly of the protection cover may result in risk of injury due to rotating parts. Dust and dirt may damage the sealing system of the gear unit.

Risk of injury to persons and damage to property.

- Be sure to properly attach the protection cover after completing assembly (dust proof).



INFORMATION on explosion protection

When mounting the protection cover, make sure it entirely covers the gasket to guarantee it is dust-proof.

If the gear unit is subject to increased vibrations during operation, additionally secure the screws against loosening (e.g. using Loctite®).



INFORMATION on explosion protection

Covers can be omitted if they cannot be mounted due to special designs, such as continuous shafts. In this case, the machine or system manufacturer must deliver suitable accessories that offer a degree of protection stipulated in DIN EN 13463.

If special maintenance work is necessary for this, it must be described in the operating instructions corresponding to the machine or components.



Assembly/installation

Output shaft as a hollow shaft with keyed connection /..A

6.14.5 Removing the gear unit from the machine shaft



NOTICE


Improper disassembly may damage bearings and other components.

Possible damage to property.

- You may only use the hollow shaft as a support for disassembly. Note that supporting on any other parts of the gear unit may damage the material.

Sizes X100-160


1. Loosen the retaining screw [6]. Remove the outer circlip [8] and the end plate [4].

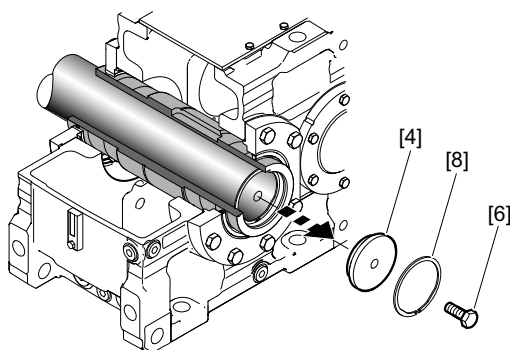

2851177867

- [4] End plate
[6] Retaining screw
[8] Retaining ring

2. To protect the center bore, screw the retaining screw [6] into the machine shaft [1].

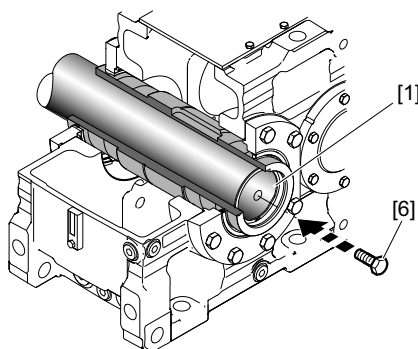


2851180299

- [1] Machine shaft
[6] Retaining screw



3. Turn the end plate [4] and remount it with the outer retaining ring [8].

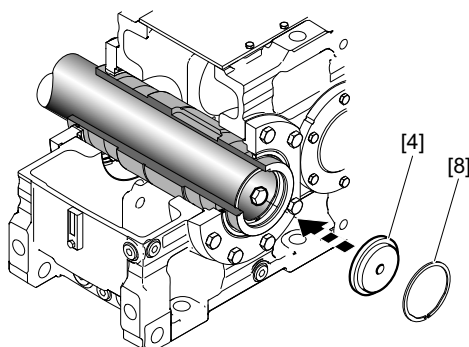


2851183627

- [4] End plate
[8] Retaining ring

4. Thread the ejector screw [8] into the end plate [4] to remove the gear unit from the machine shaft [1].

- **INFORMATION** Applying lubricant to the ejector screw [8] and the thread in the end plate prior [4] to disassembly makes the job easier.

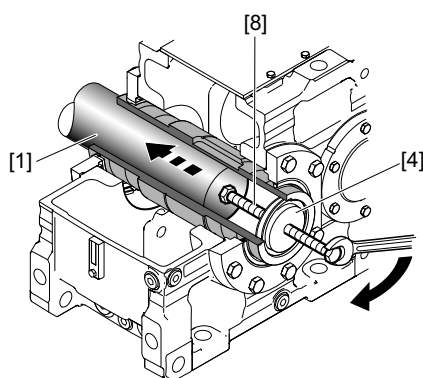

2851187595

- [1] Machine shaft
[4] End plate
[8] Ejector screw




Assembly/installation

Output shaft as a hollow shaft with keyed connection /..A


Sizes X170-320

1. Loosen the retaining screw [6].

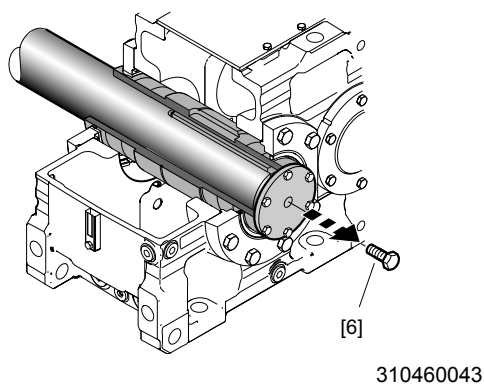

[6] Retaining screw

2. Remove the retaining screws [3] and the end plate [4].

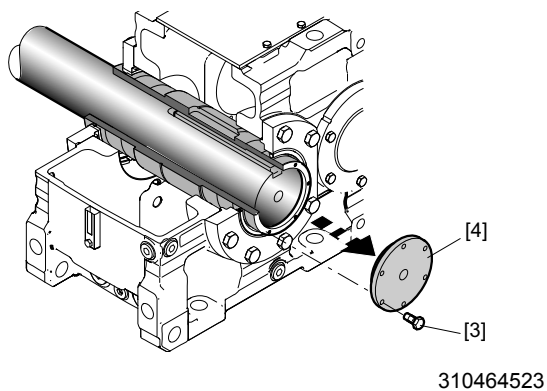


[3] Retaining screw

[4] End plate




3. To protect the center bore, screw the retaining screw [6] into the machine shaft [1].

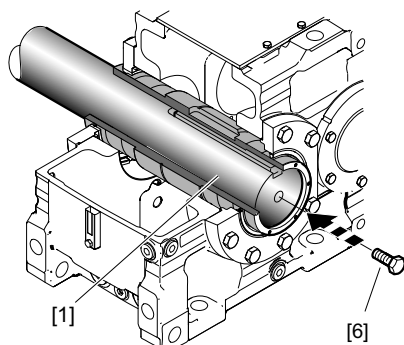

310470027

- [1] Machine shaft
[6] Retaining screw

4. To disassemble the gear unit, flip the end plate [4] over and use the retaining screws [3] to reattach it centrally to the hollow shaft [7]. The retaining screws [3] should be tightened hand-tight.

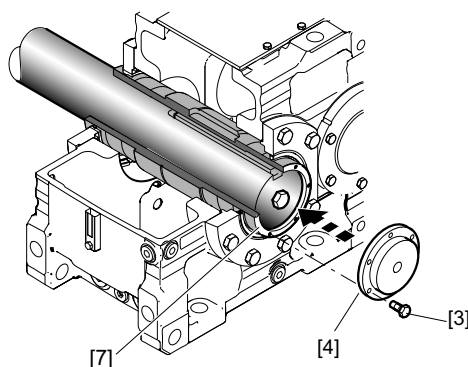

310474123

- [4] End plate
[3] Retaining screw
[7] Hollow shaft




Assembly/installation

Output shaft as a hollow shaft with keyed connection /..A

5. Thread the ejector screw [8] into the end plate [4] to remove the gear unit from the machine shaft [1].

INFORMATION Applying lubricant to the ejector screw [8] and the thread in the end plate prior [4] to disassembly makes the job easier.

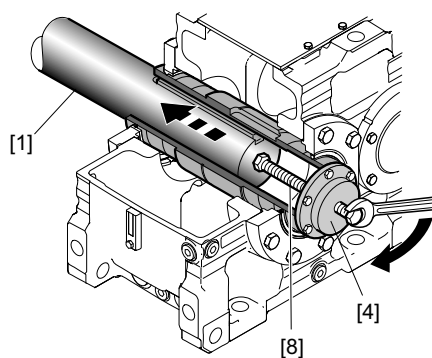

310478219

[1] Machine shaft

[4] End plate

[8] Ejector screw



6.15 Output shaft as a hollow shaft with shrink disk /..H



INFORMATION on explosion protection

Only drive components with corresponding ATEX certification are permitted, assuming that these components are covered by Directive 94/9/EC.

6.15.1 General information

The material of the machine shaft should be dimensioned by the customer according to the loads that will occur. The shaft material should have a yield point of at least 320 N/mm².

6.15.2 Thread sizes/tightening torques

SEW-EURODRIVE recommends the following thread sizes and tightening torques:

Size	Recommended thread size		Tightening torque [Nm] Retaining screw [6] ¹⁾ Strength class 8.8
	Ejector screw [8] ¹⁾ (threads in the end plate)	<ul style="list-style-type: none"> Threaded rod [2]¹⁾ Nut (DIN 934) [5]¹⁾ Retaining screw [6]¹⁾ strength class 8.8 	
X..H100-150	M30	M24	710
X..H160-230	M36	M30	1450
X..H240-300	M42	M36	2500
X..H310-320	M48	M42	4600

1) see subsequent pages

Size	Thread size for 6 x retaining screws [3] ¹⁾ Strength class 10.9	Tightening torque		2 x retaining rings (bore) DIN 472
		Assembly/oper- ating state [Nm]	Disassembly [Nm]	
X..H100	-	-	-	80x2.5
X..H110	-	-	-	90x2.5
X..H120	-	-	-	100x3
X..H130	-	-	-	110x4
X..H140	-	-	-	120x4
X..H150	-	-	-	130x4
X..H160	-	-	-	140x4
X..H170-190	M10x30	48	Apply hand pressure	-
X..H200-230	M12x30	86	Apply hand pressure	-
X..H240-300	M16x40	210	Apply hand pressure	-
X..H310-320	M20x50	410	Apply hand pressure	-


1) see subsequent pages



Assembly/installation

Output shaft as a hollow shaft with shrink disk /..H

6.15.3 Dimensions of the machine shaft

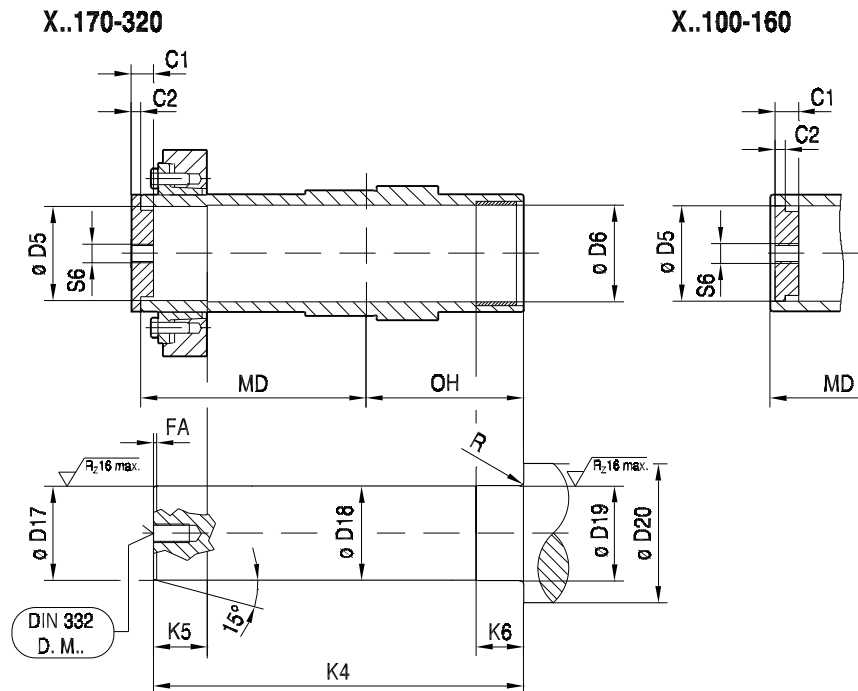

9007199906389771

X.F. X.K.. X.T..	C1	C2	ø D5	ø D6	ø D17	ø D18	ø D19	ø D20	FA	K4	K5	K6	MD	OH	R	S6	DIN 332 D.M..
X..H100	30	14	80 ^{H7}	81 ^{H9}	80 _{h6}	80 _{h11}	81 _{m6}	95	2	394.5 ₋₁	46	42 ₋₁	261	173	3	M24	M20
X..H110	30	14	90 ^{H7}	91 ^{H9}	90 _{h6}	90 _{h11}	91 _{m6}	105	2	400.5 ₋₁	46	42 ₋₁	265	176	3	M30	M24
X..H120	30	14	100 ^{H7}	101 ^{H9}	100 _{h6}	100 _{h11}	101 _{m6}	115	2	437 ₋₁	51	52 ₋₁	286.5	190.5	3	M30	M24
X..H130	30	14	110 ^{H7}	111 ^{H9}	110 _{h6}	110 _{h11}	111 _{m6}	125	2	449 ₋₁	55	52 ₋₁	297	194	3	M30	M24
X..H140	30	14	120 ^{H7}	121 ^{H9}	120 _{h6}	120 _{h11}	121 _{m6}	135	2	509 ₋₁	59	62 ₋₁	329	222	3	M30	M24
X..H150	30	14	130 ^{H7}	131 ^{H9}	130 _{h6}	130 _{h11}	131 _{m6}	145	3	520 ₋₁	66	62 ₋₁	337.5	224.5	3	M30	M24
X..H160	36	16	140 ^{H7}	141 ^{H9}	140 _{h6}	140 _{h11}	141 _{m6}	155	3	583 ₋₁	66	73 ₋₁	375	256	4	M36	M30
X..H170	36	17	150 ^{H7}	151 ^{H9}	150 _{h6}	150 _{h11}	151 _{m6}	165	3	600 ₋₁	83	73 ₋₁	364	256	4	M36	M30
X..H180	36	17	165 ^{H7}	166 ^{H9}	165 _{g6}	165 _{h11}	166 _{m6}	180	3	672 ₋₁	83	83 ₋₁	400	292	4	M36	M30
X..H190	36	17	165 ^{H7}	166 ^{H9}	165 _{g6}	165 _{h11}	166 _{m6}	180	3	672 ₋₁	83	83 ₋₁	400	292	4	M36	M30
X..H200	36	17	180 ^{H7}	181 ^{H9}	180 _{g6}	180 _{h11}	181 _{m6}	195	3	750 ₋₁	101	83 ₋₁	450.5	319.5	4	M36	M30
X..H210	36	17	190 ^{H7}	191 ^{H9}	190 _{g6}	190 _{h11}	191 _{m6}	205	3	753 ₋₁	106	83 ₋₁	453.5	319.5	4	M36	M30
X..H220	36	17	210 ^{H7}	211 ^{H9}	210 _{g6}	210 _{h11}	211 _{m6}	230	3	830 ₋₁	118	108 ₋₁	497.5	352.5	5	M36	M30
X2KH220	36	17	210 ^{H7}	211 ^{H9}	210 _{g6}	210 _{h11}	211 _{m6}	230	3	900 ₋₁	118	108 ₋₁	532.5	387.5	5	M36	M30
X..H230	36	17	210 ^{H7}	211 ^{H9}	210 _{g6}	210 _{h11}	211 _{m6}	230	3	830 ₋₁	118	108 ₋₁	497.5	352.5	5	M36	M30
X2KH230	36	17	210 ^{H7}	211 ^{H9}	210 _{g6}	210 _{h11}	211 _{m6}	230	3	900 ₋₁	118	108 ₋₁	532.5	387.5	5	M36	M30
X..H240	45	22	230 ^{H7}	231 ^{H9}	230 _{g6}	230 _{h11}	231 _{m6}	250	3	948 ₋₁	140	108 ₋₁	571.5	400.5	5	M42	M36
X2KH240	45	22	230 ^{H7}	231 ^{H9}	230 _{g6}	230 _{h11}	231 _{m6}	250	3	1023 ₋₁	140	108 ₋₁	609	438	5	M42	M36
X..H250	45	22	240 ^{H7}	241 ^{H9}	240 _{g6}	240 _{h11}	241 _{m6}	260	3	948 ₋₁	140	108 ₋₁	571.5	400.5	5	M42	M36
X2KH250	45	22	240 ^{H7}	241 ^{H9}	240 _{g6}	240 _{h11}	241 _{m6}	260	3	1023 ₋₁	140	108 ₋₁	609	438	5	M42	M36
X..H260	45	22	250 ^{H7}	255 ^{H9}	250 _{g6}	250 _{h11}	255 _{m6}	280	4	1021 ₋₁	140	108 ₋₁	608	437	5	M42	M36
X..H270	45	22	280 ^{H7}	285 ^{H9}	280 _{g6}	280 _{h11}	285 _{m6}	310	4	1056 ₋₁	146	143 ₋₁	630	450	5	M42	M36
X..H280	45	22	280 ^{H7}	285 ^{H9}	280 _{g6}	280 _{h11}	285 _{m6}	310	4	1056 ₋₁	146	143 ₋₁	630	450	5	M42	M36
X..H290	45	22	300 ^{H7}	305 ^{H9}	300 _{g6}	300 _{h11}	305 _{m6}	330	4	1147 ₋₁	152	143 ₋₁	679	492	5	M42	M36
X..H300	45	22	300 ^{H7}	305 ^{H9}	300 _{g6}	300 _{h11}	305 _{m6}	330	4	1147 ₋₁	152	143 ₋₁	679	492	5	M42	M36
X..H310	55	28	320 ^{H7}	325 ^{H9}	320 _{g6}	320 _{h11}	325 _{m6}	350	4	1241 ₋₁	165	143 ₋₁	740.5	528.5	5	M42	M36
X..H320	55	28	320 ^{H7}	325 ^{H9}	320 _{g6}	320 _{h11}	325 _{m6}	350	4	1241 ₋₁	165	143 ₋₁	740.5	528.5	5	M42	M36



6.15.4 Mounting the gear unit onto the machine shaft



INFORMATION

Make sure the dimensions of the machine shaft correspond to SEW specifications
→ see previous page.

Sizes X100-160



INFORMATION



- Included in the scope of delivery:
 - 2 x retaining rings [8], [9] and end plate [4].
- **Not** included in the scope of delivery:
 - Threaded rod [2], nut [5], retaining screw [6], ejector screw [8].

1. Before assembling the gear unit, degrease the hollow shaft [7] and the machine shaft [1] and apply some NOCO[®] fluid to the machine shaft [1] in the bushing area [11].

- **NOTICE** Never apply NOCO[®] fluid directly to the bushing [11] since the paste may get into the clamping area of the shrink disk when the input shaft is connected.

Possible damage to property.

- The clamping area of the shrink disk between the machine shaft [1] and the hollow shaft [7] must remain absolutely free of any grease.

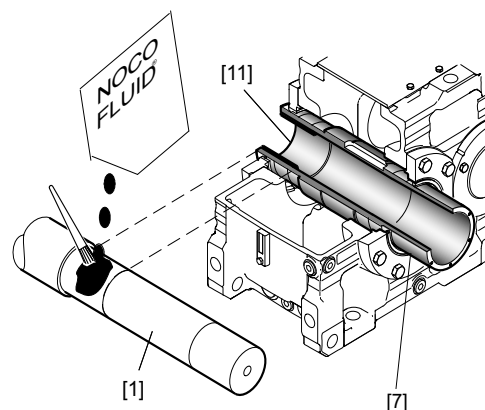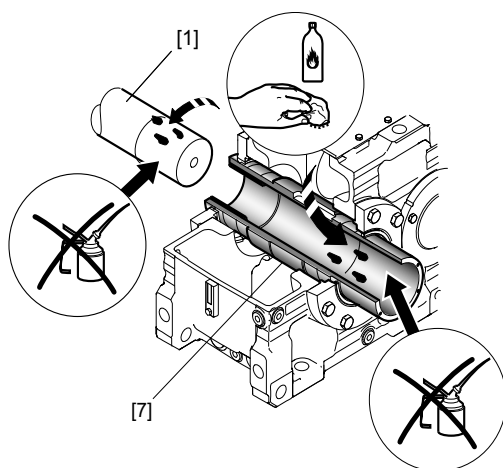

356508044

[1] Machine shaft
[7] Hollow shaft
[11] Bushing




Assembly/installation

Output shaft as a hollow shaft with shrink disk /..H

2. Attach the inner retaining ring [8] to the hollow shaft [7]. Use the outer retaining ring [9] to secure the end plate [4]. Screw the threaded rod [2] into the machine shaft [1]. Observe the tightening torques in section "Thread size/tightening torques" (page 115).


- **INFORMATION** Applying lubricant to the threaded rod and nut prior to assembly makes the job easier.

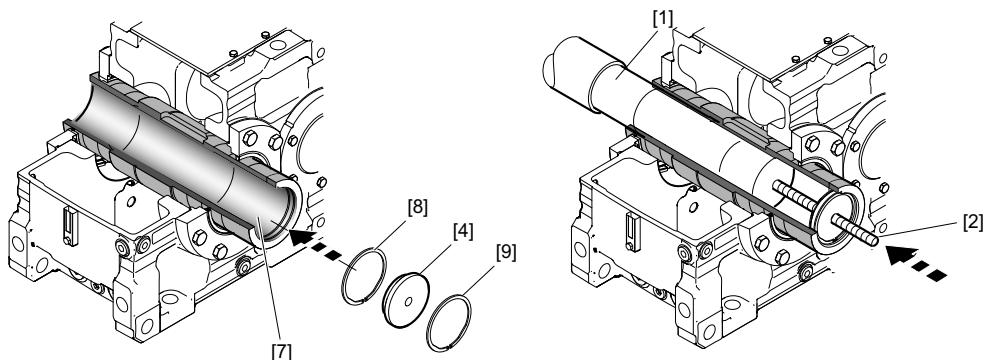

2879298827

- | | |
|-------------------|--------------------------|
| [1] Machine shaft | [7] Hollow shaft |
| [2] Threaded rod | [8] Inner retaining ring |
| [4] End plate | [9] Outer retaining ring |

3. Tighten the machine shaft [1] with the nut [5] until the shaft end of the machine shaft [1] and the end plate [4] meet.

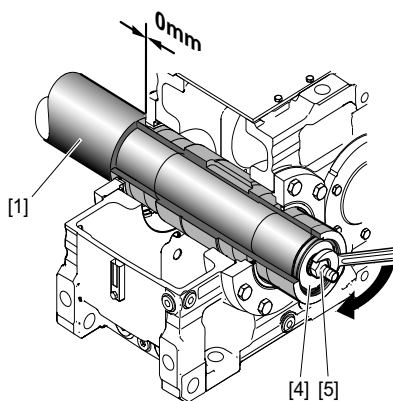


2888427147

- | |
|-------------------|
| [1] Machine shaft |
| [4] End plate |
| [5] Nut |




4. Loosen the nut [5]. Screw the threaded rod [2] out.

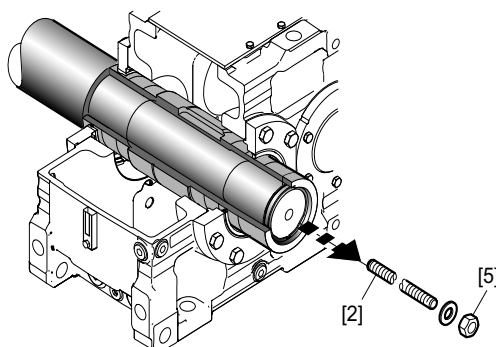

2879303435

- [2] Threaded rod
[5] Nut

5. Secure the machine shaft [1] with the retaining screw [6]. The retaining screw should also be locked with a suitable thread locker. Observe the tightening torques in section "Thread sizes / tightening torques" (page 115).

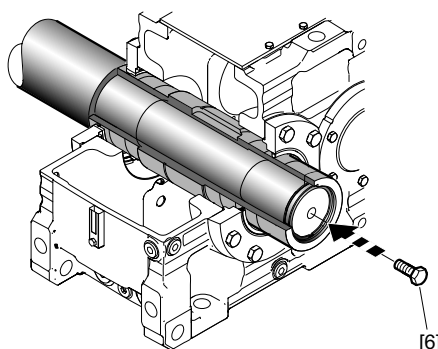

2888331147

- [1] Machine shaft
[6] Retaining screw





Assembly/installation

Output shaft as a hollow shaft with shrink disk /..H

6. Slide the shrink disk [9] with untightened screws onto the hollow shaft [7] and position the inner ring of the shrink disk [9b] with measurement A.

- **CAUTION** The loose shrink disk could slip.
Risk of injury to persons and damage to property.
 - Secure the shrink disk against slipping.
- **NOTICE** Tightening the locking screws without first installing a shaft may result in the hollow shaft being deformed.
Possible damage to property.
 - Never tighten the screws without the shaft installed.

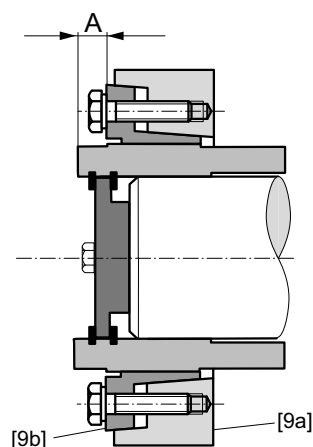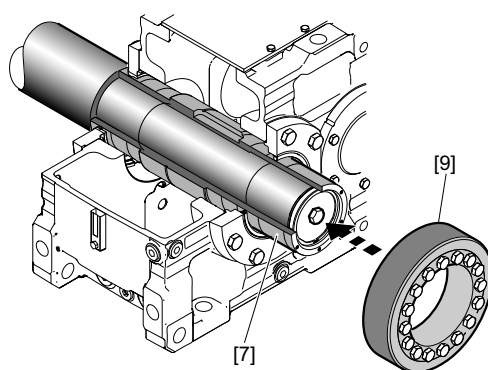

2886265099


[7] Hollow shaft
[9] Shrink disk

[9a] Bevel (outer ring)
[9b] Taper bushing (inner ring)

Size	A [mm]
XH100	37.5
XH110	38
XH120	39
XH130-140	41
XH150	42
XH160	48



7. Tighten the retaining screws [10] hand-tight. In doing so, align the bevel (outer ring) [9a] parallel to the taper bushing (inner ring) [9b]. Successively tighten the retaining screws [10] in a clockwise direction (not in a diametrically opposite sequence), each with a quarter turn. Do not tighten the retaining screws [10] in a diametrically opposite sequence.
- **INFORMATION** For shrink disks with a slotted taper bushing (inner ring) [9b], tighten the retaining screws [10] to the left and right of the slot one after another, and then, in several stages, tighten the remaining screws at evenly spaced intervals.

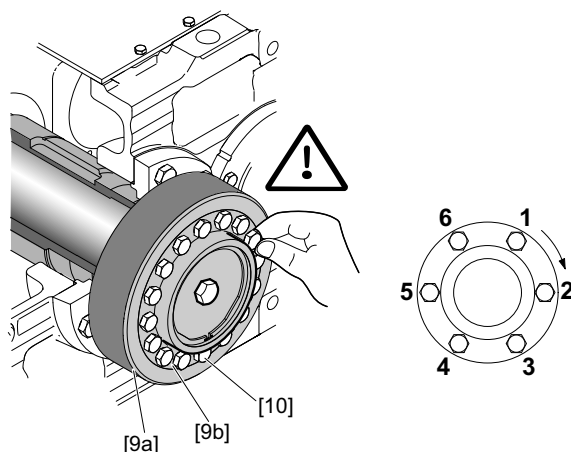


2886267275

[9a] Bevel (outer ring)
[9b] Taper bushing (inner ring)

[10] Locking screws

8. Working around the ring in several stages, evenly tighten the locking screws [10] by $\frac{1}{4}$ turns until the bevel (outer ring) [9a] and the taper bushing (inner ring) [9b] align on the face that holds the screws as is shown in the illustration below.

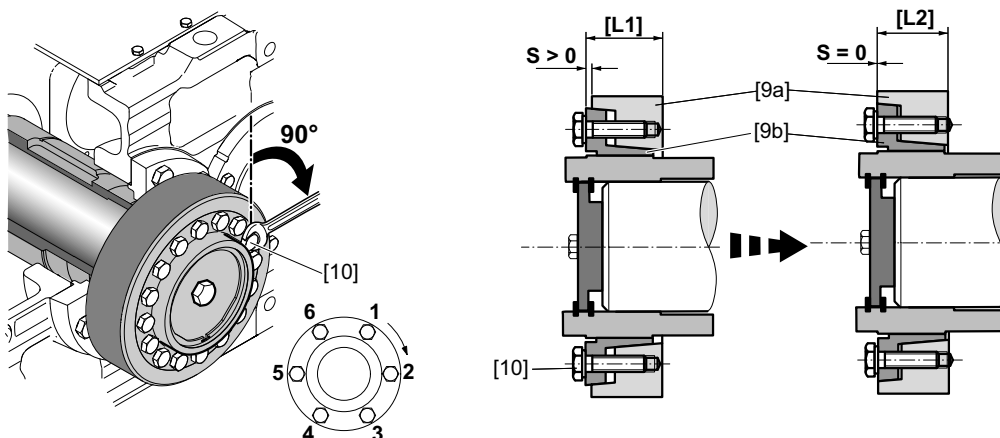

2886269451

[9a] Bevel (outer ring)
[9b] Taper bushing (inner ring)
[10] Locking screws

[L1] Condition at the time of shipment (pre-assembled)
[L2] Finished assembly (ready for operation)



Assembly/installation

Output shaft as a hollow shaft with shrink disk /..H



INFORMATION

If the taper (outer ring) and the taper bushing (inner ring) cannot be aligned on the face that holds the screws, remove the shrink disk again. Clean and lubricate it as described in the next chapter.



NOTICE

Improper assembly of the protection cover may result in risk of injury due to rotating parts. Dust and dirt may damage the sealing system of the gear unit.

Risk of injury to persons and damage to property.

- Be sure to properly attach the protection cover after completing assembly (dust proof).
-



INFORMATION on explosion protection

When mounting the protection cover, make sure it entirely covers the gasket to guarantee it is dust-proof.

If the gear unit is subject to increased vibrations during operation, additionally secure the screws against loosening (e.g. using Loctite®).



INFORMATION on explosion protection

Covers can be omitted if they cannot be mounted due to special designs, such as continuous shafts. In this case, the machine or system manufacturer must deliver suitable accessories that offer a degree of protection stipulated in DIN EN 13463.

If special maintenance work is necessary for this, it must be described in the operating instructions corresponding to the machine or components.



Sizes X170-320



INFORMATION


- Included in the scope of delivery:
 - Retaining screws [3] and end plate [4].
- **Not** included in the scope of delivery:
 - Threaded rod [2], nut [5], retaining screw [6], ejector screw [8].

1. Before assembling the gear unit, degrease the hollow shaft [7] and the machine shaft [1] and apply some NOCO[®] fluid to the machine shaft [1] in the bushing area [11].

- **NOTICE** Never apply NOCO[®] fluid directly to the bushing [11] since the paste may get into the clamping area of the shrink disk when the input shaft is connected.

Possible damage to property.

- The clamping area of the shrink disk between the machine shaft [1] and the hollow shaft [7] must remain absolutely free of any grease.

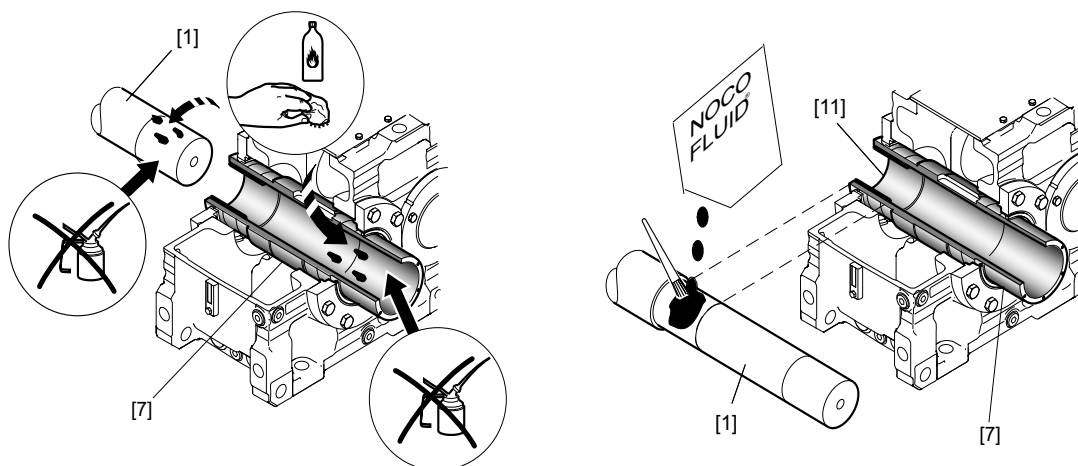

356508044


[1] Machine shaft
[7] Hollow shaft
[11] Bushing



Assembly/installation

Output shaft as a hollow shaft with shrink disk /..H


2. Use the retaining screws [3] to attach the end plate [4] centrally on the hollow shaft [7]. Thread the threaded rod [2] into the machine shaft [1]. Observe the tightening torques in chapter "Thread sizes / tightening torques" (page 115).

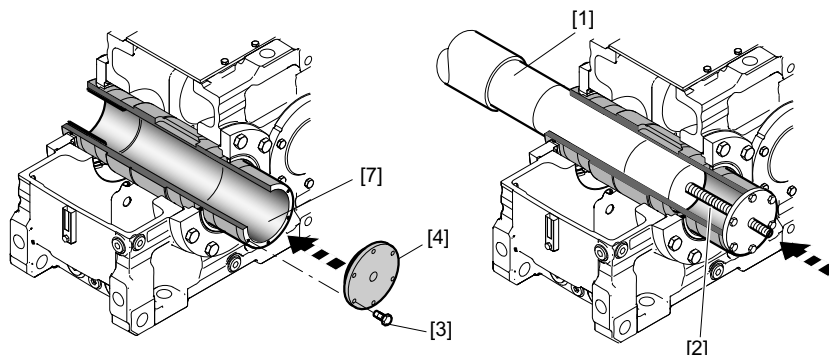

356508428

- | | |
|----------------------|------------------|
| [1] Machine shaft | [4] End plate |
| [2] Threaded rod | [7] Hollow shaft |
| [3] Retaining screws | |

3. Tighten the machine shaft [1] with the nut [5] until the shoulders of the machine shaft and the hollow shaft [7] meet.

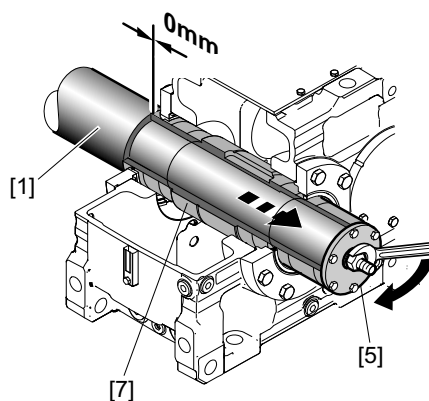


310501387

- | | |
|-------------------|------------------|
| [1] Machine shaft | [7] Hollow shaft |
| [5] Nut | |



4. Loosen the nut [5]. Screw the threaded rod [2] out.

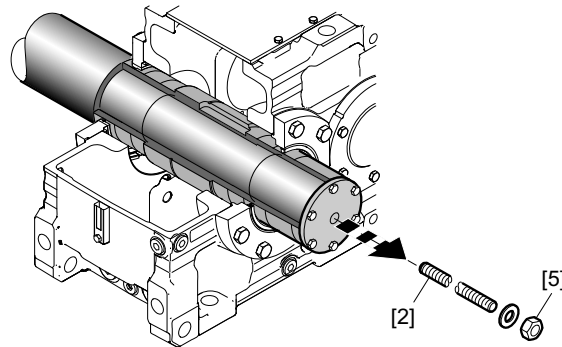


310506251

[2] Threaded rod

[5] Nut

5. Secure the machine shaft [1] with the retaining screw [6]. The retaining screw should also be locked with a suitable thread locker. Observe the tightening torques in chapter "Thread sizes / tightening torques" (page 115).

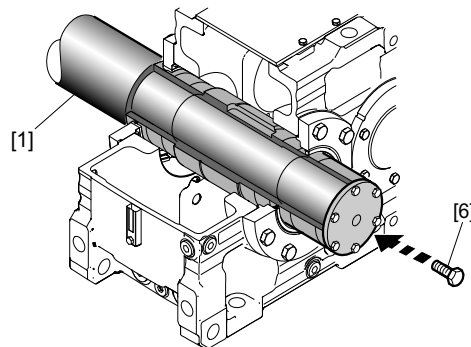

310510731

[1] Machine shaft

[6] Retaining screw




Assembly/installation

Output shaft as a hollow shaft with shrink disk /..H

6. Slide the shrink disk [9] with untightened screws onto the hollow shaft [7] and position the inner ring of the shrink disk [9b] with measurement A.

- **CAUTION** The loose shrink disk could slip.
Risk of injury to persons and damage to property.
 - Secure the shrink disk against slipping.
- **NOTICE** Tightening the locking screws without first installing a shaft may result in the hollow shaft being deformed.
Possible damage to property.
 - Never tighten the screws without the shaft installed.

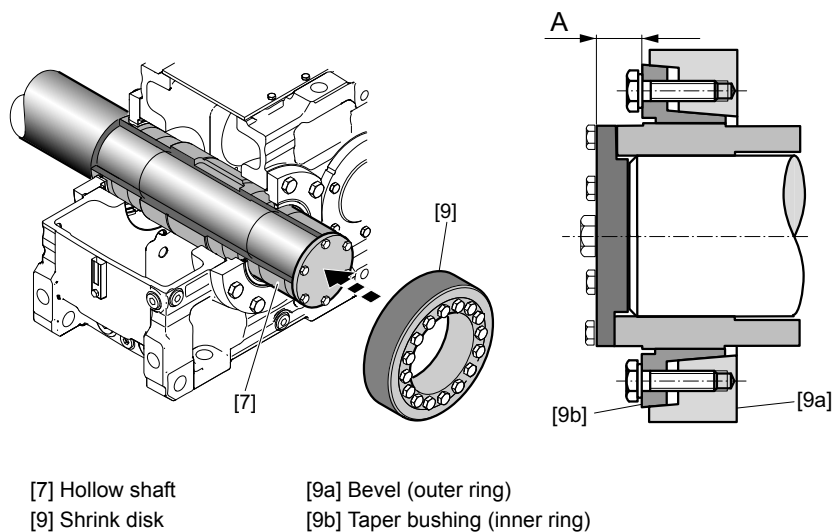


9007199565261323

Size	A [mm]
XH170-190	37
XH200-210	38
XH220-230	39
XH240-260	48
XH270-300	49
XH310-320	60



7. Tighten the retaining screws [10] hand-tight. In doing so, align the bevel (outer ring) [9a] parallel to the taper bushing (inner ring) [9b]. Successively tighten the retaining screws [10] in a clockwise direction (not in a diametrically opposite sequence), each with a quarter turn. Do not tighten the retaining screws [10] in a diametrically opposite sequence.

- **INFORMATION** For shrink disks with a slotted taper bushing (inner ring) [9b], tighten the retaining screws [10] to the left and right of the slot one after another, and then, in several stages, tighten the remaining screws at evenly spaced intervals.

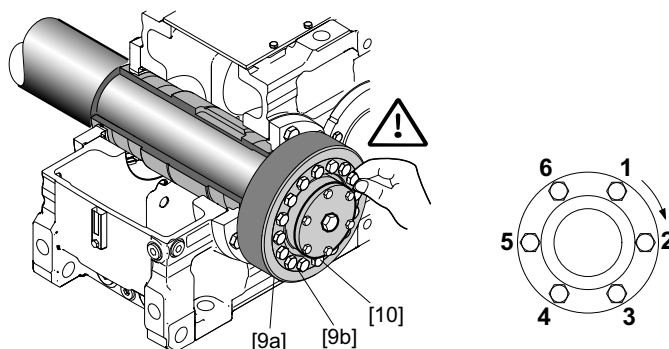


[9a] Bevel (outer ring)

[10] Locking screws

[9b] Taper bushing (inner ring)

8. Working around the ring in several stages, evenly tighten the retaining screws by $\frac{1}{4}$ turns until the bevel (outer ring) [9a] and the taper bushing (inner ring) [9b] align on the face that holds the screws as is shown in the illustration below.

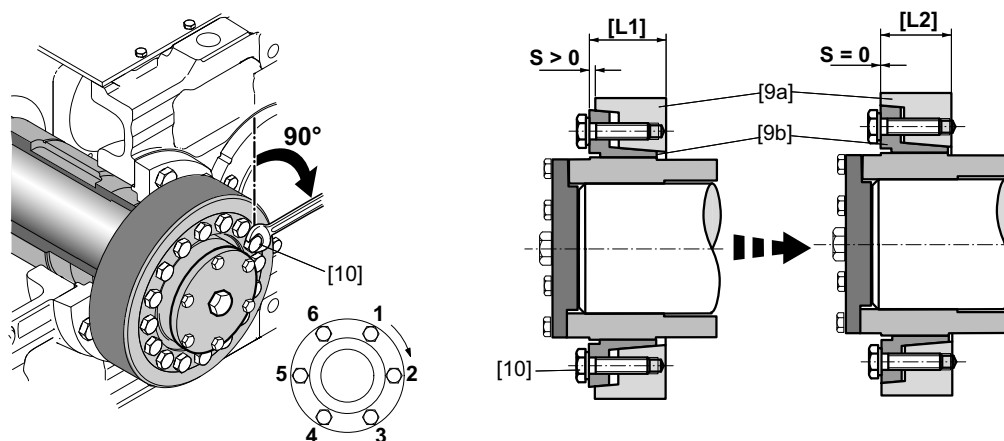

[9a] Bevel (outer ring)

[9b] Taper bushing (inner ring)

[10] Locking screws

[L1] Condition at the time of shipment (pre-assembled)

[L2] Finished assembly (ready for operation)



INFORMATION

If the taper (outer ring) and the taper bushing (inner ring) cannot be aligned on the face that holds the screws, remove the shrink disk again. Clean and lubricate it as described in the next chapter.



Assembly/installation

Output shaft as a hollow shaft with shrink disk /..H



NOTICE

Improper assembly of the protection cover may result in risk of injury due to rotating parts. Dust and dirt may damage the sealing system of the gear unit.

Risk of injury to persons and damage to property.

- Be sure to properly attach the protection cover after completing assembly (dust proof).
-



INFORMATION on explosion protection

When mounting the protection cover, make sure it entirely covers the gasket to guarantee it is dust-proof.

If the gear unit is subject to increased vibrations during operation, additionally secure the screws against loosening (e.g. using Loctite®).



INFORMATION on explosion protection

Covers can be omitted if they cannot be mounted due to special designs, such as continuous shafts. In this case, the machine or system manufacturer must deliver suitable accessories that offer a degree of protection stipulated in DIN EN 13463.

If special maintenance work is necessary for this, it must be described in the operating instructions corresponding to the machine or components.



6.15.5 Disassembling the gear unit from the machine shaft

Sizes X100-160



NOTICE

Improper disassembly may damage bearings and other components.



Possible damage to property.

- You may only use the hollow shaft as a support for disassembly. Note that supporting on any other parts of the gear unit may damage the material.
- Remove the shrink disk properly. Never completely unscrew the retaining screws because the shrink disk might jump off and cause an injury.
- Shrink disks and corresponding parts of different gear units must not be swapped.

1. Loosen the locking screws [10] by a quarter turn one after the other to avoid straining the connecting surface.

- **INFORMATION** If the bevel (outer ring) [9a] and the taper bushing (inner ring) [9b] do not separate by themselves:

Take the necessary number of retaining screws and screw them into the removal bores evenly. Tighten the retaining screws in several steps until the tapered bushing separates from the bevel ring.

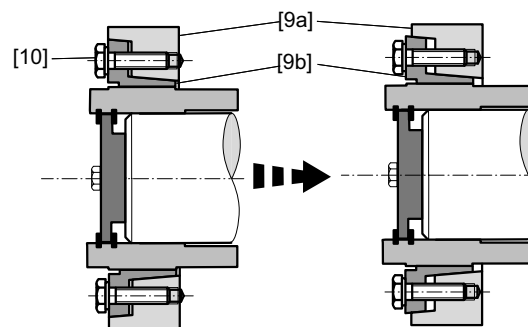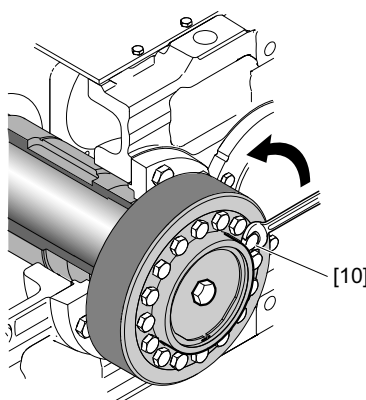

2886271627

- [9a] Bevel (outer ring)
[9b] Taper bushing (inner ring)
[10] Locking screws

2. Remove the shrink disk from the hollow shaft. Disassemble the gear unit from the machine shaft as described in chapter "Disassembling the gear unit from the machine shaft" (page 110).



Assembly/installation

Output shaft as a hollow shaft with shrink disk /..H

Sizes X170-320



NOTICE

Improper disassembly may damage bearings and other components.


Possible damage to property.

- You may only use the hollow shaft as a support for disassembly. Note that supporting on any other parts of the gear unit may damage the material.
- Remove the shrink disk properly. Never completely unscrew the retaining screws because the shrink disk might jump off and cause an injury.
- Shrink disks and corresponding parts of different gear units must not be swapped.

1. Loosen the locking screws [10] by a quarter turn one after the other to avoid straining the connecting surface.

- **INFORMATION** If the bevel (outer ring) [9a] and the taper bushing (inner ring) [9b] do not separate by themselves:

Take the necessary number of retaining screws and screw them into the removal bores evenly. Tighten the retaining screws in several steps until the tapered bushing separates from the bevel ring.

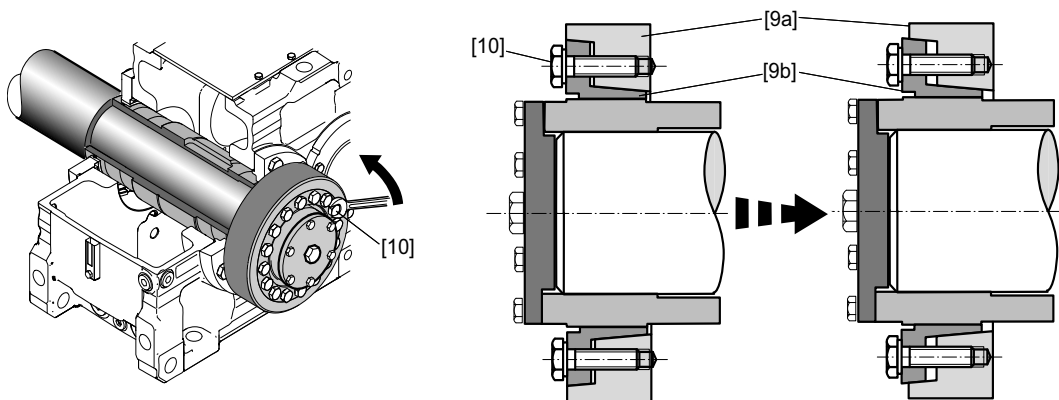

419020555

- [9a] Bevel (outer ring)
 [9b] Taper bushing (inner ring)
 [10] Locking screws

2. Remove the shrink disk from the hollow shaft. Disassemble the gear unit from the machine shaft as described in chapter "Disassembling the gear unit from the machine shaft" (page 110).




Cleaning and lubricating the shrink disk

Clean and lubricate the shrink disk before installing it again.



INFORMATION

- You must perform the following steps carefully to ensure proper functioning of the shrink disk. Use only products that are comparable to the specified lubricant.
- If the tapered surfaces of the shrink disk are damaged, the shrink disk can no longer be used and must be replaced.

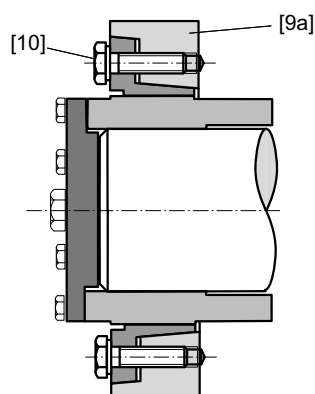

1526385163

[9a] Bevel (outer ring)

[10] Locking screws

1. Thoroughly clean the shrink disk from dirt and any remaining lubricants after disassembly.
2. Apply an MoS₂ compound onto the threads and under the screw heads of the locking screws [10], for example "gleitmo 100" by FUCHS LUBRITECH (www.fuchs-lubritech.com).
3. Also evenly lubricate the tapered surface of the taper (outer ring) [9a] with a thin layer of an MoS₂ compound, for example "gleitmo 100" from FUCHS LUBRITECH (www.fuchs-lubritech.com).



6.16 Output shaft as hollow shaft with splining /..V

6.16.1 General information

The material of the machine shaft should be dimensioned by the customer according to the loads that will occur. The shaft material should have a yield point of at least 320 N/mm².

6.16.2 Thread sizes/tightening torques

SEW-EURODRIVE recommends the following thread sizes and tightening torques:

Size	Recommended thread size		Tightening torque [Nm] Retaining screw [6] ¹⁾ Strength class 8.8
	Ejector screw [8] ¹⁾ (threads in the end plate)	<ul style="list-style-type: none"> Threaded rod [2]¹⁾ Nut (DIN 934) [5]¹⁾ Retaining screw [6] Strength class 8.8	
X..V100-150	M30	M24	710
X..V160-230	M36	M30	1450
X..V240-300	M42	M36	2500
X..V310-320	M48	M42	4600


1) see subsequent pages

Size	Thread size for 6 x retaining screws [3] ¹⁾ Strength class 10.9	Tightening torque		2 x retaining rings (bore) DIN 472
		Assembly/oper- ating state [Nm]	Disassembly [Nm]	
X..V100	-	-	-	80x2.5
X..V110	-	-	-	90x2.5
X..V120	-	-	-	100x3
X..V130	-	-	-	110x4
X..V140	-	-	-	125x4
X..V150	-	-	-	130x4
X..V160	-	-	-	140x4
X..V170-190	M10x30	48	Apply hand pressure	-
X..V200-230	M12x30	86	Apply hand pressure	-
X..V240-300	M16x40	210	Apply hand pressure	-
X..V310-320	M20x50	410	Apply hand pressure	-

1) see subsequent pages



6.16.3 Dimensions of the machine shaft

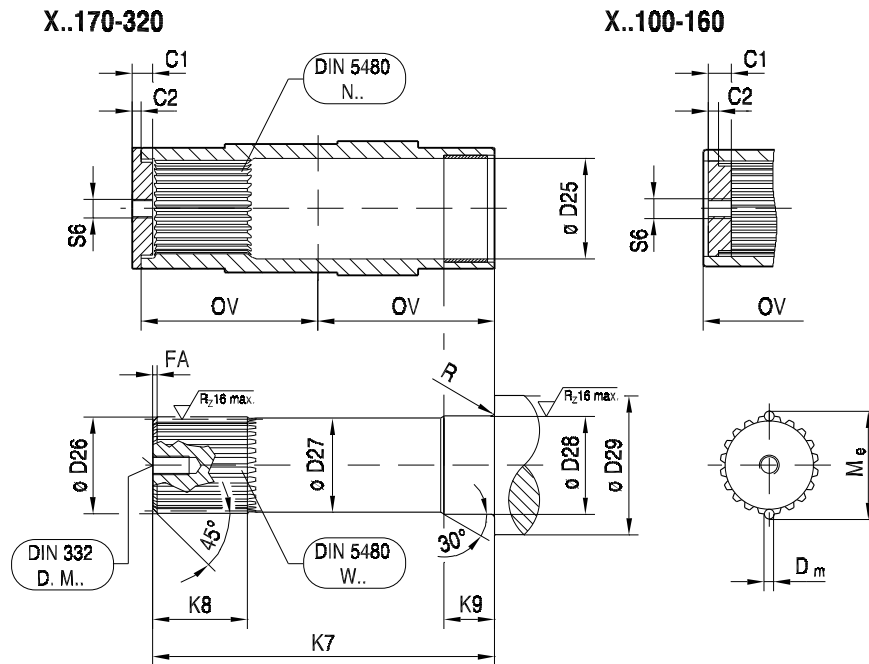

9007200017836427

X.F.. X.K.. X.T..	C1	C2	ø D25	ø D26	ø D27	ø D28	ø D29	Dm	FA	K7	K8	K9	Me	OV	R	S6	DIN 332 D.M..	DIN 5480
X..100	30	14	81 ^{H9}	74.4 _{h10}	73	81 _{m6}	95	6	3	306 ₋₁	81	42 ₋₁	81.326 ^{-0.069 -0.125}	173	3	M24	M20	W 75x3x30x24x8f N 75x3x30x24x9H
X..110	30	14	91 ^{H9}	84.4 _{h10}	83	91 _{m6}	105	6	3	311.5 ₋₁	81	42 ₋₁	91.092 ^{-0.068 -0.123}	176	3	M24	M20	W 85x3x30x27x8f N 85x3x30x27x9H
X..120	30	14	101 ^{H9}	94.4 _{h10}	93	101 _{m6}	115	6	3	341 ₋₁	91	52 ₋₁	101.141 ^{-0.068 -0.122}	190.5	3	M30	M24	W 95x3x30x30x8f N 95x3x30x30x9H
X..130	30	14	111 ^{H9}	109.4 _{h10}	108	111 _{m6}	125	6	3	346 ₋₁	86	52 ₋₁	116.076 ^{-0.078 -0.139}	194	3	M30	M24	W 110x3x30x35x8f N 110x3x30x35x9H
X..V140	30	14	121 ^{H9}	119.4 _{h10}	118	121 _{m6}	135	6	3	402 ₋₁	101	62 ₋₁	126.095 ^{-0.078 -0.138}	222	3	M30	M24	W 120x3x30x38x8f N 120x3x30x38x9H
X..150	30	14	131 ^{H9}	129.4 _{h10}	128	131 _{m6}	145	6	3	407 ₋₁	101	62 ₋₁	136.329 ^{-0.081 -0.144}	224.5	3	M30	M24	W 130x3x30x42x8f N 130x3x30x42x9H
X..160	36	16	141 ^{H9}	139.4 _{h10}	138	141 _{m6}	155	6	3	464 ₋₁	111	73 ₋₁	146.167 ^{-0.080 -0.143}	256	4	M36	M30	W 140x3x30x45x8f N 140x3x30x45x9H
X..170	36	17	151 ^{H9}	149.4 _{h10}	148	151 _{m6}	165	6	3	492 ₋₁	121	73 ₋₁	156.172 ^{-0.079 -0.141}	256	4	M36	M30	W 150x3x30x48x8f N 150x3x30x48x9H
X..180	36	17	166 ^{H9}	159 _{h10}	158	166 _{m6}	180	10	5	564 ₋₁	166	83 ₋₁	170.009 ^{-0.086 -0.152}	292	4	M36	M30	W 160x5x30x30x8f N 160x5x30x30x9H
X..190	36	17	166 ^{H9}	159 _{h10}	158	166 _{m6}	180	10	5	564 ₋₁	166	83 ₋₁	170.009 ^{-0.086 -0.152}	292	4	M36	M30	W 160x5x30x30x8f N 160x5x30x30x9H
X..200	36	17	191 ^{H9}	179 _{h10}	178	191 _{m6}	205	10	5	619 ₋₁	176	83 ₋₁	190.090 ^{-0.087 -0.155}	319.5	4	M36	M30	W 180x5x30x34x8f N 180x5x30x34x9H
X..210	36	17	191 ^{H9}	179 _{h10}	178	191 _{m6}	205	10	5	619 ₋₁	176	83 ₋₁	190.090 ^{-0.087 -0.155}	319.5	4	M36	M30	W 180x5x30x34x8f N 180x5x30x34x9H
X..220	36	17	211 ^{H9}	199 _{h10}	198	211 _{m6}	230	10	5	685 ₋₁	201	108 ₋₁	210.158 ^{-0.088 -0.157}	352.5	5	M36	M30	W 200x5x30x38x8f N 200x5x30x38x9H
X2K220	36	17	211 ^{H9}	199 _{h10}	198	211 _{m6}	230	10	5	755 ₋₁	201	108 ₋₁	210.158 ^{-0.088 -0.157}	387.5	5	M36	M30	W 200x5x30x38x8f N 200x5x30x38x9H
X..230	36	17	211 ^{H9}	199 _{h10}	198	211 _{m6}	230	10	5	685 ₋₁	201	108 ₋₁	210.158 ^{-0.088 -0.157}	352.5	5	M36	M30	W 200x5x30x38x8f N 200x5x30x38x9H



X.F.. X.K.. X.T..	C1	C2	ø D25	ø D26	ø D27	ø D28	ø D29	Dm	FA	K7	K8	K9	Me	OV	R	S6	DIN 332 D.M..	DIN 5480
X2K230	36	17	211 ^{H9}	199 _{h10}	198	211 _{m6}	230	10	5	755 ₋₁	201	108 ₋₁	210.158 ^{-0.088} _{-0.157}	387.5	5	M36	M30	W 200x5x30x38x8f N 200x5x30x38x9H
X..240	45	22	231 ^{H9}	219 _{h10}	218	231 _{m6}	250	10	5	777 ₋₁	216	108 ₋₁	230.215 ^{-0.102} _{-0.179}	400.5	5	M36	M30	W 220x5x30x42x8f N 220x5x30x42x9H
X2K240	45	22	231 ^{H9}	219 _{h10}	218	231 _{m6}	250	10	5	852 ₋₁	216	108 ₋₁	230.215 ^{-0.102} _{-0.179}	438	5	M36	M30	W 220x5x30x42x8f N 220x5x30x42x9H
X..250	45	22	241 ^{H9}	219 _{h10}	218	241 _{m6}	260	10	5	777 ₋₁	216	108 ₋₁	230.215 ^{-0.102} _{-0.179}	400.5	5	M36	M30	W 220x5x30x42x8f N 220x5x30x42x9H
X2K250	45	22	241 ^{H9}	219 _{h10}	218	241 _{m6}	260	10	5	852 ₋₁	216	108 ₋₁	230.215 ^{-0.102} _{-0.179}	438	5	M36	M30	W 220x5x30x42x8f N 220x5x30x42x9H
X..260	45	22	255 ^{H9}	239 _{h10}	238	255 _{m6}	275	10	5	850 ₋₁	216	108 ₋₁	250.264 ^{-0.102} _{-0.180}	437	5	M42	M36	W 240x5x30x46x8f N 240x5x30x46x9H
X..270	45	22	285 ^{H9}	258.4 _{h10}	258	285 _{m6}	305	16	8	876 ₋₁	248	143 ₋₁	276.230 ^{-0.101} _{-0.177}	450	5	M42	M36	W 260x8x30x31x8f N 260x8x30x31x9H
X..280	45	22	285 ^{H9}	258.4 _{h10}	258	285 _{m6}	305	16	8	876 ₋₁	248	143 ₋₁	276.230 ^{-0.101} _{-0.177}	450	5	M42	M36	W 260x8x30x31x8f N 260x8x30x31x9H
X..290	45	22	305 ^{H9}	278.4 _{h10}	278	305 _{m6}	325	16	8	960 ₋₁	268	143 ₋₁	297.014 ^{-0.105} _{-0.184}	492	5	M42	M36	W 280x8x30x34x8f N 280x8x30x34x9H
X..300	45	22	305 ^{H9}	278.4 _{h10}	278	305 _{m6}	325	16	8	960 ₋₁	268	143 ₋₁	297.014 ^{-0.105} _{-0.184}	492	5	M42	M36	W 280x8x30x34x8f N 280x8x30x34x9H
X..310	55	28	325 ^{H9}	298.4 _{h10}	298	325 _{m6}	345	16	8	1029 ₋₁	318	143 ₋₁	316.655 ^{-0.102} _{-0.180}	528.5	5	M42	M36	W 300x8x30x36x8f N 300x8x30x36x9H
X..320	55	28	325 ^{H9}	298.4 _{h10}	298	325 _{m6}	345	16	8	1029 ₋₁	318	143 ₋₁	316.655 ^{-0.102} _{-0.180}	528.5	5	M42	M36	W 300x8x30x36x8f N 300x8x30x36x9H

6.16.4 Mounting the gear unit onto the machine shaft



INFORMATION

Ensure that the dimensions of the machine shaft correspond to SEW specifications → see previous page.

Sizes X100-160



INFORMATION

- Included in the scope of delivery:
 - 2 x retaining rings [8], [9] and end plate [4]
- **Not** included in the scope of delivery:
 - Threaded rod [2], nut [5], retaining screw [6], ejector screw [8]

Apply some NOCO fluid on the machine shaft around the bushing and the splining.

Mount the gear unit to the machine shaft as described in chapter "Mounting the gear unit to the machine shaft" (page 103).




Sizes X170-320



INFORMATION

- Included in the scope of delivery:
 - Retaining screws [3] and end plate [4].
- **Not** included in the scope of delivery:
 - Threaded rod [2], nut [5], retaining screw [6], ejector screw [8].

1. Apply some NOCO[®] fluid on the machine shaft [1] around the bushing [11] and the splining.

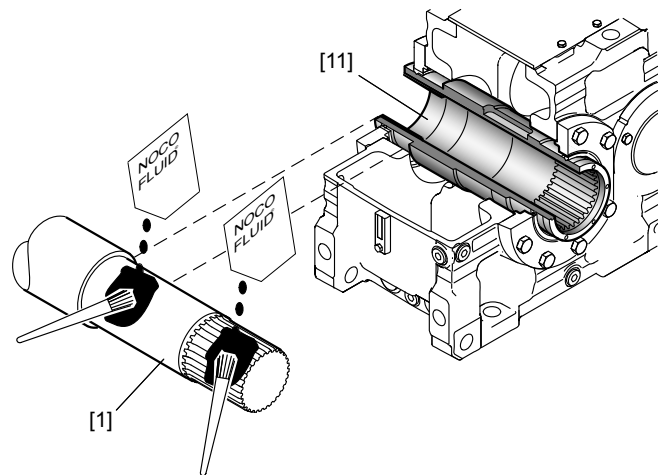


771686923

[1] Machine shaft
[11] Bushing

2. Push the gear unit onto the machine shaft. The splining of the hollow shaft must mesh with the splining of the machine shaft.

Use the retaining screws [3] to attach the end plate [4] centrally to the hollow shaft [7] and screw the threaded rod [2] onto the machine shaft [1]. Observe the tightening torques in section "Thread size/tightening torques" (page 132).

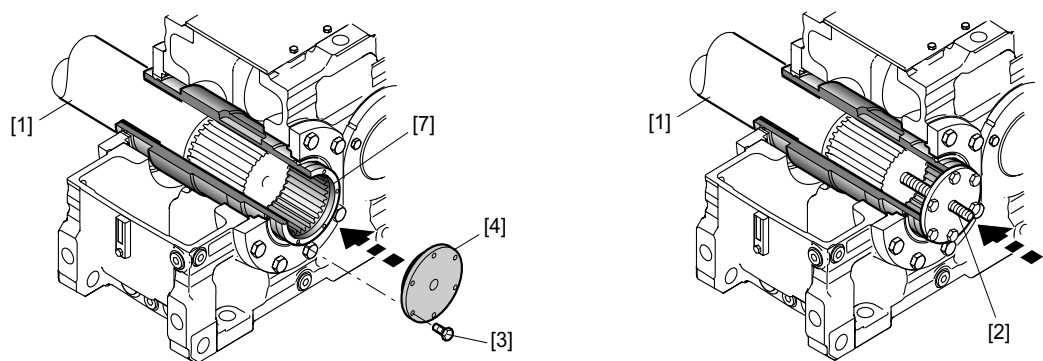

771692555


[1] Machine shaft
[2] Threaded rod
[3] Retaining screws
[4] End plate
[7] Hollow shaft



Assembly/installation

Output shaft as hollow shaft with splining /..V


3. Tighten the machine shaft [1] with the nut [5] until the shoulders of the machine shaft and the hollow shaft [7] meet.

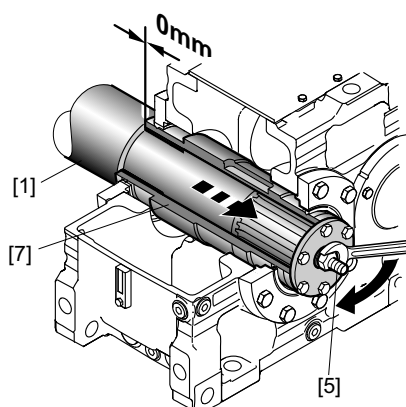

771696651

- [1] Machine shaft
[5] Nut
[7] Hollow shaft

4. Loosen the nut [5]. Screw the threaded rod [2] out.

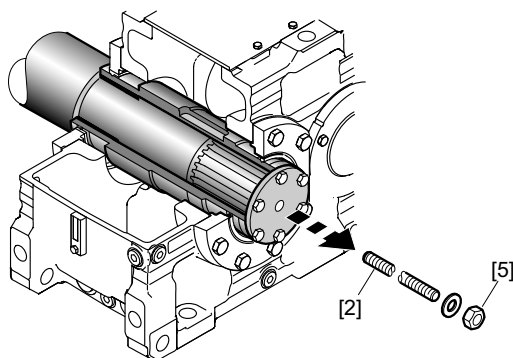


771752587

- [2] Threaded rod
[5] Nut



5. Secure the machine shaft [1] with the retaining screw [6]. The retaining screw should also be locked with a suitable thread locker. Observe the tightening torques in chapter "Thread sizes / tightening torques" (page 132).

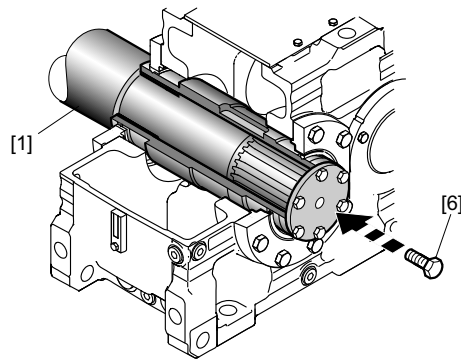

771756683

[1] Machine shaft
[6] Retaining screw



NOTICE

Improper assembly of the protection cover may result in risk of injury due to rotating parts. Dust and dirt may damage the sealing system of the gear unit.

Risk of injury to persons and damage to property.

- Be sure to properly attach the protection cover after completing assembly (dust proof).

**6.16.5 Removing the gear unit from the machine shaft****NOTICE**

Improper disassembly may damage bearings and other components.

Possible damage to property.

- You may only use the hollow shaft as a support for disassembly. Note that supporting on any other parts of the gear unit may damage the material.
-

Sizes X100-160

Remove the gear unit from the machine shaft as described in chapter "Removing the gear unit from the machine shaft" (page 110).

Sizes X170-320

Remove the gear unit from the machine shaft as described in chapter "Removing the gear unit from the machine shaft" (page 110).



6.17 Changing the direction of rotation

6.17.1 Notes on installation



⚠ WARNING

Risk of crushing if the drive starts up unintentionally and the shafts or the drive train are under load.

Severe or fatal injuries.

- De-energize the motor before you start working on the unit.
- Secure the motor against unintended power-up.
- Before releasing shaft connections, be sure that there are no active torsional moments present.



⚠ WARNING

Danger of burns due to hot gear unit and hot gear unit oil.

Severe injuries.

- Let the gear unit cool down before you start working on it.



⚠ CAUTION

Selecting and filling improper lubricants may damage the gear unit.

Possible damage to property.

- After the direction of rotation has been changed, fill the gear unit with oil via the oil fill plug up to the oil level marking. Use the same type of oil that has been used before. Mixing oils of different grades and/or manufacturers is not permitted.



INFORMATION

- For changing the direction of rotation of drives with auxiliary drive and overrunning clutch, you will have to change the direction of rotation of the backstop as well as of the overrunning clutch.
- Use a surface sealing agent, such as Loctite® 5208, when installing the mount-on components on the gear unit housing.

6.17.2 Tightening torques


Observe the following tightening torques.

Bolt size	Tightening torque [Nm] Strength classes 8.8
M5	6
M6	10
M8	25
M10	48
M12	84
M16	206
M20	402
M24	696
M30	1420




6.17.3 Drives with external backstop

1. Drain the oil from the gear unit until the oil level is under the bearing bore of the backstop. Observe chapter "Notes on installation (page 139)".
2. Remove the retaining screws [1] of the backstop and remove the closing cover [2].

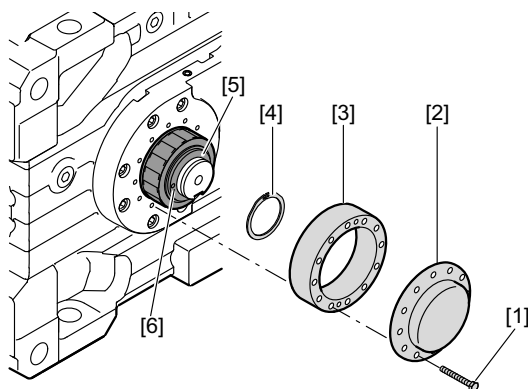

1622023819

3. Remove the outer ring [3]. To facilitate dismounting, slightly turn the outer ring [3] in freewheeling direction.
4. Remove the retaining ring [4] and the inner ring [5] with cage and sprags. When removing the backstop, do not apply pressure to the cage with the sprags but to the inner ring [5] only. Use the tapped holes [6] on the inner ring [5] of the backstop.
5. Turn the inner ring [5] with the sprags by 180° and reinstall it.

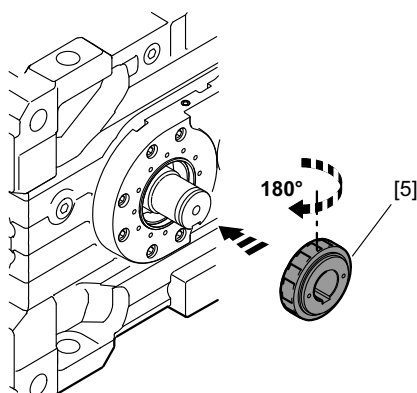

1622187787

6. Secure the inner ring [5] on the shaft with the retaining ring [4].
7. Reinstall the outer ring [3] and the closing cover [2] using the retaining screws [1]. Slightly turn the outer ring [3] in the free-wheeling direction. This will make it easier to slide it over the sprags. Thoroughly seal the parting line between the bearing cover and the outer ring [3] of the backstop as well as the closing cover [2].



INFORMATION

In order to facilitate the process, you may fixate the sprags with a rubber band or a cable tie. This will make it easier to slide the outer ring over the sprags.




8. Alter the direction arrow on the gear unit housing.
9. Fill the gear unit with oil and check the oil level.
10. After assembly, check that the backstop runs smoothly.




6.17.4 Drives with external backstop and torque limitation

1. Drain the oil from the gear unit until the oil level is under the bearing bore of the backstop. Observe chapter "Notes on installation (page 139)". Also adhere to the operating instructions of the backstop manufacturer.
2. Remove the retaining screws [1] of the backstop and remove the cover [2]. To facilitate dismounting, slightly turn the cover [2] in freewheeling direction.

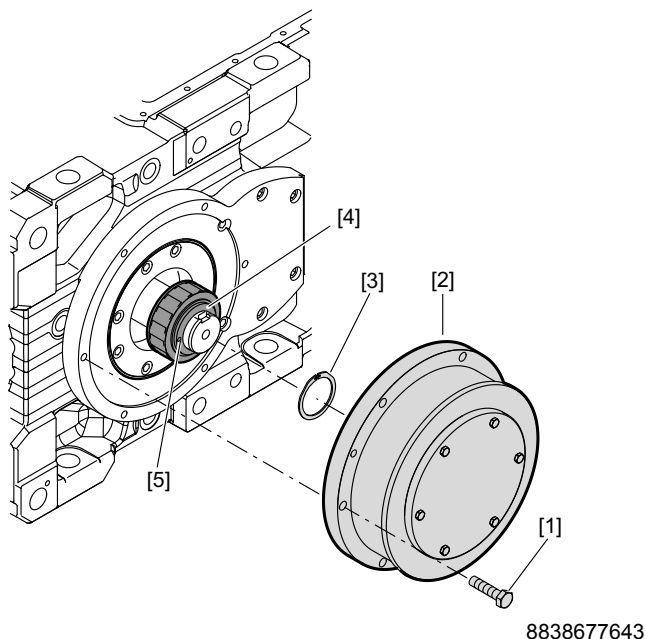

3. Remove the retaining ring [3] and the inner ring [4] with cage and sprags. When removing the backstop, do not apply pressure to the cage with the sprags but only to the inner ring [4]. Use the tapped holes [5] on the inner ring [4] of the backstop.
4. Turn the inner ring [4] with the sprags by 180° and reinstall it.

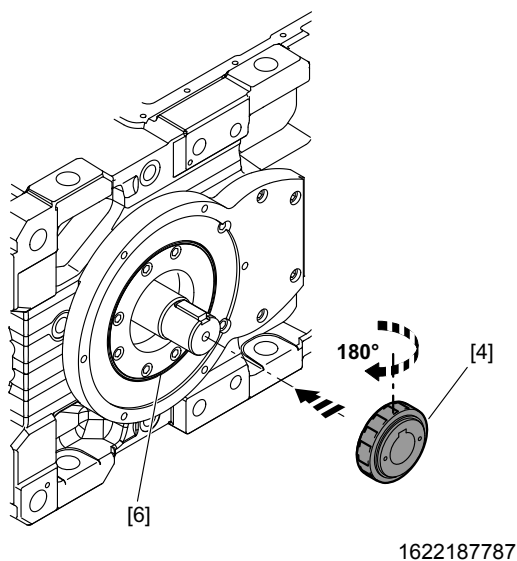

5. Secure the inner ring [4] on the shaft using the retaining ring [3].



6. Check to make sure that the sealing ring [6] is seated properly in the groove. Reinstall the cover [2] using the retaining screws [1]. When installing the cover [2], slightly turn it in the freewheeling direction. Doing so will make it easier to slide it over the sprags.




INFORMATION

In order to facilitate the process, you may fixate the sprags with a rubber band or a cable tie. This will make it easier to slide the outer ring over the sprags.

7. Alter the direction arrow on the gear unit housing.
8. Fill the gear unit with oil and check the oil level.
9. After assembly, check that the backstop runs smoothly.




6.17.5 Drives with freewheeling clutch

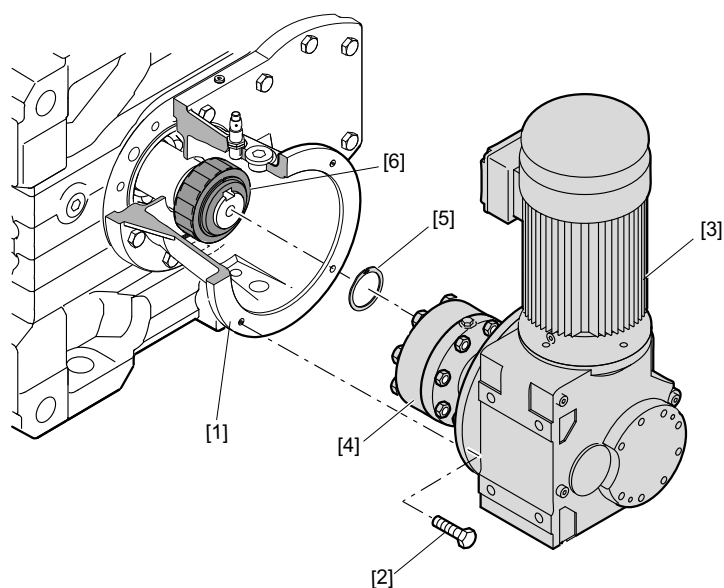

1626311947

1. Drain the oil from the auxiliary drive adapter. Observe section "Notes on installation (page 139)".
2. Loosen the connection screws [2] between auxiliary drive [3] and auxiliary drive adapter [1] and remove the auxiliary drive [3] with the freewheeling clutch [4].
3. Remove retaining ring [5], and inner ring [6] with cage and sprags. When removing the backstop, do not apply pressure to the cage with the sprags but only to the inner ring [6]. Use the tapped holes on the inner ring [6] of the backstop.
4. Turn the inner ring [6] with the sprags 180° and reinstall it.

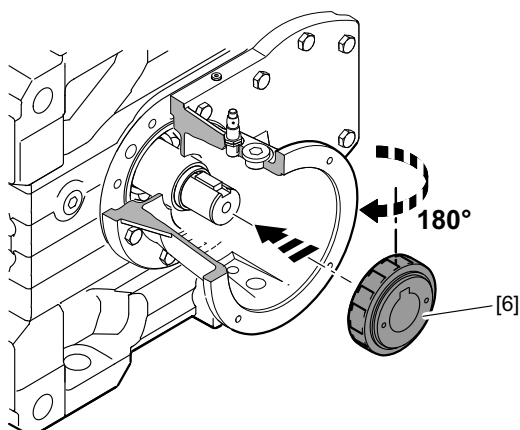

1626316555



5. Secure the inner ring [6] on the shaft with the retaining ring [5].
6. Install the auxiliary drive [3] on the auxiliary drive adapter [1] using the retaining screws [2]. If possible, slightly turn the auxiliary drive [3] in the freewheeling direction. This will make it easier to slide the outer ring of the freewheeling clutch [4] over the sprags. In order to prevent damage to the freewheeling clutch [4], make sure not to tilt the auxiliary drive [3] during assembly. Seal the parting line between the auxiliary drive [3] and the auxiliary drive adapter [1].
7. Alter the direction arrow on the auxiliary drive [3].
8. Fill the auxiliary drive adapter [1] with oil and check the oil level of the gear unit.
9. After assembly, check that the freewheeling clutch runs smoothly.

6.18 Torque arm /T



⚠ WARNING

Insufficiently secured gear units can fall down during disassembly and assembly.

Severe or fatal injuries.

- Secure the gear unit during assembly and disassembly. Support the gear unit using appropriate tools.



NOTICE

Deforming the torque arm leads to constraining forces on the output shaft, which may negatively influence the service life of the output shaft bearings.

Possible damage to property.

- Do not deform the torque arm.



NOTICE

Strain on the torque arm might break the housing.

Possible damage to property.



- Adhere to the specified screw size, tightening torques and required screw strength.



Assembly/installation



Torque arm /T

1. To keep the flexural torque on the machine shaft as low as possible, the torque arm [1] must always be mounted on the same side as the machine that is driven. The torque arm [1] can be mounted on the top or bottom of the gear unit.

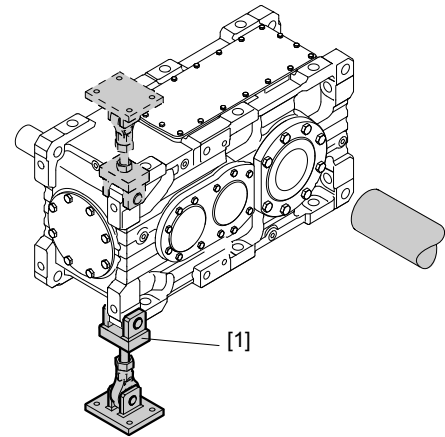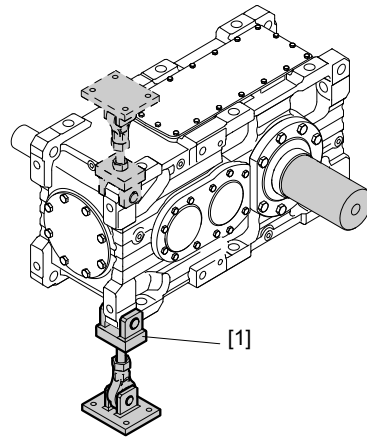

9007199613871883

2. Align the gear unit horizontally over the threaded bolts and the nuts of the torque arm.

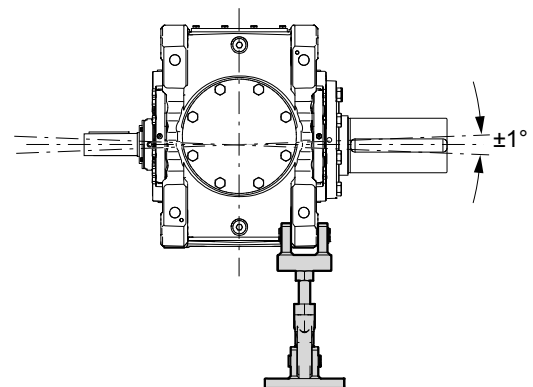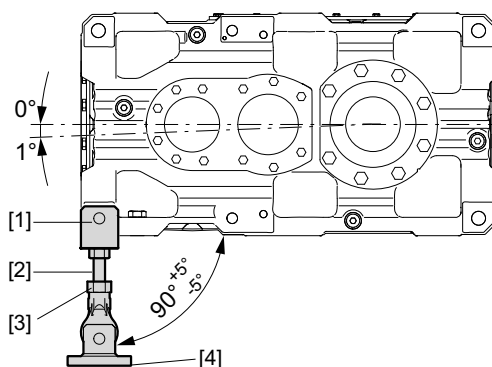


359126795

- [1] Yoke with bolt
- [2] Threaded bolt with nuts
- [3] Joint head
- [4] Yoke plate with bolt

- **▲ NOTICE** Make sure that the stud bolt [2] is screwed evenly into the yoke [1] and the joint head [3].

Possible damage to property.

- The stud bolt [2] must be screwed evenly into the yoke [1] and the joint head [3], covering a length of at least 1 x the bolt's cross section on both sides.

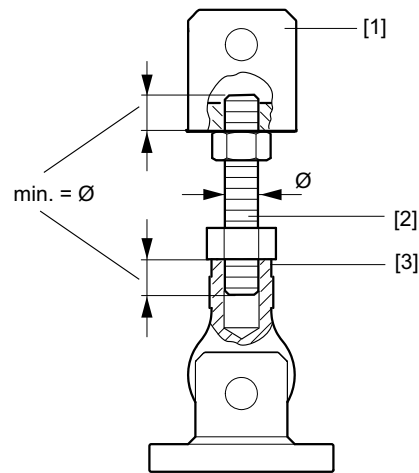

1154061707

- [1] Yoke with bolt
- [2] Threaded bolt with nuts
- [3] Joint head

3. After the alignment process, tighten the nuts with the tightening torques listed in the following table. Secure it using a suitable threadlocker (e.g. Loctite® 243).

Size	Bolt/nut	Tightening torque [Nm]
X100-110	M20	140
X120-130	M24	
X140-150	M24	
X160-190	M36	200
X200-230	M42	350
X240-280	M48	500
X290-320	M56	700



6.19 Couplings






NOTE on explosion protection

- Couplings must be identified for use in potentially explosive atmospheres.
- Also adhere to the special operating instructions given by the respective coupling manufacturer.

6.19.1 Mounting tolerances

Adjust the following misalignments according to the coupling manufacturer's specifications when mounting couplings.





- Maximum and minimum clearance
- Axial offset
- Angular offset

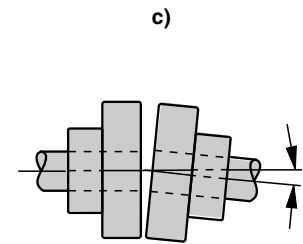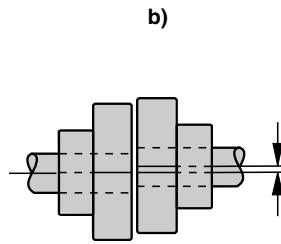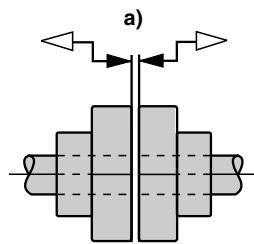

211395595



The following table shows various methods for measuring the differing tolerances.

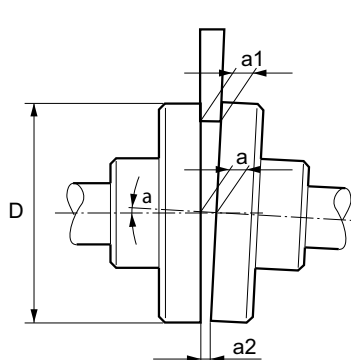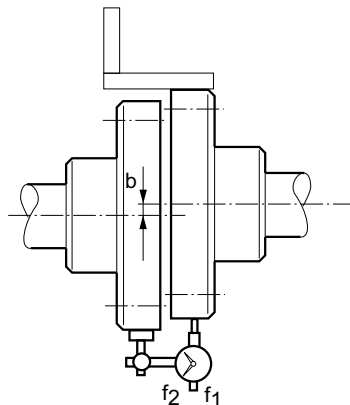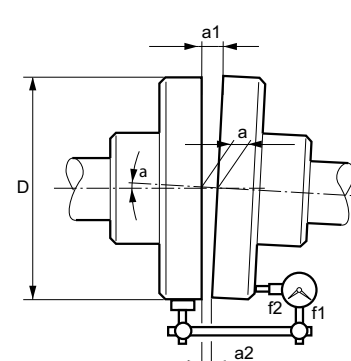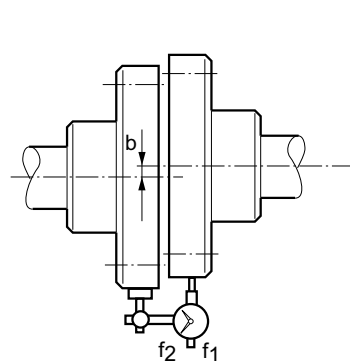Measuring instruments	Angular misalignment	Offset axis
Feeler gauge	 <p>This method only achieves an accurate result when the deviation of the coupling faces is eliminated by turning both coupling halves by 180° and then calculating the average value from the difference ($a_1 - a_2$).</p>	 <p>The following illustration shows the measurement of axial misalignment using a straight-edge. Permissible values for eccentricity are usually so small that the best measurement results can be achieved with a micrometer dial. If you rotate one coupling half together with the micrometer dial and divide the deviation by two, the deviation displayed on the micrometer dial indicates the misalignment (dimension "b") that includes the axial misalignment of the other coupling half.</p>
Micrometer dial	 <p>A prerequisite for this measuring method is that there is no axial play in the shaft bearings when the shafts rotate. If this condition is not fulfilled, the axial play between the faces of the coupling halves must be eliminated. As an alternative, you can use two micrometer dials positioned on the opposite sides of the coupling (to calculate the difference of the two micrometer dials when rotating the coupling).</p>	 <p>The following figure shows the how to measure axial misalignment using a more accurate measuring method, as described above. The coupling halves are rotated together without letting the point of the micrometer dial slide onto the measuring surface. The axial misalignment is obtained by dividing the deviation displayed on the micrometer dial (dimension "b").</p>



6.20 Motor adapter /MA

6.20.1 Max. permitted motor weight

Two criteria are to be checked when mounting a motor onto the gear unit.

1. Maximum motor weight depending on gear unit version and type of mounting
2. Maximum motor weight depending on motor adapter size



INFORMATION

The motor weight may not exceed either one of these criteria.

1. Maximum motor weight depending on gear unit design and mounting type



INFORMATION

- The following tables apply only to stationary applications. For mobile applications (e.g. travel drives), consult SEW-EURODRIVE.
- Contact SEW-EURODRIVE in case of deviating mounting position/mounting surface.

The following applies to all tables:

G_M = Motor weight

G_G = Gear unit weight

Horizontal gear unit

Type of mounting	Mounting position M. / mounting surface F.		
	M1 / F1 and M3 / F2		
	X.F..	X.K..	X.T..
Foot-mounted design X../B	$G_M \leq 1.5 G_G$	$G_M \leq 1.75 G_G$	$G_M \leq 2.0 G_G$
Shaft-mounted design X../T	$G_M \leq 0.5 G_G$	$G_M \leq 1.5 G_G$	$G_M \leq 1.5 G_G$
Flange-mounted design X../F	$G_M \leq 0.5 G_G$	$G_M \leq 0.5 G_G$	$G_M \leq 0.5 G_G$

Vertical gear units



INFORMATION

- When using the shaft-mounted version, please consult SEW-EURODRIVE.
- Gear unit with mounting position M. / mounting surface F.: For M5 / F4 and M6 / F3, please contact SEW-EURODRIVE.

Type of mounting	Mounting position M. / mounting surface F.		
	M5 / F3 and M6 / F4		
	X.F..	X.K..	X.T..
Foot-mounted design X../B	$G_M \leq 2.0 G_G$	$G_M \leq 1.5 G_G$	$G_M \leq 1.75 G_G$
Flange-mounted design X../F	$G_M \leq 1.5 G_G$	$G_M \leq 0.75 G_G$	$G_M \leq 1.25 G_G$




Upright gear unit

Type of mounting	Mounting position M. / mounting surface F.		
	M4/F6		
	X.F..	X.K..	X.T..
Foot-mounted design X../ B	$G_M \leq 1.25 G_G$	$G_M \leq 1.75 G_G$	$G_M \leq 1.5 G_G$
Shaft-mounted design X../ T	$G_M \leq 0.75 G_G$	$G_M \leq 1.0 G_G$	$G_M \leq 0.75 G_G$
Flange-mounted design X../ F	$G_M \leq 1.0 G_G$	$G_M \leq 1.25 G_G$	$G_M \leq 1.0 G_G$

2. Maximum motor weight depending on motor adapter size

The following maximum loads on the motor adapter must not be exceeded.

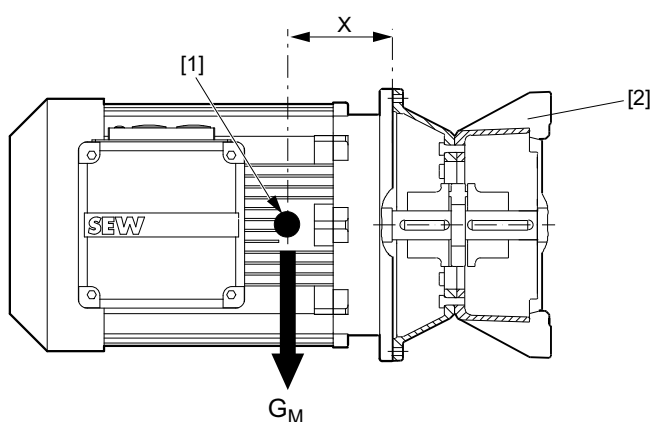

9007199611271819

[1] Center of gravity of the motor
[2] Motor adapter

X = Distance from the center of gravity
 G_M = Weight of the mounted motor



INFORMATION

The table only applies to stationary applications. For mobile applications (e.g. travel drives), consult SEW-EURODRIVE.

Motor adapter		G_M [kg]	X [mm]
IEC	NEMA		
100/112	182/184	60	190
132	213/215	110	230
160/180	254/286	220	310
200	324	280	340
225	326	400	420
250/280	364 - 405	820	480
315S-L	444 - 449	1450	680
315		2000	740
355		2500	740

The maximum permitted weight G_M must be linearly reduced if the centroidal distance **X** is increased. G_M cannot be increased if the centroidal distance is reduced.




6.20.2 Claw coupling



INFORMATION

Observe the operating instructions of the respective coupling manufacturer.


ROTEX® coupling

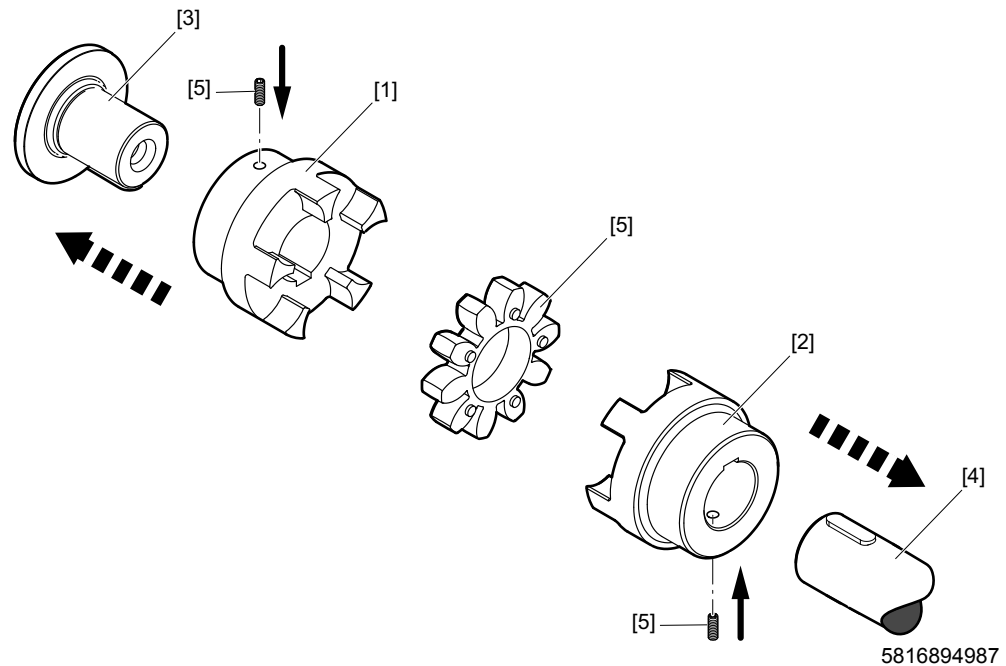

1. Observe the notes in chapter "Notes on installation/assembly" (page 67).
2. Mount the hubs [1], [2] onto the input and output shafts [3], [4].
 - **NOTICE** Improper assembly can damage the hubs [1], [2].
Possible damage to property.
 - Heat the hub to about 80 °C to facilitate assembly.
3. Insert the girth gear [5] and DZ elements in the cam section of the input/output hub [1], [2].
4. Push the gear unit/motor in axial direction until dimension **E** is reached. If the gear unit/motor has already been installed permanently, set dimension **E** by moving the hubs [1], [2] axially on the input and output shafts [3], [4].
 - **NOTICE** Improper assembly can damage the couplings [1], [2].
Possible damage to property.
 - During assembly, it is essential to observe **dimension E** so that the ring gear remains axially flexible during operation.



Dimension **E** is shown in the following table.

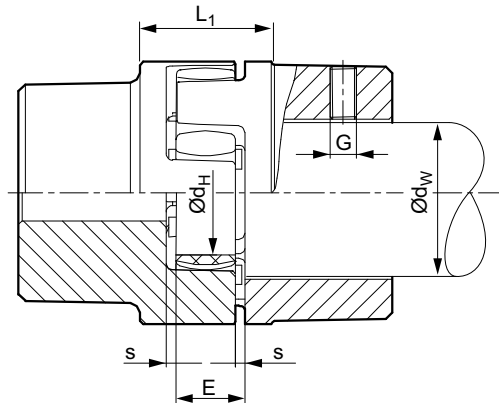

5815628427

Coupling size	Mounting dimensions E [mm]	s [mm]	d_H [mm]	Set screw	
				G	Tightening torque [Nm]
14	13	1.5	10	M4	1.5
19	16	2	18	M5	2
24	18	2	27	M5	2
28	20	2.5	30	M8	10
38	24	3	38	M8	10
42	26	3	46	M8	10
48	28	3.5	51	M8	10
55	30	4	60	M10	17
65	35	4.5	68	M10	17
75	40	5	80	M10	17
90	45	5.5	100	M12	40
100	50	6	113	M12	40
110	55	6.5	127	M16	80
125	60	7	147	M16	80
140	65	7.5	165	M20	140
160	75	9	190	M20	140
180	85	10.5	220	M20	140

5. Secure the hubs by tightening the set screws [5].



Misalignment – Aligning the coupling



NOTICE


Improper mounting of the coupling may result in damage.

Possible damage to property.

- The shaft ends must be aligned accurately to ensure a long service life of the coupling. Strictly adhere to the misalignment values specified in the following chapters. Exceeding these values will damage the coupling. Exact coupling alignment increases its service life.


Important:

- The misalignment values specified in the table (see next page) are maximum values that must not occur simultaneously. If radial offset and angular offset occur at the same time, the permitted misalignment values may only be used proportionately.
- Use dial indicator, linear or feeler gauge to check whether the permitted misalignment values specified in the table (see next page) are adhered to.

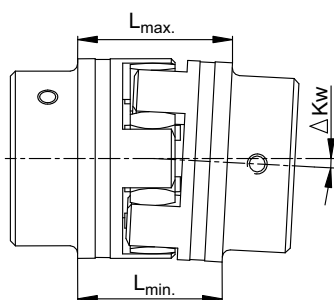


Angular misalignments

$$\Delta K_w = L_{1\max} - L_{1\min} \quad [\text{mm}]$$

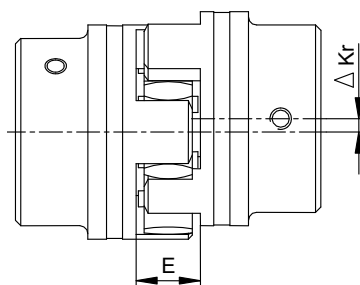

Radial misalignments

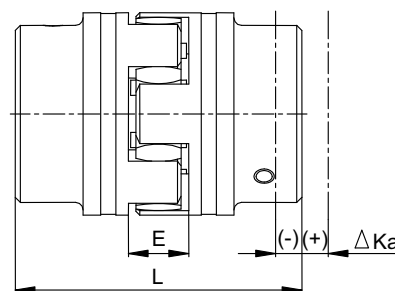

Axial misalignments

$$L_{\max} = L + \Delta K_a \quad [\text{mm}]$$

5989511307



Example of specified misalignment combinations (see diagram):

Example 1:

$$\Delta K_r = 30\%$$


$$\Delta K_w = 70\%$$

Example 2:

$$\Delta K_r = 60\%$$

$$\Delta K_w = 40\%$$

$$\Delta K_{\text{total}} = \Delta K_r + \Delta K_w \leq 100\%$$

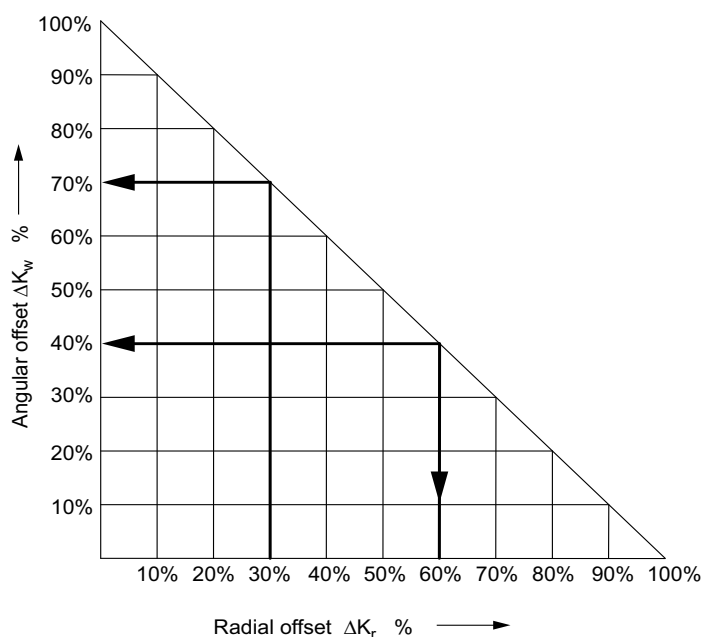

5989508747

Misalignment values


The table below shows the misalignment values:

ROTEX® size		14	19	24	28	38	42	48	55	65	75	90	100	110	125	140	160	180
Max. axial misalignment ΔK_a [mm]		-0.5	-0.5	-0.5	-0.7	-0.7	-1.0	-1.0	-1.0	-1.0	-1.5	-1.5	-1.5	-2.0	-2.0	-2.0	-2.5	-2.5
		1.0	1.2	1.4	1.5	1.8	2.0	2.1	2.2	2.6	3.0	3.4	3.8	4.2	4.6	5.0	5.7	6.4
Max. radial misalignment ΔK_r [mm]	1500 rpm	0.17	0.20	0.22	0.25	0.28	0.32	0.36	0.38	0.42	0.48	0.50	0.52	0.55	0.60	0.62	0.64	0.68
	1800 rpm	0.11	0.13	0.15	0.17	0.19	0.21	0.25	0.26	0.28	0.32	0.34	0.36	0.38	-	-	-	-
ΔK_w [degree] angular misalignment when n = 1500 rpm ΔK_w [mm]		1.2	1.2	0.9	0.9	1.0	1.0	1.1	1.1	1.2	1.2	1.2	1.2	1.3	1.3	1.2	1.2	1.2
		0.67	0.82	0.85	1.05	1.35	1.7	2.0	2.3	2.7	3.3	4.3	4.8	5.6	6.5	6.6	7.6	9.0
ΔK_w [degree] angular misalignment when n = 3000 rpm ΔK_w [mm]		1.1	1.1	0.8	0.8	0.8	0.8	0.9	1.0	1.0	1.0	1.1	1.1	1.1	-	-	-	-
		0.62	0.7	0.75	0.84	1.1	1.4	1.6	2.0	2.3	2.9	3.8	4.2	5.0	-	-	-	-



6.20.3 Attaching the motor to the motor adapter

1. Clean the motor shaft and flange surfaces of the motor and the motor adapter. They must be dry and free of grease.
 - **INFORMATION** To avoid contact corrosion, SEW-EURODRIVE recommends to apply NOCO[®] fluid to the motor shaft before mounting the coupling half.
2. Push the coupling half onto the motor shaft and position it. When doing this, observe the information in chapter "Claw coupling" (page 152) and the figure below. The coupling size and type are indicated on the coupling.

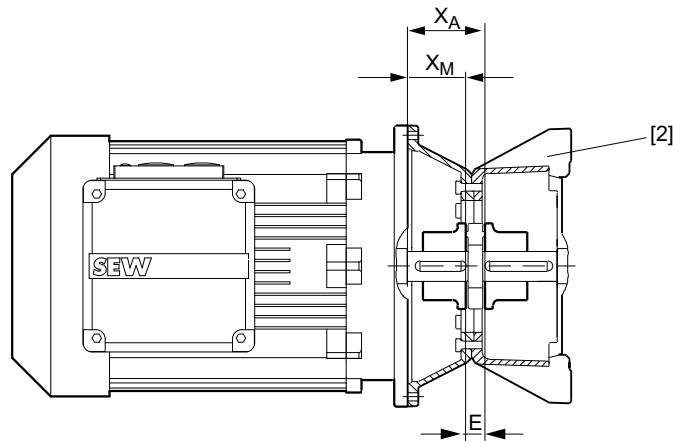

9007199705735691

[1] Motor adapter X_A = Distance between the coupling and the motor adapter flange surface
 E = Mounting dimension X_M = Distance between the coupling and the motor flange surface

$$\rightarrow X_M = X_A - E$$

3. Secure the coupling halves using the setscrew.
4. Install the motor onto the adapter, making sure that the claws of the coupling engage each other.



6.21 V-belt drives /VBD



INFORMATION on explosion protection

Using a V-belt drive is permitted after consultation with SEW-EURODRIVE.

If belt pulleys, belts and protective covers are not included in the scope of delivery, observe the following:

Use belts with sufficient electrical discharge resistance ($< 10^9 \Omega$).

- Before a protection cover can be installed, a risk analysis must demonstrate that no sources of ignition (e.g. impact sparks from contact between the protective cover and rotating parts) can occur. The manufacturer of the protection cover must perform the risk analysis.

6.21.1 Max. permitted motor weight

When selecting a motor, observe the permitted motor weight, the gear unit version and the type of gear unit mounting according to the following table.

The table only applies to stationary applications. For mobile applications (e.g. travel drives), consult SEW-EURODRIVE.

Type of mounting	Gear unit type	
	X.F..	X.K..
Foot-mounted design X../ B	$G_M \leq 1.75 G_G$	$G_M \leq 1.75 G_G$
Shaft-mounted design X../ T	$G_M \leq 1.5 G_G$	$G_M \leq 1.5 G_G$


In this table:

G_M = Motor weight

G_G = Gear unit weight

6.21.2 Mounting the V-belt drive

1. Mount the motor [1] to the base plate [2] (mounting screws are not included in the scope of delivery).
2. Clean and degrease the shafts [4], the taper bushings [5] and the belt pulleys [6].

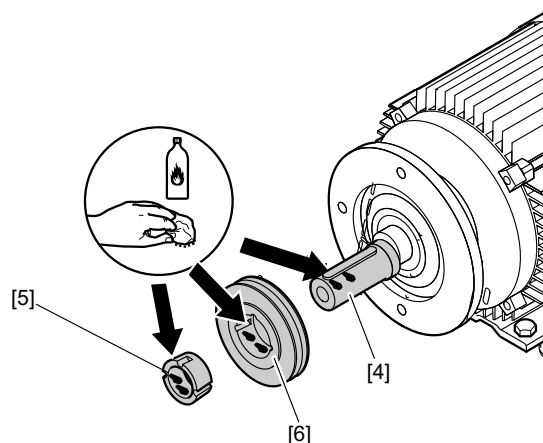


1022665099



Assembly/installation

V-belt drives /VBD

3. Install the belt guard [3] using the provided fixtures. Take into account the room required for applying and tightening the belts, as well as the desired direction in which the cover will be opened.

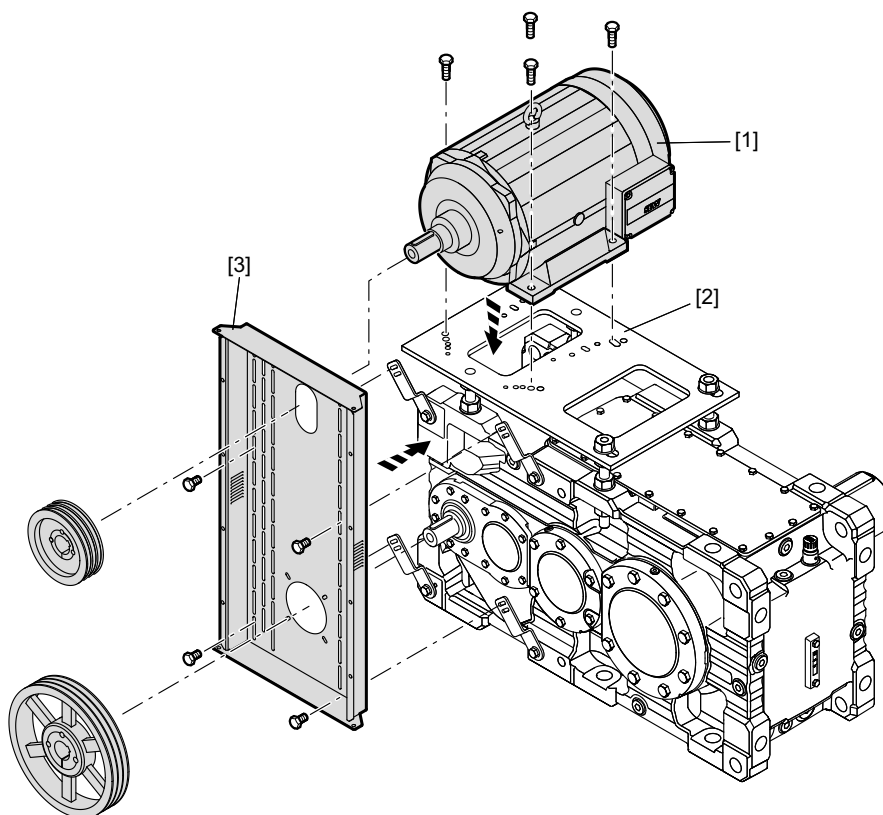


9007200277402251



4. Mount the belt pulleys with the taper bushings [6] on the gear unit and motor shaft [4]. Apply some grease to the screws of the taper bushings and fill the remaining boreholes with grease. Tighten the locking screws of the taper bushings [5] evenly. While tightening the screws, apply some light strokes to the hub in order to make the connection fit properly.

The following table shows the tightening torques for the taper lock bushings [5].


Dimension	Wrench size	Number of screws	Tightening torque [Nm]
TB 1008, 1108	3	2	5.7
TB 1210, 1215, 1310, 1610, 1615	5	2	20
TB 2012	6	2	31
TB 2517	6	2	49
TB 3020, 3030	8	2	92
TB 3525, 3535	10	3	115
TB 4040	12	3	172
TB 4545	14	3	195
TB 5050	14	3	275

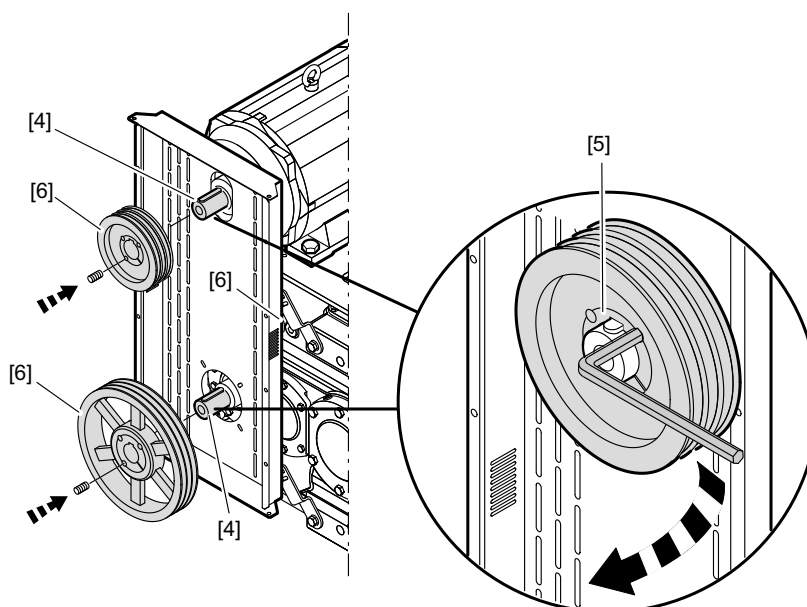

9007200277411851



5. Position the belt pulleys [7] as close to the shaft shoulder as possible [8]. If the respective rim widths differ, you will have to take this into account accordingly for the positioning. Check the alignment of the belt pulleys before and after you have tightened the taper bushings using a straightedge [9] or a suitable alignment tool. The following table lists the maximum permitted misalignment values for individual diameters.

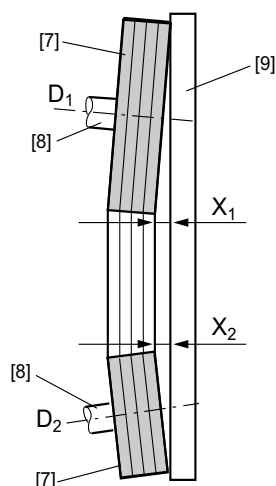

Pulley diameter D_1, D_2 [mm]	Maximum permitted distance X_1, X_2
112	0.5
224	1.0
450	2.0
630	3.0

For other diameter values, you have to interpolate the intermediate values for X_1, X_2 .



6. Place the V-belts [8] onto the belt pulleys and tighten them by adjusting the base plate via the threaded rods [9].

- **▲NOTICE** Never apply force to mount the V-belt.


Possible damage to property.

- Mounting using a screw driver or similar will damage the V-belt externally and internally.

- **▲CAUTION** Never apply force to mount the V-belt.

Possible dangerous situation.


- Be careful not to get your fingers between the disk and the V-belt when adjusting and turning the V-belt pulleys.

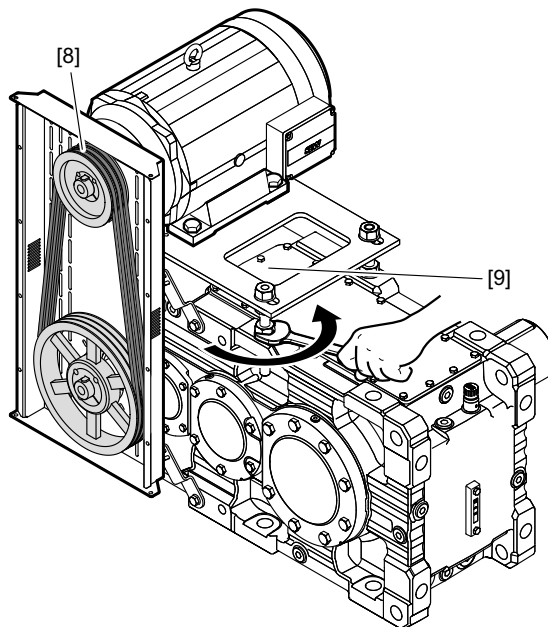

9007200277448075



7. Check the tension of the belts using a suitable measuring device. If no special measuring devices are available, you can roughly check the pretension using the following method:
 - Refer to the following table to determine the test force [f] required to deflect the belt by a specific distance [E_a] in the middle of the free belt length if the belt has the correct tension.
 - Compare the measured values with the values given in the the table (on the following pages). Adjust the tension of the belt until the measured values correspond to the values of the table.

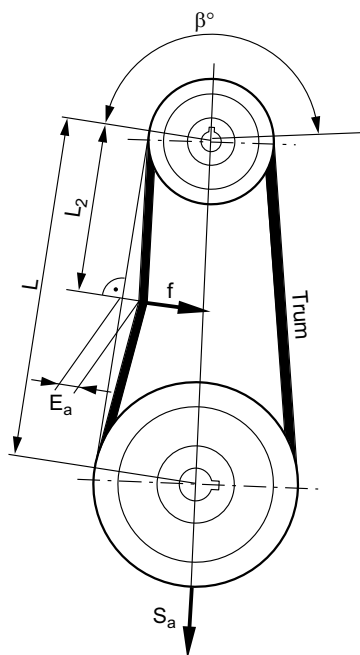

1068875787

8. Tighten all the screws and nuts and once again check the alignment of the belt pulleys as well as the tension of the belt.
9. Check the fastening of the belt guard. Close and bolt it correctly using the designated bores.



INFORMATION on explosion protection

Make sure that the protection cover has a **minimum distance** of **8 mm** to all rotating parts

10. Check the tension of the belt after about 24 hours of operation to compensate the initial tension of the V-belts. Also check the taper bushings and the respective locking screws.



INFORMATION

The data in the following table only apply if the V-belt from SEW-EURODRIVE is used. When using V-belts from other manufacturers, the operator is responsible for determining the belt tension and for observing the permitted bending moments.



X.K..

Size	Gear ratio	Motor power [kW]	Test force [N]	Indent. depth (mm) Initial assembly	Indent. depth (mm) Used belts	Frequency (1/s) Initial assembly	Frequency (1/s) Used belts
XK100-110	1.25	4	25	9.4	10.7	64	56
		5.5	25	8.2	9.4	67	59
		7.5	25	8.1	9.4	70	62
		9.2	25	8.2	9.4	68	59
		11	25	8.1	9.4	70	61
		15	25	7.0	9.5	73	64
		18.5	50	11.0	13.0	64	57
	1.4	4	25	9.5	10.8	63	55
		5.5	25	8.2	9.5	67	59
		7.5	25	8.1	9.4	71	62
		9.2	25	8.2	9.4	67	59
		11	25	8.1	9.4	70	61
		15	25	7.0	9.5	73	64
		18.5	50	11.2	13.2	66	58
	1.6	4	25	9.5	10.7	64	56
		5.5	25	8.2	9.4	68	59
		7.5	25	8.0	9.3	71	63
		9.2	25	8.3	9.5	67	59
		11	25	8.0	9.3	71	62
		15	50	12.0	13.2	63	55
		18.5	50	11.1	13.1	67	58
	1.8	4	25	9.5	10.7	64	56
		5.5	25	8.2	9.5	67	59
		7.5	25	8.1	9.4	71	62
		9.2	25	8.1	9.3	69	60
		11	25	8.1	9.4	70	61
		15	50	11.9	13.0	64	56
		18.5	50	11.0	12.9	68	60
XK120-130	1.25	5.5	25	9.6	11.0	57	50
		7.5	25	9.5	11.0	60	53
		9.2	25	9.6	11.1	57	50
		11	25	9.5	11.0	60	52
		15	25	8.2	11.1	62	55
		18.5	50	13.0	15.3	57	50
		22	50	12.1	13.9	59	52
		30	25	8.2	11.1	62	55
		37	75	14.0	16.2	52	46
		45	75	14.7	18.5	45	40
	1.4	5.5	25	9.6	11.1	57	50
		7.5	25	9.6	11.1	60	52
		9.2	25	9.6	11.0	58	51
		11	25	9.6	11.1	59	52
		15	25	8.2	11.1	63	55
		18.5	50	13.0	15.4	57	50
		22	50	12.0	13.9	59	52
		30	25	8.2	11.1	63	55
		37	75	13.9	16.1	53	46
		45	75	14.1	19.0	46	40
	1.6	5.5	25	9.5	11.0	58	51
		7.5	25	9.5	11.0	60	53
		9.2	25	9.6	11.1	57	50
		11	25	9.5	11.0	59	52
		15	50	13.9	15.3	54	48



Size	Gear ratio	Motor power [kW]	Test force [N]	Indent. depth (mm) Initial assembly	Indent. depth (mm) Used belts	Frequency (1/s) Initial assembly	Frequency (1/s) Used belts
XK120-130	1.6	18.5	50	13.0	15.3	57	50
		22	50	11.9	13.8	60	53
		30	75	12.7	15.9	56	49
		37	50	11.1	12.8	64	57
		45	75	13.4	18.1	48	42
	1.8	5.5	25	9.5	11.0	58	51
		7.5	25	9.4	10.8	61	54
		9.2	25	9.4	10.9	59	51
		11	25	9.4	10.8	61	53
		15	50	14.0	15.4	54	47
		18.5	50	12.9	15.1	58	51
		22	50	11.9	13.8	60	53
		30	75	13.1	16.3	54	48
XK140-150	1.25	15	25	8.2	11.1	62	55
		18.5	50	15.8	18.6	47	41
		22	50	14.6	16.9	49	43
		30	25	9.9	13.4	51	45
		37	75	17.0	19.7	43	38
		45	75	14.7	18.5	45	40
		55	75	15.5	19.4	42	37
		75	75	16.9	21.3	40	35
		90	75	13.6	18.2	44	38
	1.4	15	25	8.2	11.1	62	55
		18.5	50	15.8	18.6	47	41
		22	50	14.6	16.9	49	43
		30	25	9.9	13.4	51	45
		37	75	17.0	19.7	43	38
		45	75	14.7	18.5	45	40
		55	75	15.5	19.4	42	37
		75	75	16.9	21.3	40	35
		90	75	13.6	18.2	44	38
	1.6	15	25	8.2	11.1	62	55
		18.5	50	15.8	18.6	47	41
		22	50	14.6	16.9	49	43
		30	25	9.9	13.4	51	45
		37	75	17.0	19.7	43	38
		45	75	14.7	18.5	45	40
		55	75	15.5	19.4	42	37
		75	75	16.9	21.3	40	35
		90	75	13.6	18.2	44	38
	1.8	15	25	8.2	11.1	62	55
		18.5	50	15.8	18.6	47	41
		22	50	14.6	16.9	49	43
		30	25	9.9	13.4	51	45
		37	75	17.0	19.7	43	38
		45	75	14.7	18.5	45	40
		55	75	15.5	19.4	42	37
		75	75	16.9	21.3	40	35
		90	75	13.6	18.2	44	38



Size	Gear ratio	Motor power [kW]	Test force [N]	Indent. depth (mm) Initial assembly	Indent. depth (mm) Used belts	Frequency (1/s) Initial assembly	Frequency (1/s) Used belts
XK160-170	1.25	22	50	14.6	16.9	49	43
		30	25	9.9	13.4	51	45
		37	75	17.0	19.7	43	38
		45	75	16.5	20.8	40	35
		55	75	15.5	19.4	42	37
		75	75	16.9	21.3	40	35
		90	75	13.6	18.2	44	38
		110	75	12.4	16.5	46	41
		132	75	11.2	12.0	56	49
	1.4	22	50	14.6	16.9	49	43
		30	25	9.9	13.4	51	45
		37	75	16.7	19.4	44	39
		45	75	16.5	20.7	42	37
		55	75	14.9	18.6	44	39
		75	75	16.1	20.3	42	37
		90	75	13.0	17.4	46	40
		110	75	13.3	17.8	45	40
		132	75	10.8	11.1	57	50
	1.6	22	50	14.5	16.8	49	43
		30	75	15.9	19.8	45	39
		37	50	13.8	15.9	52	45
		45	75	16.0	21.6	40	35
		55	75	16.5	20.9	41	36
		75	75	16.8	21.2	41	36
		90	75	13.5	18.2	44	39
		110	75	16.1	17.2	47	41
		132	75	13.9	14.6	51	45
	1.8	22	50	14.9	17.2	48	42
		30	75	16.1	20.1	44	39
		37	50	13.7	15.8	52	46
		45	75	19.7	22.8	38	33
		55	75	16.1	20.3	42	37
		75	75	15.8	19.9	44	38
		90	75	12.7	17.0	47	41
		110	75	15.1	15.8	49	43
		132	75	12.6	13.7	53	47
XK180-190	1.25	30	75	18.3	21.2	42	37
		37	75	20.5	23.7	36	31
		45	75	17.4	22.0	38	33
		55	75	16.7	20.8	39	34
		75	75	20.2	25.5	34	30
		90	75	18.7	23.3	35	31
		110	75	15.5	20.7	39	34
		132	75	12.2	16.7	42	37
	1.4	30	50	15.9	18.7	47	41
		37	75	20.8	24.0	35	31
		45	75	17.8	22.5	39	34
		55	75	16.0	19.9	41	36
		75	75	19.8	25.0	35	30
		90	75	17.2	23.1	36	32
		110	75	16.5	22.2	37	32
		132	75	13.1	17.9	40	35
	1.6	30	75	15.9	19.8	45	39
		37	50	16.3	18.7	44	38
		45	75	16.0	21.6	40	35



Size	Gear ratio	Motor power [kW]	Test force [N]	Indent. depth (mm) Initial assembly	Indent. depth (mm) Used belts	Frequency (1/s) Initial assembly	Frequency (1/s) Used belts
XK180-190	1.6	55	75	17.0	21.4	39	35
		75	75	20.3	25.6	34	30
		90	75	17.4	23.3	36	32
		110	75	15.7	19.6	39	34
		132	75	12.4	17.0	42	37
	1.8	30	75	16.1	20.1	44	39
		37	50	16.1	18.6	44	39
		45	75	20.3	23.4	37	32
		55	75	17.2	21.7	39	34
		75	75	19.8	24.9	35	30
		90	75	17.5	23.4	36	31
		110	75	15.0	20.0	38	33
		132	75	12.7	17.4	41	36
XK200-210	1.25	30	50	20.1	23.8	36	32
		37	50	18.8	22.1	40	35
		45	75	18.7	23.4	38	33
		55	75	18.3	22.8	36	31
		75	75	20.2	25.5	34	30
		90	75	18.7	23.3	35	31
		110	75	19.8	25.0	34	30
		132	75	17.2	23.1	37	32
		160	125	19.1	23.2	32	28
		200	125	16.6	20.5	35	31
	1.4	30	75	23.4	27.1	33	29
		37	75	20.2	25.3	36	31
		45	75	17.2	21.7	39	34
		55	75	17.5	23.4	36	32
		75	75	19.8	25.0	35	30
		90	75	17.2	23.1	36	32
		110	75	19.4	24.5	35	31
		132	75	16.9	22.6	37	33
		160	125	18.2	22.1	34	30
		200	125	15.8	19.6	37	32
	1.6	30	75	22.4	27.8	33	29
		37	75	19.1	23.9	36	32
		45	75	16.0	21.6	40	35
		55	75	19.9	25.1	34	30
		75	75	20.3	25.6	34	30
		90	75	17.4	23.3	36	32
		110	75	19.6	24.7	35	30
		132	75	17.0	22.8	37	33
		160	125	18.2	22.1	34	30
		200	125	15.8	19.6	37	33
	1.8	30	75	21.9	27.2	34	30
		37	75	18.8	23.4	37	33
		45	75	20.3	23.4	37	32
		55	75	17.4	21.6	36	32
		75	75	19.8	24.9	35	30
		90	75	17.5	23.4	36	31
		110	75	20.0	25.3	34	30
		132	75	17.4	21.6	36	32
		160	125	18.9	23.0	33	29
		200	125	16.4	20.4	36	31
XK220-230	1.25	37	50	18.8	22.1	40	35
		45	75	18.7	23.4	38	33



Size	Gear ratio	Motor power [kW]	Test force [N]	Indent. depth (mm) Initial assembly	Indent. depth (mm) Used belts	Frequency (1/s) Initial assembly	Frequency (1/s) Used belts
XK220-230	1.25	55	75	18.3	22.8	36	31
		75	75	20.2	25.5	34	30
		90	75	18.7	23.3	35	31
		110	75	19.8	25.0	34	30
		132	75	17.2	23.1	37	32
		160	125	19.1	23.2	32	28
		200	125	16.6	20.5	35	31
	1.4	30	75	23.4	27.1	33	29
		37	75	20.2	25.3	36	31
		45	75	17.2	21.7	39	34
		55	75	17.5	23.4	36	32
		75	75	19.8	25.0	35	30
		90	75	17.2	23.1	36	32
		110	75	19.4	24.5	35	31
		132	75	16.9	22.6	37	33
		160	125	18.2	22.1	34	30
		200	125	15.8	19.6	37	32
	1.6	30	75	22.4	27.8	33	29
		37	75	19.1	23.9	36	32
		45	75	16.0	21.6	40	35
		55	75	19.9	25.1	34	30
		75	75	20.3	25.6	34	30
		90	75	17.4	23.3	36	32
		110	75	19.6	24.7	35	30
		132	75	17.0	22.8	37	33
		160	125	18.2	22.1	34	30
		200	125	15.8	19.6	37	33
	1.8	30	75	21.9	27.2	34	30
		37	75	18.8	23.4	37	33
		45	75	20.3	23.4	37	32
		55	75	17.4	21.6	36	32
		75	75	19.8	24.9	35	30
		90	75	17.5	23.4	36	31
		110	75	20.0	25.3	34	30
		132	75	17.4	21.6	36	32
		160	125	18.9	23.0	33	29



6.22 Base frame /BF

Observe the following notes:

- The support structure of the foot mounting must be rigid and adequately dimensioned.
- The base plate must only be bolted onto the gear unit foundation at the mounting hole positions provided for this purpose. It is important that the base frame is not deformed (hazard of damage to gear unit and coupling),
- Do not twist the base frame by misaligning the gear unit output shaft to the machine shaft.

6.23 Swing base /SB

Observe the following notes:

- The system must be adequately dimensioned to be able to absorb the torque of the torque arm.
- Do not twist the swing base during assembly (hazard of damage to gear unit and coupling).



INFORMATION on explosion protection

Observe the special installation instructions for the swing base.

6.24 Fan /FAN

Note the following:

- When protective devices for couplings or similar are installed on gear units equipped with a fan, sufficient clearance must be provided for cooling air intake.
For the required clearance, refer to the dimension drawing in the catalog or the order documents.
- Never operate the gear unit without the protective housing.
- Protect the fan guard from external damage.
- Make sure the air intake vents of the fan are not blocked or covered.

Note the following tightening torques when installing the fan guard:

Screws/nuts	Tightening torques Strength class 8.8 [Nm]
M8	5



6.25 Water cooling cover /CCV



INFORMATION on explosion protection

A water cooling cover can only be used in connection with a temperature monitoring device on the gear unit.

6.25.1 Notes on connection / installation



INFORMATION on explosion protection

Make sure that the connection to the cooling circuit complies with ATEX requirements. If connections with a limited service life (e.g. rubber hoses) are used, the operator must be informed about the relevant maintenance and service measures. The connection must ensure permanent operational capability of the cooling system.



NOTICE

Improper mounting of the water cooling cover may result in damage to the gear unit.

Possible damage to property.

- Observe the following notes:
- Using thread seal tape on the pipe threads increases the resistance between the connection parts as well as the risk of cracking in the water cooling cover. Do not tighten the threads excessively.
- The water cooling cover is not equipped with a water drain. In the event of repair work, you have to install a drain on the cooling water outlet to ensure proper draining of the cooling water.
- Connect the water cooling cover to the existing cooling circuit. The direction of flow is user-defined.
- Cooling water temperature and volume flow according to the order documents.
- Make sure the cooling water pressure does not exceed 6 bars.
- In the event of temperature levels below 0 °C and longer downtimes, drain the cooling water from the circuit. Use compressed air to remove any remaining water.
- For permitted cooling media, refer to the following chapter.

The following measures can be taken to ensure proper functioning in different systems:

- Install a safety valve in the cooling water inlet to prevent fluctuations in pressure and volume.
- Install filters in the cooling water inlet to protect the heat exchanger from dirt and mud in particular if the cooling water is obtained from sources other than the municipal water supply system.
- Install an automatic throttle valve in the respective inlet to compensate pressure.

6.25.2 Removal

Observe the notes in chapter "Inspection/maintenance" (page 204).



6.25.3 Cooling media



INFORMATION

- Note that the service life, the efficiency, and the maintenance intervals of the heat exchanger depend to a great degree on the quality and ingredients of the cooling medium.
 - Special procedures are required when sea water or brackish water is used. Consult SEW-EURODRIVE
-

Permitted cooling media

- The permitted cooling media is pure water. Cooling water additives, such as anti-freeze or corrosion inhibitor, might negatively influence the cooling performance and compatibility of materials. Consult SEW-EURODRIVE.
- Cooling water temperature and flow rate of oil and cooling water according to the order documents.

Dirt

The quantity of suspended solids (ball-shaped, particle size < 0.25 mm) should be less than 10 mg/l. Threadlike contaminants increase the risk of pressure loss.

Corrosion

Limit values: free chlorine < 0.5 ppm, chlorine ions < 200 ppm, sulfate < 100 ppm, ammonia < 10 ppm, free CO < 10 ppm, pH 7-9.

The following ions do not have a corrosive effect under normal conditions: phosphate, nitrate, nitrite, iron, manganese, sodium, potassium.



6.26 Water cooling cartridge /CCT



INFORMATION on explosion protection

A water cooling cartridge can only be used in connection with a temperature monitoring device on the gear unit.

6.26.1 Notes on connection / installation



INFORMATION on explosion protection

Make sure that the connection to the cooling circuit complies with ATEX requirements. If connections with a limited service life (e.g. rubber hoses) are used, the operator must be informed about the relevant maintenance and service measures. The connection must ensure permanent operational capability of the cooling system.



NOTICE

Improper installation of the water cooling cartridge can damage the gear unit.

Possible damage to property.

• Observe the following notes:


- Using calking strip on the pipe threads increases the resistance between the connection parts as well as the risk of cracking in the cast parts of the water cooling cartridge. Do not tighten the threads excessively.
- The water cooling cartridges are not equipped with a water drain. In the event of repair work, you have to install a drain on the cooling water outlet to ensure proper draining of the cooling water.
- For connecting the water cooling cartridge, use only piping and mounting parts of the same or of compatible material.
- Check the water cooling cartridge to see that it is free from soiling and foreign objects in the pipe connection to ensure unobstructed flow of the cooling media.
- Avoid tensions on the connection points when connecting the piping. Support the pipes properly, if required.
- Install the cooling water outlet pipe in such a way that the water cooling cartridge is permanently flooded by cooling water.
- Refer to chapter "Cooling media" (page 171) to determine the permitted cooling media.
- Cooling water temperature and volume flow according to the order documents.
- Make sure the cooling water pressure does not exceed 6 bars.
- In the event of temperature levels below 0 °C and longer downtimes, drain the cooling water from the circuit. Use compressed air to remove any remaining water.
- The recommended filtering is 100 µm.
- Connect the water-cooling cartridge to the existing cooling circuit. The direction of flow is user-defined.



Assembly/installation

Water cooling cartridge /CCT

- For gear units with 2 water cooling cartridges, connect the cooling circuit in parallel, see following figure.

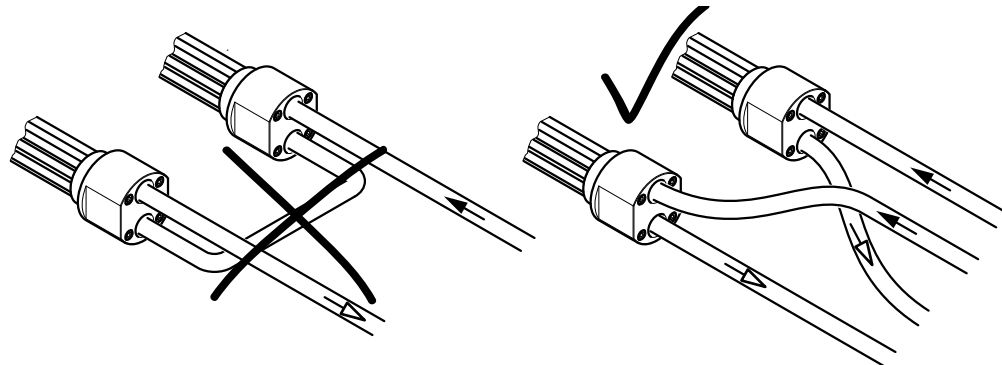

370075915

- ← Supply (cold water)
 → Return (warm water discharge)

The following measures can be taken to ensure proper functioning in different systems:

- Install a safety valve in the cooling water inlet to prevent fluctuations in pressure and volume.
- Install filters in the cooling water inlet to protect the heat exchanger from dirt and mud in particular if the cooling water is obtained from sources other than the municipal water supply system.
- Install an automatic throttle valve in the respective inlet to compensate pressure.

6.26.2 Removal

Observe the notes in chapter "Inspection/maintenance" (page 204).



6.26.3 Requirements on the water quality



INFORMATION

Special measures have to be taken when using sea water or brackish water. Consult SEW-EURODRIVE.

The following requirements on the water quality are recommendations. In exceptional cases, certain concentrations of substances of content might cause unforeseen reactions.

The quality of the water as well as its substances are important factors for assessing the cooling water available for water cooling cartridges. The water quality is determined by the water hardness and the pH value of the water.

Water hardness

Water hardness is defined by the amount of hardeners (carbonates and bicarbonates) in the water. Hardeners accumulate on the surface of the water cooling cartridge in particular at high temperatures and in this way impair the performance. Take these deposits into account when selecting the water cooling cartridge for extremely hard water.

The following table shows the classification of German degrees of hardness to water quality °dH:

Degree of hardness ¹⁾	Water quality
0 – 5 °dH	Very soft water
5 – 10 °dH	Soft water
10 – 20 °dH	Medium hard water
20 – 30 °dH	Hard water
> 30 °dH	Very hard water

1) 10 mg/l of hardener corresponds to 1 °dH

pH value

- The water cooling cartridge partially consists of a copper and nickel alloy, to which the following applies:

→ Corrosion problems when **pH value < 6**

- With alkaline water:

→ Corrosion problems when **water hardness < 6°dH**.

Smaller values can cause corrosion due to free carbonic acid.

The following table describes the classification of the water quality based on the pH value:

pH value	Water quality
4.5	Very acidic
4.5 – 6.0	Acidic
6.0 – 6.8	Slightly acidic
7.0	Neutral
7.2 – 7.7	Slightly alkaline
7.7 – 8.2	Alkaline
8.2	Very alkaline



Assembly/installation

Water cooling cartridge /CCT

Cooling water assessment based on water substances

The following table provides an overview of the resistance of copper pipes against substances in non-potable water.

Assessment criterion	Approximate concentration [mg/l]	Assessment CuNi10Fe1Mn
pH value	< 6	0
	6 to 9	+
	> 9	0
Chloride	up to 1000	+
	> 1000	+ (< 25000 mg/l)
Sulfate	up to 70	+
	70 to 300	+
	> 300	+ (< 25000 mg/l)
Nitrate	up to 100	+
	> 100	0
Free (aggressive) carbonic acid	up to 20	+
	20 to 50	0
	> 50	–
Oxygen	up to 2	+
	> 2	+
Ammonium	up to 2	+
	2 to 20	+
	> 20	–
Iron (dissolved)	up to 10	0
	> 10	–
Manganese (dissolved)	up to 1	0
	> 1	–
Free chlorine	up to 5	permanently < 0.5 mg/l
	> 5	intermittently < 3.0 mg/l
Sulfide		0
Ammonia		+ (< 15 mg/l)

Key

0	= usually good resistivity
+	= corrosion problems can occur in particular if several factors are assessed with 0
–	= we advise against use



Types of cooling water/characteristics

Note the following conditions:

Industrial water

- Usually untreated water (no drinking water)
- Often very contaminated
- A water analysis is necessary for assessment
- Copper, brass and steel are very resistant against industrial water

Stream water and river water

- We recommend using copper brass pipes
- Cast iron parts must be protected against corrosion by suitable coating
- Usually untreated water (no drinking water)
- Often very contaminated
- A water analysis is necessary for assessment



Assembly/installation

Oil-water cooler for splash lubrication /OWC

6.27 Oil-water cooler for splash lubrication /OWC



INFORMATION

Before installation/assembly, first read the addendum to the operating instructions "Oil-Water Cooler with Motor Pump for Splash Lubricaton /OWC", which includes the manufacturer's documentation.

6.28 Oil-air cooler for splash lubrication /OAC



INFORMATION

Before installation/assembly, first read the addendum to the operating instructions "Oil-Air Cooler for Splash Lubricaton /OAC", which includes the manufacturer's documentation.

6.29 Oil-water cooler for pressure lubrication /OWP



INFORMATION

Before installation/assembly, first read the addendum to the operating instructions "Oil-Water Cooler for Pressure Lubricaton /OWP", which includes the manufacturer's documentation.

6.30 Oil-air cooler for pressure lubrication /OAP



INFORMATION

Before installation/assembly, first read the addendum to the operating instructions "Oil-Air Cooler for Pressure Lubricaton /OAP", which includes the manufacturer's documentation.



6.31 Oil heater /OH



⚠ WARNING

Danger of electric shock.

Severe or fatal injuries

- De-energize the oil heater before you start working on the unit.
- Secure the oil heater against unintended power-up.



NOTICE

Improper installation of the oil heater may result in damage to the gear unit.

Possible damage to property.

- Make sure the heating elements are fully immersed in the oil bath to avoid any damage.



NOTICE

Improper change of the mounting position might result in malfunction of the gear unit heater.

Possible damage to property.

- The mounting position may only be changed after consultation with SEW-EURODRIVE. The warranty will become void without prior consultation.



INFORMATION on explosion protection

- Using an oil heater is only permitted after consultation with SEW-EURODRIVE. Also observe the separate operating instructions of the manufacturer.
- The oil heater may only be operated with properly connected oil level monitoring.

6.31.1 Information on the function of the oil heater

- The customer is responsible for setting the trip temperature of the oil heater based on the following viscosity table.
- Thermostat, oil heater, and oil level monitoring are installed on the gear unit and ready for operation. Prior to startup, wire them properly and connect them to the power supply.
- During installation, check the thermostat setting according to the following tables.



INFORMATION

The electrical connection of the heating elements of the thermostat and the oil level monitoring may only be established by qualified personnel according to the power supply conditions on site.

Observe the connection voltage and the switching capacity. Improper or incorrect cabling can damage the electrical components.


6.31.2 Thermostat

INFORMATION on explosion protection

Observe the manufacturer's operating instructions.

6.31.3 Oil level monitoring

INFORMATION on explosion protection

- Observe the manufacturer's operating instructions.
 - If the oil level is too low, switch off the drive and the oil heater.
-

6.31.4 Limit temperature for gear unit start

The minimum permitted ambient temperature / oil temperature for gear unit starting depends on the viscosity of the oil used and the lubrication type of the gear unit.


NOTICE

Starting up the gear unit below the permitted minimum oil temperature may damage the unit.

Possible damage to property.

- Before startup, the oil must be heated up by the oil heater to the temperature specified under "Initial temperature for gear unit start" (see following tables).
-


INFORMATION

The following tables show the limit temperatures (minimum ambient temperatures) for gear unit startup without and with oil heater.



Mineral oil

Lowest permissible starting temperature for the gear unit

Lubrication type	Design	Lubricants		
		ISO VG320	ISO VG220	ISO VG150
Splash lubrication Oil bath lubrication	Initial temperature for gear unit start (minimum permitted oil bath temperature)	-12 °C	-15 °C	-20 °C
Pressure lubrication with Shaft end pump	Initial temperature for gear unit start (minimum permitted oil bath temperature)	+5 °C	0 °C	-5 °C
Pressure lubrication with motor pump	Initial temperature for gear unit start (minimum permitted oil bath temperature)	+15 °C	+10 °C	+5 °C



INFORMATION

The specified temperatures refer to the average values of the permitted lubricants based on the lubricant table (see chapter 9.2). In borderline cases, the permitted temperature of the lubricant that is actually being used must be verified. When planning the motor, observe the increased starting torque at low temperatures. It may be necessary to contact SEW-EURODRIVE.

Synthetic oil

Lowest permissible starting temperature for the gear unit

Lubrication type	Design	Lubricants		
		ISO VG320	ISO VG220	ISO VG150
Splash lubrication Oil bath lubrication	Initial temperature for gear unit start (minimum permitted oil bath temperature)	-25 °C	-25 °C	-25 °C
Pressure lubrication with Shaft end pump	Initial temperature for gear unit start (minimum permitted oil bath temperature)	-5 °C	-8 °C	-15 °C
Pressure lubrication with motor pump	Initial temperature for gear unit start (minimum permitted oil bath temperature)	+8 °C	+3 °C	-3 °C



INFORMATION

The specified temperatures refer to the average values of the permitted lubricants based on the lubricant table (see chapter 9.2). In borderline cases, the permitted temperature of the lubricant that is actually being used must be verified. When planning the motor, observe the increased starting torque at low temperatures. It may be necessary to contact SEW-EURODRIVE.



6.32 Pressure switch /PS



INFORMATION

All gear units with pressure lubrication are equipped with a pressure switch for function monitoring.


The pressure switch is to be connected and integrated into the system in such a way that the gear unit can only be operated when the oil pump is building up pressure. A short-term compensation (max 10 s) during startup is permitted.

6.32.1 Notes



INFORMATION on explosion protection


- The pressure switch must be used together with a switch amplifier that enables intrinsically safe switching operations. The switch amplifier must be located outside the potentially explosive atmosphere.
- The switch amplifier must be designed according to EN 60079-11 taking account of the minimum ignition energy (gas group); for dust at least IIB. The pressure switch itself is a simple electrical device according to EN 60079-11 and does not require a separate Ex marking. The isolated switch amplifier and the pressure switch must be installed in compliance with EN 60079-14.

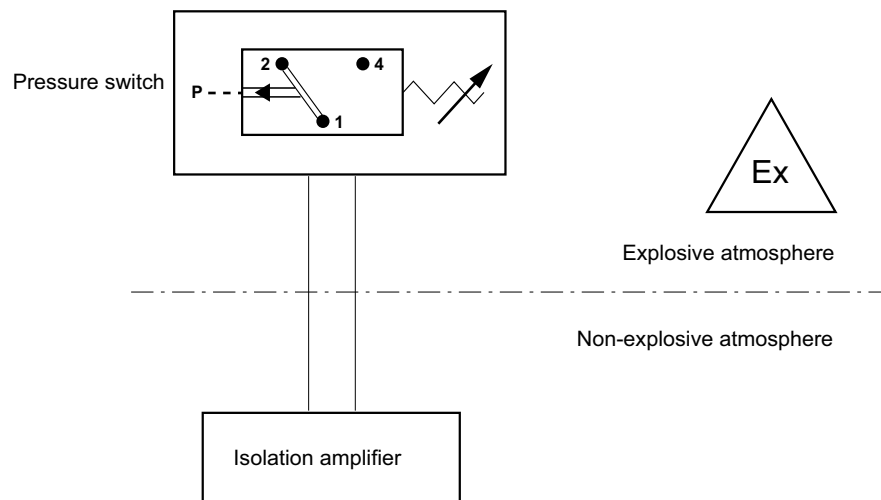

899198347




6.32.2 Dimensions

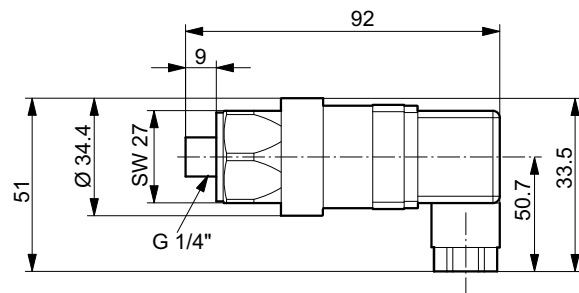

721994635

6.32.3 Electrical connection



722003723

[1] [2] NC contact
[1] [4] NO contact

6.32.4 Technical data

- Pressure 0.5 ± 0.2 bar
- Maximum switching capacity 4 A - AC 250 V; 4 A - DC 24 V
- Plug connector DIN EN 175301-803
- The tightening torque for the retaining screw in the back of the plug connector for electrical connection is 0.25 Nm.



Assembly/installation

Temperature sensor /PT100


6.33 Temperature sensor /PT100

6.33.1 Information




NOTE on explosion protection

- To ensure intrinsically safe wiring, the temperature sensor must be used with a Zener barrier whose current consumption enables correct measuring operation.
- The Zener barrier must be located outside the potentially explosive atmosphere.
- The Zener barrier must be designed according to EN 60079-11 taking account of the minimum ignition energy (gas group); for dust at least IIB. The temperature sensor itself is a simple electrical device according to EN 60079-11 and does not require a separate Ex marking. The Zener barrier and the temperature sensor must be installed in compliance with EN 60079-14.

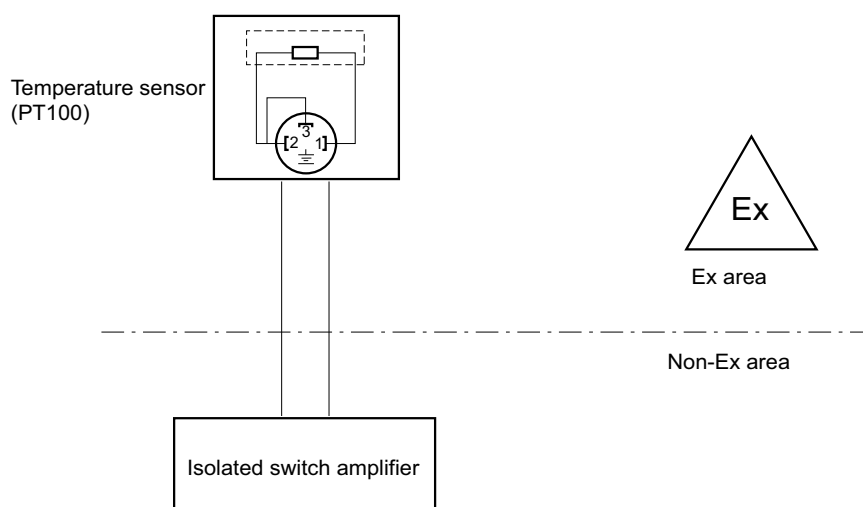

615251339

6.33.2 Dimensions

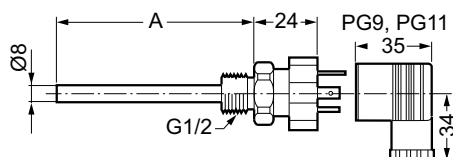


9007199613895435

Size	A [mm]
X100-170	50
X180-320	150



6.33.3 Electrical connection

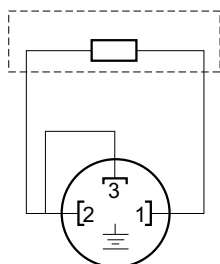

359158539

[1] [2] Resistor element connection

6.33.4 Technical data

- Design with thermometer pocket and changeable measuring bit
- Sensor tolerance [K] $\pm (0.3 + 0.005 \times T)$, (corresponds to DIN IEC 751 class B),
T = Oil temperature [°C]
- Plug connector: DIN EN 175301-803 PG9 (IP65)
- The tightening torque for the retaining screw in the back of the plug connector for electrical connection is 0.25 Nm.



Assembly/installation


Temperature sensor /PT100 (metallic)

6.34 Temperature sensor /PT100 (metallic)



INFORMATION on explosion protection


- To ensure intrinsically safe wiring, the temperature sensor must be used with a Zener barrier whose current consumption enables correct measuring operation.
- The Zener barrier must be located outside the potentially explosive atmosphere.
- The Zener barrier must be designed according to EN 60079-11 taking account of the minimum ignition energy (gas group); for dust at least IIB. The temperature sensor itself is a simple electrical device according to EN 60079-11 and does not require a separate Ex marking. The Zener barrier and the temperature sensor must be installed in compliance with EN 60079-14.

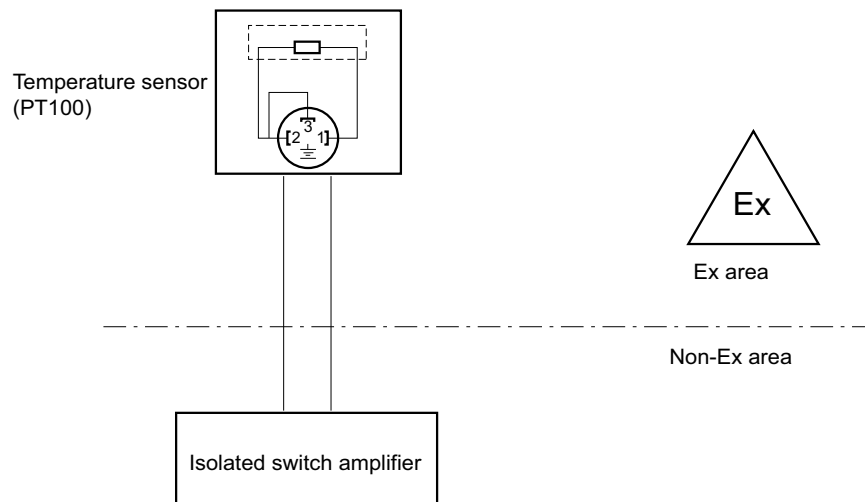

9007199869992331



6.34.1 Technical data

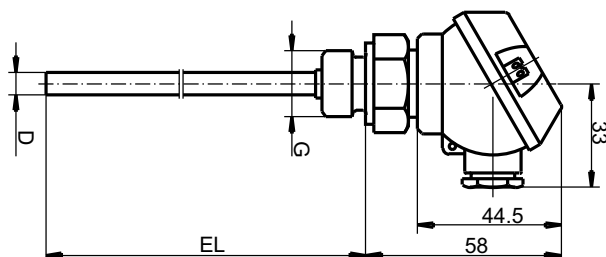

4401813899

Field of application	For monitoring the oil temperature
Operating temperature	-50 °C to 400 °C
Thermowell diameter	Ø 7 mm
Installation length	100 mm
Process connection	G1/2 screw fitting
Measuring insert	1 x PT100 in double-wire circuit
Tolerance class according to DIN EN 60 751	Class B (standard)

6.34.2 Electrical connection

Connection type	Double-wire
Standard connector	
Connection socket	

[1] [2] Resistor element connection




6.35 Temperature switch /NTB

6.35.1 Notes




NOTE on explosion protection

- The temperature switch must be used with an isolating switch amplifier that enables intrinsically safe switching operations. The isolated switch amplifier must be located outside the potentially explosive atmosphere.
- The isolated switch amplifier must be designed according to EN 60079-11 taking account of the minimum ignition energy (gas group); for dust at least IIB. The temperature switch itself is a simple electrical device according to EN 60079-11 and does not require a separate Ex marking. The isolated switch amplifier and the temperature switch must be installed in compliance with EN 60079-14.

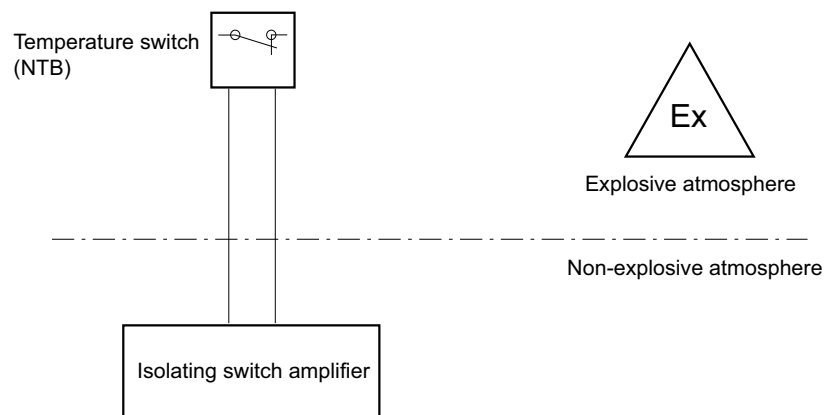

615315595

6.35.2 Dimensions

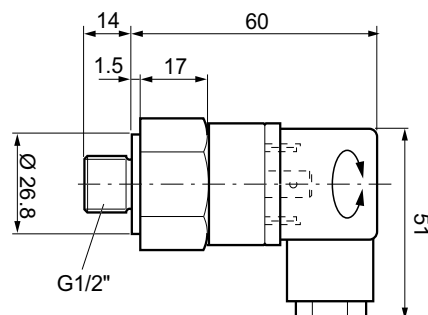


366524939



6.35.3 Electrical connection

To guarantee a long service life and trouble-free functioning, we recommend that you use a relay in the power circuit instead of a direct connection through the temperature switch.

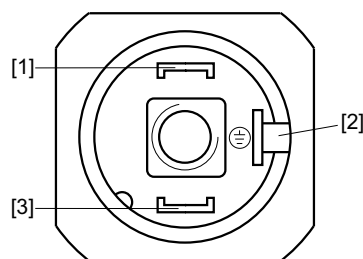

366532491

- [1] [3] NC contact (without vacuum)
[2] Grounding terminal 6.3 x 0.8

6.35.4 Technical data

- Trigger temperature: 70 °C, 80 °C, 90 °C, 100 °C \pm 5 °C
- Contact capacity: 10 A - AC 240 V
- Plug connector: DIN EN 175301-803 PG9 (IP65)
- The tightening torque for the retaining screw in the back of the plug connector for electrical connection is 0.25 Nm.




6.36 Temperature switch /TSK

6.36.1 Notes




NOTE on explosion protection

- The temperature switch must be used with an isolating switch amplifier that enables intrinsically safe switching operations. The isolated switch amplifier must be located outside the potentially explosive atmosphere.
- The isolated switch amplifier must be designed according to EN 60079-11 taking account of the minimum ignition energy (gas group); for dust at least IIB. The temperature switch itself is a simple electrical device according to EN 60079-11 and does not require a separate Ex marking. The isolated switch amplifier and the temperature switch must be installed in compliance with EN 60079-14.

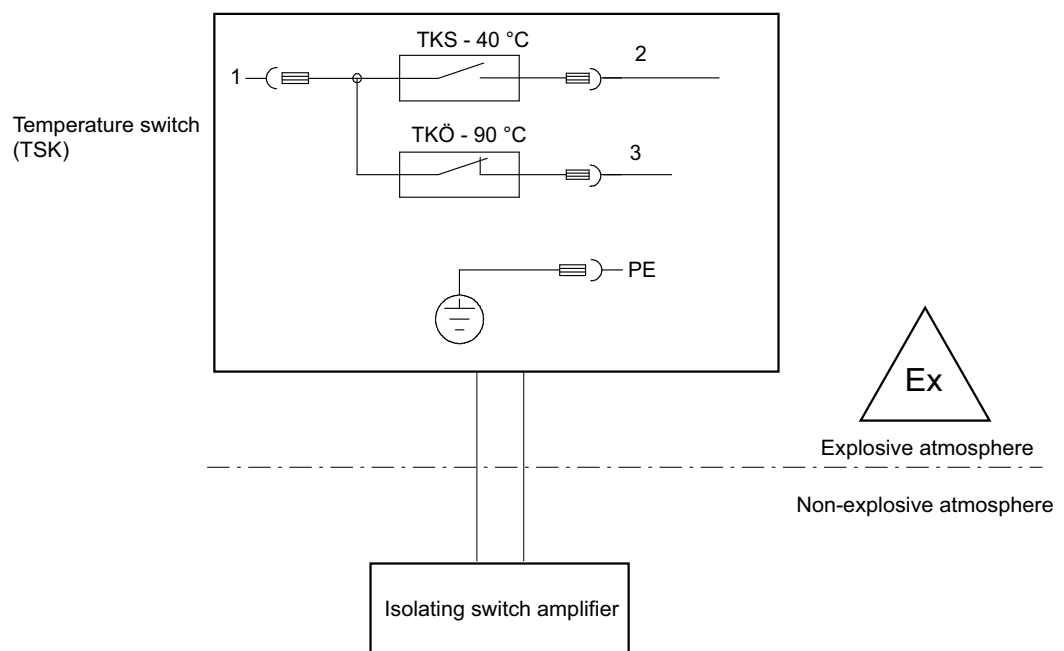

899312907

6.36.2 Dimensions

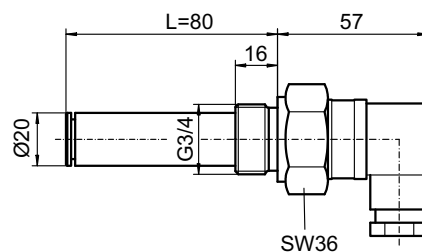


893872779



6.36.3 Electrical connection

To guarantee a long service life and trouble-free functioning, we recommend that you use a relay in the power circuit instead of a direct connection through the temperature switch.

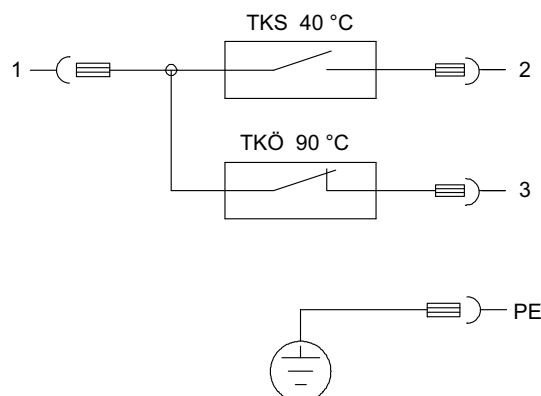

893878155

[1] [2] Switch 40 °C NO contact
[1] [3] Switch 90 °C NC contact
PE Grounding terminal

6.36.4 Technical data

- Switching temperatures: 40 °C and 90 °C
- Contact capacity: 2 A - AC 240 V
- Plug connector: DIN EN 175301-803 PG11 (IP65)
- The tightening torque for the retaining screw in the back of the plug connector for electrical connection is 0.25 Nm.

6.37 Brake



INFORMATION

The brake is not set at the factory.

Observe the manufacturer's operating instructions.



7 Startup

7.1 Notes on startup



⚠ WARNING

Overspeed can destroy the auxiliary drive

Severe or fatal injuries.

- Consult SEW-EURODRIVE if you want to change the direction of rotation.




NOTICE

Improper startup may result in damage to the gear unit.

Possible damage to property.

- For startup, adhere to the safety notes in chapter 2 and to the safety notes of the operating instructions indicated in chapter 1.
- Observe the following notes.
- Before startup, check that the oil level is correct. Refer to the unit's nameplate for lubricant fill quantities.
- Check the correct direction of rotation of the bevel-helical gear unit and make sure that the auxiliary drive does not rotate in operating direction.
- Before connecting the main and auxiliary drive, determine the rotating field of the three-phase supply system using a phase-sequence indicator. Check as to whether both drives are connected according to the direction of rotation.
- Make sure that it is not possible to operate the main drive against the blocking direction of the bevel-helical gear unit. Observe the direction arrow on the bevel-helical gear unit.
- Interlock the main drive and the auxiliary drive so that only one of the two motors can be switched on.
- Check the disconnection function of the speed control.
- Make sure that the auxiliary drive is not overloaded. The auxiliary drive may only be operated with the output torque rates indicated in the order documents.
- Make sure that the rotary motion of the input shaft of the bevel-helical gear unit is not obstructed during auxiliary drive operation (e.g. maintenance). A brake on the input side of the main drive must be released for auxiliary drive operation.
- The most important technical data is provided on the nameplate. Additional data relevant for operation is available in drawings, on the order confirmation or any order-specific documentation.
- Prior to startup, make sure that monitoring devices (pressure switch, temperature switch etc.) are fully operational.
- After having installed the gear unit, check to see that all retaining screws are tight.
- Make sure that the alignment has not changed after tightening the mounting elements.
- Prior to startup, ensure that rotating shafts as well as couplings are equipped with suitable protective covers.
- If there are any oil drain valves, ensure that they cannot be opened unintentionally.
- If an oil level glass is used for checking the oil level, ensure that it is protected against damage.
- It is essential that there is no open fire or risk of sparks when working on the gear unit.

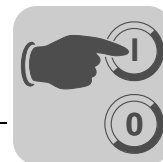

- Make sure that the gear unit is grounded. Electrical mount-on components, such as motors, frequency inverters, etc. must be grounded separately.
- Protect the gear unit from falling objects.
- If the gear unit is equipped with a fan on the input shaft, check for free air intake within the specified angle.
- Make sure that the external coolant supply is guaranteed for gear units with circulation cooling, water cooling cover and water cooling cartridge.
- When ambient temperatures are low, adhere to the limit temperature for gear unit start. Ensure that the heating time is sufficient.
- Gear units with pressure lubrication may only be taken into operation when the pressure switch is connected.
- For gear units with long-term protection: Replace the screw plug at the location indicated on the gear unit with a breather plug (position → see order documents).
- Remove any transport fixtures prior to startup.
- Observe the safety notes in the individual chapters!

7.2 Starting up gear units in potentially explosive atmospheres



INFORMATION on explosion protection

- Define measure to ensure that the values on the nameplate of the gear unit are not exceeded. It is essential that the gear unit is not overloaded.
Make sure that the data specified on the nameplate of the gear unit corresponds to real conditions at the location where the drive is to be installed.
- If the project planning documents require the use of oil temperature monitoring, the gear unit may only be started up with an installed oil temperature monitor.
- Check the monitoring system for proper functioning prior to startup. The shutdown temperature of the drive is specified in the delivered documents.
- **I M2:** The devices must be switched off in a potentially explosive atmosphere.
- Processes that cause strong electrical charge are not permitted.



7.3 Startup sequence



NOTICE

Improper startup may result in damage to the gear unit.

Possible damage to property.

Always adhere to the startup sequence. It is a prerequisite for a safe startup.

Adhere to the following startup sequence:

1. Starting up the auxiliary drive
2. Startup of the speed monitor
3. Startup of the main drive


7.3.1 Startup of the auxiliary drive

Make sure that the rotary motion of the input shaft of the bevel-helical gear unit is not obstructed during auxiliary drive operation. A brake on the input side of the main drive must be released for auxiliary drive operation.

7.3.2 Startup of the speed monitor

The speed monitor is not included in the scope of delivery. The following figure shows the SEW speed monitor.


Setting the functions

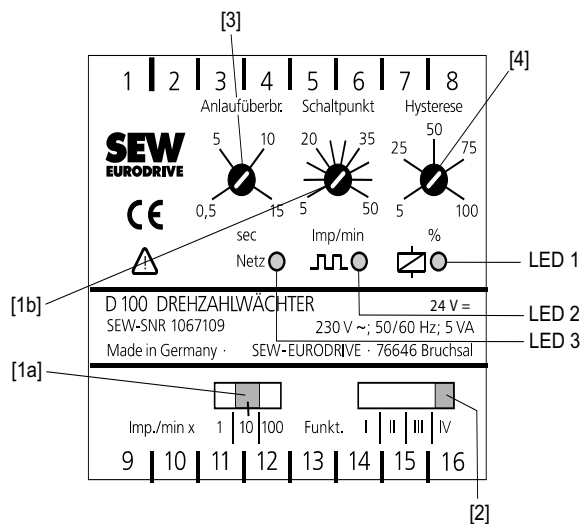

488815115

- [1a] [1b] Switching speed
 [2] Switching function
 [3] Starting lag
 [4] Hysteresis

- LED 1 = lights up when relay has picked up
 LED 2 = signals input pulse
 LED 3 = shows correct operating voltage
 LED 1 = lights up when relay has picked up

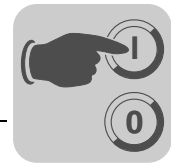

Function	Description	Setting
Switching speed [1a] [1b]	allows for an exact setting of the desired value <ul style="list-style-type: none"> Rough adjustment with step switch (1, 10, 100) Fine adjustment with potentiometer (5 ... 50) 	Step switch [1a] " 10 " Potentiometer setting [1b] " 7 " Switching speed = $10 \times 7 = 70$ pulses/min
Switching function [2]	Definition of the switching function: <ul style="list-style-type: none"> Overrun or underrun of the switching speed Relay setting for an overrun of underrun 	Switching function IV
Starting lag [3]	Possibility to bypass the signal evaluation during the start (irrelevant for switching function IV)	Set to the lowest value (= 0.5 s)
Hysteresis [4]	Difference between the switch-on and switch-off point of the relay.	set to the lowest value (= 5%)

Overview of possible switching functions:

Switching function [2]	Relay position		
	when speed is exceeded	too low	for normal operation and start bypass
I			
II			
III			
IV			



NOTICE

Improper startup may result in damage to the gear unit.

Possible damage to property.


- Integrate the speed monitor into the system circuitry so that the power supply to main drive and auxiliary drive is interrupted if the preset switching speed is overrun.



Startup

Startup sequence

*Operational check
of the speed monitor*

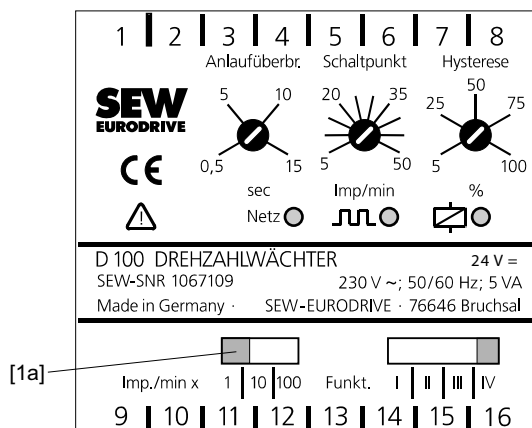


508095755

1. Switch on the auxiliary drive of the bucket elevator drive.
2. Set the step switch for the switching speed [1a] briefly from "10" to "1". The switching speed is now reduced from 70 to 7 pulses/min.
3. The speed monitor detects overspeed and the output relay becomes operative. The function test is successful when the power supply to the main and auxiliary drives is interrupted.
4. After a successful function test, set the step switch for the switching speed [1a] back to "10". The switching speed is now increased again from 7 to 70 pulses/min.

7.3.3 Startup of the main drive

Before starting up the main drive, determine the rotating field of the three-phase system using a phase-sequence indicator. Make sure that it is not possible to operate the main drive against the blocking direction of the bevel-helical gear unit. Observe the direction arrow on the bevel-helical gear unit.

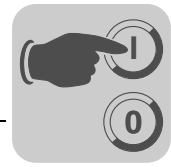

7.4 Shaft end pump /SEP



NOTICE

Improper startup of gear units with pressure lubrication can damage the gear unit.
Possible damage to property.

- Do not start up the gear unit if the pressure switch is not connected.
- It is essential that the gear unit is sufficiently lubricated from the very beginning. Consult SEW-EURODRIVE if the pump does not build up pressure within 20 seconds after the gear unit has been started up.
- A minimum speed of ≥ 400 rpm is required for proper operation of the shaft end pump. If you use variable input speeds (e.g. inverter-controlled drives) or if you intend to change the input speed of a gear unit equipped with a shaft end pump, it is essential that you contact SEW-EURODRIVE.
- An oil heater is mandatory when operating gear units with shaft end pump at low ambient temperatures. For more information, see the chapter "Limit temperature for gear unit startup" (page 179).
- Observe the notes in chapter "Filling the bevel-helical gear unit and the auxiliary drive adapter with oil" (page 80).

7.5 Motor pump /ONP



INFORMATION

Before startup, first read the addendum to the operating instructions "Motor Pump /ONP", which includes the manufacturer's documentation.



7.6 Water cooling cover /CCV



NOTICE

Risk of damage to the system due to performance loss.

Possible damage to property.

- A loss of performance may result from the formation of scale on the inside of the pipe. Refer to chapter "Inspection/Maintenance".



NOTICE

Risk of damage to components caused by aggressive cooling media, such as sea water or brackish water.


Possible damage to property.

- Sea water or brackish water and other caustic fluids must not be used as cooling media for the standard models. Special materials are necessary when using these aggressive cooling media.

After having installed the water cooling cover in the system, it can be taken into operation and operated without taking further preparatory measures. After startup, check the water cooling cover for proper function.

Make the following checks:

- Check the connection points for tightness.
- If necessary, check the valves, fittings, and filters for unrestricted flow and proper functioning.
- Check for proper function of the water cooling cover.

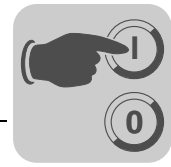

7.7 Water cooling cartridge /CCT



NOTICE

Risk of damage to the system due to performance loss.

Possible damage to property.

- A loss of performance may result from the formation of scale on the inside of the pipe. Refer to chapter "Inspection/Maintenance".



NOTICE

Risk of damage to components caused by aggressive cooling media, such as sea water or brackish water.

Possible damage to property.

- Sea water or brackish water and other caustic fluids must not be used as cooling media for the standard models. Special materials are necessary when using these aggressive cooling media.

After having installed the water cooling cartridge in the system, it can be taken into operation and operated without taking further preparatory measures. After startup, check the water cooling cartridge for proper function.

Make the following checks:

- Check the connection points for tightness.
- If necessary, check the valves, fittings, and filters for unrestricted flow and proper functioning.
- Check for proper function of the water cooling cartridge.

**Startup**Oil-water cooler with motor pump for splash lubrication /OWC

7.8 Oil-water cooler with motor pump for splash lubrication /OWC**INFORMATION**

Before installation/assembly, first read the addendum to the operating instructions "Oil-Water Cooler with Motor Pump for Splash Lubrication /OWC", which includes the manufacturer's documentation.

7.9 Oil-air cooler with motor pump for splash lubrication /OAC**INFORMATION**


Before startup, first read the addendum to the operating instructions "Oil-Air Cooler with Motor Pump for Splash Lubrication /OAC", which includes the manufacturer's documentation.

7.10 Oil-water cooler for pressure lubrication /OWP**INFORMATION**

Before startup, first read the addendum to the operating instructions "Oil-Water Cooler for Pressure Lubrication /OWP", which includes the manufacturer's documentation.

7.11 Oil-air cooler with motor pump for pressure lubrication /OAP**INFORMATION**

Before startup, first read the addendum to the operating instructions "Oil-Air Cooler with Motor Pump for Pressure Lubrication /OAP", which includes the manufacturer's documentation.

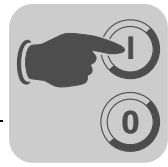

7.12 Oil heater /OH



INFORMATION

Before startup, read the manufacturer's documentation of the oil heater and the oil level monitor.

7.13 Backstop /BS



INFORMATION on explosion protection

Regular operation of the backstop below the lift-off speed is not permitted, except during the temporary starting and braking process and in auxiliary drive mode. The permitted minimum speed rating is listed on the nameplate.



NOTICE

Operating the motor in the blocking direction could destroy the backstop.


Possible damage to property

- Do not start up the motor in the blocking direction. Ensure a correct voltage supply to the motor, so that it rotates in the required direction. Operating the motor in the blocking direction could destroy the backstop.
- Observe the "Addendum to the operating instructions" when you change the blocking direction.

The direction of rotation is specified as viewed onto the output shaft (LSS):

- Clockwise (CW)
- Counterclockwise (CCW)

The permitted direction of rotation [1] is indicated on the housing.

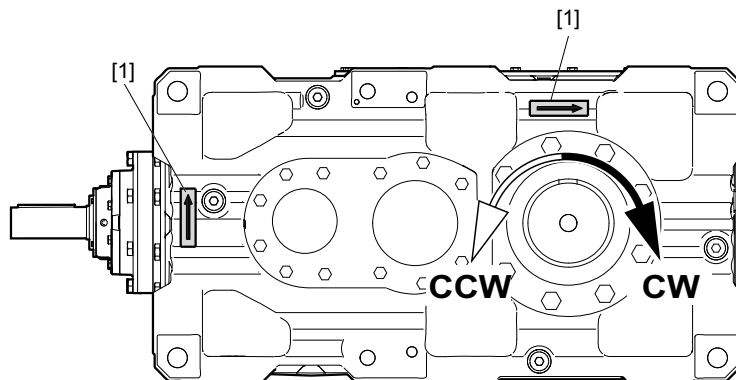

199930635



7.14 Torque-limited backstop



NOTICE

The slipping torque may not be changed by any means for safety reasons.

Possible damage to property.

- There is a risk that the load cannot be kept safely in its position after the motor is switched off and that it can accelerate in the opposite direction.



NOTICE

Operating the motor in the blocking direction could destroy the backstop.

Possible damage to property.

- Do not start up the motor in the blocking direction. Ensure a correct voltage supply to the motor, so that it rotates in the required direction. Operating the motor in the blocking direction could destroy the backstop.

7.15 Starting up the gear unit at low ambient temperatures



NOTICE

Starting up the gear unit below the permitted minimum temperature may damage the unit.

Possible damage to property.

- Before startup, make sure that the oil heater has heated up the oil to the temperature specified in the tables "Lowest permissible starting temperatures for the gear unit" (page 179).

7.16 Measuring the surface and oil temperatures




INFORMATION on explosion protection

The nameplate data on maximum surface temperature is based on measurements made under standard environmental and startup conditions.

Even slight changes in these conditions (such as limited installation space) can have a significant impact on the temperature profile.

During operation, deviations from the calculated temperature are possible.

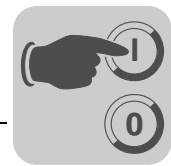

7.17 Gear unit shutdown/conservation



⚠ WARNING

Risk of crushing if the drive starts up unintentionally.

Severe or fatal injuries.

- De-energize the motor before you start working on the unit.
- Secure the motor against unintended power-up.



INFORMATION

Gear units with water cooling system: disrupt the cooling water supply and drain the water from the cooling circuit. Gear units with oil supply system: Please contact SEW-EURODRIVE.

Additional conservation measures are required if the gear unit is to be shut-down for a longer period. Depending on the location, the ambient conditions, and the lubrication state, even a few weeks of downtime might require conservation measures.

7.17.1 Internal conservation

- **New or hardly used gear units:**
 - For internal conservation, SEW-EURODRIVE recommends the VCI conservation method.
 - Apply the required amount of VCI anti-corrosion agent to the inside of the gear unit (e.g. FUCHS LUBRITECH Anticorit VCI UNI IP-40, www.fuchs-lubritech.com). The amount depends on the free space inside the gear unit. Any existing oil may usually remain in the drive.
 - Replace the breather filter with a screw plug and close the gear unit so that it is air tight. Prior to startup, re-install the breather filter.
- **After longer gear unit operation:**
 - The oil might be contaminated (oil sludge, water, etc.) after long periods of operation. Therefore, drain the oil and thoroughly rinse the inside of the gear unit with new oil prior to conservation. Observe the information in chapter "Changing the oil" in the corresponding operating instructions. The inside of the gear unit can then be conserved as described above.

**INFORMATION**

For gear units with contactless sealing systems, consult SEW-EURODRIVE.

For gear units without contactless sealing systems, you may also use the oil type indicated on the nameplate to perform the conservation. In this case, the gear unit must be completely filled with clean oil. Replace the breather filter with a screw plug and fill in the oil from the highest point of the gear unit. In order to provide for sufficient conservation, all the gearing and bearing components must be completely covered in oil.

Prior to startup, re-install the breather filter. Observe the information on the nameplate regarding the oil grade and quantity.

7.17.2 Exterior corrosion protection


- Clean the respective surfaces.
- Grease the shaft near the sealing lip to separate the sealing lip of the oil seal and the anti-corrosion agent.
- Apply a wax-based protective coating to shaft ends and unpainted surfaces as external corrosion protection (e.g. Herm. Hölterhoff Hölterol MF 1424, www.hoelterhoff.de).

**INFORMATION**

Consult the respective supplier regarding the compatibility with the oil that is used and the length of corrosion protection for your particular gear unit version.

Observe the information in chapter "Storage and Transport Conditions" in the corresponding operating instructions. This chapter provides information on the possible storage periods in conjunction with adequate packaging – depending on the storage location.

Prior to re-startup, observe chapter "Startup" in the corresponding operating instructions.

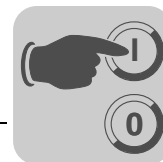

8 Inspection/maintenance

8.1 Preliminary work regarding inspection and maintenance

Observe the following notes before you start with inspection/maintenance work.



⚠ WARNING

Risk of crushing if the drive starts up unintentionally.

Severe or fatal injuries.

- De-energize the motor before you start working on the unit.
- Secure the motor against unintended power-up.



⚠ WARNING

A customer machine that is not appropriately secured can fall when installing or removing the gear unit.

Severe or fatal injuries.

- Safeguard the customer machine against unintentional movement when installing or removing the gear unit.
- Before releasing shaft connections, be sure that there are no active torsional moments present (tensions within the system).



⚠ WARNING

Danger of burns due to hot gear unit and hot gear unit oil.

Serious injury.

- Let the gear unit cool down before you start working on it.
- Carefully remove the oil level plug and oil drain plug.



NOTICE

Filling in the wrong oil may result in significantly different lubricant characteristics.

Possible damage to property.

- Do not mix different synthetic lubricants and do not mix synthetic with mineral lubricants!



INFORMATION on explosion protection

- Wet cleaning of the gear unit is not permitted. The gear unit must be cleaned in such a way that liquids cannot enter the motor adapter (HSS end) or the mounting flange (LSS end) and accumulate there. Otherwise, the oil seal can be damaged, and subsequent damage can create a possible ignition source.
- Processes that cause strong electrical charge are not permitted. Do not use dry cotton cloth to clean the gear unit.



Inspection/maintenance

Preliminary work regarding inspection and maintenance



NOTICE

Improper maintenance may result in damage to the gear unit.

Possible damage to property.

- Note the following:
- Maintenance work on explosion-proof gear units must only be carried out by qualified personnel (qualified according to Directive 1999/92/EC). See chapter 2.3 "Target group".
- Strict adherence to the inspection and maintenance intervals is absolutely necessary to ensure safe working conditions.
- When using primary gearmotors, also observe the maintenance notes for motors and primary gear units in the accompanying operating instructions.
- Use only original spare parts according to the delivered spare and wearing parts lists.
- If you remove the inspection cover, you must apply new sealing compound to the sealing surface. Otherwise, the tightness of the gear unit is not ensured. Consult SEW-EURODRIVE.
- Prevent foreign particles from entering into the gear unit during maintenance and inspection work.
- Never clean the gear unit with a high-pressure cleaning system. Water might enter the gear unit and the seals might be damaged.
- Perform safety and function tests following all maintenance and repair work.
- For third-party parts, such as cooling systems, observe the separate inspection and maintenance intervals of the manufacturer's documentation.
- Strictly observe the safety notes in the individual chapters.



8.2 Inspection and maintenance intervals

Time interval	What to do?
Daily	<ul style="list-style-type: none"> Check the housing temperature: <ul style="list-style-type: none"> with mineral oil: max. 90 °C with synthetic oil: max. 100 °C Check gear unit noise
Monthly	<ul style="list-style-type: none"> Check the gear unit for signs of leakage Check the oil level
After 500 hours of operation	<ul style="list-style-type: none"> First oil change after initial startup
Every 3000 operating hours, at least every 6 months	<ul style="list-style-type: none"> Check the oil consistency¹⁾ Fill regreasable sealing systems with grease V-belt drives: Check the belt tension and condition of the belt pulleys and belts
Depending on the operating conditions, at least every 12 months	<ul style="list-style-type: none"> Check whether retaining screws are tightly secured Check the condition of the motor pump /ONP, replace filter element if necessary Check the condition of the oil-water cooler /OWC Check the condition of the oil-air cooler /OAC Check the condition of the oil-water cooler /OWP, replace filter element, if necessary (see addendum to the operating instructions) Clean the oil filter, replace filter element, if necessary Check the breather valve, replace if necessary Check the alignment of the input and output shaft Check the condition and tightness of all the rubber tubes (aging effects) Check all screw fittings and pipes for any leaks Check the wear of the torque-limited backstop
At least every 3 years, depending on the operating conditions (see figure on next page)	<ul style="list-style-type: none"> Change mineral oil
At least every 5 years, depending on the operating conditions (see figure on next page)	<ul style="list-style-type: none"> Change synthetic oil
Varying (depending on external factors)	<ul style="list-style-type: none"> Clean the gear unit. Prevent dust from building up higher than 5 mm Clean the gear unit housing surface and the fan Repair or renew the surface/anti-corrosion coating Replace backstop The backstop might wear off when operated below lift-off speed. This is why you should consult SEW-EURODRIVE for defining the maintenance intervals for: <ul style="list-style-type: none"> Speed on input shaft < 950 rpm See backstop, chapter 4 Check built-in coolers (such as water cooling cover/cartridge) for deposits Check oil heater (at same time as oil change): <ul style="list-style-type: none"> Are all connection cables and terminals tightened securely and free from corrosion? Clean encrusted heating elements, replace if necessary

1) The oil bath temperature during operation might differ from the calculated one.




8.3 Lubricant change intervals

Change the oil more frequently when using special designs subject to more severe/aggressive ambient conditions.



INFORMATION

Mineral CLP lubricants and synthetic polyalphaolefin-based (PAO) lubricants are used for lubrication. The synthetic lubricant CLP HC (according to DIN 51502) shown in the following illustration corresponds to the PAO oils.

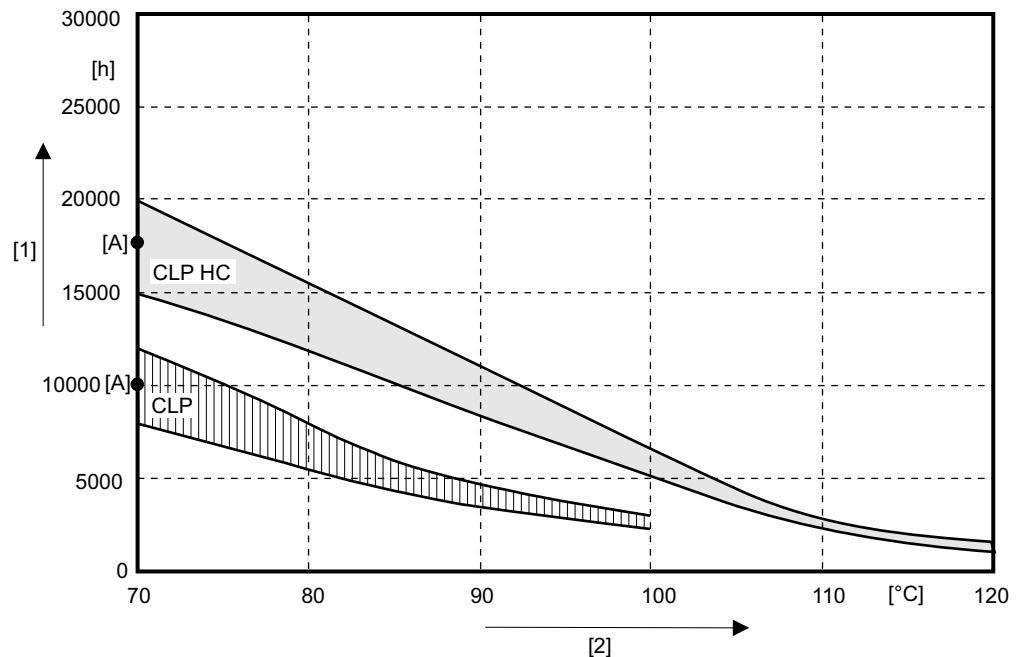

- [1] Operating hours
 [2] Sustained oil bath temperature
 [A] Average value per oil type at 70 °C



INFORMATION

In order to optimize the lubricant change intervals, SEW-EURODRIVE recommends that the gear unit oil (page 213) be analyzed regularly.



8.4 Check oil level on bevel-helical gear unit

8.4.1 General information

Observe the following notes:



NOTICE

Improper checking of the oil level may result in damage to the gear unit.


Possible damage to property.

- Check the oil level only when the gear unit is at standstill.
- If the gear unit is equipped with both an oil dipstick and an oil sight glass, the oil level indicated by the oil dipstick is decisive. The oil level of the oil sight glass is only a guide value.
- For gear units in fixed and variable pivoted mounting position, observe the notes in chapter "Procedure for fixed and variable pivoted mounting positions".
- Elements for controlling the oil level, oil drain, and oil fill openings are indicated by safety symbols.
- Bevel-helical gear units and auxiliary drives have a separate oil chamber.
- For the auxiliary drive, observe the notes and descriptions in the "Gear Unit Series R..7, F..7, K..7, S..7, SPIROPLAN®" operating instructions.

8.4.2 Standard procedure

Oil dipstick

1. Observe the notes in chapter "Preliminary work regarding inspection and maintenance" (page 204).
2. Unscrew the oil dipstick and remove it.
3. Clean the oil dipstick and re-insert it by turning it hand-tight into the gear unit up to the stop.
4. Remove the oil dipstick and check the oil level.

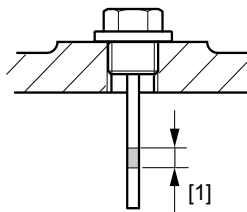

460483852

[1] The oil level must be within this range

5. Proceed as follows if the oil level is too low:
 - Open the oil fill plug.
 - Fill in new oil of the same type via the oil fill plug up to the mark [1].
 - Check the oil level again.
6. Screw in the oil dipstick.




Inspection/maintenance

Check oil level on bevel-helical gear unit

Oil level glass

1. Observe the notes in chapter "Preliminary work regarding inspection and maintenance" (page 204).
2. Check the oil level as shown in the following figure.

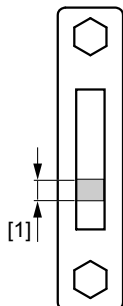


460483724

[1] The oil level must be within this range

3. Proceed as follows if the oil level is too low:
 - Open the oil fill plug.
 - Fill in new oil of the same type via the oil fill plug up to the mark [1].
 - Check the oil level again.
4. Screw in the oil fill plug.

Oil sight glass

1. Observe the notes in chapter "Preliminary work regarding inspection and maintenance" (page 204).
2. Check the oil level on the oil sight glass as shown in the following figure.

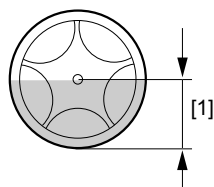

460483980

[1] The oil level must be within this range

3. Proceed as follows if the oil level is too low:
 - Open the respective oil fill plug.
 - Fill in new oil of the same type via the oil fill plug up to the mark [1].
 - Check the oil level again.
4. Screw in the oil fill plug.



8.4.3 Procedure for fixed and variable pivoted mounting positions


Observe the information on the nameplate and in the order documents.

Fixed pivoted mounting positions

Procedure

Check the oil level in the fixed, intended position. Observe the notes in chapter "Standard procedure" (page 208).


The following figure shows an example of how to check the oil level.

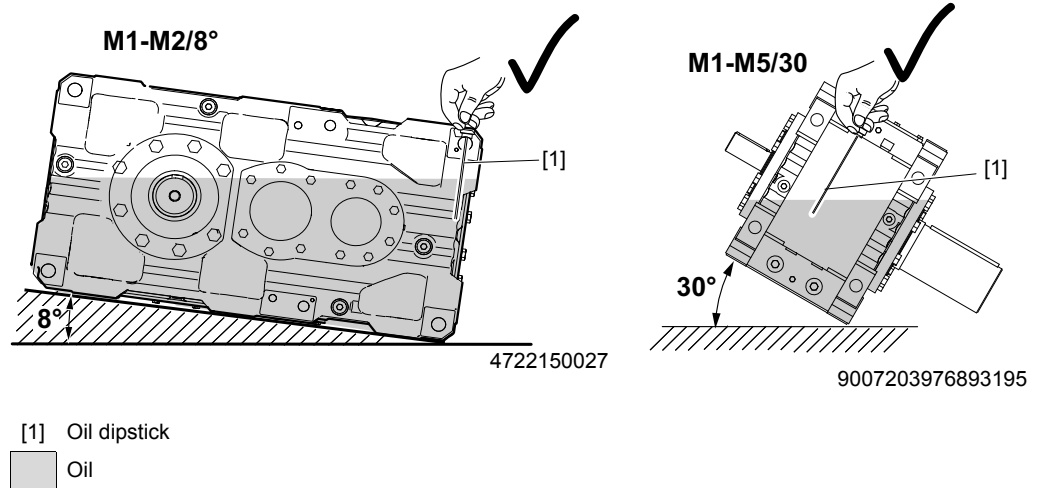

Variable pivoted mounting positions

For variable pivoted mounting positions, the customer determines the pivoting angle in which the oil level is checked.

An additional nameplate is attached to the gear unit to clearly indicate the oil check angle. This nameplate lists the mounting position for the oil level check.

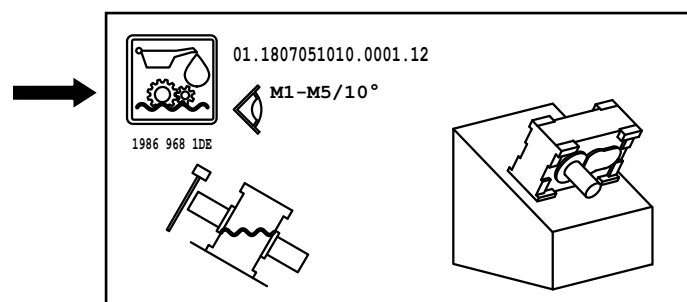



Inspection/maintenance

Check oil level on bevel-helical gear unit


Combination of fixed and variable pivoted mounting positions

Procedure

Observe the following procedure when combining **fixed and variable pivoted mounting position**.

Before checking the oil level of gear units with variable/fixed pivoted mounting position, position the gear unit in the mounting position defined in the order documents. Observe the notes in chapter "Standard procedure" (page 208).

The following figure shows an example of how to check the oil level.

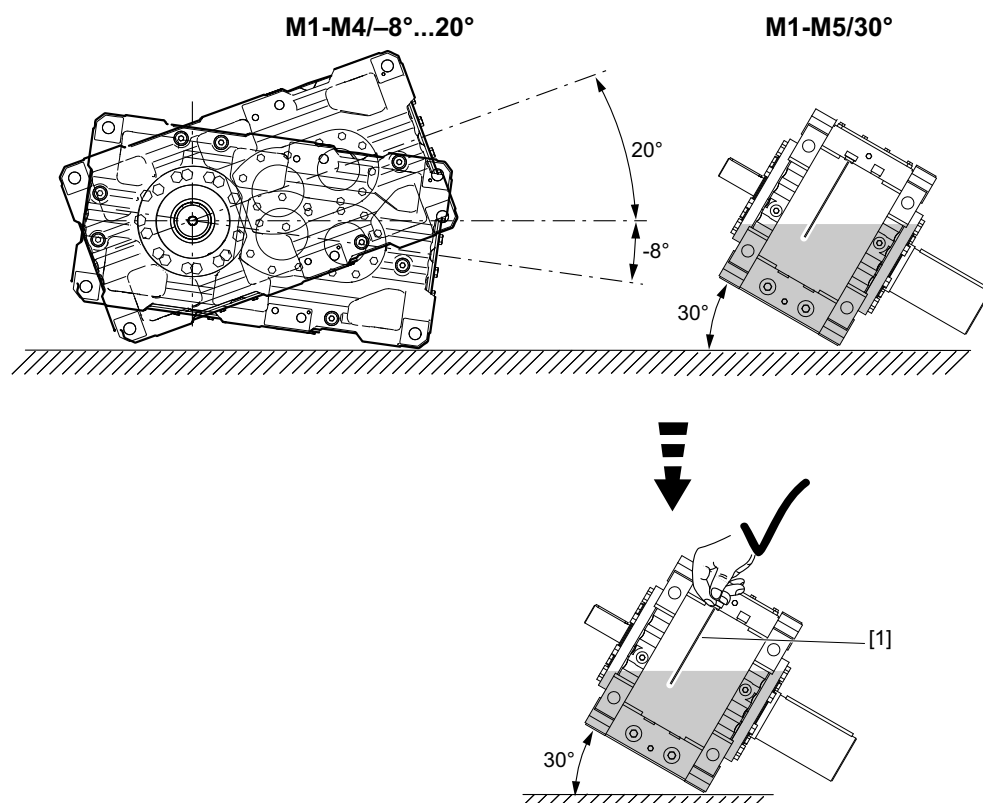

4725461515

[1] Oil dipstick


Oil



Information sign


Observe the additional information sign on the gear unit. Check the oil level in the test mounting position specified on the nameplate.

Following an example of the information sign for check mounting position 30°

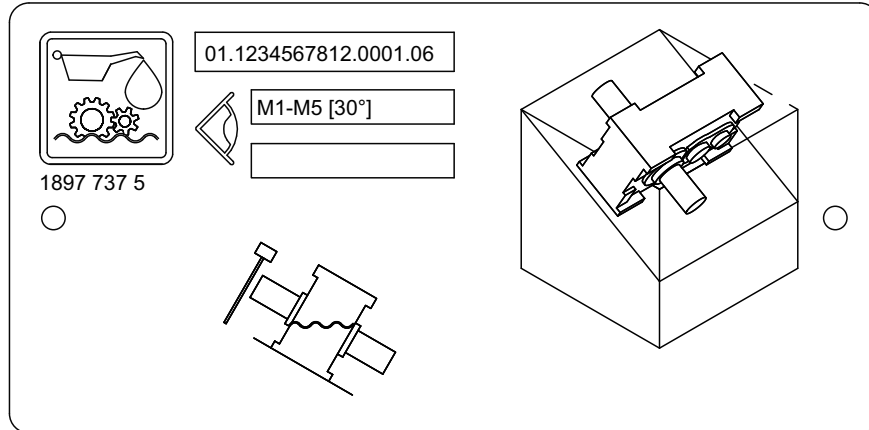

5689445387

Following an example of the information sign for check mounting position 20/30°

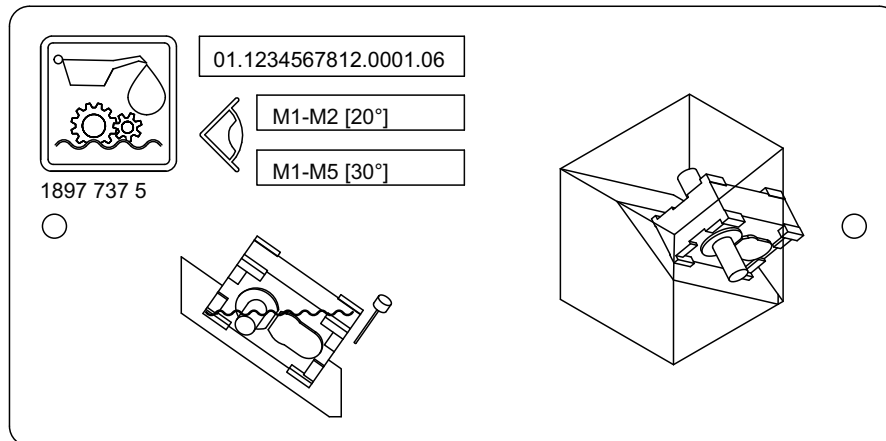

5689447563



8.5 *Checking the oil consistency*

1. Observe the notes in chapter "Preliminary work for inspection/maintenance work" (page 204).
2. Determine the oil drain position and place a container underneath.
3. Slowly open the oil drain and drain some oil.
4. Close the oil drain valve.
5. Check the oil consistency:
 - Check the drained oil for appearance, color, contamination.
 - If the oil sample is severely contaminated (e.g. water, color, dirt), consult a specialist to find out the cause.
 - For more detailed information on checking the oil for water content and viscosity, contact your lubricant manufacturer.



8.6 Change oil of bevel-helical gear unit and auxiliary drive adapter

8.6.1 Notes



NOTICE

Improper oil change may result in damage to the gear unit.

Possible damage to property.

- Note the following:


- Perform the oil change quickly after you have switched off the gear unit to prevent solids from settling. You should drain the oil while it is still warm. Avoid oil temperatures well above 50 °C.
- Always fill the gear unit with the same oil grade as before. Mixing oils of different grades and/or manufacturers is not permitted. Especially synthetic oils may not be mixed with mineral oils or other synthetic oils. When switching from mineral oil and/or when switching from synthetic oil of one basis to synthetic oil of another basis, thoroughly flush the gear unit with the new oil grade.
- Refer to the lubrication table (see chapter "Lubricants") to determine which oils from the various lubricant manufacturers can be used.
- Information such as the oil grade, oil viscosity and required oil quantity is given on the nameplate of the gear unit. The oil quantity specified on the nameplate is an approximate quantity. The mark on the oil level glass or oil dipstick is the decisive indicator for the correct oil level. When additional attachments, e.g. an oil supply system, are mounted to the gear unit, the oil fill quantity is higher. In this case, observe the respective SEW operating instructions. "Oil supply system".
- When changing the oil, flush the gear unit interior thoroughly with oil to remove oil sludge, oil residue, and abrasion. Use the same oil grade for this as you are using for operating the gear unit. Fill in fresh oil only after all residues have been removed.
- For the position of the oil level plug, oil drain plug and breather plug, refer to the order documents.
- Dispose of the used oil in accordance with applicable regulations.
- An oil level above the max marking could indicate that foreign liquids (e.g. water) have entered. An oil level below the min marking could indicate a leakage. Find and eliminate the cause before you fill in new oil.
- Empty accessories (e.g. filters) and piping if required.
- Replace damaged gaskets of the oil drain plug.
- Bevel-helical gear units and auxiliary drives have a separate oil chamber.
- For the auxiliary drive, observe the notes and procedures in the operating instructions: Gear Unit Series R..7, F..7, K..7, S..7, SPIROPLAN®
- Empty the oil-bearing system of gear units with circulation lubrication and oil supply systems according to the manufacturer's maintenance instructions.
- Use a funnel to fill the oil (max. filter mesh 25 µm).



Inspection/maintenance

Change oil of bevel-helical gear unit and auxiliary drive adapter

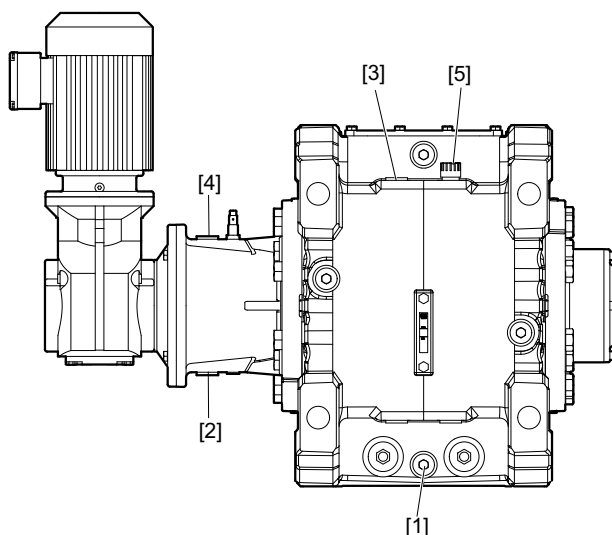

8.6.2 Procedure





9007199764450187

- [1] Oil drain plug - bevel-helical gear unit
- [2] Oil drain plug - auxiliary drive adapter
- [3] Oil filling plug bevel-helical gear unit
- [4] Oil filling plug of the auxiliary drive adapter

1. Observe the notes in chapter "Preliminary work regarding inspection and maintenance" (page 204).
2. Place a container underneath the oil drain plug [1/2] of the bevel-helical gear unit and the auxiliary drive adapter.
3. Remove the oil filling plug [3/4] and the oil drain plug [1/2] of the bevel-helical gear unit and the auxiliary drive adapter.
4. Drain all the oil.
5. Re-insert the oil drain plug of the bevel-helical gear unit [1] and the auxiliary drive adapter [2].
6. Fill the prescribed partial oil quantity into the auxiliary drive adapter via the oil filling plug [4].
 - **INFORMATION** The oil volume indicated on the nameplate is a guide value representing the total fill quantity. The auxiliary drive adapter must be filled with a prescribed partial quantity.

Size X3K..	Auxiliary drive adapter	
	"Empty buckets"  I	"Full buckets"  I
X3K100 / 110	1	1
X3K120 / 130	1	2
X3K140 / 150	1	2
X3K160 / 170	1	3
X3K180 / 190	1	4



Size X3K..	Auxiliary drive adapter	
	"Empty buckets"	"Full buckets"
	 I	 I
X3K200 / 210	2	5
X3K220 / 230	1	7
X3K240 / 250	1	9
X3K260 / 270	2	12
X3K280	2	12

- Use a filling filter to fill the oil into the gear unit (max. filter mesh 25 µm).

7. Fill the rest of the oil into the bevel-helical gear unit via the oil filling plug [3].

X3K..	Oil quantity [l]	X3K..	Oil quantity [l]
X3K100	13	X3K200	100
X3K110	14	X3K210	100
X3K120	20	X3K220	130
X3K130	21	X3K230	130
X3K140	33	X3K240	170
X3K150	34	X3K250	170
X3K160	60	X3K260	255
X3K170	60	X3K270	255
X3K180	75	X3K280	325
X3K190	75		

- Use a filling filter to fill the oil into the gear unit (max. filter mesh 25 µm).

8. Check whether the oil level is correct using the oil level glass or oil dipstick [5].

9. Clean the oil filter, replace the filter element if necessary (when using an external oil-air or oil-water cooling system).



INFORMATION

Remove any dripping oil immediately with an oil binding agent.



8.7 Checking and cleaning the breather



NOTICE

Improper cleaning of the breather may damage the gear unit.

Possible damage to property.

- Prevent foreign particles from entering into the gear unit when performing the following work.
1. Observe the notes in chapter "Preliminary work regarding inspection and maintenance" (page 204).
 2. Remove any deposits near the breather plug.
 3. Replace clogged breather plugs.

8.8 Refilling the sealing grease



⚠ WARNING

Risk of crushing due to rotating parts.

Severe or fatal injuries.

- Make sure to provide for sufficient safety measures for relubrication.



INFORMATION on explosion protection

Make sure that the old grease cannot escape uncontrolled (preventing explosions, e.g. chemical reactions).

Regreasable sealing systems can be refilled with lithium-soap grease (see chapter 9). Use moderate pressure to force about 30 g of grease into each lubrication point until new grease leaks out of the sealing gap.

Used grease, including contaminants and sand, is in this way pressed out of the sealing gap.



8.9 Motor pump /ONP



INFORMATION

- Before inspection/maintenance, first read the addendum to the operating instructions "Motor Pump /ONP", which includes the manufacturer's documentation.
- Observe the notes in chapter "Preliminary work regarding inspection and maintenance" (page 204).

8.10 Fan /FAN

1. Observe the notes in chapter "Preliminary work regarding inspection and maintenance" (page 204).
2. Remove the fan guard.
3. Remove any dirt from the fan wheel, fan guard and protective grid using a hard brush, for example.
4. Before restarting the fan again, make sure the fan guard is mounted properly. The fan may not touch the fan guard.



8.11 Water cooling cover /CCV

8.11.1 Safety notes



⚠ WARNING

Danger of burns due to media under pressure and hot component parts.

Serious injury.

- Unpressurize all systems before carrying out any disassembly work on the water cooling cover. Safeguard the systems according to the applicable accident prevention regulations.
- Risk of burns when touching hot parts (such as supply lines) of the water cooling cover. Let the parts cool down before you remove the water cooling cover and the supply lines.



NOTICE

Risk of damaging components of the water cooling cover.

Possible damage to property.

- For information on suitable cleaning agents, consult SEW-EURODRIVE.
- Properly vent the water cooling cover and the connected systems before taking them into operation again.



NOTICE

Risk of contamination of the medium.

Possible damage to property.

- According to experience, it is not possible to remove the cleaning agent without any residues. It is therefore important that you select only cleaning agents that are compatible with the medium.



NOTICE

Risk of destroying components of the water cooling cover.

Possible damage to property.

- To exclude damage resulting from improper handling of the functional components, always contact SEW-EURODRIVE before you use other comparable, aggressive cleaning agents.



NOTICE

Risk of contamination due to drained media.

Possible damage to property.

- Drain media in such a way that it is not discharged into the soil or sewage system. Drain media in suitable containers and dispose of them according to the applicable environmental regulations.

8.11.2 Expansion

1. Observe the notes in chapter "Preliminary work regarding inspection and maintenance" (page 204).
2. Remove the cooling water inflow and return pipes from the water cooling cover.
3. Open the inspection cover.
4. Carefully remove the water cooling cover and the gasket.
5. Check the water cooling cover for deposits.



Clean light dirt on the water cooling cover with a suitable cleaning agent. If heavily soiled, replace the water cooling cover with a new one. Consult SEW-EURODRIVE.

6. Insert the water cooling cover into the gear unit housing.
7. Apply Loctite® 5188 over the entire edge of the cooling cover.
8. Insert the gasket.
9. Place the inspection cover onto the gear unit and align it.
10. Reinsert the screws and tighten them in two goes starting from the inside.
Observe chapter "Tightening torques".
11. Re-connect the water cooling inflow and return pipes to the water cooling cover.



8.12 Water cooling cartridge /CCT



INFORMATION

Do not carry out any work on the pipe bundle of the water cooling cartridge unless in case of emergency. Contact SEW-EURODRIVE in that case. Analyze the situation and report the failure symptoms.

8.12.1 Maintenance intervals

The service life of the water cooling cartridge depends to a large degree on the quality of the media and their substances. The operator is responsible for specifying the maintenance intervals. Use the performance parameters and power rating determined during operation to define the maintenance intervals.

Specify the maintenance intervals in such a way that a performance loss of the water cooling cartridge does not pose a hazard to the operation of the system.

8.12.2 Cleaning

Use the performance parameters and power rating determined during operation to define the cleaning intervals. Specify the intervals in such a way that a performance loss of the water cooling cartridge does not pose a hazard to the operation of the system.

Safety notes



⚠ WARNING

Danger of burns due to media under pressure and hot component parts.

Serious injury.

- Unpressurize all systems before carrying out any disassembly work on the water cooling cartridge. Safeguard the systems according to the applicable accident prevention regulations.
- Risk of burns when touching hot parts (such as supply lines) of the water cooling cartridge. Let the parts cool down before you remove the water cooling cartridge and the supply lines.



⚠ WARNING

Cleaning the water cooling cartridge with cleaning agents such as hydrochloric acid and comparable cleaning agents can pose a risk of chemical burn to parts of the body and the eyes if the applicable work safety regulations are not adhered to.

Serious injury.

- Always adhere to the applicable work safety regulations when handling cleaning agents. Wear protective clothing, protective gloves and, if necessary, safety goggles and breathing protection when working with aggressive cleaning media.



NOTICE

Risk of destroying components of the water cooling cartridge.

Possible damage to property.

- To exclude damage resulting from improper handling of the water cooling cartridge, always contact SEW-EURODRIVE before you use other comparable, aggressive cleaning agents.



NOTICE

Risk of contamination of the medium.

Possible damage to property.

- According to experience, it is not possible to remove the cleaning agent without any residues. It is therefore important that you select only cleaning agents that are compatible with the medium.



NOTICE

Risk of damaging components of the water cooling cartridge.

Possible damage to property.

- Properly vent the water cooling cartridge and the connected systems before taking them into operation again.



NOTICE

Risk of contamination due to drained media.

Possible damage to property.

- Drain media in such a way that it is not discharged into the soil or sewage system. Drain media in suitable containers and dispose of them according to the applicable environmental regulations.

Expansion

1. Observe the notes in chapter "Preliminary work regarding inspection and maintenance" (page 204).
2. Unpressurize the water cooling cartridge and the connected system pipes. Shut them off with the corresponding valve.
3. Drain all the gear unit oil.
4. Completely drain the cooling medium using the drain screws and/or drains provided for this purpose.
5. Loosen the water cooling cartridge by applying torque only to the head of the hex screw on the tube plate and remove the water cooling cartridge.
6. Remove the flat gasket. Remove any gasket residues from the sealing surface.
 - **▲NOTICE** Be careful not to damage the sealing surface.
Possible damage to property.
 - Damage to the sealing surfaces can result in leakage.



Inspection/maintenance

Water cooling cartridge /CCT

7. Clean the water cooling cartridge.
8. Insert a new gasket and make sure it is seated properly. If present, replace the O-ring.
9. Apply LOCTITE® 577 to two threads and screw on the water cooling cartridge and tighten the hex head screw by applying torque only to the head of the screw on the tube plate using an adequate tool.
10. Re-connect the cooling water supply and return pipes to the water cooling cartridges.
11. Fill in new oil of the same type via the oil fill plug (otherwise consult the customer service).
 - Use a funnel to fill the oil (max. filter mesh 25 µm).
 - Fill in the oil according to the quantity specified on the nameplate. The oil quantity specified on the nameplate is an approximate value.
 - Check the oil level.
12. Before starting the system again, vent the lines.

Cleaning the inside of the water cooling cartridge

Observe the notes in the previous chapter.



NOTICE

Risk of corrosion due to scratches.

Possible damage to property.

- Scratches on the inner surface of the pipe bundle can result in increased corrosion. Use a brush with soft bristles to clean the inner surface of the pipe bundle.



NOTICE

Risk of damaging components of the water cooling cover.

Possible damage to property.

- For information on suitable cleaning agents, consult SEW-EURODRIVE.

We recommend that you take the following measures for cleaning:

- To remove scale deposits from the inside of pipes, use a mixture of 50% hydrochloric acid with inhibitors and 50% water.
- To clean the inside of the pipe bundle, you can use a brush if the pipe diameter is > 5 mm. Make sure you use a brush with soft bristles to prevent the surface from pipe walls from being scratched.
- Contact SEW-EURODRIVE if you want to use other cleaning agents to remove scale deposits.
- After cleaning, make sure all cleaning agents have been removed completely from the pipes before taking the water cooling cartridge into operation again.



8.13 Oil-water cooler for splash lubrication /OWC



INFORMATION

- Before inspection/maintenance, first read the addendum to the operating instructions "Oil-Water Cooler for Splash Lubrication /OWC", which includes the manufacturer's documentation.
- Observe the notes in chapter "Preliminary work regarding inspection and maintenance" (page 204).

8.14 Oil-air cooler for splash lubrication /OAC



INFORMATION

- Before inspection/maintenance, first read the addendum to the operating instructions "Oil-Air Cooler for Splash Lubrication /OAC", which includes the manufacturer's documentation.
- Observe the notes in chapter "Preliminary work regarding inspection and maintenance" (page 204).

8.15 Oil-water cooler for pressure lubrication /OWP



INFORMATION

- Before inspection/maintenance, first read the addendum to the operating instructions "Oil-Water Cooler for Pressure Lubrication /OWP", which includes the manufacturer's documentation.
- Observe the notes in chapter "Preliminary work regarding inspection and maintenance" (page 204).

8.16 Oil-air cooler for pressure lubrication /OAP



INFORMATION

- Before inspection/maintenance, first read the addendum to the operating instructions "Oil-Air Cooler for Pressure Lubrication /OAP", which includes the manufacturer's documentation.
- Observe the notes in chapter "Preliminary work regarding inspection and maintenance" (page 204).



8.17 Oil heater /OH



⚠ WARNING

Danger of electric shock.

Severe or fatal injuries

- De-energize the oil heater before you start working on the unit.
- Secure the oil heater against unintended power-up.



INFORMATION on explosion protection

Deactivate the heating resistor before you drain the oil. The heating resistor can cause the evaporating oil to explode.

1. Observe the notes in chapter "Preliminary work regarding inspection and maintenance" (page 204).
2. Before disassembling the oil heater, drain the oil completely.
3. Disassemble the oil heater.
4. Clean the tubular heating elements with solvent, replace defective heating elements.
 - **NOTICE** Improper cleaning of the heater may damage the heating elements.
Possible damage to property.
 - Do not destroy the heating elements by scratching or scraping.
5. Apply LOCTITE® 577 to two threads and screw on the oil heater and tighten the hex head screw by applying torque only to the head of the screw using an adequate tool.
6. Re-insert the oil drain plug.
7. Fill in new oil of the same type via the oil fill plug (otherwise consult the customer service).
 - Use a funnel to fill the oil (max. filter mesh 25 µm).
 - Fill in the oil according to the quantity specified on the nameplate. The oil quantity specified on the nameplate is an approximate value.
 - Check the oil level.
8. Connect the oil heater.



8.18 Torque-limited backstop



INFORMATION

Observe the operating instructions of the respective backstop manufacturer.

The following chapter describes the procedure for backstops from the company RING-SPANN GmbH.

8.18.1 Checking the wear of the lining



⚠ WARNING

Risk of crushing if the drive starts up unintentionally.

Severe or fatal injuries.

- Shutdown the drive when the conveyor belt is empty, i.e. no backdriving torque at the backstop caused by material on the conveyor belt. Make sure that there is no torque applied to the backstop.



⚠ WARNING

Danger of burns due to hot gear unit and hot gear unit oil.

Serious injury.

- Let the gear unit cool down before you start working on it.



NOTICE

Improper maintenance of the torque arm may result in damage to the gear unit.


Possible damage to property.

- If the distance "X" is equal to or smaller than 0.8 mm, the proper functioning of the torque limiter is not guaranteed. Consult SEW-EURODRIVE.



Inspection/maintenance

Torque-limited backstop

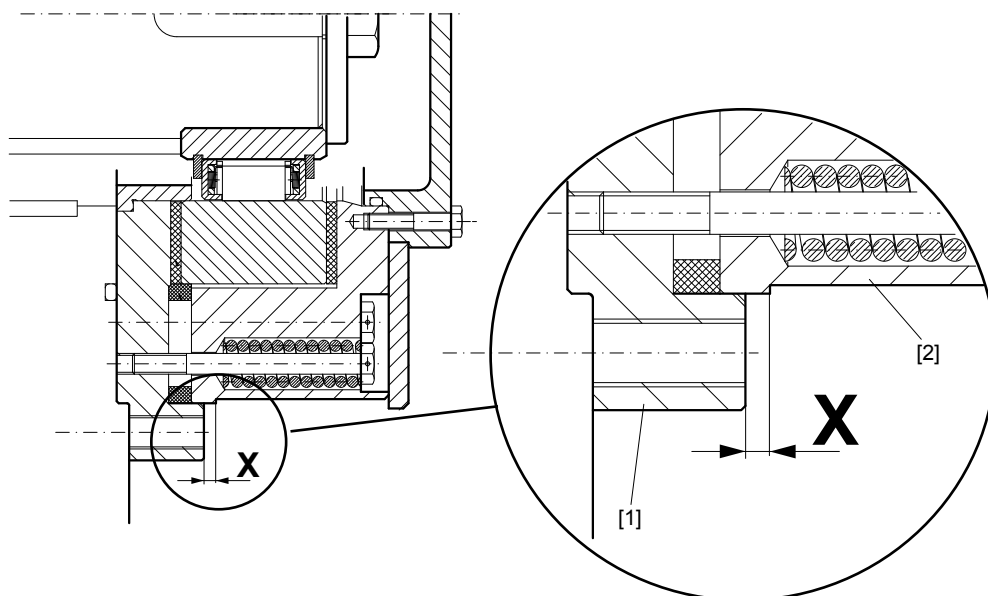

539297547

- [1] Backstop flange
[2] Housing

Observe the notes in chapter "Preliminary work regarding inspection and maintenance" (page 204).

Check the wear of the lining by measuring the **reference dimension "X"** between the fixed backstop flange [1] and the bottom edge of the groove of the housing [2]. The distance must not be shorter than 0.8 mm.



9 Lubricants

9.1 Lubricant selection



INFORMATION on explosion protection

- Contact SEW-EURODRIVE before changing the mounting position. Otherwise, the ATEX certification will become void.
- Observe the ignition temperature of the gear unit oils used. It must be sufficiently above the operating temperature of the gear unit to prevent the oil from creating a potentially explosive atmosphere.



NOTICE

Selecting improper lubricants may damage the gear unit.

Possible damage to property.

- Note the following:
 - The oil viscosity and type (mineral/synthetic) to be used are determined by SEW-EURODRIVE specifically for each order. This information is noted in the order confirmation and on the gear unit's nameplate.

You must contact SEW-EURODRIVE in case of a deviation from this specification.

This lubricant recommendation in no way represents a guarantee as to the quality of the lubricant delivered by the respective supplier. Each lubricant manufacturer is responsible for the quality of its product.
- Ensure that the gear unit is filled with the correct oil grade and quantity before startup. Refer to the nameplate of the gear unit and the lubricant table in the following chapter for information.
- Do not mix different synthetic lubricants.
- Check the compatibility of the greases and oils used.



9.2 Lubricant table



NOTICE

Selecting improper lubricants may damage the gear unit.

Possible damage to property.


- Contact SEW-EURODRIVE if you operate the unit under extreme conditions, such as cold, heat, or if the operating conditions have changed since project planning.


The lubricant table shows the permitted lubricants for SEW-EURODRIVE industrial gear units. Consider the used abbreviations, meaning of shading and notes.

CLP = Mineral oil

CLP HC = Synthetic polyalphaolefin

E = Ester oil (water hazard classification 1)

 = Mineral lubricant

 = Synthetic lubricant

3) = Lubricants may only be used if service factor $F_s \geq 1.3$

4) = Take into account critical startup behavior at low ambient temperatures

6) = Ambient temperature













= Lubricant for the food industry (food grade oil)



= Biodegradable oil (lubricant for agriculture, forestry, and water management)



<div>6)</div> <div><div></div><div>°C -50 0 +50 +100</div></div>		<div>DIN (ISO)</div>	ISO, NLGI	<div>Mobil®</div>	<div>Shell</div>	<div>bp</div>	<div>Klüber LUBRICATION</div>	<div>TEXACO</div>	<div>Castrol</div>	<div>FUCHS</div>	<div>Q8</div>	<div>Total</div>	
-10	+40	CLP CC	VG 320	Mobilgear 600XP 320	Shell Omala F 320	BP Energol GR-XP-320	Kilberoil GEM 1-320 N	Meropa 320	Alpha SP 320 Tribol 1100/320	Optigear BM 320	Rendin CLP 320 Plus Rendin High Gear 320	Goya NT 320	Carter EP 320
-20	+20	CLP CC	VG 150	Mobilgear 600XP 150		BP Energol GR-XP-150	Kilberoil GEM 1-150 N	Meropa 150	Alpha SP 150 Tribol 1100/150	Optigear BM 150	Rendin CLP 150 Plus Rendin High Gear 150	Goya NT 150	
-15	+30	CLPCC	VG 220	Mobilgear 600XP 220	Shell Omala F 220	BP Energol GR-XP-220	Kilberoil GEM 1-220 N	Meropa 220	Alpha SP 220 Tribol 1100/220	Optigear BM 220	Rendin CLP 220 Plus Rendin High Gear 220	Goya NT 220	Carter EP 220
-5	+45	CLP CC	VG 460	Mobilgear 600XP 460	Shell Omala F 460	BP Energol GR-XP-460	Kilberoil GEM 1-460 N	Meropa 460	Alpha SP 460 Tribol 1100/460	Optigear BM 460	Rendin CLP 460 Plus Rendin High Gear 460	Goya NT 460	Carter EP 460
0	+50	CLP CC	VG 680	Mobilgear 600XP 680		BP Energol GR-XP-680	Kilberoil GEM 1-680 N	Meropa 680	Alpha SP 680 Tribol 1100/680	Optigear BM 680	Rendin CLP 680 Plus Rendin High Gear 680	Goya NT 680	Carter EP 680
+5	+60	CLP CC	VG 1000						Tribol 1100/1000				
-25	+40	CLP HC	VG 320	Mobil SHC Gear 320 Mobil SHC 632	Shell Omala S4 GX 320	BP Energol EP-XF-320	Kilbersynth GEM 4-320 N	Pinnacle EP 320	Alphasyn EP 320	Optigear Synthetic X 320	Rendin Unisyn CLP 320 Rendin High Gear Synth 320	EI Greco 320	Carter SH 320
3) 4) -40	-10	CLP HC	VG 32	Mobil SHC 624									
3) 4) -40	+10	CLP HC	VG 68	Mobil SHC 626	Shell Omala S4 GX68	BP Energol EP-XF-68	Kilbersynth GEM 4-68 N			Optigear Synthetic X 68	Reolin Unisyn CLP 68		
-35	+20	CLP HC	VG 150	Mobil SHC Gear 150 Mobil SHC 629	Shell Omala S4 GX 150	BP Energol EP-XF-150	Kilbersynth GEM 4-150 N	Pinnacle EP 150	Alphasyn EP 150	Optigear Synthetic X 150	Reolin Unisyn CLP 150	EI Greco 150	Carter SH 150
-30	+30	CLP HC	VG 220	Mobil SHC Gear 220 Mobil SHC 630	Shell Omala S4 GX 220	BP Energol EP-XF-220	Kilbersynth GEM 4-220 N	Pinnacle EP 220	Alphasyn EP 220	Optigear Synthetic X 220	Rendin Unisyn CLP 220 Rendin High Gear Synth 220	EI Greco 220	Carter SH 220
-20	+50	CLP HC	VG 460	Mobil SHC Gear 460 Mobil SHC 634	Shell Omala S4 GX 460	BP Energol EP-XF-460	Kilbersynth GEM 4-460 N	Pinnacle EP 460	Alphasyn EP 460	Optigear Synthetic X 460	Rendin Unisyn CLP 460 Rendin High Gear Synth 460	EI Greco 460	Carter SH 460
-10	+60	CLP HC	VG 680	Mobil SHC Gear 680 Mobil SHC 636	Shell Omala S4 GX 680	BP Energol EP-XF-680	Kilbersynth GEM 4-680 N	Pinnacle EP 680		Optigear Synthetic X 680	Reolin Unisyn CLP 680	EI Greco 680	Carter SH 680
0	+70	CLP HC	VG 1000	Mobil SHC Gear 1000 Mobil SHC 639			Kilbersynth GEM 4-1000 N						
3) -10	+30	CLP HC NSF H1	VG 460				Kilberöl 4UH1-460 N				Cassida Fluid GL 460		
3) -20	+20		VG 220				Kilberöl 4UH1-220 N				Cassida Fluid GL 220		
3) 4) -40	-10		VG 68				Kilberöl 4UH1-68 N				Cassida Fluid GL 68		
-20	+40	E 	VG 460	Shell Naturelle Gear Fluid EP 460			Kilberbio CA2-460				Plantogear 460 S		

470490405



9.3 Lubricant fill quantities



NOTICE



Improper filling of the lubricant quantity may damage the gear unit.

Possible damage to property.

- Different oil quantities are required for the auxiliary drive adapter in **"empty bucket"** design and in **"full bucket"** design. Observe the information in the following table.
- The specified fill quantities are guide values. The exact values vary depending on the gear ratio.
- The mark on the oil level glass and/or oil dipstick is the decisive indicator for the correct oil level.

9.3.1 Bevel-helical-bevel gear units with auxiliary drive adapter

The following table shows the lubricant quantities for bevel-helical gear units and auxiliary drive adapters.

Size	[l]	Partial quantity	
		Auxiliary drive adapter "Empty buckets"	Auxiliary drive adapter "Full buckets"
		 [l]	 [l]
X3K.100	13	1	1
X3K.110	14	1	1
X3K.120	20	1	2
X3K.130	21	1	2
X3K.140	33	1	2
X3K.150	34	1	2
X3K.160	60	1	3
X3K.170	60	1	3
X3K.180	75	1	4
X3K.190	75	1	4
X3K.200	100	2	5
X3K.210	100	2	5
X3K.220	130	1	7
X3K.230	130	1	7
X3K.240	170	1	9
X3K.250	170	1	9
X3K.260	255	2	12
X3K.270	255	2	12
X3K.280	325	2	12



9.3.2 Auxiliary drive

The following table shows the lubricant quantities for auxiliary drives.

Gear unit	Auxiliary drive "empty buckets"		Auxiliary drive "full buckets"	
	Type	Fill quantity [l]	Type	Fill quantity [l]
X3K.100	KF37	1.5	KF57	3.15
X3K.110	KF37	1.5	KF57	3.15
X3K.120	KF47	2.2	KF77	5.9
X3K.130	KF47	2.2	KF77	5.9
X3K.140	KF57	3.15	KF77	5.9
X3K.150	KF57	3.15	KF77	5.9
X3K.160	KF67	3.7	KF87	11.9
X3K.170	KF67	3.7	KF87	11.9
X3K.180	KF77	5.9	KF97	21.5
X3K.190	KF77	5.9	KF97	21.5
X3K.200	KF77	5.9	KF97	21.5
X3K.210	KF77	5.9	KF97	21.5
X3K.220	KF87	11.9	KF107	35.1
X3K.230	KF87	11.9	KF107	35.1
X3K.240	KF87	11.9	KF127	55
X3K.250	KF87	11.9	KF127	55
X3K.260	KF87	11.9	KF127	55
X3K.270	KF87	11.9	KF127	55
X3K.280	KF87	11.9	KF127	55



9.4 Sealing greases / rolling bearing greases

The table shows the greases recommended by SEW-EURODRIVE for an operating temperature of –40 °C to 100 °C.

Manufacturer	Grease	Group
Fuchs	Renolit CX TOM 15 OEM ¹⁾	Group 1
BP	Energrease LS-EP 2	
Castrol	Longtime PD 2	
Castrol	Spheerol EP 2	
Klüber	Centoplex EP2	
Klüber	Petamo GHY 133 N	
Kuwait	Q8 Rembrandt EP2	
Mobil	Mobilux EP 2	
Shell	Gadus S2 V220 2	
Texaco	Mulifak EP2	
Total	Multis EP 2	
Castrol	Obeen FS 2 ¹⁾	Group 2
Fuchs	Plantogel 2 S ¹⁾	Group 3

1) You should preferably use greases also used by the manufacturer!



INFORMATION

- The greases may only be replaced within the same group. It is not permitted to mix different groups.
- If a customer wants to use a grease that is not listed in the table, the customer has to make sure that it is suitable for the intended application.



10 Malfunctions/remedy

10.1 Troubleshooting information

Read the following notes before you proceed.



⚠ WARNING

Risk of crushing if the drive starts up unintentionally.

Severe or fatal injuries.

- De-energize the motor before you start working on the unit.
- Secure the motor against unintended power-up.



⚠ WARNING

Danger of burns due to hot gear unit and hot gear unit oil.

Serious injury.

- Let the gear unit cool down before you start working on it.
- Remove the oil level plug and the oil drain plug with great care.



NOTICE

Improper handling of the gear unit and the motor may lead to damage.

Possible damage to property.

- Only qualified personnel is permitted to separate drive and motor and to carry out repair work on SEW drives.
- Please contact the SEW-EURODRIVE Service.

10.2 Customer service


Please have the following information available if you require customer service assistance:

- Complete nameplate data
- Type and extent of the problem
- Time the problem occurred and any accompanying circumstances
- Assumed cause
- A digital photograph if possible



10.3 Possible malfunctions/remedy

Malfunction	Possible cause	Remedy
Unusual, irregular running noise	<ul style="list-style-type: none"> • Meshing/grinding noise: Bearing damage • Knocking noise: Irregularity in the gearing • Deformation of the housing upon tightening • Noise generation caused by insufficient rigidity of the gear unit foundation 	<ul style="list-style-type: none"> • Check the oil, replace the bearing • Contact customer service • Check the gear unit mounting for possible deformation and correct if necessary • Reinforce the gear unit foundation
Unusual, irregular running noise	<ul style="list-style-type: none"> • Foreign objects in the oil 	<ul style="list-style-type: none"> • Check the oil • Stop the drive, contact customer service
Unusual noise in the area of the gear unit mounting	<ul style="list-style-type: none"> • Gear unit mounting has loosened 	<ul style="list-style-type: none"> • Tighten retaining screws and nuts to the specified torque • Replace damaged/defective retaining screws or nuts
Operating temperature too high	<ul style="list-style-type: none"> • Too much oil • Oil too old • The oil is heavily contaminated • Ambient temperature too high • Gear units with fan: Air intake opening/gear unit housing contaminated • For gear units with built-in cooling: Cooling liquid flow rate too low, cooling liquid temperature too high, deposits in cooling system • Malfunction of the oil-air or oil-water cooling system • Malfunction of the water cooling cover • Malfunction of the water cooling cartridge 	<ul style="list-style-type: none"> • Check the oil level, correct if necessary • Check when the oil was last changed; change the oil if necessary • Protect from external heat sources (e.g. provide shade) • Check air intake openings, clean them if necessary; clean the gear unit housing • Water cooling cartridge: Check the cooling water throughput and the entry temperature of the cooling water, clean the cartridge, if necessary • Water cooling cover: Check the cooling water throughput and the entry temperature of the cooling water, clean the cartridge, if necessary
Bearing point temperatures too high	<ul style="list-style-type: none"> • Not enough oil • Oil too old • Bearing damaged 	<ul style="list-style-type: none"> • Check the oil level, correct if necessary • Check when the oil was last changed; change the oil if necessary • Check the bearings and replace if necessary, contact customer service
Operating temperature at backstop too high, no blocking function	<ul style="list-style-type: none"> • Damaged/defective backstop 	<ul style="list-style-type: none"> • Check the backstop, replace it if necessary • Contact customer service
Oil leaking¹⁾ <ul style="list-style-type: none"> • From cover plate • From inspection cover • From bearing cover • From mounting flange • From output/input end oil seal 	<ul style="list-style-type: none"> • Gasket on cover plate/inspection cover/bearing cover/mounting flange leaking • Sealing lip of the oil seal turned up • Oil seal damaged/worn 	<ul style="list-style-type: none"> • Tighten the bolts on the respective cover plate and observe the gear unit. If oil still leaks: Contact customer service • Vent the gear unit, observe the gear unit. If oil still leaks: Contact customer service • Check oil seals; replace if necessary • Contact customer service

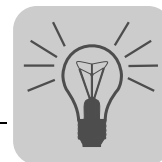

Malfunction	Possible cause	Remedy
Oil leaking <ul style="list-style-type: none"> • From breather plug 	<ul style="list-style-type: none"> • Too much oil • Drive not installed in proper mounting position • Frequent cold starts (oil foaming) and/or high oil level 	<ul style="list-style-type: none"> • Correct the oil quantity • Mount the breather plug correctly and correct the oil level (see nameplate, "Lubricants" chapter)
Oil leaking <ul style="list-style-type: none"> • on screw plug • Oil drain valve 	<ul style="list-style-type: none"> • Gasket not tight • Fittings loosened 	<ul style="list-style-type: none"> • Retighten screw • Retighten the fitting and screws
Gear unit does not reach cold start temperature	<ul style="list-style-type: none"> • Oil heating defective or connected incorrectly • Heat dissipation too great due to unfavorable climatic conditions 	<ul style="list-style-type: none"> • Check the oil heater for proper connection and function; replace if necessary • Protect the gear unit from cooling off during the warm-up phase • Check the setting of the thermostat
Temperature at backstop too high No blocking function	Damaged/defective backstop	<ul style="list-style-type: none"> • Check backstop; replace if necessary • Contact the customer service
Main drive does not start	<ul style="list-style-type: none"> • Main drive defective • Overload at the output side • Wrong direction of rotation, motor rotates against blocking direction of the backstop • Cage with sprags of the backstop not installed correctly or defective. • Overrunning clutch blocked (cage with sprags of the overrunning clutch not installed correctly or overrunning clutch defective) • Main drive and auxiliary drive not interlocked correctly • Speed monitor of the overrunning clutch not set correctly 	<ul style="list-style-type: none"> • Repair motor in a specialist workshop • Reduce load • Change rotational direction of the motor (swap over two phases) • Install cage of the backstop the other way around (180°) or replace it • Install cage of the overrunning clutch the other way around (180°) or replace it • Check the speed monitor setting • Contact the customer service
Auxiliary drive does not start	<ul style="list-style-type: none"> • Auxiliary drive is defective • Overload at the output side • Auxiliary drive rotates against blocking direction of the backstop 	<ul style="list-style-type: none"> • Repair motor in a specialist workshop • Reduce load • Install cage of the overrunning clutch the other way around (180°) or replace it, and change direction of rotation of the auxiliary drive • Contact the customer service
Linings, wear marker "X" below 0.8 mm	<ul style="list-style-type: none"> • Constantly switching the system on and off or driving it in blocking direction leads to frequent engaging and disengaging of the backstops and torque limiters. This can cause exceptional heat generation and lining wear in the torque limiter. The generated heat can destroy the lining. In normal operation, the torque limiter distributes the torque through relatively small rotational movements. This causes only very little wear on the lining. 	<ul style="list-style-type: none"> • Send the torque limiter to RINGSPANN GmbH for overhaul.



Malfunctions/remedy

Possible malfunctions/remedy

Malfunction	Possible cause	Remedy
Severe V-belt wear	<ul style="list-style-type: none"> • Inadequately aligned belt pulleys • Harmful ambient conditions (e.g. abrasive particles, chemical substances) • V-belt overloaded 	<ul style="list-style-type: none"> • Check V-belt pulley alignment and pretension of the belts • Protect V-belt drive from environmental influences. Sufficient ventilation must be ensured. • Replace V-belt if necessary, consult customer service
No oil pump suction Pressure switch does not switch	<ul style="list-style-type: none"> • Air in the suction line of the oil pump • Oil pump defective • Pressure switch defective 	<ul style="list-style-type: none"> • Fill suction pipe and oil pump with oil • Vent the pump at the pressure side • Replace pressure switch • Contact customer service

1) During the run-in phase (24-hour runtime), it is normal for (small amounts of) oil/grease to leak from the oil seal (see also DIN 3761).



10.4 Disposal

Dispose gear units in accordance with the regulations in force regarding respective materials:

- Steel scrap
 - Housing parts
 - Gears
 - Shafts
 - Rolling bearing
- Collect waste oil and dispose of it according to the regulations in force.



11 Declaration of conformity

EC Declaration of Conformity

SEW
EURODRIVE

900690310



SEW-EURODRIVE GmbH & Co KG
Ernst-Blickle-Straße 42, D-76646 Bruchsal

declares under sole responsibility that the

Industrial gear units of the series X100-X320

variant G, D, or GD

category 2

are in conformity with

ATEX Directive 94/9/EC 2)

Applied harmonized standards: EN 13463-1:2009
EN 13463-5:2003
EN 13463-8:2003
EN 60079-11:2007
EN 60529:2000

2) SEW-EURODRIVE lodges the documents required by 94/9/EC, appendix VIII, with the notified body: FSA GmbH, EU ID No.: 0588

Bruchsal 18.11.13

Place

Date

Johann Soder
Managing Director Technology

a) b)

a) Authorized representative for issuing this declaration on behalf of the manufacturer
b) Authorized representative for compiling the technical documents



EC Declaration of Conformity



900670310



SEW-EURODRIVE GmbH & Co KG
Ernst-Blickle-Straße 42, D-76646 Bruchsal
declares under sole responsibility that the

Industrial gear units of the series	X100-X320
variant	G, D, or GD
category	3
are in conformity with	
ATEX Directive	94/9/EC
Applied harmonized standards:	EN 13463-1:2009 EN 60079-11:2007 EN 60529:2000

Bruchsal	18.11.13		
Place	Date	Johann Soder Managing Director Technology	a) b)

a) Authorized representative for issuing this declaration on behalf of the manufacturer
b) Authorized representative for compiling the technical documents



EC Declaration of Conformity



902160013

SEW-EURODRIVE GmbH & Co KG
Ernst-Blickle-Straße 42, D-76646 Bruchsal

declares under sole responsibility that the

Industrial gear units of the series X100-X320

category M2

are in conformity with

ATEX Directive 94/9/EC 2)

Applied harmonized standards: EN 13463-1:2009
 EN 13463-5:2003
 EN 13463-8:2003
 EN 60529:2000
 EN 1710:2008

2) SEW-EURODRIVE lodges the documents required by 94/9/EC, appendix VIII, with the notified body: FSA GmbH, EU ID No.: 0588

Bruchsal 18.11.13

Place

Date

Johann Soder
 Managing Director Technology

a) b)

a) Authorized representative for issuing this declaration on behalf of the manufacturer
 b) Authorized representative for compiling the technical documents



12 Address list

Germany			
Headquarters Production Sales	Bruchsal	SEW-EURODRIVE GmbH & Co KG Ernst-Blickle-Straße 42 D-76646 Bruchsal P.O. Box Postfach 3023 • D-76642 Bruchsal	Tel. +49 7251 75-0 Fax +49 7251 75-1970 http://www.sew-eurodrive.de sew@sew-eurodrive.de
Production / Industrial Gears	Bruchsal	SEW-EURODRIVE GmbH & Co KG Christian-Pähr-Str.10 D-76646 Bruchsal	Tel. +49 7251 75-0 Fax +49 7251 75-2970
Service Competence Center	Mechanics / Mechatronics	SEW-EURODRIVE GmbH & Co KG Ernst-Blickle-Straße 1 D-76676 Graben-Neudorf	Tel. +49 7251 75-1710 Fax +49 7251 75-1711 sc-mitte@sew-eurodrive.de
	Electronics	SEW-EURODRIVE GmbH & Co KG Ernst-Blickle-Straße 42 D-76646 Bruchsal	Tel. +49 7251 75-1780 Fax +49 7251 75-1769 sc-elektronik@sew-eurodrive.de
Drive Technology Center	North	SEW-EURODRIVE GmbH & Co KG Alte Ricklinger Straße 40-42 D-30823 Garbsen (near Hannover)	Tel. +49 5137 8798-30 Fax +49 5137 8798-55 sc-nord@sew-eurodrive.de
	East	SEW-EURODRIVE GmbH & Co KG Dänkritzer Weg 1 D-08393 Meerane (near Zwickau)	Tel. +49 3764 7606-0 Fax +49 3764 7606-30 sc-ost@sew-eurodrive.de
	South	SEW-EURODRIVE GmbH & Co KG Domagkstraße 5 D-85551 Kirchheim (near München)	Tel. +49 89 909552-10 Fax +49 89 909552-50 sc-sued@sew-eurodrive.de
	West	SEW-EURODRIVE GmbH & Co KG Siemensstraße 1 D-40764 Langenfeld (near Düsseldorf)	Tel. +49 2173 8507-30 Fax +49 2173 8507-55 sc-west@sew-eurodrive.de
	Drive Service Hotline / 24 Hour Service		+49 800 SEWHELP +49 800 7394357
	Additional addresses for service in Germany provided on request!		

France			
Production Sales Service	Haguenau	SEW-USOCOME 48-54 route de Soufflenheim B. P. 20185 F-67506 Haguenau Cedex	Tel. +33 3 88 73 67 00 Fax +33 3 88 73 66 00 http://www.usocomme.com sew@usocomme.com
Production	Forbach	SEW-USOCOME Zone industrielle Technopôle Forbach Sud B. P. 30269 F-57604 Forbach Cedex	Tel. +33 3 87 29 38 00
Assembly Sales Service	Bordeaux	SEW-USOCOME Parc d'activités de Magellan 62 avenue de Magellan - B. P. 182 F-33607 Pessac Cedex	Tel. +33 5 57 26 39 00 Fax +33 5 57 26 39 09
	Lyon	SEW-USOCOME Parc d'affaires Roosevelt Rue Jacques Tati F-69120 Vaulx en Velin	Tel. +33 4 72 15 37 00 Fax +33 4 72 15 37 15
	Nantes	SEW-USOCOME Parc d'activités de la forêt 4 rue des Fontenelles F-44140 Le Bignon	Tel. +33 2 40 78 42 00 Fax +33 2 40 78 42 20



France			
	Paris	SEW-USOCOME Zone industrielle 2 rue Denis Papin F-77390 Verneuil l'Etang	Tel. +33 1 64 42 40 80 Fax +33 1 64 42 40 88
Additional addresses for service in France provided on request!			
Algeria			
Sales	Algiers	REDUCOM Sarl 16, rue des Frères Zaghroune Bellevue 16200 El Harrach Alger	Tel. +213 21 8214-91 Fax +213 21 8222-84 info@reducom-dz.com http://www.reducom-dz.com
Argentina			
Assembly Sales	Buenos Aires	SEW EURODRIVE ARGENTINA S.A. Ruta Panamericana Km 37.5, Lote 35 (B1619IEA) Centro Industrial Garín Prov. de Buenos Aires	Tel. +54 3327 4572-84 Fax +54 3327 4572-21 sewar@sew-eurodrive.com.ar http://www.sew-eurodrive.com.ar
Australia			
Assembly Sales Service	Melbourne	SEW-EURODRIVE PTY. LTD. 27 Beverage Drive Tullamarine, Victoria 3043	Tel. +61 3 9933-1000 Fax +61 3 9933-1003 http://www.sew-eurodrive.com.au enquires@sew-eurodrive.com.au
	Sydney	SEW-EURODRIVE PTY. LTD. 9, Sleigh Place, Wetherill Park New South Wales, 2164	Tel. +61 2 9725-9900 Fax +61 2 9725-9905 enquires@sew-eurodrive.com.au
Austria			
Assembly Sales Service	Wien	SEW-EURODRIVE Ges.m.b.H. Richard-Strauss-Strasse 24 A-1230 Wien	Tel. +43 1 617 55 00-0 Fax +43 1 617 55 00-30 http://www.sew-eurodrive.at sew@sew-eurodrive.at
Belarus			
Sales	Minsk	SEW-EURODRIVE BY RybalkoStr. 26 BY-220033 Minsk	Tel. +375 17 298 47 56 / 298 47 58 Fax +375 17 298 47 54 http://www.sew.by sales@sew.by
Belgium			
Assembly Sales Service	Brussels	SEW-EURODRIVE n.v./s.a. Researchpark Haasrode 1060 Evenementenlaan 7 BE-3001 Leuven	Tel. +32 16 386-311 Fax +32 16 386-336 http://www.sew-eurodrive.be info@sew-eurodrive.be
Service Competence Center	Industrial Gears	SEW-EURODRIVE n.v./s.a. Rue de Parc Industriel, 31 BE-6900 Marche-en-Famenne	Tel. +32 84 219-878 Fax +32 84 219-879 http://www.sew-eurodrive.be service-wallonie@sew-eurodrive.be
Brazil			
Production Sales Service	São Paulo	SEW-EURODRIVE Brasil Ltda. Avenida Amâncio Gaiolli, 152 - Rodovia Presidente Dutra Km 208 Guarulhos - 07251-250 - SP SAT - SEW ATENDE - 0800 7700496	Tel. +55 11 2489-9133 Fax +55 11 2480-3328 http://www.sew-eurodrive.com.br sew@sew.com.br



Brazil			
Assembly Sales Service	Rio Claro	SEW-EURODRIVE Brasil Ltda. Rodovia Washington Luiz, Km 172 Condomínio Industrial Conpark Caixa Postal: 327 13501-600 – Rio Claro / SP	Tel. +55 19 3522-3100 Fax +55 19 3524-6653 montadora.rc@sew.com.br
	Joinville	SEW-EURODRIVE Brasil Ltda. Rua Dona Francisca, 12.346 – Pirabeiraba 89239-270 – Joinville / SC	Tel. +55 47 3027-6886 Fax +55 47 3027-6888 filial.sc@sew.com.br
	Indaiatuba	SEW-EURODRIVE Brasil Ltda. Estrada Municipal Jose Rubim, 205 Rodovia Santos Dumont Km 49 13347-510 - Indaiatuba / SP	Tel. +55 19 3835-8000 sew@sew.com.br
Bulgaria			
Sales	Sofia	BEVER-DRIVE GmbH Bogdanovetz Str.1 BG-1606 Sofia	Tel. +359 2 9151160 Fax +359 2 9151166 bever@bever.bg
Cameroon			
Sales	Douala	Electro-Services Rue Drouot Akwa B.P. 2024 Douala	Tel. +237 33 431137 Fax +237 33 431137 electrojemba@yahoo.fr
Canada			
Assembly Sales Service	Toronto	SEW-EURODRIVE CO. OF CANADA LTD. 210 Walker Drive Bramalea, ON L6T 3W1	Tel. +1 905 791-1553 Fax +1 905 791-2999 http://www.sew-eurodrive.ca l.watson@sew-eurodrive.ca
	Vancouver	SEW-EURODRIVE CO. OF CANADA LTD. Tilbury Industrial Park 7188 Honeyman Street Delta, BC V4G 1G1	Tel. +1 604 946-5535 Fax +1 604 946-2513 b.wake@sew-eurodrive.ca
	Montreal	SEW-EURODRIVE CO. OF CANADA LTD. 2555 Rue Leger Lasalle, PQ H8N 2V9	Tel. +1 514 367-1124 Fax +1 514 367-3677 a.peluso@sew-eurodrive.ca
Additional addresses for service in Canada provided on request!			
Chile			
Assembly Sales Service	Santiago	SEW-EURODRIVE CHILE LTDA. Las Encinas 1295 Parque Industrial Valle Grande LAMP RCH-Santiago de Chile P.O. Box Casilla 23 Correo Quilicura - Santiago - Chile	Tel. +56 2 75770-00 Fax +56 2 75770-01 http://www.sew-eurodrive.cl ventas@sew-eurodrive.cl
China			
Production Assembly Sales Service	Tianjin	SEW-EURODRIVE (Tianjin) Co., Ltd. No. 46, 7th Avenue, TEDA Tianjin 300457	Tel. +86 22 25322612 Fax +86 22 25323273 info@sew-eurodrive.cn http://www.sew-eurodrive.cn
Assembly Sales Service	Suzhou	SEW-EURODRIVE (Suzhou) Co., Ltd. 333, Suhong Middle Road Suzhou Industrial Park Jiangsu Province, 215021	Tel. +86 512 62581781 Fax +86 512 62581783 suzhou@sew-eurodrive.cn



China			
	Guangzhou	SEW-EURODRIVE (Guangzhou) Co., Ltd. No. 9, JunDa Road East Section of GETDD Guangzhou 510530	Tel. +86 20 82267890 Fax +86 20 82267922 guangzhou@sew-eurodrive.cn
	Shenyang	SEW-EURODRIVE (Shenyang) Co., Ltd. 10A-2, 6th Road Shenyang Economic Technological Development Area Shenyang, 110141	Tel. +86 24 25382538 Fax +86 24 25382580 shenyang@sew-eurodrive.cn
	Wuhan	SEW-EURODRIVE (Wuhan) Co., Ltd. 10A-2, 6th Road No. 59, the 4th Quanli Road, WEDA 430056 Wuhan	Tel. +86 27 84478388 Fax +86 27 84478389 wuhan@sew-eurodrive.cn
	Xi'An	SEW-EURODRIVE (Xi'An) Co., Ltd. No. 12 Jinye 2nd Road Xi'An High-Technology Industrial Development Zone Xi'An 710065	Tel. +86 29 68686262 Fax +86 29 68686311 xian@sew-eurodrive.cn
Additional addresses for service in China provided on request!			
Colombia			
Assembly Sales Service	Bogotá	SEW-EURODRIVE COLOMBIA LTDA. Calle 22 No. 132-60 Bodega 6, Manzana B Santafé de Bogotá	Tel. +57 1 54750-50 Fax +57 1 54750-44 http://www.sew-eurodrive.com.co sew@sew-eurodrive.com.co
Croatia			
Sales Service	Zagreb	KOMPEKS d. o. o. Zeleni dol 10 HR 10 000 Zagreb	Tel. +385 1 4613-158 Fax +385 1 4613-158 kompeks@inet.hr
Czech Republic			
Sales Assembly Service	Hostivice	SEW-EURODRIVE CZ s.r.o. Floriánova 2459 253 01 Hostivice	Tel. +420 255 709 601 Fax +420 235 350 613 http://www.sew-eurodrive.cz sew@sew-eurodrive.cz
	Drive Service Hotline / 24 Hour Service	HOT-LINE +420 800 739 739 (800 SEW SEW)	Servis: Tel. +420 255 709 632 Fax +420 235 358 218 servis@sew-eurodrive.cz
Denmark			
Assembly Sales Service	Copenhagen	SEW-EURODRIVEA/S Geminivej 28-30 DK-2670 Greve	Tel. +45 43 9585-00 Fax +45 43 9585-09 http://www.sew-eurodrive.dk sew@sew-eurodrive.dk
Egypt			
Sales Service	Cairo	Copam Egypt for Engineering & Agencies 33 El Hegaz ST, Heliopolis, Cairo	Tel. +20 2 22566-299 +1 23143088 Fax +20 2 22594-757 http://www.copam-egypt.com/ copam@datum.com.eg
Estonia			
Sales	Tallin	ALAS-KUUL AS Reti tee 4 EE-75301 Peetri küla, Rae vald, Harjumaa	Tel. +372 6593230 Fax +372 6593231 veiko.soots@alas-kuul.ee



Finland			
Assembly Sales Service	Hollola	SEW-EURODRIVE OY Vesimäentie 4 FIN-15860 Hollola 2	Tel. +358 201 589-300 Fax +358 3 780-6211 http://www.sew-eurodrive.fi sew@sew.fi
Service	Hollola	SEW-EURODRIVE OY Keskikankaantie 21 FIN-15860 Hollola	Tel. +358 201 589-300 Fax +358 3 780-6211 http://www.sew-eurodrive.fi sew@sew.fi
Production Assembly	Karkkila	SEW Industrial Gears Oy Valurinkatu 6, PL 8 FI-03600 Karkkila, 03601 Karkkila	Tel. +358 201 589-300 Fax +358 201 589-310 sew@sew.fi http://www.sew-eurodrive.fi
Gabon			
Sales	Libreville	ESG Electro Services Gabun Feu Rouge Lalala 1889 Libreville Gabun	Tel. +241 741059 Fax +241 741059 esg_services@yahoo.fr
Great Britain			
Assembly Sales Service	Normanton	SEW-EURODRIVE Ltd. DeVilliers Way Trident Park Normanton West Yorkshire WF6 1GX	Tel. +44 1924 893-855 Fax +44 1924 893-702 http://www.sew-eurodrive.co.uk info@sew-eurodrive.co.uk
Drive Service Hotline / 24 Hour Service			Tel. 01924 896911
Greece			
Sales	Athens	Christ. Boznos & Son S.A. 12, K. Mavromichali Street P.O. Box 80136 GR-18545 Piraeus	Tel. +30 2 1042 251-34 Fax +30 2 1042 251-59 http://www.boznos.gr info@boznos.gr
Hong Kong			
Assembly Sales Service	Hong Kong	SEW-EURODRIVE LTD. Unit No. 801-806, 8th Floor Hong Leong Industrial Complex No. 4, Wang Kwong Road Kowloon, Hong Kong	Tel. +852 36902200 Fax +852 36902211 contact@sew-eurodrive.hk
Hungary			
Sales Service	Budapest	SEW-EURODRIVE Kft. H-1037 Budapest Kunigunda u. 18	Tel. +36 1 437 06-58 Fax +36 1 437 06-50 http://www.sew-eurodrive.hu office@sew-eurodrive.hu
India			
Registered Office Assembly Sales Service	Vadodara	SEW-EURODRIVE India Private Limited Plot No. 4, GIDC POR Ramangamdi • Vadodara - 391 243 Gujarat	Tel. +91 265 3045200, +91 265 2831086 Fax +91 265 3045300, +91 265 2831087 http://www.seweurodriveindia.com salesvadodara@seweurodriveindia.com



India			
Assembly Sales Service	Chennai	SEW-EURODRIVE India Private Limited Plot No. K3/1, Sipcot Industrial Park Phase II Mambakkam Village Sriperumbudur - 602105 Kancheepuram Dist, Tamil Nadu	Tel. +91 44 37188888 Fax +91 44 37188811 saleschennai@seweurodriveindia.com
Ireland			
Sales Service	Dublin	Alperton Engineering Ltd. 48 Moyle Road Dublin Industrial Estate Glasnevin, Dublin 11	Tel. +353 1 830-6277 Fax +353 1 830-6458 info@alperton.ie http://www.alperton.ie
Israel			
Sales	Tel-Aviv	Liraz Handasa Ltd. Ahofer Str 34B / 228 58858 Holon	Tel. +972 3 5599511 Fax +972 3 5599512 http://www.liraz-handasa.co.il office@liraz-handasa.co.il
Italy			
Assembly Sales Service	Solaro	SEW-EURODRIVE di R. Blicke & Co.s.a.s. Via Bernini, 14 I-20020 Solaro (Milano)	Tel. +39 02 96 9801 Fax +39 02 96 980 999 http://www.sew-eurodrive.it sewit@sew-eurodrive.it
Ivory Coast			
Sales	Abidjan	SICA Société Industrielle & Commerciale pour l'Afrique 165, Boulevard de Marseille 26 BP 1173 Abidjan 26	Tel. +225 21 25 79 44 Fax +225 21 25 88 28 sicamot@aviso.ci
Japan			
Assembly Sales Service	Iwata	SEW-EURODRIVE JAPAN CO., LTD 250-1, Shimoman-no, Iwata Shizuoka 438-0818	Tel. +81 538 373811 Fax +81 538 373855 http://www.sew-eurodrive.co.jp sewjapan@sew-eurodrive.co.jp
Kazakhstan			
Sales	Almaty	ТОО "СЕВ-ЕВРОДРАЙВ" пр.Райымбека, 348 050061 г. Алматы Республика Казахстан	Тел. +7 (727) 334 1880 Факс +7 (727) 334 1881 http://www.sew-eurodrive.kz sew@sew-eurodrive.kz
Kenya			
Sales	Nairobi	Barico Maintenances Ltd Kamutaga Place Commercial Street Industrial Area P.O.BOX 52217 - 00200 Nairobi	Tel. +254 20 6537094/5 Fax +254 20 6537096 info@barico.co.ke
Latvia			
Sales	Riga	SIA Alas-Kuul Katlakalna 11C LV-1073 Riga	Tel. +371 6 7139253 Fax +371 6 7139386 http://www.alas-kuul.com info@alas-kuul.com



Lebanon			
Sales Lebanon	Beirut	Gabriel Acar & Fils sarl B. P. 80484 Bourj Hammoud, Beirut	Tel. +961 1 510 532 Fax +961 1 494 971 ssacar@inco.com.lb
		After Sales Service	service@medrives.com
Sales Jordan / Kuwait / Saudi Arabia / Syria	Beirut	Middle East Drives S.A.L. (offshore) Sin El Fil. B. P. 55-378 Beirut	Tel. +961 1 494 786 Fax +961 1 494 971 info@medrives.com http://www.medrives.com
		After Sales Service	service@medrives.com
Lithuania			
Sales	Alytus	UAB Irseva Statybininku 106C LT-63431 Alytus	Tel. +370 315 79204 Fax +370 315 56175 irmantas@irseva.lt http://www.sew-eurodrive.lt
Luxembourg			
Assembly Sales Service	Brussels	SEW-EURODRIVE n.v./s.a. Researchpark Haasrode 1060 Evenementenlaan 7 BE-3001 Leuven	Tel. +32 16 386-311 Fax +32 16 386-336 http://www.sew-eurodrive.lu info@sew-eurodrive.be
Madagascar			
Sales	Antananarivo	Ocean Trade BP21bis. Andraharo Antananarivo. 101 Madagascar	Tel. +261 20 2330303 Fax +261 20 2330330 oceanrabp@moov.mg
Malaysia			
Assembly Sales Service	Johor	SEW-EURODRIVE SDN BHD No. 95, Jalan Seroja 39, Taman Johor Jaya 81000 Johor Bahru, Johor West Malaysia	Tel. +60 7 3549409 Fax +60 7 3541404 sales@sew-eurodrive.com.my
Mexico			
Assembly Sales Service	Quéretaro	SEW-EURODRIVE MEXICO SA DE CV SEM-981118-M93 Tequisquiapan No. 102 Parque Industrial Quéretaro C.P. 76220 Quéretaro, México	Tel. +52 442 1030-300 Fax +52 442 1030-301 http://www.sew-eurodrive.com.mx scmexico@seweurodrive.com.mx
Mongolia			
Sales	Ulan Bator	SEW-EURODRIVE Representative Office Mongolia Olympic street 8, 2nd floor Juulchin corp bldg., Sukhbaatar district, Ulaanbaatar 14253	Tel. +976-70009997 Fax +976-70009997 http://www.sew-eurodrive.mn sew@sew-eurodrive.mn
Morocco			
Sales Service	Mohammedia	SEW-EURODRIVE SARL 2 bis, Rue Al Jahid 28810 Mohammedia	Tel. +212 523 32 27 80/81 Fax +212 523 32 27 89 sew@sew-eurodrive.ma http://www.sew-eurodrive.ma



Namibia			
Sales	Swakopmund	DB Mining & Industrial Services Einstein Street Strauss Industrial Park Unit1 Swakopmund	Tel. +264 64 462 738 Fax +264 64 462 734 sales@dbmining.in.na
Netherlands			
Assembly Sales Service	Rotterdam	SEW-EURODRIVE B.V. Industrieweg 175 NL-3044 AS Rotterdam Postbus 10085 NL-3004 AB Rotterdam	Tel. +31 10 4463-700 Fax +31 10 4155-552 Service: 0800-SEWHELP http://www.sew-eurodrive.nl info@sew-eurodrive.nl
New Zealand			
Assembly Sales Service	Auckland	SEW-EURODRIVE NEW ZEALAND LTD. P.O. Box 58-428 82 Greenmount drive East Tamaki Auckland	Tel. +64 9 2745627 Fax +64 9 2740165 http://www.sew-eurodrive.co.nz sales@sew-eurodrive.co.nz
	Christchurch	SEW-EURODRIVE NEW ZEALAND LTD. 10 Settlers Crescent, Ferryroad Christchurch	Tel. +64 3 384-6251 Fax +64 3 384-6455 sales@sew-eurodrive.co.nz
Nigeria			
Sales	Lagos	EISNL Engineering Solutions and Drives Ltd Plot 9, Block A, Ikeja Industrial Estate (Ogba Scheme) Adeniyi Jones St. End Off ACME Road, Ogba, Ikeja, Lagos Nigeria	Tel. +234 (0)1 217 4332 team.sew@eisnl.com http://www.eisnl.com
Norway			
Assembly Sales Service	Moss	SEW-EURODRIVE A/S Solgaard skog 71 N-1599 Moss	Tel. +47 69 24 10 20 Fax +47 69 24 10 40 http://www.sew-eurodrive.no sew@sew-eurodrive.no
Pakistan			
Sales	Karachi	Industrial Power Drives Al-Fatah Chamber A/3, 1st Floor Central Commercial Area, Sultan Ahmed Shah Road, Block 7/8, Karachi	Tel. +92 21 452 9369 Fax +92-21-454 7365 seweurodrive@cyber.net.pk
Paraguay			
Sales	Fernando de la Mora	SEW-EURODRIVE PARAGUAY S.R.L De la Victoria 112, Esquina nueva Asunción Departamento Central Fernando de la Mora, Barrio Bernardino	Tel. +595 991 519695 Fax +595 21 3285539 sew-py@sew-eurodrive.com.py
Peru			
Assembly Sales Service	Lima	SEW DEL PERU MOTORES REDUCTORES S.A.C. Los Calderos, 120-124 Urbanizacion Industrial Vulcano, ATE, Lima	Tel. +51 1 3495280 Fax +51 1 3493002 http://www.sew-eurodrive.com.pe sewperu@sew-eurodrive.com.pe
Poland			
Assembly Sales Service	Lodz	SEW-EURODRIVE Polska Sp.z.o.o. ul. Techniczna 5 PL-92-518 Łódź	Tel. +48 42 676 53 00 Fax +48 42 676 53 49 http://www.sew-eurodrive.pl sew@sew-eurodrive.pl



Poland			
	Service	Tel. +48 42 6765332 / 42 6765343 Fax +48 42 6765346	Linia serwisowa Hotline 24H Tel. +48 602 739 739 (+48 602 SEW SEW) serwis@sew-eurodrive.pl
Portugal			
Assembly Sales Service	Coimbra	SEW-EURODRIVE, LDA. Apartado 15 P-3050-901 Mealhada	Tel. +351 231 20 9670 Fax +351 231 20 3685 http://www.sew-eurodrive.pt info@sew@sew-eurodrive.pt
Romania			
Sales Service	Bucharest	Sialco Trading SRL str. Brazilia nr. 36 011783 Bucuresti	Tel. +40 21 230-1328 Fax +40 21 230-7170 sialco@sialco.ro
Russia			
Assembly Sales Service	St. Petersburg	ZAO SEW-EURODRIVE P.O. Box 36 RUS-195220 St. Petersburg	Tel. +7 812 3332522 +7 812 5357142 Fax +7 812 3332523 http://www.sew-eurodrive.ru sew@sew-eurodrive.ru
Senegal			
Sales	Dakar	SENEMECA Mécanique Générale Km 8, Route de Rufisque B.P. 3251, Dakar	Tel. +221 338 494 770 Fax +221 338 494 771 senemeca@sentoo.sn http://www.senemeca.com
Serbia			
Sales	Beograd	DIPAR d.o.o. Ustanicka 128a PC Košum, IV sprat SRB-11000 Beograd	Tel. +381 11 347 3244 / +381 11 288 0393 Fax +381 11 347 1337 office@dipar.rs
Singapore			
Assembly Sales Service	Singapore	SEW-EURODRIVE PTE. LTD. No 9, Tuas Drive 2 Jurong Industrial Estate Singapore 638644	Tel. +65 68621701 Fax +65 68612827 http://www.sew-eurodrive.com.sg sewsingapore@sew-eurodrive.com
Slovakia			
Sales	Bratislava	SEW-Eurodrive SK s.r.o. Rybničná 40 SK-831 06 Bratislava	Tel. +421 2 33595 202 Fax +421 2 33595 200 sew@sew-eurodrive.sk http://www.sew-eurodrive.sk
	Žilina	SEW-Eurodrive SK s.r.o. Industry Park - PChZ ulica M.R.Štefánika 71 SK-010 01 Žilina	Tel. +421 41 700 2513 Fax +421 41 700 2514 sew@sew-eurodrive.sk
	Banská Bystrica	SEW-Eurodrive SK s.r.o. Rudlovska cesta 85 SK-974 11 Banská Bystrica	Tel. +421 48 414 6564 Fax +421 48 414 6566 sew@sew-eurodrive.sk
	Košice	SEW-Eurodrive SK s.r.o. Slovenská ulica 26 SK-040 01 Košice	Tel. +421 55 671 2245 Fax +421 55 671 2254 sew@sew-eurodrive.sk



Slovenia			
Sales Service	Celje	Pakman - Pogonska Tehnika d.o.o. Ul. XIV. divizije 14 SLO - 3000 Celje	Tel. +386 3 490 83-20 Fax +386 3 490 83-21 pakman@siol.net
South Africa			
Assembly Sales Service	Johannesburg	SEW-EURODRIVE (PROPRIETARY) LIMITED Eurodrive House Cnr. Adcock Ingram and Aerodrome Roads Aeroton Ext. 2 Johannesburg 2013 P.O.Box 90004 Bertsham 2013	Tel. +27 11 248-7000 Fax +27 11 494-3104 http://www.sew.co.za info@sew.co.za
	Cape Town	SEW-EURODRIVE (PROPRIETARY) LIMITED Rainbow Park Cnr. Racecourse & Omuramba Road Montague Gardens Cape Town P.O.Box 36556 Chempet 7442 Cape Town	Tel. +27 21 552-9820 Fax +27 21 552-9830 Telex 576 062 bgriffiths@sew.co.za
	Durban	SEW-EURODRIVE (PROPRIETARY) LIMITED 48 Prospecton Road Isipingo Durban P.O. Box 10433, Ashwood 3605	Tel. +27 31 902 3815 Fax +27 31 902 3826 cdejager@sew.co.za
	Nelspruit	SEW-EURODRIVE (PTY) LTD. 7 Christie Crescent Vintonia P.O.Box 1942 Nelspruit 1200	Tel. +27 13 752-8007 Fax +27 13 752-8008 robermeyer@sew.co.za
South Korea			
Assembly Sales Service	Ansan	SEW-EURODRIVE KOREA CO., LTD. B 601-4, Banweol Industrial Estate #1048-4, Shingil-Dong, Danwon-Gu, Ansan-City, Kyunggi-Do Zip 425-839	Tel. +82 31 492-8051 Fax +82 31 492-8056 http://www.sew-korea.co.kr master.korea@sew-eurodrive.com
	Busan	SEW-EURODRIVE KOREA Co., Ltd. No. 1720 - 11, Songjeong - dong Gangseo-ku Busan 618-270	Tel. +82 51 832-0204 Fax +82 51 832-0230 master@sew-korea.co.kr
Spain			
Assembly Sales Service	Bilbao	SEW-EURODRIVE ESPAÑA, S.L. Parque Tecnológico, Edificio, 302 E-48170 Zamudio (Vizcaya)	Tel. +34 94 43184-70 Fax +34 94 43184-71 http://www.sew-eurodrive.es sew.spain@sew-eurodrive.es
Swaziland			
Sales	Manzini	C G Trading Co. (Pty) Ltd PO Box 2960 Manzini M200	Tel. +268 2 518 6343 Fax +268 2 518 5033 engineering@cgtrading.co.sz
Sweden			
Assembly Sales Service	Jönköping	SEW-EURODRIVE AB Gnejsvägen 6-8 S-55303 Jönköping Box 3100 S-55003 Jönköping	Tel. +46 36 3442 00 Fax +46 36 3442 80 http://www.sew-eurodrive.se jonkoping@sew.se



Switzerland			
Assembly	Basel	Alfred Imhof A.G.	Tel. +41 61 417 1717
Sales		Jurastrasse 10	Fax +41 61 417 1700
Service		CH-4142 Münchenstein bei Basel	http://www.imhof-sew.ch info@imhof-sew.ch
Tanzania			
Sales	Dar es Salaam	SEW-EURODRIVE PTY LIMITED TANZANIA Plot 52, Regent Estate PO Box 106274 Dar Es Salaam	Tel. +255 0 22 277 5780 Fax +255 0 22 277 5788 uroos@sew.co.tz
Thailand			
Assembly	Chonburi	SEW-EURODRIVE (Thailand) Ltd. 700/456, Moo.7, Donhuaroh Muang Chonburi 20000	Tel. +66 38 454281 Fax +66 38 454288 sewthailand@sew-eurodrive.com
Tunisia			
Sales	Tunis	T. M.S. Technic Marketing Service Zone Industrielle Mghira 2 Lot No. 39 2082 Fouchana	Tel. +216 79 40 88 77 Fax +216 79 40 88 66 http://www.tms.com.tn tms@tms.com.tn
Turkey			
Assembly	Kocaeli-Gebze	SEW-EURODRIVE Sistemleri San. Ve TIC. Ltd. Sti Gebze Organize Sanayi Böl. 400 Sok No. 401 41480 Gebze Kocaeli	Tel. +90-262-9991000-04 Fax +90-262-9991009 http://www.sew-eurodrive.com.tr sew@sew-eurodrive.com.tr
Ukraine			
Assembly	Dnipropetrovsk	ООО «СЕВ-Евродрайв» ул.Рабочая, 23-В, офис 409 49008 Днепропетровск	Тел. +380 56 370 3211 Факс. +380 56 372 2078 http://www.sew-eurodrive.ua sew@sew-eurodrive.ua
United Arab Emirates			
Sales	Sharjah	Copam Middle East (FZC) Sharjah Airport International Free Zone P.O. Box 120709 Sharjah	Tel. +971 6 5578-488 Fax +971 6 5578-499 copam_me@eim.ae
USA			
Production	Southeast Region	SEW-EURODRIVE INC. 1295 Old Spartanburg Highway P.O. Box 518 Lyman, S.C. 29365	Tel. +1 864 439-7537 Fax Sales +1 864 439-7830 Fax Manufacturing +1 864 439-9948 Fax Assembly +1 864 439-0566 Fax Confidential/HR +1 864 949-5557 http://www.seweurodrive.com cslyman@seweurodrive.com
Assembly	Northeast Region	SEW-EURODRIVE INC. Pureland Ind. Complex 2107 High Hill Road, P.O. Box 481 Bridgeport, New Jersey 08014	Tel. +1 856 467-2277 Fax +1 856 845-3179 csbridgeport@seweurodrive.com
Sales	Midwest Region	SEW-EURODRIVE INC. 2001 West Main Street Troy, Ohio 45373	Tel. +1 937 335-0036 Fax +1 937 332-0038 cstroy@seweurodrive.com
Service	Southwest Region	SEW-EURODRIVE INC. 3950 Platinum Way Dallas, Texas 75237	Tel. +1 214 330-4824 Fax +1 214 330-4724 csdallas@seweurodrive.com



USA			
	Western Region	SEW-EURODRIVE INC. 30599 San Antonio St. Hayward, CA 94544	Tel. +1 510 487-3560 Fax +1 510 487-6433 cshayward@seweurodrive.com
Additional addresses for service in the USA provided on request!			
Venezuela			
Assembly Sales Service	Valencia	SEW-EURODRIVE Venezuela S.A. Av. Norte Sur No. 3, Galpon 84-319 Zona Industrial Municipal Norte Valencia, Estado Carabobo	Tel. +58 241 832-9804 Fax +58 241 838-6275 http://www.sew-eurodrive.com.ve ventas@sew-eurodrive.com.ve sewfinanzas@cantv.net
Vietnam			
Sales	Ho Chi Minh City	All sectors except harbor and offshore: Nam Trung Co., Ltd 250 Binh Duong Avenue, Thu Dau Mot Town, Binh Duong Province HCM office: 91 Tran Minh Quyen Street District 10, Ho Chi Minh City	Tel. +84 8 8301026 Fax +84 8 8392223 namtrungco@hcm.vnn.vn truongtantam@namtrung.com.vn khanh-nguyen@namtrung.com.vn
		Harbor and offshore: DUC VIET INT LTD Industrial Trading and Engineering Services A75/6B/12 Bach Dang Street, Ward 02, Tan Binh District, 70000 Ho Chi Minh City	Tel. +84 8 62969 609 Fax +84 8 62938 842 totien@ducvietint.com
	Hanoi	Nam Trung Co., Ltd R.205B Tung Duc Building 22 Lang ha Street Dong Da District, Hanoi City	Tel. +84 4 37730342 Fax +84 4 37762445 namtrunghn@hn.vnn.vn
Zambia			
Sales	Kitwe	EC Mining Limited Plots No. 5293 & 5294, Tangaanyika Road, Off Mutentemuko Road, Heavy Industrial Park, P.O.BOX 2337 Kitwe	Tel. +260 212 210 642 Fax +260 212 210 645 sales@ecmining.com http://www.ecmining.com





Index

A	
Accessories.....	32
Accessories, abbreviations	32
Ambient temperature	74
Auxiliary drive	
Cable entry.....	27
Directions of rotation	43
IEC motor standard IE1 and IE2	21
Position of motor terminal box	27
Startup	193
Structure	20
B	
Backstop	43, 51
Startup	200
Torque-limited	25
Base frame.....	55, 169
Bearing greases	233
Breather	47
Bucket elevator drive	20
C	
Category II2GD	73
Changing the oil	214
Check the oil level	208
Checking and cleaning the breather	217
Checking the oil consistency.....	213
Checking the oil level	
Notes on the procedure for fixed and variable pivoted mounting positions	210
Circulation cooling.....	56
Coating systems	45
Cooling fan	
X.K.. Advanced (option)	56
X.K.. fan (standard).....	56
Cooling types	56
Cooling water cartridge	
Types of cooling water	176
Copyright.....	8
Couplings	148
Mounting tolerances.....	148
Customer service	234
D	
Degree of protection	75
Directions of rotation	43
Disposal	238
E	
Embedded safety notes	7
Exterior corrosion protection	18
F	
Fan.....	56
Installation.....	169
Maintenance	217
Fan cooling	56
Fill quantities	
Lubricant	231
Fixed pivoted mounting position	
Checking the oil level.....	210
Definition	36
Flange coupling	
Mounting onto shaft	86, 94
Mounting the flange connection.....	88, 96
Removal.....	90, 98
Structure	50
Flange couplings with cylindrical interference fit....	85
Machine shaft dimensions	85
Mounting	86
Removing.....	90
Flange couplings with keyway	
Machine shaft diameters.....	94
Removal.....	98
Foundation.....	71
G	
Gear unit mounting	70
Gear unit mounting in potentially-explosive atmospheres	72
Gear unit structure	20
Gear units and gearmotors in category II2GD	73
I	
IEC.....	52
IEC motor standard IE1 and IE2.....	21
Inductive incremental encoder	
Dimension drawing	78
Electrical connection.....	78
Technical data	79
Inspection intervals	206
Installing the gear unit.....	70




Internal conservation.....	18	Oil level glass.....	47
L		Oil-air cooler for pressure lubrication	
Lubricant change intervals	207	Maintenance	224
Lubricant fill quantities	231	Mechanical connection	177
Lubricant table	229	Structure	61
Lubricants	228	Oil-air cooler for splash lubrication	
Lubricating greases.....	233	Inspection	224
Lubrication	46	Structure	61
Lubrication types.....	46	Oil-air cooler with motor pump for pressure lubrication	
		Startup	199
M		Oil-air cooler with motor pump for splash lubrication	
Maintenance intervals	206	Startup	199
Motor adapter		Oil-water cooler for pressure lubrication	
Assembly	150	Maintenance	224
Structure	52	Mechanical installation.....	177
Motor pump		Structure	61
Startup	196	Oil-water cooler for splash lubrication	
Structure	49	Maintenance	224
Motor terminal box		Mechanical connection	177
Cable entry.....	27	Oil-water cooler with motor pump for pressure lubrication	
Position	27	lubrication	
Mounting position.....	33	Startup	199
Mounting position and standard mounting surface	34	Oil-water cooler with motor pump for splash lubrication	
		Startup	199
N		Oil-water cooler with splash lubrication	
Nameplate.....	28	Cooling media.....	171
NEMA.....	52	OS1, OS2, OS3	45
Notes		Output shaft as hollow shaft with keyway	
Designation in the documentation.....	7	Installation.....	100
NTB	63	Output shaft as hollow shaft with shrink disk	
NTB temperature switch.....	63	Installation.....	115
		Output shaft as hollow shaft with splining	
O		Assembly	132
Oil bath lubrication	46	Overrunning clutch.....	22
Oil check		OWC	61
Standard	208	P	
Oil dipstick.....	47	Packaging	18
Oil drain plug.....	47	Pivoted mounting position	
Oil drain valve	47	Checking the oil level.....	210
Oil fill with pressure lubrication.....	81	Definition.....	35
Oil heater		Potentially explosive atmosphere	72
Limit temperature for gear unit startup.....	179	Preliminary work	70
Maintenance	225	Pressure lubrication	46, 81
Notes on the function	178		
Startup	200		
Structure	62		
Thermostat.....	179		




Pressure switch.....	82	Stickers on the gear unit.....	11
Dimensions	182	Storage conditions	18, 19
Electrical connection	182	Structure	20
Startup	196	Surface temperature	75
Structure	63	Swing base	169
Technical data.....	182	Structure	54
PT100	63, 183, 185	Symbols on the gear unit.....	11
PT100 temperature sensor	63		
R		T	
Refilling the sealing grease	217	Temperature classes T3 to T6.....	74
Rigid flange couplings with keyway		Temperature sensor PT100	
Mounting	94	Dimensions	183, 186
		Electrical connection.....	184, 186
		Technical data	184
S		Temperature switch	
Safety Notes	9	TSK.....	63
Safety notes		Temperature switch NTB	
Design of section-related	7	Dimensions	187
Design of the embedded	7	Electrical connection.....	188
Designation in the documentation.....	7	Technical data	188
Sealing grease	233	Temperature switch TSK	
Section-related safety notes	7	Dimensions	189
SEP	48	Electrical connection.....	190
Shaft end pump		Technical data	190
Filling with oil.....	81	Tightening torques	71
Pressure switch.....	82	Tolerances	66
Startup	196	Torque arm	
Structure	48	Assembly	145
Shaft positions	43	Design.....	49
Shrink disk		Torque-limited backstop	25
Installation.....	115	Maintenance	226
Shutting down gear units	202	Transport	15
Signal words in safety notes	7	Transport conditions	18
Smooth output shaft.....	42	TSK.....	63
Special designs.....	75	Type designation of the gear unit	29
Speed monitor		Type designation of the oil supply system	30, 31
Dimension drawing	77		
Electrical connection	77	V	
Operational check	195	Variable pivoted mounting position	
Technical data.....	77	Checking the oil level.....	210
Speed monitoring		Definition.....	37
Installation.....	76	V-belt drive	
Startup	193	Maximum permitted motor weight.....	157
Structure	23	V-belt drives	
Splash lubrication.....	46	Design.....	53
Starting up the gear unit at low		Installation.....	157
ambient temperatures	201	Visual oil level check.....	47
Startup sequence	193		

**W**

Warning notes on the gear unit.....	11	Water cooling cover	
Waste oil	238	Connection.....	58
Water cooling cartridge		Installation.....	170
Cleaning	221	Maintenance	219
Cleaning the inside	223	Removal.....	219
Connection.....	172	Structure	58
Installation.....	172	Wear of the torque-controlled backstop	226
Maintenance	221		
Maintenance intervals	221		
Removal.....	222		
Requirements on the water quality	174		
Startup	197, 198		
Structure	59		

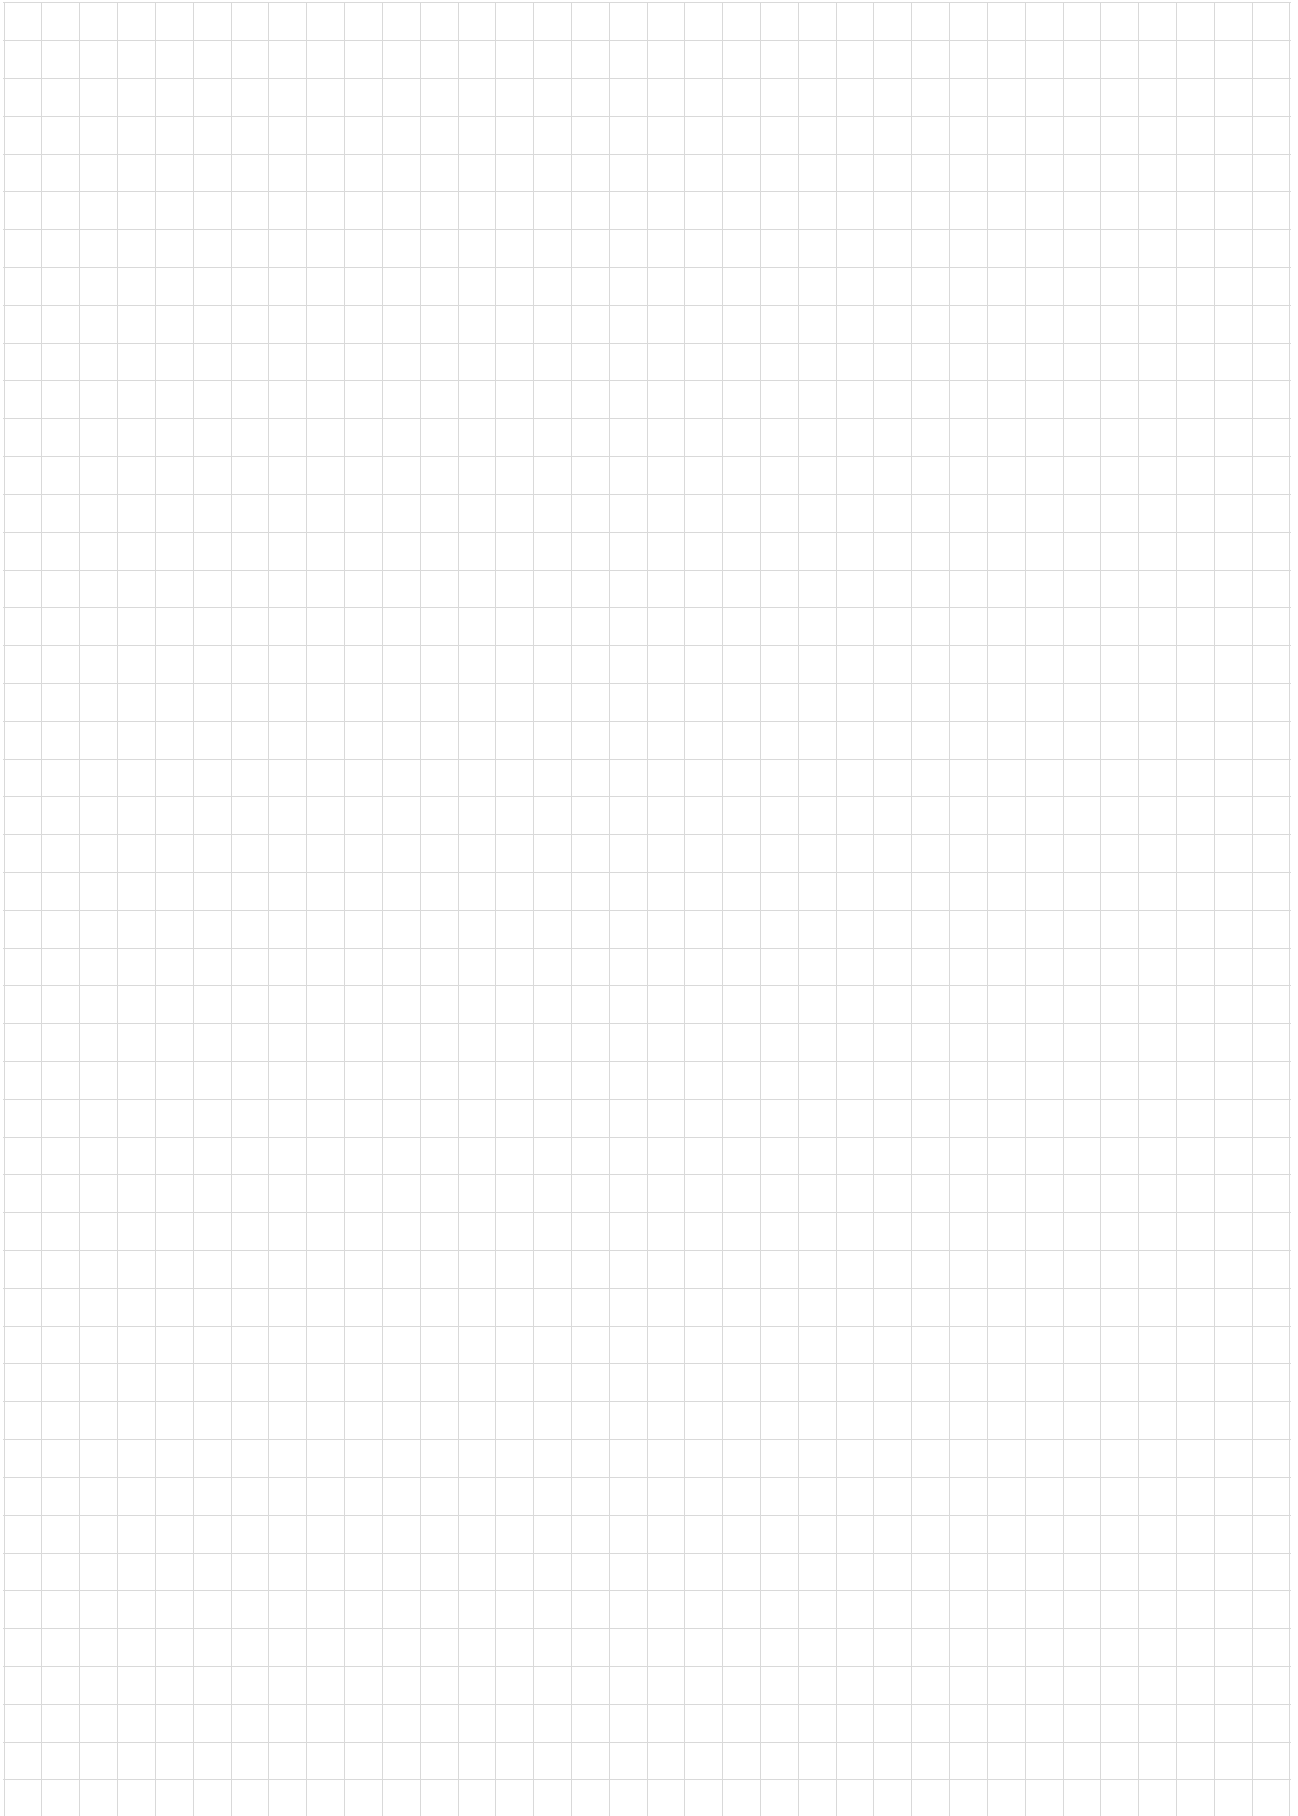

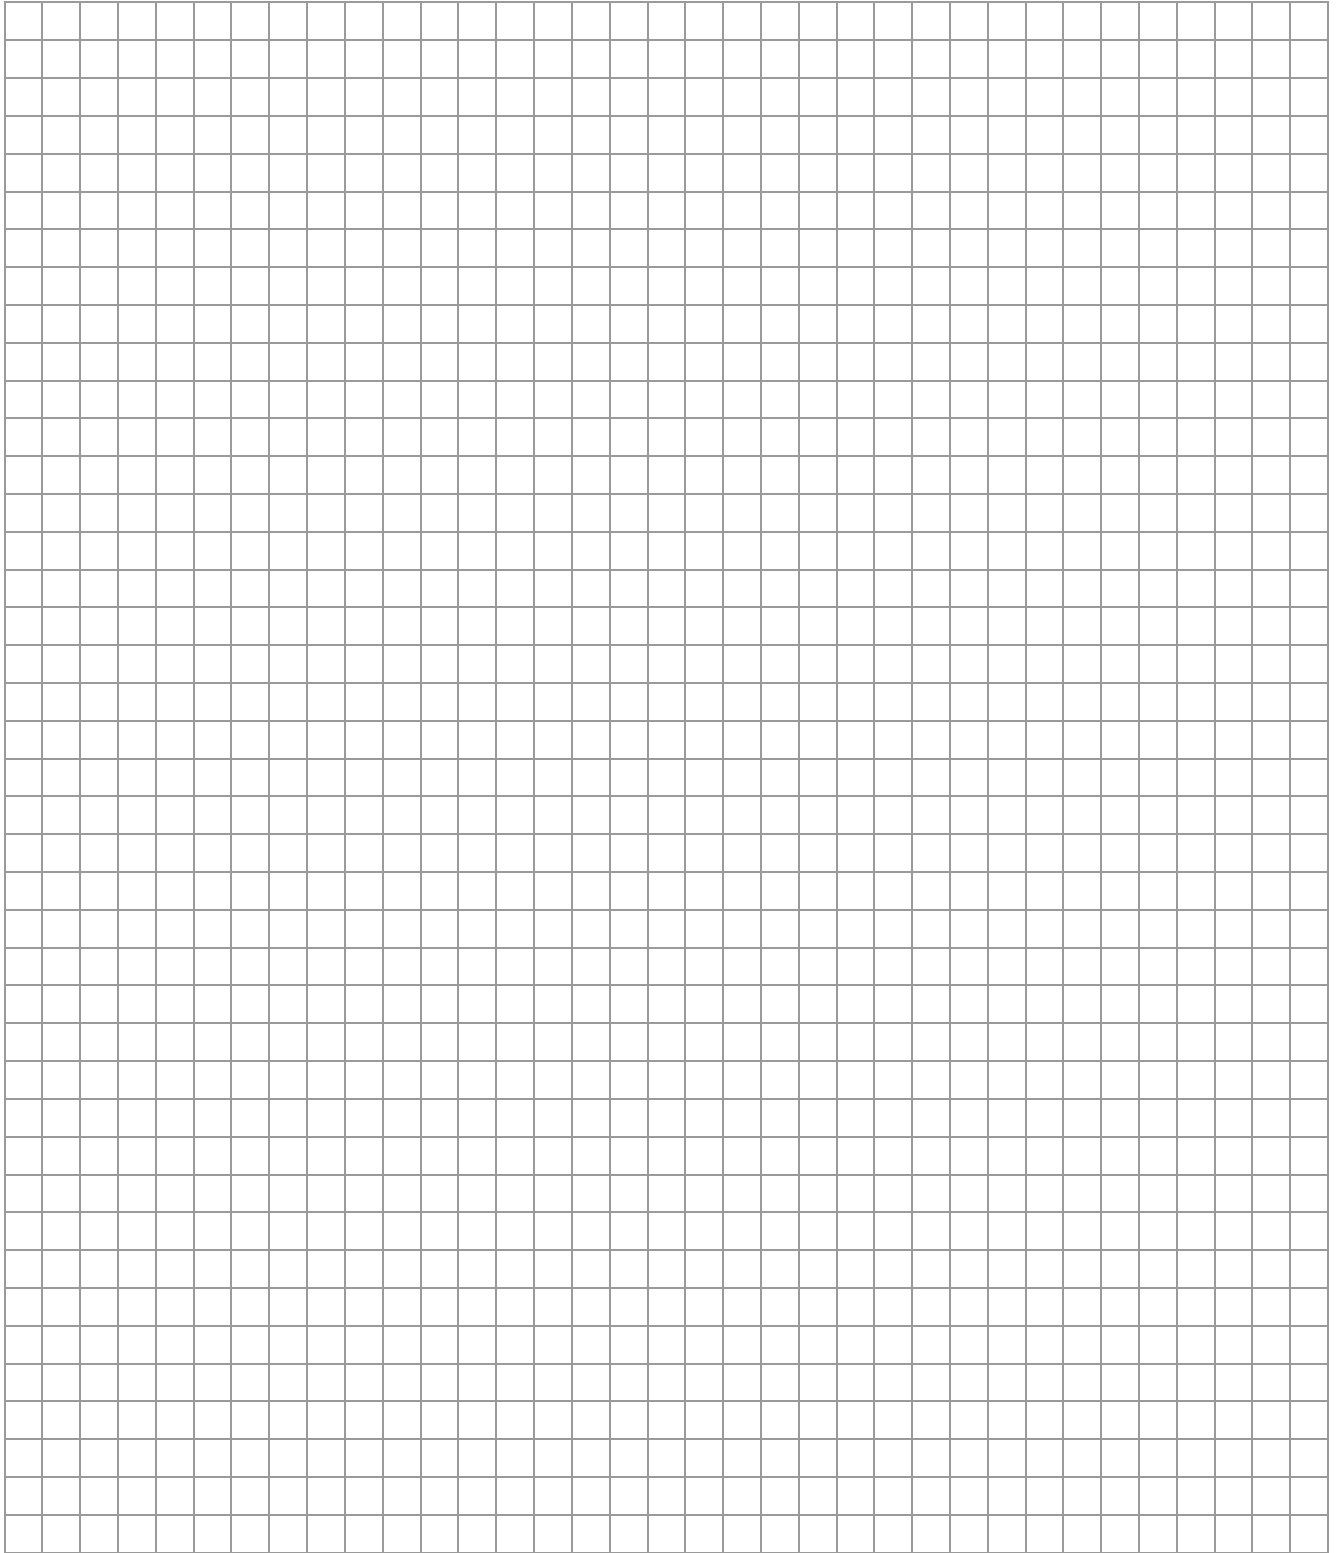



SEW-EURODRIVE
Driving the world

SEW
EURODRIVE

SEW-EURODRIVE GmbH & Co KG
P.O. Box 3023
76642 BRUCHSAL
GERMANY
Phone +49 7251 75-0
Fax +49 7251 75-1970
sew@sew-eurodrive.com

→ www.sew-eurodrive.com