




SEW
EURODRIVE

Operating Instructions

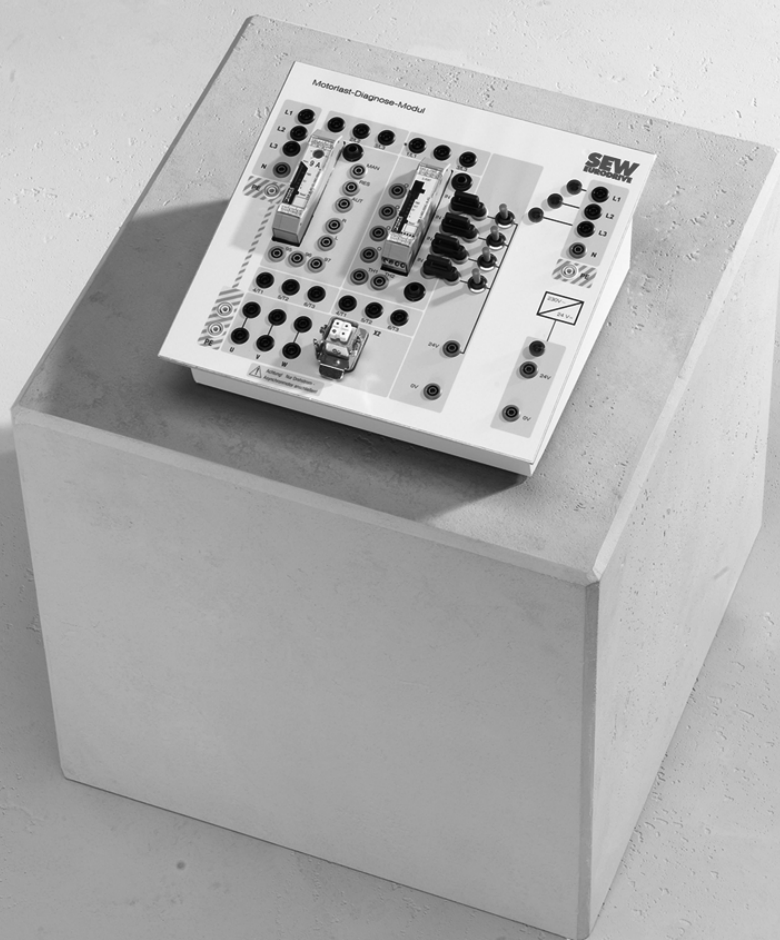

Didactics – Electromechanics
Motor Load Diagnostics Module



Table of contents

1	General information.....	4
1.1	About this documentation	4
1.2	Structure of the safety notes	4
1.3	Decimal separator in numerical values	5
1.4	Rights to claim under limited warranty	5
1.5	Applicable documentation.....	5
1.6	Product names and trademarks.....	6
1.7	Copyright notice	6
2	Safety notes	7
2.1	Preliminary information	7
2.2	Target group	7
2.3	Designated use	7
2.4	Transport.....	8
2.5	Setup and installation.....	8
2.6	Electrical connection	8
2.7	Startup and operation	9
2.8	Inspection and maintenance	9
3	Device structure	10
3.1	Scope of delivery	10
3.2	Short designation	10
3.3	Basic device.....	11
3.4	Device components	12
4	Installation.....	13
4.1	Important information	13
4.2	Electrical connections	14
4.3	Wiring diagram.....	18
5	Startup	19
5.1	Important information	19
5.2	Starting up the didactics module.....	20
6	Operation.....	21
6.1	Important information	21
6.2	Evaluating diagnostic data	21
7	Service	22
7.1	Electronics Service by SEW-EURODRIVE.....	22
7.2	Waste disposal.....	22
8	Technical data.....	23
9	Standards and certifications	24
9.1	EC declaration of conformity.....	24
9.2	Certifications	24
10	Address list	25
	Index	26

1 General information

1.1 About this documentation

The current version of the documentation is the original.

This documentation is an integral part of the product. The documentation is intended for all employees who perform work on the product.

Make sure this documentation is accessible and legible. Ensure that persons responsible for the systems and their operation as well as persons who work on the product independently have read through the documentation carefully and understood it. If you are unclear about any of the information in this documentation, or if you require further information, contact SEW-EURODRIVE.

1.2 Structure of the safety notes

1.2.1 Meaning of signal words

The following table shows the grading and meaning of the signal words for safety notes.

Signal word	Meaning	Consequences if disregarded
▲ DANGER	Imminent hazard	Severe or fatal injuries
▲ WARNING	Possible dangerous situation	Severe or fatal injuries
▲ CAUTION	Possible dangerous situation	Minor injuries
NOTICE	Possible damage to property	Damage to the product or its environment
INFORMATION	Useful information or tip: Simplifies handling of the product.	

1.2.2 Structure of section-related safety notes

Section-related safety notes do not apply to a specific action but to several actions pertaining to one subject. The hazard symbols used either indicate a general hazard or a specific hazard.

This is the formal structure of a safety note for a specific section:



SIGNAL WORD

Type and source of hazard.




Possible consequence(s) if disregarded.

- Measure(s) to prevent the hazard.

Meaning of the hazard symbols

The hazard symbols in the safety notes have the following meaning:

Hazard symbol	Meaning
	General hazard

Hazard symbol	Meaning
	Warning of dangerous electrical voltage
	Warning of hot surfaces
	Warning of automatic restart

1.2.3 Structure of embedded safety notes

Embedded safety notes are directly integrated into the instructions just before the description of the dangerous action.

This is the formal structure of an embedded safety note:

⚠ SIGNAL WORD Type and source of hazard. Possible consequence(s) if disregarded. Measure(s) to prevent the hazard.

1.3 Decimal separator in numerical values

In this document, a period is used to indicate the decimal separator.

Example: 30.5 kg

1.4 Rights to claim under limited warranty

Read the information in this documentation. This is essential for fault-free operation and fulfillment of any rights to claim under limited warranty. Read the documentation before you start working with the product.

1.5 Applicable documentation

Observe the following applicable documents:

- Operating instructions of the motor in use
- "PACKB.EMM 3.../500AC(-16)-IFS Elektronische Motormanagement-Module / Electronic motor management modules" package insert
- "UM DE CONTACTRON Motor Management" manual from Phoenix Contact
- "PACKB.ELR H5-IES-SC-.../500AC... Hybrid-Motorstarter mit Wendefunktion / Hybrid motor starter with reversing function" package insert from Phoenix Contact
- "PACKB.IFS-USB-PROG-ADAPTER Hinweis zur Verwendung des Programmieradapters / Note about programming adapter" package insert from Phoenix Contact

Always use the latest edition of documentation and software.

The SEW-EURODRIVE website (www.sew-eurodrive.com) provides a wide selection of documents for download in various languages. If required, you can also order printed and bound copies of the documentation from SEW-EURODRIVE.

1.6 Product names and trademarks

The brands and product names in this documentation are trademarks or registered trademarks of their respective titleholders.

1.7 Copyright notice

© 2018 SEW-EURODRIVE. All rights reserved. Unauthorized reproduction, modification, distribution or any other use of the whole or any part of this documentation is strictly prohibited.

2 Safety notes

2.1 Preliminary information

The following general safety notes serve the purpose of preventing injury to persons and damage to property. They primarily apply to the use of products described in this documentation. If you use additional components, also observe the relevant warning and safety notes.

2.2 Target group

The product is intended for persons in training facilities that are equipped with the appropriate furnishings in classrooms and laboratories. Furnishings are, for example, experimental stands, laboratory benches, energy cells, control panels and control consoles as well as control cabinets with pick-up positions for electrical energy.

The focus is on the transfer of knowledge to non-specialists. Before using the products, non-specialists must be instructed about the safety-relevant aspects described in this document.

Specialist for mechanical work

Any mechanical work on the products must be carried out by a qualified specialist. Specialists in the context of this documentation are persons familiar with the design, mechanical installation, troubleshooting, and maintenance of the product who possess the following qualifications:

- Qualification in the field of mechanical engineering in accordance with the national regulations.
- They are familiar with this documentation.

Specialist for electrotechnical work

Any electrical work on the products must be carried out by adequately qualified electricians. Qualified electricians in the context of this documentation are persons familiar with electrical installation, startup, troubleshooting, and maintenance of the product who possess the following qualifications:

- Qualification in the field of electrical engineering in accordance with the national regulations.
- They are familiar with this documentation.

Additional qualification

In addition to that, these persons must be familiar with the valid safety regulations and laws, as well as with the requirements of the standards, directives, and laws specified in this documentation. The persons must have the express authorization of the company to operate, program, parameterize, label, and ground units, systems, and circuits in accordance with the standards of safety technology.

Instructed persons

All work in the areas of transportation, storage, operation and waste disposal must be carried out by persons who are trained appropriately. The purpose of the instruction is that the persons are capable of performing the required tasks and work steps in a safe and correct manner.

2.3 Designated use

The product is designed for training purposes only. Operating the product in private, craft, trade or for industrial purposes is not permitted. The product is not intended for installation in electrical plants or machines. The product is not intended for use in applications (such as lifting applications).

The product can be used for operating AC asynchronous motors with squirrel-cage rotors. The product is not suited for operating AC synchronous motors.

The motors must be suitable for operation with drive inverters. Do not connect any other loads to the product.

Startup (i.e. start of regular operation) is permitted with adherence to EMC guideline only.

Technical data and information on the connection conditions are provided on the nameplate and in the documentation. Comply with the data and conditions.

2.4 Transport

Inspect the shipment for damage as soon as you receive the delivery. Inform the shipping company immediately about any damage. If the product is damaged, it must not be assembled, installed or started up.

Observe the following notes when transporting the device:

- Before transportation, cover the connections with the supplied protection caps.
- Place the product only on the base plate during transport.
- Ensure that the product is not subject to mechanical impact.

If necessary, use suitable, sufficiently dimensioned handling equipment.

2.5 Setup and installation

Ensure that the product is installed and cooled according to the regulations in the documentation.

The product is suited for operation on laboratory benches and on tables. Use standard laboratory or training equipment where the products can be placed properly and safely without posing any risk to the learners.

Protect the product from strong mechanical strain. The product and its mounting parts must never protrude into the path of persons or vehicles. Ensure that components are not deformed and insulation spaces are not changed, particularly during transportation and handling. Electric components must not be mechanically damaged or destroyed.

The following applications are prohibited unless the device is explicitly designed for such use:

- Use in potentially explosive atmospheres
- Use in areas exposed to harmful oils, acids, gases, vapors, dust, and radiation
- Operation in applications with impermissibly high mechanical vibration and shock loads in excess of the regulations stipulated in EN 61800-5-1
- Use at an elevation of more than 4000 m above sea level

2.6 Electrical connection

Familiarize yourself with the applicable national accident prevention regulations before working on the product.

Perform electrical installation according to the pertinent regulations (e.g. cable cross-sections, fusing, protective conductor connection).

Ensure that all of the required covers are correctly attached after the electrical installation.

The preventive measures and protection devices must comply with the applicable regulations (e.g. EN 60204-1 or EN 61800-5-1).

Ground connections are required as preventive measures.

2.7 Startup and operation

Before startup, make sure that the 4 mm sockets, buttons, and switches are intact.

It might be necessary to equip locations where such devices are used with additional monitoring and protection devices in accordance with the respective applicable safety regulations, e.g. the law governing technical equipment, accident prevention regulations, etc.

Depending on the degree of protection, products may have live, uninsulated, and sometimes moving or rotating parts, as well as hot surfaces during operation.

Cover unused connections with the supplied protection caps during operation.

Make sure the connection boxes are closed and screwed before connecting the supply voltage.

When the device is switched on, dangerous voltages are present at all power connections as well as at any connected cables and terminals. This also applies even when the product is inhibited and the motor is at standstill.

Electric shock due to moving the device while voltage is applied. Do not move the product while voltage is applied.

Do not separate the connection to the product during operation. This may result in dangerous electric arcs damaging the product.

If you disconnect the product from the voltage supply, do not touch any live components or power connections because capacitors might still be charged. Observe the following minimum switch-off time:

10 minutes.

Observe the corresponding information signs on the product.

The fact that the operation LED and other display elements are no longer illuminated does not indicate that the product has been disconnected from the supply system and no longer carries any voltage.

Mechanical blocking or internal protective functions of the product can cause a motor standstill. Eliminating the cause of the problem or performing a reset may result in the drive restarting automatically. If, for safety reasons, this is not permitted for the drive-controlled machine, first disconnect the product from the supply system and then start troubleshooting.

2.8 Inspection and maintenance

Only perform maintenance and repair work once the product has been secured and disconnected from the power supply. Ensure a de-energized state of the product before you start working on it. Ensure a de-energized state for the entire time you work on the product.

Repair work may only be carried out by SEW-EURODRIVE.

3 Device structure

3.1 Scope of delivery

The following components are included in the scope of delivery:


- Affixed front panel
- Housing
- Assembled and checked printed circuit board for the power section

3.2 Short designation

The following short designations are used in this documentation:

Device	Designation
Phoenix Contact ELR H5-IES-SC-24CD/500AC-2	Hybrid motor starter
Phoenix Contact EMM 3-24DC/500AC-16-IFS	Electronic motor management
Phoenix Contact IFS-USB-PROG-AD-APTER	Programming adapter

3.3 Basic device

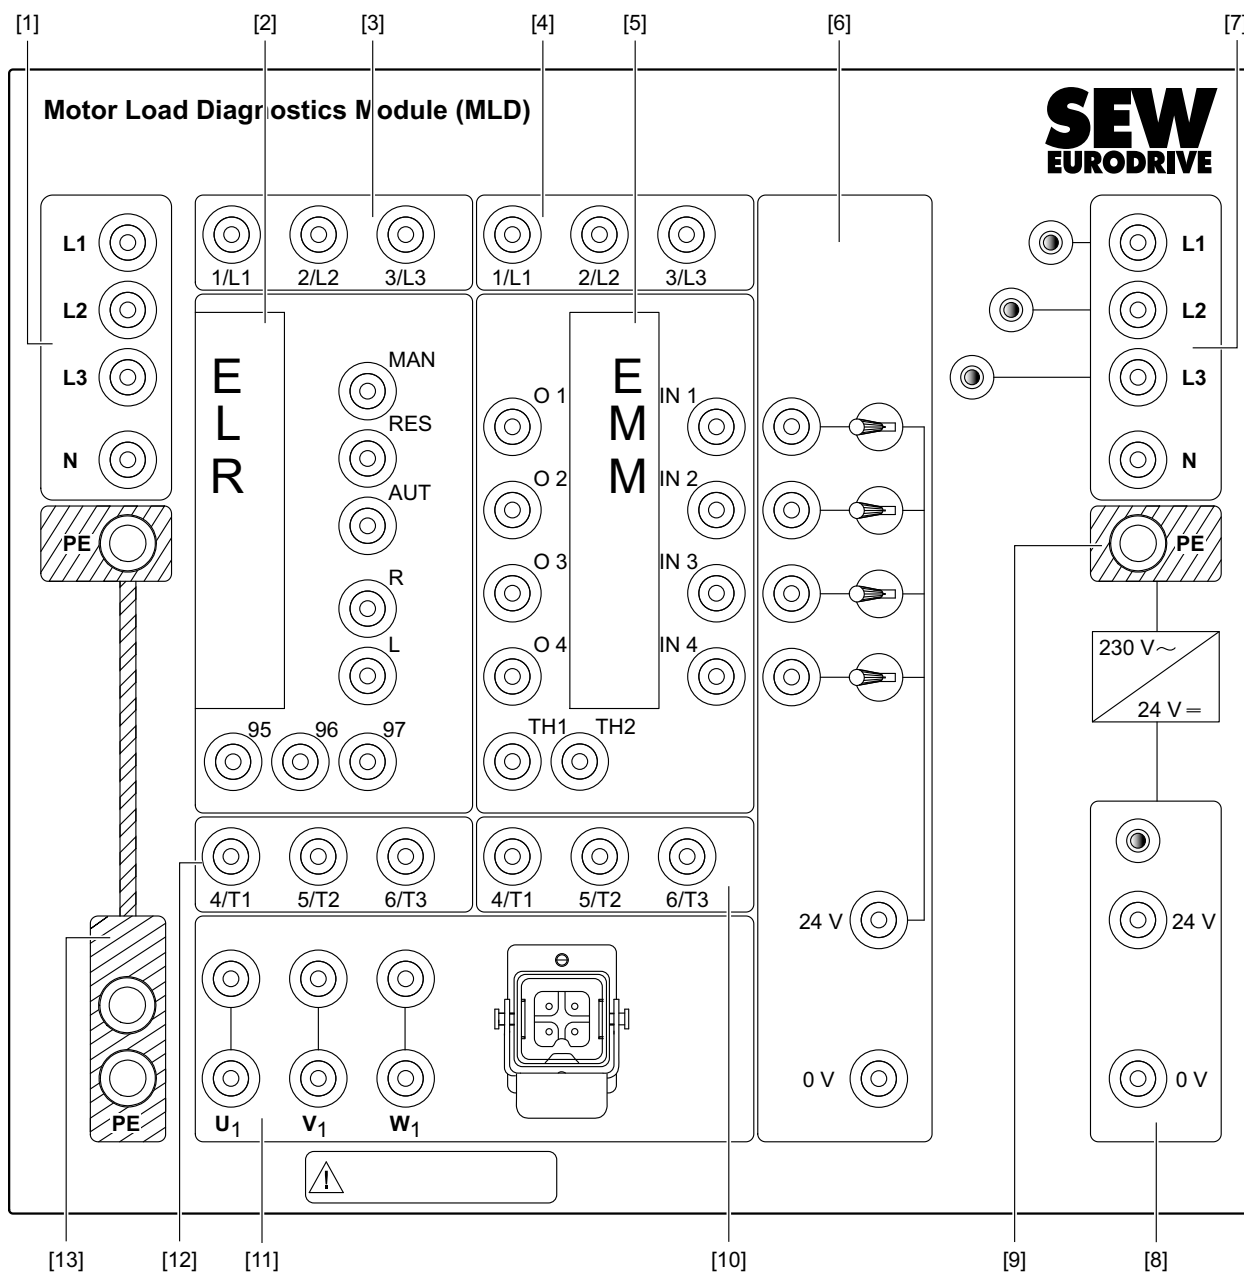

9007208498797963

- | | |
|--|--|
| [1] Power section connection | [8] 24 V control voltage as bridge connection for another didactics module |
| [2] Hybrid motor starter (ELR) | [9] PE: PE connection |
| [3] Power section connection ELR | [10] Motor connection EMM |
| [4] Power section connection EMM | [11] Motor connection |
| [5] Electronic motor management (EMM) | [12] Motor connection ELR |
| [6] Switch for input simulation | [13] PE: PE connection |
| [7] Power section connection as bridge connection for another didactics module | |

3.4 Device components

3.4.1 Motor types

SEW-EURODRIVE recommends the following motor type for training on an asynchronous motor with simple encoder technology:


- DR.. series AC motor

Recommendation: Didactics motor assembly DRS71S4

3.4.2 Hybrid motor starter


It is possible to implement the following functions, among others, with the hybrid motor starter with reversing function:

- CW rotation
- CCW rotation
- Thermal motor protection
- Emergency stop

For further information, refer to the documentation of the manufacturer, Phoenix Contact (see the chapter "Applicable documentation" (→  5)).


3.4.3 Electronic motor management

The electronic motor management with load relay and overload or underload monitoring provides continuous monitoring of the status.

For further information, refer to the documentation of the manufacturer, Phoenix Contact (see the chapter "Applicable documentation" (→  5)).

3.4.4 Programming adapter

With the programming adapter with USB interface, you can parameterize the electronic motor management with the software from Phoenix Contact.

For further information, refer to the documentation of the manufacturer, Phoenix Contact (see the chapter "Applicable documentation" (→  5)).

4 Installation

4.1 Important information

INFORMATION



- Observe the documentation of components connected or mounted to the module (e.g. motor, inverter).
- Comply with all instructions referring to the technical data and the permissible conditions where the device is operated.

⚠ WARNING



Electric shock when disconnecting or connecting voltage-carrying plug connectors.
Severe or fatal injuries.

- Disconnect all supply voltages.
- Make sure that the device is de-energized.
- Never plug or unplug the plug connectors while they are energized.

⚠ CAUTION



Short circuit due to incorrectly set jumpers.
Damage to property and injury.

- Insert the jumpers only in the contact points provided for this purpose.

INFORMATION



Only connect AC asynchronous motors to the device output.

4.1.1 Device output

Only connect ohmic/inductive load (motor).

4.1.2 Digital outputs

The digital outputs are short-circuit proof and protected against external voltage up to 30 V. Higher external voltages can destroy the digital outputs.

4.1.3 Cable

Use the following cables:

- Standardized safety cables for use in classrooms or laboratories.
- 4 mm laboratory safety plug connectors with rigid insulating sleeve, suited for nominal voltages of up to 1000 V.
- Didactics connection cable from SEW-EURODRIVE.

The cable must not be longer than 3 m.

4.1.4 PE line connection according to EN 61800-5-1

Earth-leakage currents of ≥ 3.5 mA can occur during normal operation. Observe the following for reliable PE connection:


- Supply system cable $< 10 \text{ mm}^2$:
 - Second PE conductor with the same cross section as the supply system cable routed parallel to the protective earth via separate terminals, or
 - Copper PE conductor with a cross section of 10 mm^2
- Supply system cable 10 to 16 mm^2 :
 - Copper protective earth conductor with the same cross section as the supply system cable.
- Supply system cable 16 to 35 mm^2 :
 - Copper PE conductor with a cross section of 16 mm^2
- Supply system cable $> 35 \text{ mm}^2$:
 - Copper PE conductor with half the cross section of the supply system cable.

4.1.5 Interference emission

Recommendation: Use shielded motor cables for EMC compliant installation.

4.2 Electrical connections

4.2.1 Power section connection

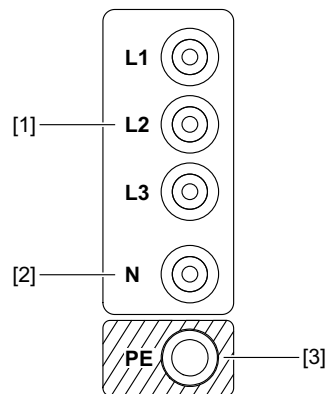

9250651019

- [1] L1, L2, L3: Line connection phase
 [2] N: Line connection of neutral conductor
 [3] PE: PE connection


4.2.2 X2: Motor connection

NOTICE

Damage to the didactics module due to overload.

Damage to property.

- Only connect one motor to the didactics module.

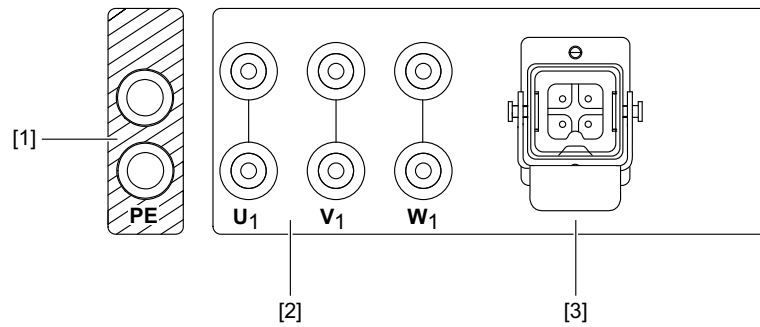


9250653707

- [1] PE: PE connection
- [2] Motor phases U, V, W
- [3] Motor connection HARTING connector type Han®Q5 EMC female
Article no.: Connector: 09620030301, insert: 09120053101

To connect the motor, use either the connections for the U, V, and W motor phases or the connector.

4.2.3 Hybrid motor starter connections

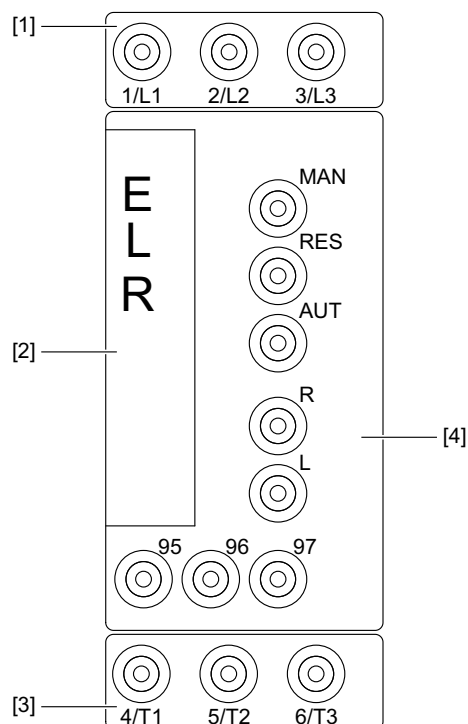


9250659083

- [1] Power section connection
- [2] Hybrid motor starter
- [3] Motor connection
- [4] Connections of the hybrid motor starter

For further information, refer to the documentation of the manufacturer, Phoenix Contact (see the chapter "Applicable documentation" (→ 5)).

4.2.4 Connections of the electronic motor management

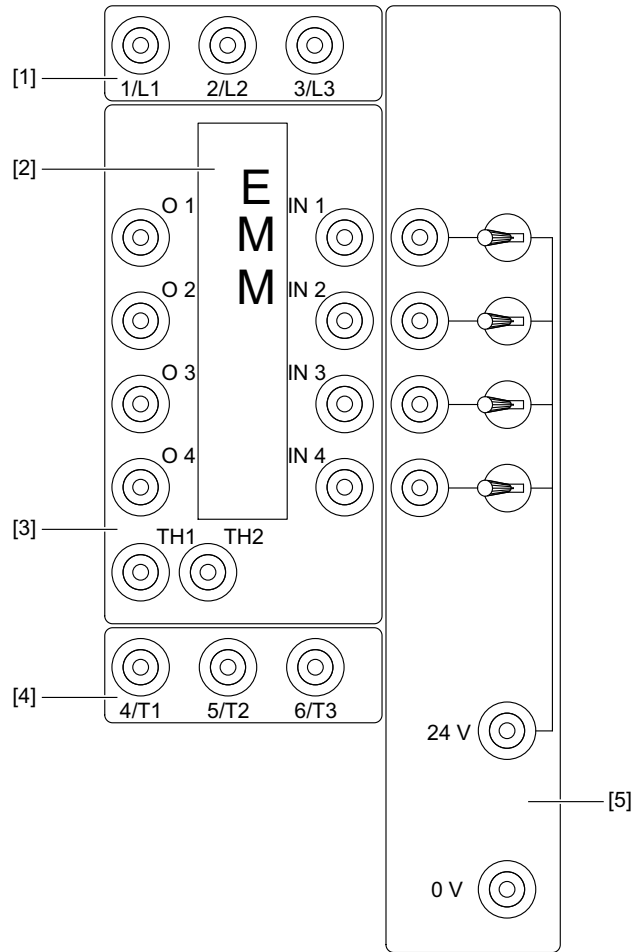


9293763723

- [1] Power section connection
 [2] Electronic motor management
 [3] Connections of the electronic motor management:
- O 1 – O 4: digital outputs
 - TH1, TH2: Connection for PTC thermistors
 - IN 1 – IN 4: digital inputs
- [4] Motor connection
 [5] 24 V control voltage

For further information, refer to the documentation of the manufacturer, Phoenix Contact (see the chapter "Applicable documentation" (→ 5)).


4.2.5 Connection of power jumper to another didactics module

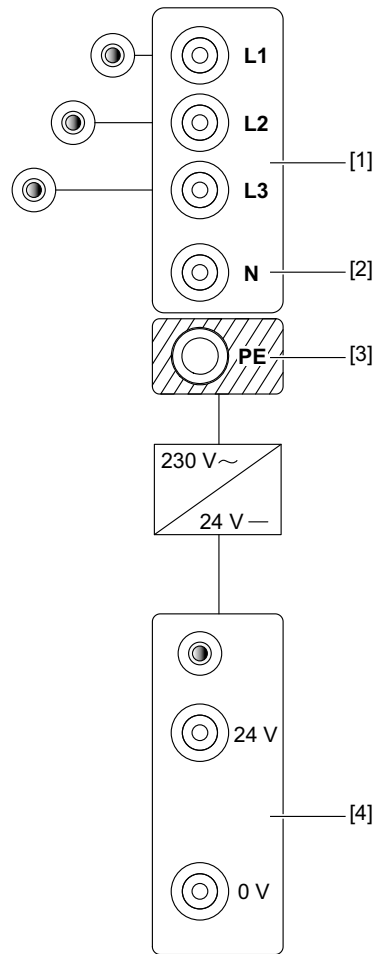

9250656395

- [1] L: Line connection phase
- [2] N: Line connection of neutral conductor
- [3] PE: PE connection
- [4] 24 V control voltage

4.3 Wiring diagram

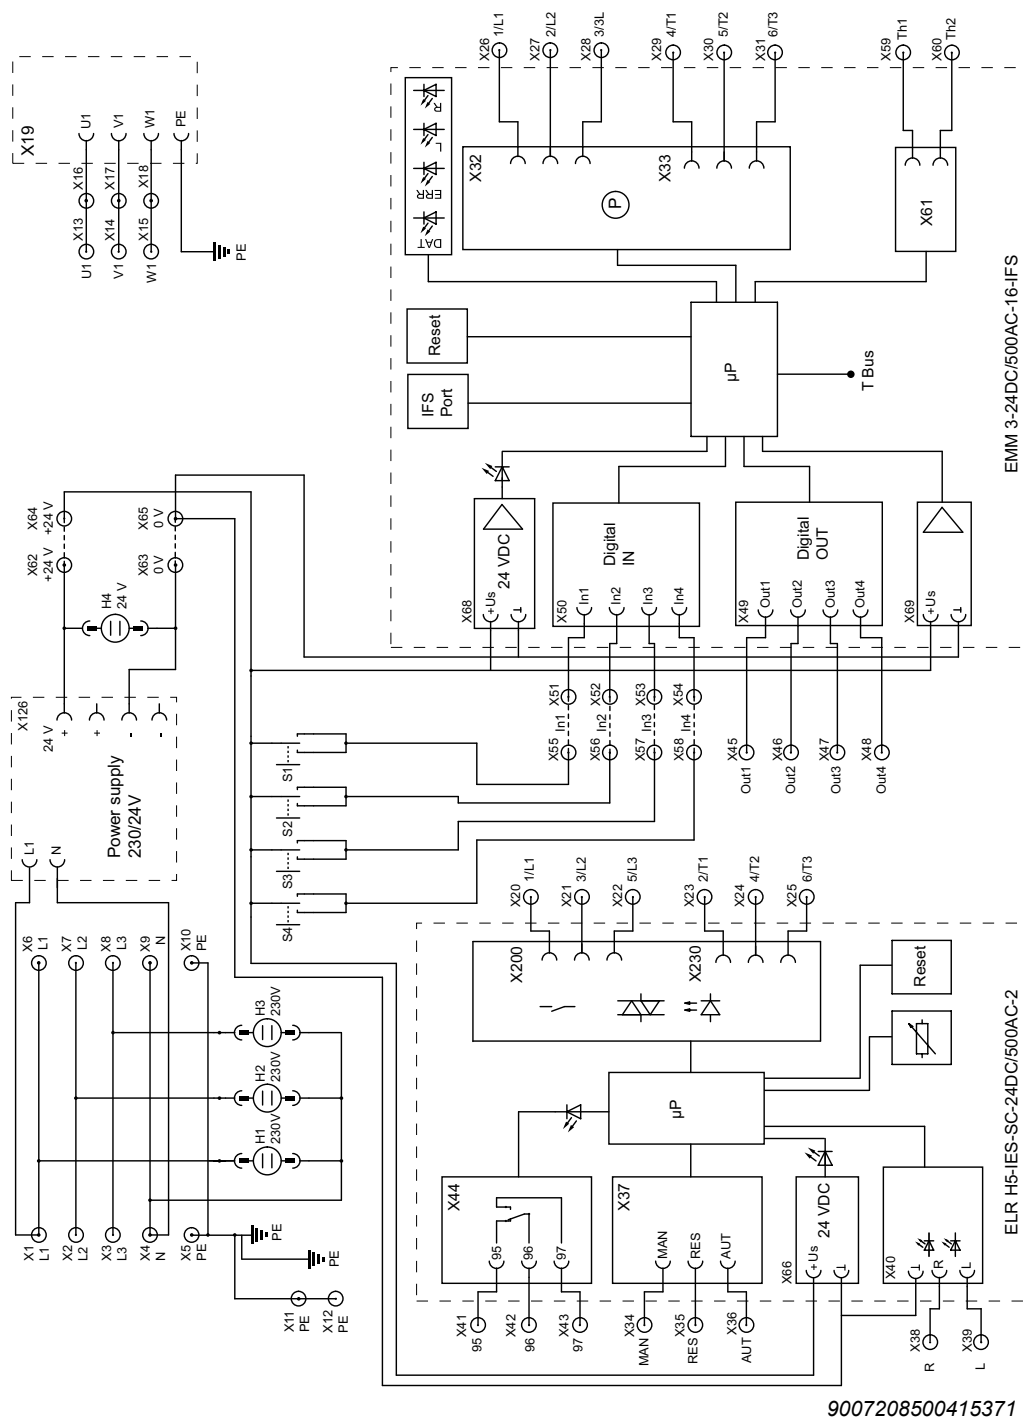

5 Startup

5.1 Important information



INFORMATION

- Before startup, make sure that the product is not damaged.
- Check that all protective covers are installed correctly.
- Observe the documentation of components connected or mounted to the module (e.g. motor, inverter).



⚠ WARNING

Danger of electric shock due to open connections.

Severe or fatal injuries.

- Never start the device if the touch guard is not installed.



⚠ WARNING

Risk of injury due to device malfunction caused by incorrect device setting.

Severe or fatal injuries.

- Make sure that the installation was carried out by trained specialists.
- Check the parameters and data sets.
- Only use settings that are correct for the function.



⚠ WARNING

Risk of crushing if the motor starts up unintentionally.

Severe or fatal injuries.

- Ensure that the motor cannot start unintentionally, by removing the X12 electronics terminal block for example.
- Additional safety precautions must be taken depending on the application, such as monitoring systems or mechanical protection devices, to avoid injury to people and damage to machinery.



NOTICE

Danger due to arcing.

Damage to electrical components.

- Do not disconnect power connections during operation.
- Do not connect power connections during operation.




INFORMATION

To ensure fault-free operation, do not disconnect or connect signal cables during operation.

5.2 Starting up the didactics module

Correct project planning for the drive is a prerequisite for successful startup. During startup of the motor, take note of the parameterization notes in the documentation of the components in use.

1. Connect the PE protective earth to the didactics module.
2. Connect the N to the didactics module.
3. Connect the L1, L2, and L3 phases to the didactics module.
4. Connect the line voltage (3-phase / 400 V / 50 Hz) to the electronic motor management and to the hybrid motor starter.
5. Do **not** connect the motor cable to the didactics module.
6. Define the connection type of the motor and wire the motor accordingly. Refer to the documentation for the motor for this purpose.
7. Connect the connections to the didactics module. Do not connect the connections during ongoing operation.
8. In the case of external control, set all toggle switches of the didactics module to "0" (zero) position for input simulation.
9. Apply the line voltage.

For further information, refer to the documentation of the manufacturer, Phoenix Contact (see the chapter "Applicable documentation" (→  5)).

6 Operation

6.1 Important information

INFORMATION



- Check that all protective covers are installed correctly.
- Observe the documentation of components connected or mounted to the module (e.g. motor, inverter).



⚠ WARNING

Electric shock when disconnecting or connecting voltage-carrying plug connectors.
Severe or fatal injuries.

- Disconnect all supply voltages.
- Make sure that the device is de-energized.
- Never plug or unplug the plug connectors while they are energized.



⚠ CAUTION

Risk of burns due to hot surfaces of the device or connected options, e.g. braking resistors.

Injury.

- Provide for covers to secure hot surfaces.
- Install the protection devices according to the regulations.
- Check the protection devices on a regular basis.
- Let the device and the connected options cool down before you start working on them.

6.2 Evaluating diagnostic data

You can evaluate the diagnostic data with the help of the electronic motor management.

For further information, refer to the documentation of the manufacturer, Phoenix Contact (see the chapter "Applicable documentation" (→ 5)).

7 Service

7.1 Electronics Service by SEW-EURODRIVE

If you are unable to rectify a fault, contact SEW-EURODRIVE Service. For the addresses, refer to www.sew-eurodrive.com.

When contacting the SEW-EURODRIVE service, always specify the following information so that our service personnel can assist you more effectively:

- Information on the device type on the nameplate (e.g. type designation, serial number, part number, product key, purchase order number)
- Brief description of the application
- Fault message on the status display
- Nature of the fault
- Accompanying circumstances
- Any unusual events preceding the problem

7.2 Waste disposal

Dispose of the product and all parts separately in accordance with their material structure and the national regulations. Put the product through a recycling process or contact a specialist waste disposal company. If possible, divide the product into the following categories:

- Iron, steel or cast iron
- Stainless steel
- Magnets
- Aluminum
- Copper
- Electronic parts
- Plastics

The following materials are hazardous to health and the environment. These materials must be collected and disposed of separately.

- Oil and grease

Collect used oil and grease separately according to type. Ensure that the used oil is not mixed with solvent. Dispose of used oil and grease correctly.

- Screens
- Capacitors

8 Technical data

Motor load diagnostics module (MDL)	
Weight	Approx. 4 kg
Dimensions W × H × D	315 mm × 67 mm (front) / 115 mm (rear) × 297 mm

The technical data of the didactics module are decisively influenced by the electronic motor management and the hybrid motor starter.

For further information, refer to the documentation of the manufacturer, Phoenix Contact (see the chapter "Applicable documentation" (→ 5)).

Devices and part numbers	
Assembled didactics module	Part number: 18979599
Hybrid motor starter (Phoenix Contact)	
Designation	H5-IES-SC-24DC/500AC-2
Part number	2900414
Electronic motor management (Phoenix Contact)	
Designation	3-24DC/500AC-16-IFS
Part number	2297523
Programming adapter (Phoenix Contact)	
Designation	IFS-USB-PROG-ADAPTER
Part number	28112171

9 Standards and certifications

The SEW-EURODRIVE components were developed and tested based on the latest, national standards and certifications.

If special approvals are necessary for additional requirements, request them separately from SEW-EURODRIVE.

9.1 EC declaration of conformity

The EC declarations of conformity for the SEW components are listed on the website of SEW-EURODRIVE with the respective products.

9.2 Certifications

The certificates for the SEW components are listed on the website of SEW-EURODRIVE with the respective products.

10 Address list

Germany			
Headquarters Production Sales	Bruchsal	SEW-EURODRIVE GmbH & Co KG Ernst-Blickle-Straße 42 76646 Bruchsal	Tel. +49 7251 75-0 Fax +49 7251 75-1970 http://www.sew-eurodrive.de sew@sew-eurodrive.de
Production / Industrial Gears	Bruchsal	SEW-EURODRIVE GmbH & Co KG Christian-Pähr-Str. 10 76646 Bruchsal	Tel. +49 7251 75-0 Fax +49 7251 75-2970
Production	Graben	SEW-EURODRIVE GmbH & Co KG Ernst-Blickle-Straße 1 76676 Graben-Neudorf	Tel. +49 7251 75-0 Fax +49 7251-2970
	Östringen	SEW-EURODRIVE GmbH & Co KG, Werk Östringen Franz-Gurk-Straße 2 76684 Östringen	Tel. +49 7253 9254-0 Fax +49 7253 9254-90 oesstringen@sew-eurodrive.de
Service Competence Center	Mechanics / Mechatronics	SEW-EURODRIVE GmbH & Co KG Ernst-Blickle-Straße 1 76676 Graben-Neudorf	Tel. +49 7251 75-1710 Fax +49 7251 75-1711 scc-mechanik@sew-eurodrive.de
	Electronics	SEW-EURODRIVE GmbH & Co KG Ernst-Blickle-Straße 42 76646 Bruchsal	Tel. +49 7251 75-1780 Fax +49 7251 75-1769 scc-elektronik@sew-eurodrive.de
Drive Technology Center	North	SEW-EURODRIVE GmbH & Co KG Alte Ricklinger Straße 40-42 30823 Garbsen (Hannover)	Tel. +49 5137 8798-30 Fax +49 5137 8798-55 dtc-nord@sew-eurodrive.de
	East	SEW-EURODRIVE GmbH & Co KG Dankritzer Weg 1 08393 Meerane (Zwickau)	Tel. +49 3764 7606-0 Fax +49 3764 7606-30 dtc-ost@sew-eurodrive.de
	South	SEW-EURODRIVE GmbH & Co KG Domagkstraße 5 85551 Kirchheim (München)	Tel. +49 89 909552-10 Fax +49 89 909552-50 dtc-sued@sew-eurodrive.de
	West	SEW-EURODRIVE GmbH & Co KG Siemensstraße 1 40764 Langenfeld (Düsseldorf)	Tel. +49 2173 8507-30 Fax +49 2173 8507-55 dtc-west@sew-eurodrive.de
Drive Center	Berlin	SEW-EURODRIVE GmbH & Co KG Alexander-Meißner-Straße 44 12526 Berlin	Tel. +49 306331131-30 Fax +49 306331131-36 dc-berlin@sew-eurodrive.de
	Ludwigshafen	SEW-EURODRIVE GmbH & Co KG c/o BASF SE Gebäude W130 Raum 101 67056 Ludwigshafen	Tel. +49 7251 75 3759 Fax +49 7251 75 503759 dc-ludwigshafen@sew-eurodrive.de
	Saarland	SEW-EURODRIVE GmbH & Co KG Gottlieb-Daimler-Straße 4 66773 Schwalbach Saar – Hülzweiler	Tel. +49 6831 48946 10 Fax +49 6831 48946 13 dc-saarland@sew-eurodrive.de
	Ulm	SEW-EURODRIVE GmbH & Co KG Dieselstraße 18 89160 Dornstadt	Tel. +49 7348 9885-0 Fax +49 7348 9885-90 dc-ulm@sew-eurodrive.de
	Würzburg	SEW-EURODRIVE GmbH & Co KG Nürnbergerstraße 118 97076 Würzburg-Lengfeld	Tel. +49 931 27886-60 Fax +49 931 27886-66 dc-wuerzburg@sew-eurodrive.de
Drive Service Hotline / 24 Hour Service			0 800 SEWHELP 0 800 7394357

Index

A

Applicable documentation	5
Assembly	
Safety notes	8

C

Certifications	24
Connection	
Safety notes	8
Connection wiring diagram	18
Connections	
Electrical	14
Copyright notice	6

D

Decimal separator	5
Declaration of conformity	24
Designated use	7
Device structure	10
Didactics module structure	11
Documentation, applicable	5

E

Electrical connection	8
Electrical connections	14
Electronic motor management	16
Hybrid motor starter	15
Motor	14
Power jumper	17
Power section	14
Electronic motor management	12, 16
Electronics Service	22
Embedded safety notes	5

H

Hazard symbols	
Meaning	4
Hybrid motor starter	12, 15

I

Installation	13
--------------------	----

M

Motor	12
Motor management, electronic	12, 16

Motor starter	12, 15
---------------------	--------

N

Notes	
Designation in the documentation	4
Meaning of the hazard symbols	4

O

Operation	21
Safety notes	9, 21

P

Product names	6
Programming adapter	12

R

Repair	22
Rights to claim under limited warranty	5

S

Safety notes	
Assembly	8
Designation in the documentation	4
Installation	13
Meaning of the hazard symbols	4
Operation	21
Preliminary information	7
Startup	19
Structure of embedded	5
Structure of section-related	4
Section-related safety notes	4
Service	22
Signal words in safety notes	4
Standards	24
Startup	19
Safety notes	9, 19

T

Target group	7
Trademarks	6
Transport	8

U

USB interface	12
Use	7

W

Waste disposal	22
Wiring diagram	18











SEW-EURODRIVE
Driving the world

SEW
EURODRIVE

SEW-EURODRIVE GmbH & Co KG
Ernst-Blickle-Str. 42
76646 BRUCHSAL
GERMANY
Tel. +49 7251 75-0
Fax +49 7251 75-1970
sew@sew-eurodrive.com
→ www.sew-eurodrive.com